newline TC-4N22M

Mod Cam+

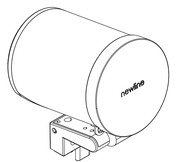

Quick Start Guide

Package contents



Overview

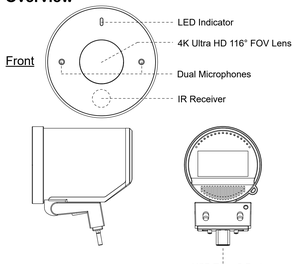

Remote Control

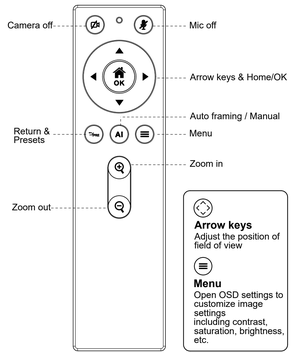

LED Status Indicator

	Event	LED Status
1	Camera is active in use	Always ON
2	Camera is inactive	Always OFF

Getting start with Newline TC-4N22M

Plug into Type-C port

Plug the camera into Type-C port, located on top-center of IFPD.

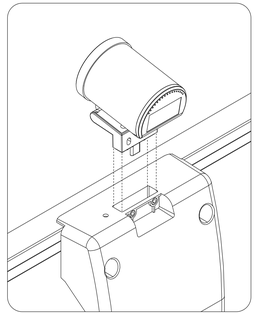

Fix screw

Use supporting screws to fix the camera.

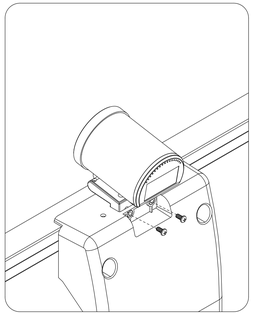

Adjust the angle

Adjust the appropriate perspective.

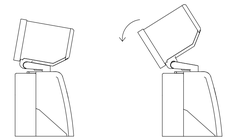

Open lens cap

Gently remove the lens cap or cover that is protecting the lens.



How to prevent flicker in your video

The default camera frequency setting is 50Hz, if you encounter the flicker problem, simply use the remote control, get into Menu to adjust camera frequency that match the electrical frequency of your region.

Safe Usage Guidelines for Products

- Do not open or modify the product except for battery removal and replacement.
- Do not disassemble or attempt to service this product.
- This product is safe under normal and reasonably foreseeable misuse operating conditions.
- If product is operating improperly, contact the authorized reseller.
- Product must be returned to the authorized reseller for any service or repair.
- This is not a Children's Product and is not intended for use by children under 14 years old.

