



## STEP 1

Plug the green Azuga device and camera power cable into the black Y cable, as shown in the top of the diagram.

The single end of the Y cable being held in the diagram goes into your vehicle's OBD port. If you have a JBus port, plug the single end of the Y cable into the JBus adapter cable.

Please note, your Azuga box should contain tie wraps, don't lose these as you will need them.

### VERY IMPORTANT

The Azuga device detects crashes. To avoid crash notifications being sent when there is no crash, be certain the green device in the picture is tightly fastened to something secure under the dashboard.



## STEP 2


- After plugging your Y cable into your vehicles OBD port, fold up the excess Y cable.
- Find something secure under the dashboard to fasten this cable to. See B in diagram.
- Use one of the tie wraps included in the Azuga box and tighten securely.

Its always good to trim the excess tie wrap after tightening.



## STEP 3

- Locate the longest tie wrap in the Azuga box and feed it through the hole on one side of the black cable that should now be plugged into the green Azuga device. See A on diagram.
- Thread the tie wrap around the secure location used in step 2. See B on diagram.
- Next, feed the tie wrap through the hole on the other side of the green Azuga device. See C on diagram.
- Finally, tighten tie wrap until the green Azuga device feels secure, as show in the diagram.

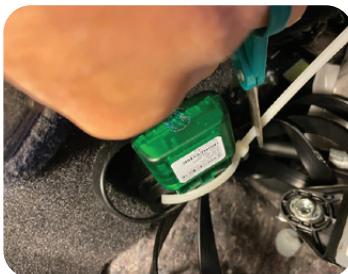

Remember, Its always safer to trim the excess tie wrap after tightening.



Scan to Download

<https://www.azuga.com/downloads/installing-tie-wraps-to-secure-azuga-device>