


Installing an Azuga Camera With Existing ELD or no ELD

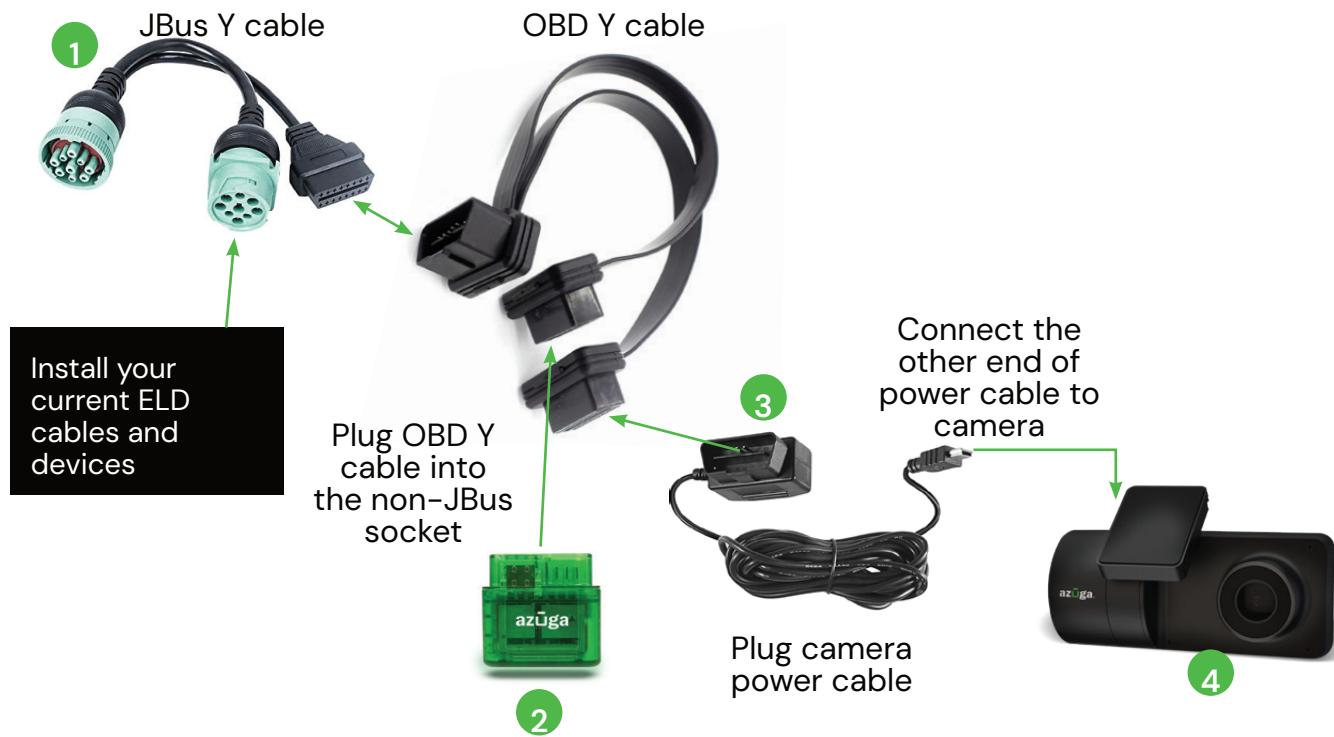

Note: some vehicles like Volvo's after 2014 use a 16-pin diagnostics port. If that is the case, you will be supplied with 2 OBD Y cables. Please, use the extra OBD Y cable as you would the Jbus Y Cable in box 1.