




TOOLS CHECKLIST:

- ✓ Basic white scrub pad
- ✓ High quality glass cleaner
- ✓ Lint-free, non-abrasive cloths
- ✓ Hard Squeegee (e.g. Blue Max)
- ✓ Heat gun (1000 °F - 12 CFM)

Make sure all tools are clean and in good condition before using to install ExoShield ULTRA. This will help reduce contamination.

1 CLEANING

Thoroughly clean the windshield with a glass cleaner or alcohol-based solution. Follow this with a quick clean with soapy water, taking care to flush out the gaskets.

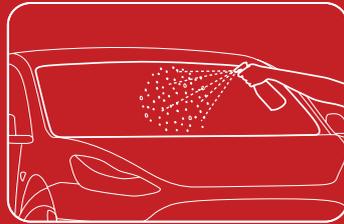


Cleaning is the most critical step in ensuring a contamination-free installation.

2 INITIAL POSITIONING & FIT CHECK

Spray the windshield with slip solution & position the film to check the fit. There should be minimal fingers and the film should lay flat (minor fingers less than 2 inch in length are ok).

3 RELEASE THE LINER

Ensure the film is positioned liner side facing out. Peel back the plastic liner halfway across the windshield & spray the film with slip solution. Replace the liner and repeat on the other half of the film.

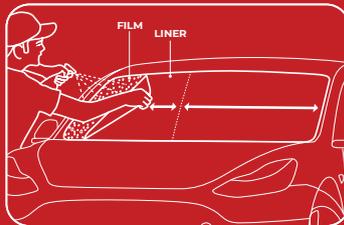


4 PREP THE FILM

With the liner facing out, roll the film tightly. Thoroughly clean and wet the windshield with the soapy water solution.

5 APPLY THE FILM (REVERSE ROLL)

Release a corner of the liner (with film side facing out) and place the film adhesive onto the glass. Unroll by gently pulling the liner while guiding the film into place.

Watch a video of this step by using the QR code on the back of this card.

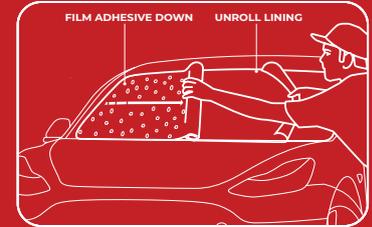


6 FINAL POSITIONING

Position the film on the windshield leaving a 1/16" gap between the film and windshield edge on all four sides.

7 TACKING

Use a hard squeegee across the center of the film horizontally to tack the film. This will hold the film in place on the windshield while you squeegee out the water.

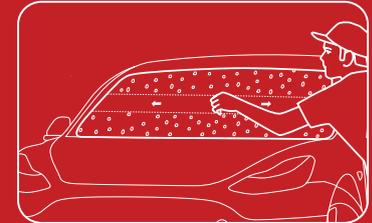

8 FINAL SQUEEGEE

Firmly squeegee out all fingers, bubbles and excess water from the film. Note that ULTRA is an 8-mil film, meaning it will require more force to remove all moisture. Ensure you remove as much moisture as possible before delivery to the customer.

9 FINISHING TOUCHES

You may need to touch up the edges by using a heat gun & soft squeegee. This will take care of any remaining fingers and help make sure that the edges of the film lay flat.



LET THE FILM DRY FOR 3 HOURS