


ASSEMBLY INSTRUCTIONS

CONTENTS

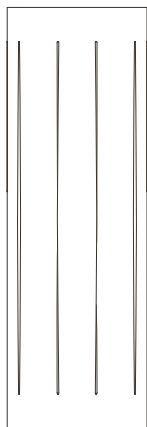

Amouaj



(x1) hook



(x4) wago



(x4) screw



(x1) driver



(x5) wall plug



(x1) light bar

STEPS

01. Switch off the power.

Depending on your electrical installation, you may need to drill a 2in/5cm hole around the power supply to accommodate the driver and cables.

02. Position the hook **18.9 in/48 cm** above the power supply hole.



03. Position the light bar **as close as possible** to the hook.

04. Ensure that the light bar is **aligned vertically**.


05. Mark the positions of the four fixing holes.

06. Drill holes at the marked points and **insert the wall plugs**.

07. Screw the light bar into place.

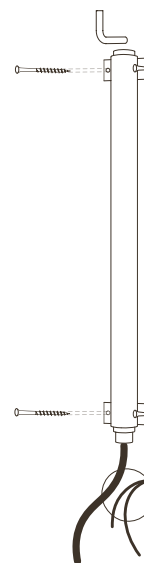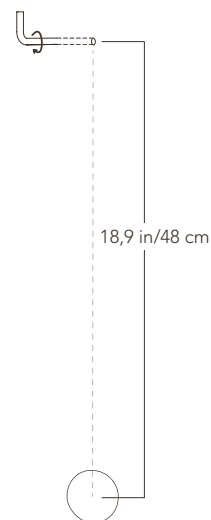


08. Connect the driver to the power cable and **insert** the cable and the driver into the hole.

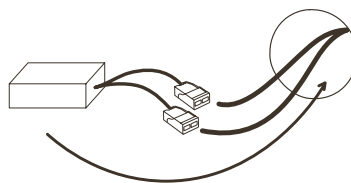

09. Insert the light bar cable into the wall light hole.

10. Connect the cable to the wago terminals on the driver and **push** the wire as far as possible into the hole in the wall.

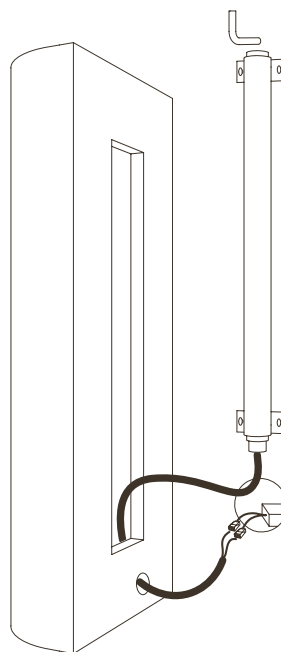

11. Position the wall light.

12. Switch the power back on.

