




INSTALLATION INSTRUCTIONS

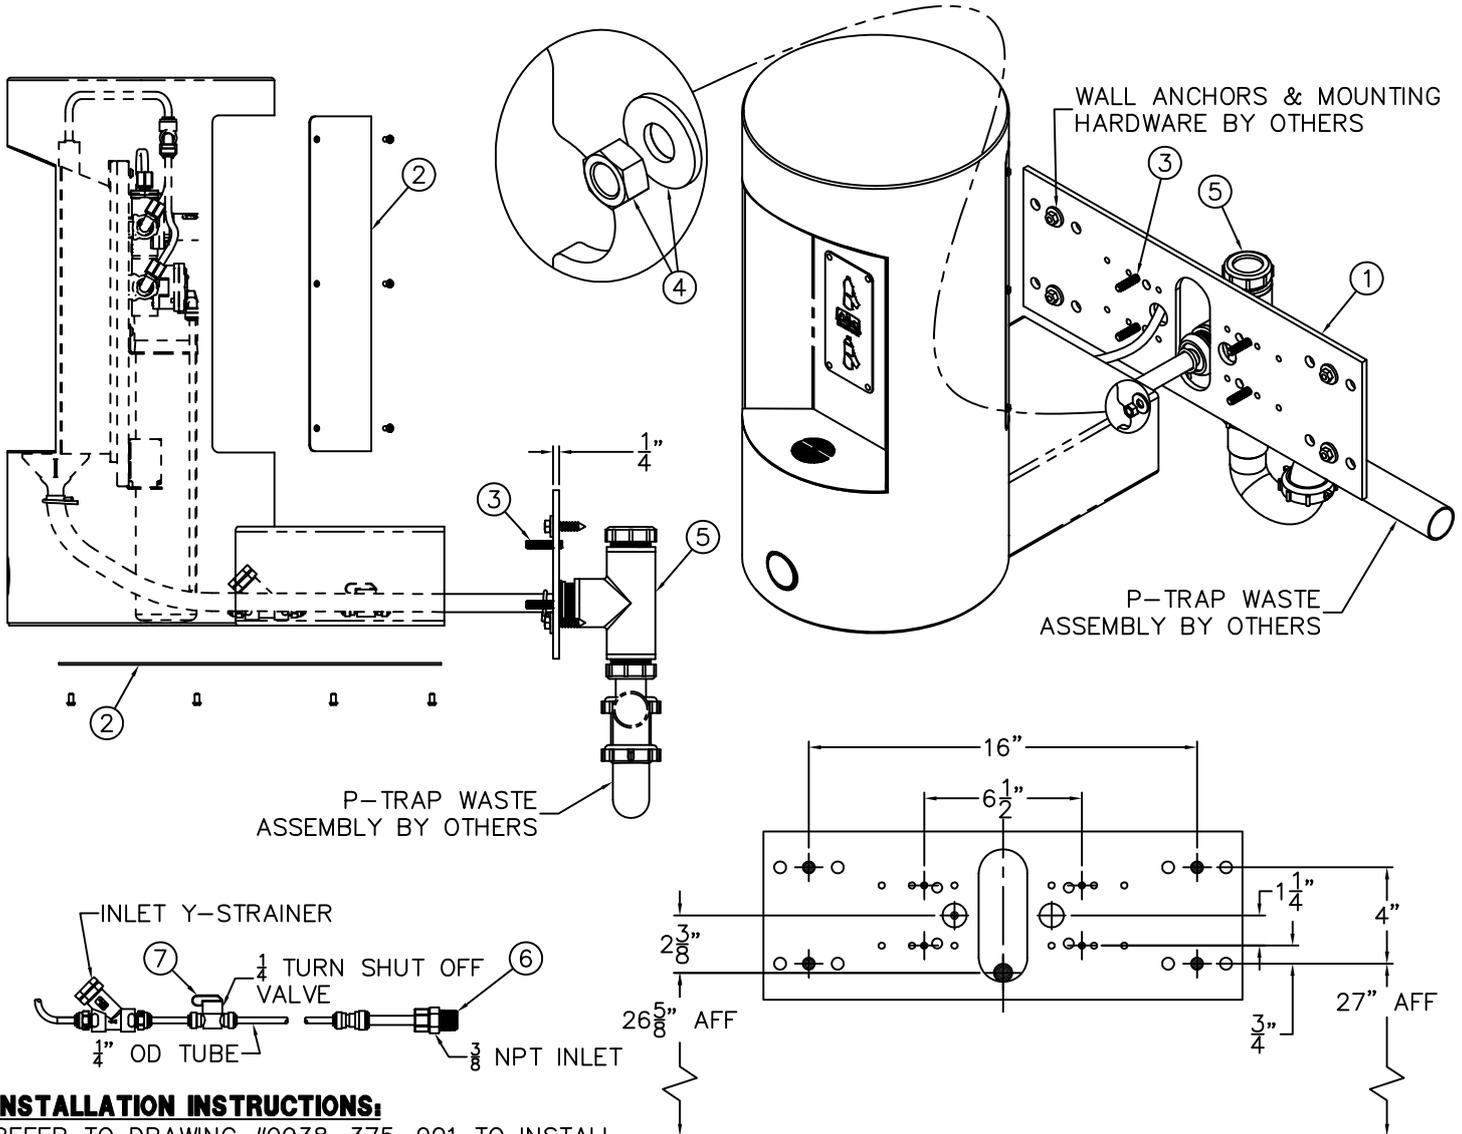

INSTALLATION INSTRUCTIONS:

REFER TO DRAWING #9938-375-001 TO INSTALL MOUNTING PLATE CORRECTLY.

A-ROUGH-IN WASTE AND SUPPLY LINES DURING -MP1 (1) INSTALLATION OR PRIOR TO MOUNTING FIXTURE.

B-CAREFULLY REMOVE FIXTURE FROM PACKING MATERIAL AND COVER TO PREVENT SCRATCHING OR DAMAGE.

C-REMOVE ACCESS COVERS (2) FROM HOUSING AND INSPECT FIXTURE TO ENSURE ALL TUBING CONNECTIONS, VALVES AND PUSHBUTTONS HAVE NOT BECOME LOOSE DURING SHIPPING. CORRECT IF NECESSARY.

D-ALIGN FIXTURE MOUNTING POINTS WITH STUDS (3) AND SLIDE FIXTURE TO FINISHED WALL. FIX WITH NUTS AND WASHERS PROVIDED (4).

E-MAKE UP CONNECTIONS TO 1-1/4" OD WASTE TEE (5) PROVIDED FOR P-TRAP ASSEMBLY BY OTHERS.

F-FLUSH SUPPLY LINES THOROUGHLY BEFORE CONNECTING TO 3/8" NPT SUPPLY INLET (6).


G-TEST OPERATION BY DEPRESSING BUTTON AND ADJUST FLOW RATE BY ADJUSTING 1/4 TURN SHUT OFF VALVE (7) AS REQUIRED. CHECK ALL PIPING FOR LEAKS. CORRECT IF PRESENT.

H-ASSEMBLY ACCESS PANELS (2) TO COMPLETE THE INSTALLATION.

 MURDOCK-SUPER SECUR P.O. Box 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746 Phone: (800) 591-9880 www.murdock-supersecur.com	TITLE M-OBA4 WALL MOUNTED BOTTLE FILLER		
	MANUFACTURE DATE JUNE 2017 TO PRESENT	DATE ISSUED JULY 28, 2017 DATE REVISED	DRAWING NUMBER 9938-008-001



ROUGH-IN FOR 3/8" OD PUSH-IN SUPPLY INLET, STRAIGHT STOP RECOMMENDED. *1/4" NCT x 2" LONG TUBE STUB OUT PROVIDED.
ROUGH-IN FOR 1-1/4" OD P-TRAP WASTE OUTLET.

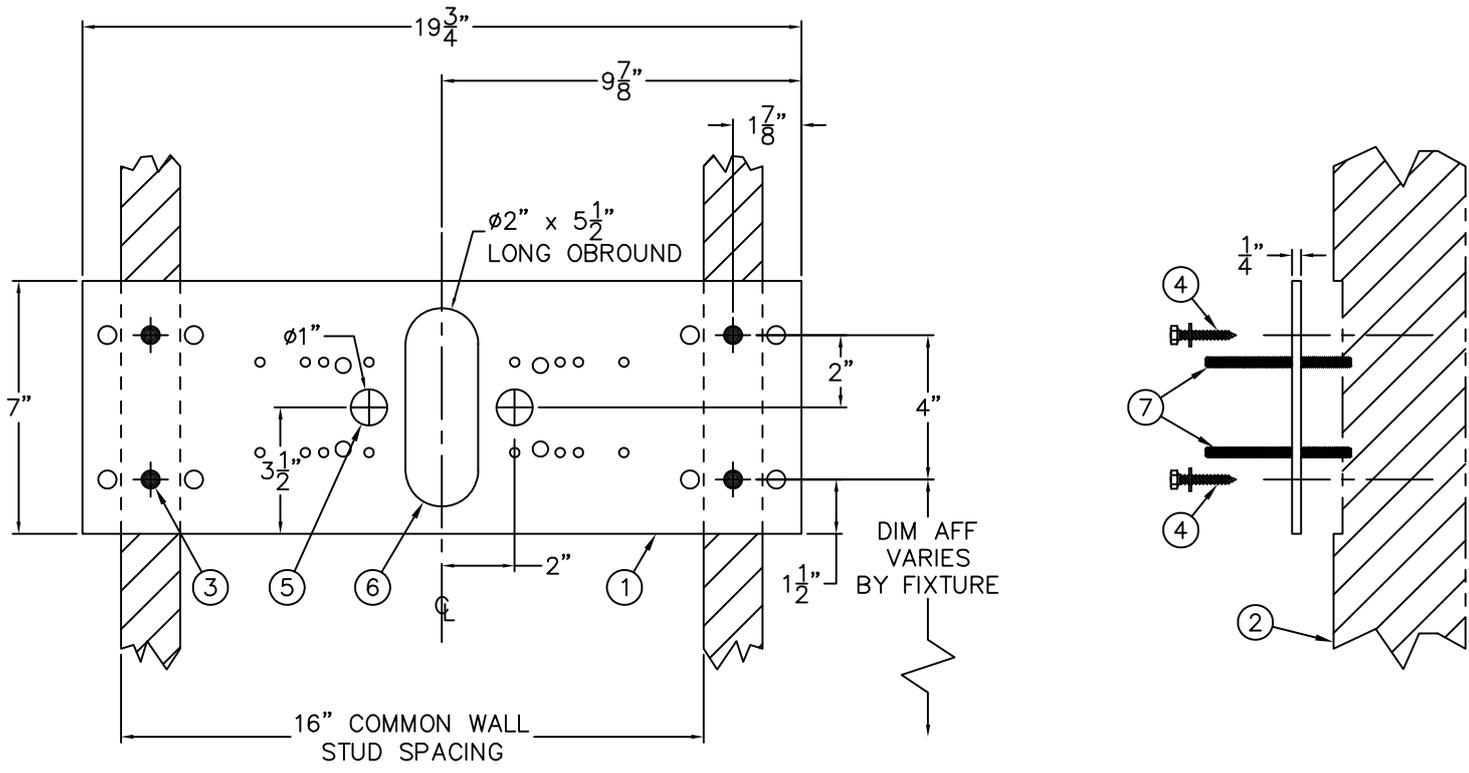

INSTALLATION INSTRUCTIONS:

A-PLATE ① INTENDED TO BE RECESSED FLUSH WITH SUPPORT FRAMING ② PROVIDED BY INSTALLER. FRAME & BLOCK OUT SUPPORT USING DIMENSIONS SHOWN. FRAME SHOULD SUPPORT 300 LBS MINIMUM.

B-MOUNTING PLATE ① IS 1/4" THICK AND INCLUDES 12, 1/2" DIAMETER PUNCHING FOR ANCHORING HARDWARE BY OTHERS.

C-STRIKE A HORIZONTAL CHALK LINE TO LOCATE BOTTOM MOUNTING HOLES ③. REFERENCE DISCHARGE HEIGHT REQUIREMENTS FOR YOUR MODEL AND FACILITY TO DETERMINE CORRECT HEIGHT AT FINISHED FLOOR (AFF).

D-AFTER POSITIONING PLATE CORRECTLY, FIX PLATE TO WALL USING APPROPRIATE, INSTALLER PROVIDED ANCHORING HARDWARE ④.

E-MAKE UP APPROPRIATE SUPPLY ⑤ AND WASTE ⑥ ROUGHS THROUGH MOUNTING PLATE OPENINGS. A STRAIGHT SUPPLY STOP IS RECOMMENDED.

F-REFER TO FIXTURE INSTALLATION SHEETS TO LOCATE 5/16" THREADED STUDS MOUNTING HARDWARE AND THREAD STUDS ⑦ THRU PLATE SO THAT A MINIMUM OF 1-1/4" OF THREAD PROJECTS BEYOND THE FINISHED WALL MATERIAL.

G-PROTECT THREADED STUDS ⑦, SUPPLY ⑤ AND WASTE ⑥ ROUGHS WHILE FINISHING WALL.

<p>MURDOCK-SUPER SECUR P.O. Box 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746 Phone: (800) 591-9880 www.murdock-supersecur.com</p>	<p>TITLE -MP1 WALL MOUNTING PLATE</p>		<p>DATE ISSUED 09/28/05</p>	<p>DRAWING NUMBER 9938-375-001</p>
	<p>MANUFACTURE DATE JANUARY 2006 TO PRESENT</p>	<p>DATE REVISED 03/02/16</p>		