



JURY BASE SEATING

INSTALLATION GUIDE

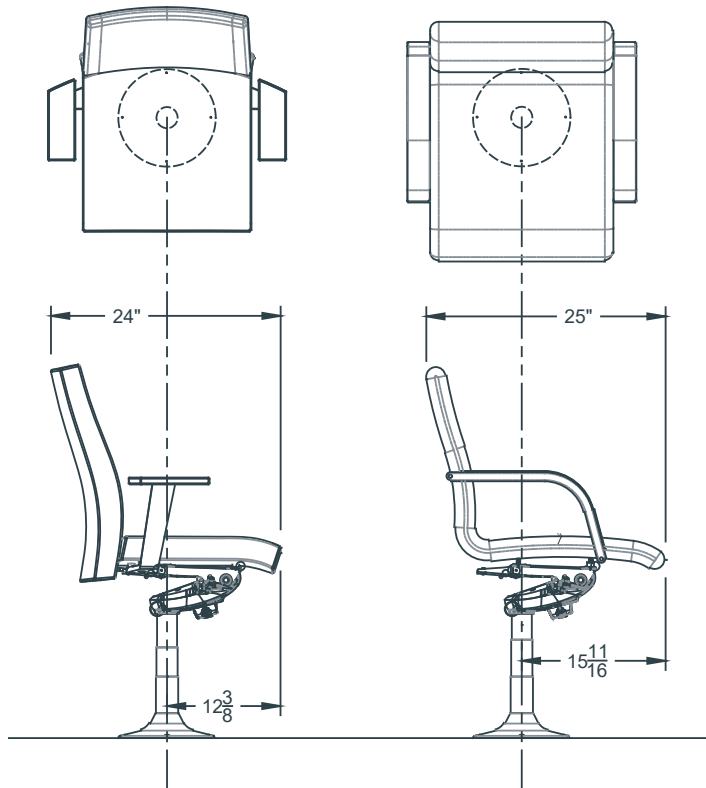



Now Chair

Senator Boardroom Chair

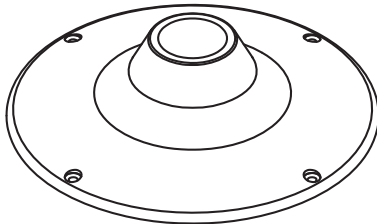

DRILL INTO FLOOR ON SITE BY OTHERS
WITH APPROPRIATE FASTENER

DEPENDING ON FLOOR COMPOSITION
TAPCON FASTENER FOR CONCRETE OR
12 (MINIMUM) WOOD SCREW FOR WOOD FLOOR)
OR EQUIV F.H. LAG BOLT

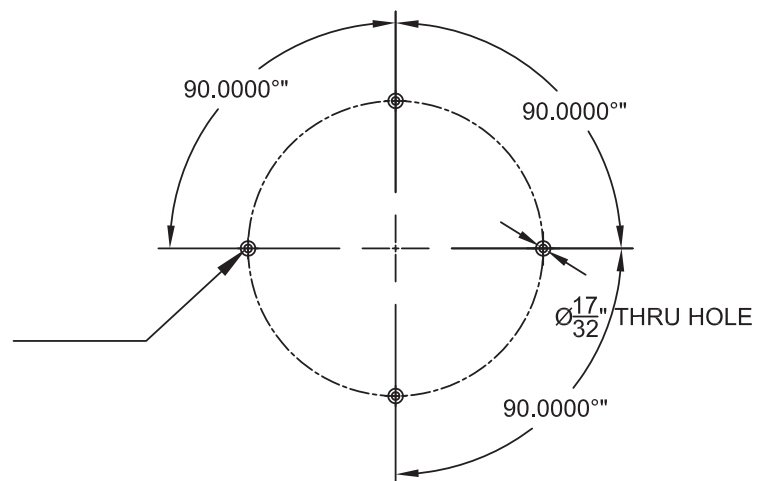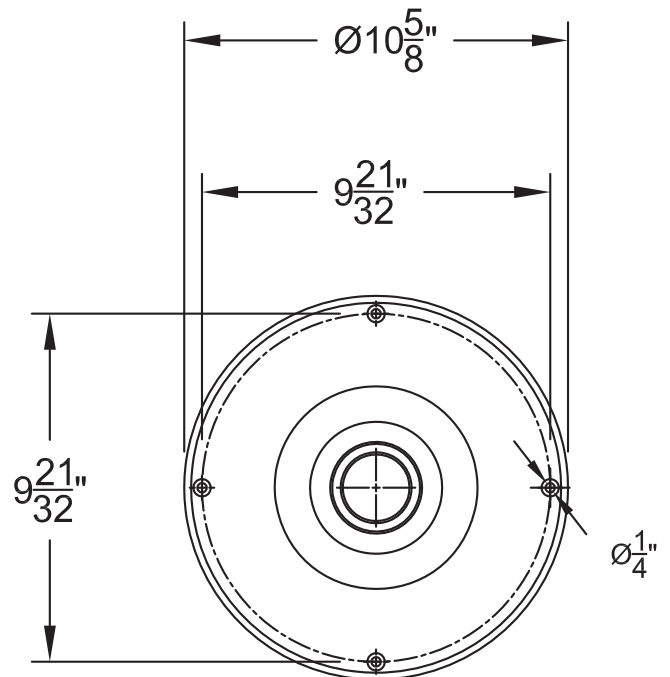

Drill Pattern For Floor