

Signaltape® Underground Warning Tape | Installation Instructions**Instructions for Open Trench Installation**

1. Position box for product to be dispensed from side opening.
2. Pull tape and lay flat in trench with the printed side up over the length of the utility.
3. At the end of each box overlap the ends of the tape by a minimum of 20 ft (approximately 6 m). (See **Figure 1**)
4. For utility installations exceeding twelve inches in overall width, install multiple runs of tape side by side, overlapping as needed, to provide full coverage. (See **Figure 2**)
5. Backfill trench according to project specifications.

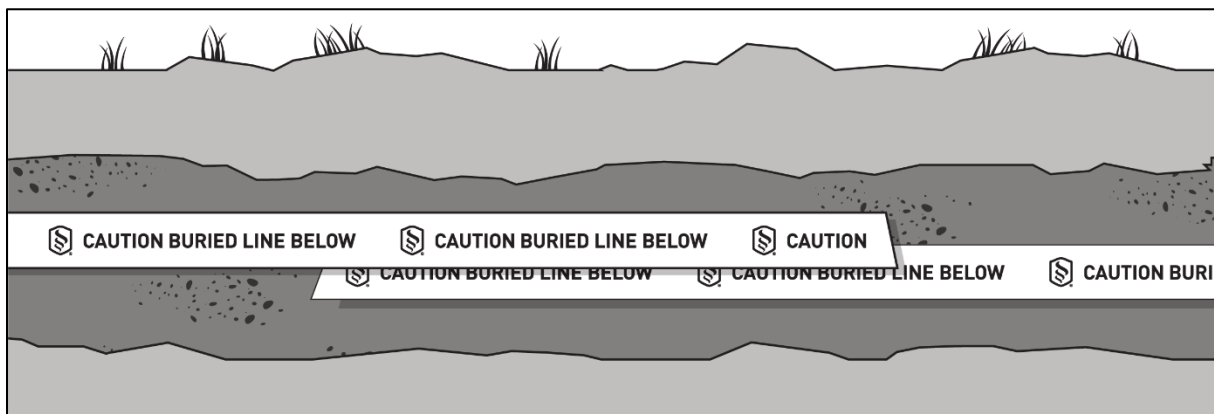


Figure 1 – Overlap ends by a minimum of 20 ft (approximately 6 m).

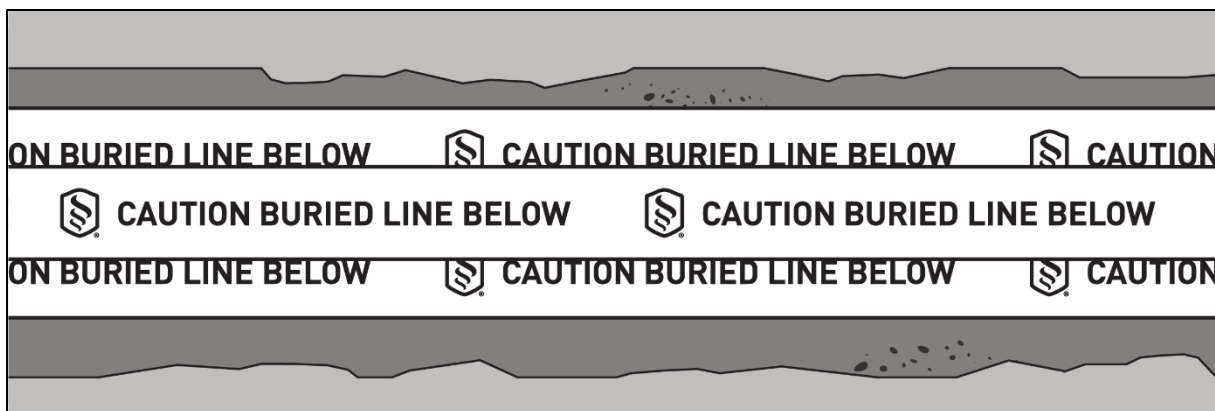



Figure 2 – Overlap parallel runs as needed to cover the entire width of the utility installation.

Additional Installation Options: Signaltape® products may also be installed with static or vibratory plow.

Signaltape® Underground Warning Tape | Installation Instructions**IMPORTANT:**
BURIAL DEPTH

It is recommended that Signaltape® be buried 12 inches (30 cm) or less below grade.

The minimum distance from the top of the pipeline should be 12 in (30 cm), with 24 in (60 cm) to 36 inches (90 cm) recommended as shown to the right.

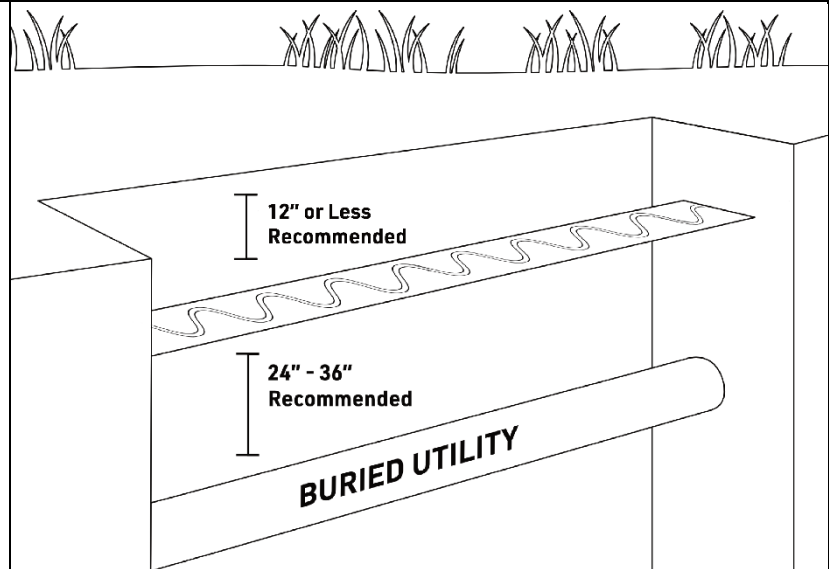

Please read limited warranty available at damageprevention.com/signaltape/limited-warranty