


## Tracetape® Detectable Marking Tape | Installation Instructions

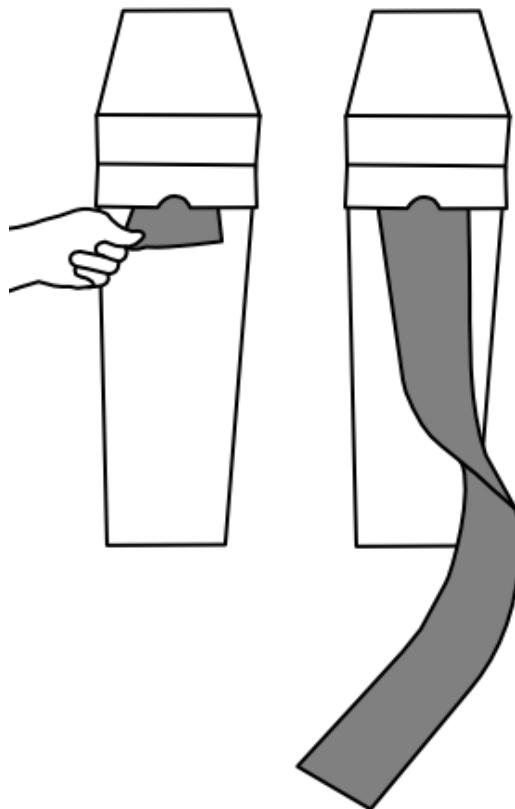

### Instructions for Open Trench Installation

1. Position box for product to be dispensed from side opening.
2. Pull tape and lay flat in trench (printed side up) centered above the length of the utility.
3. At each end of the tape, separate enough of the film layers to access the tracer wire.
4. Join tracer wire using a direct bury connector with strain relief unless otherwise specified by the engineer.
5. Backfill trench according to project specifications.