
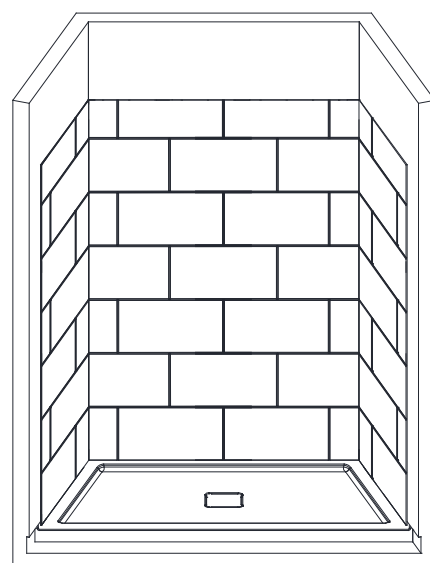
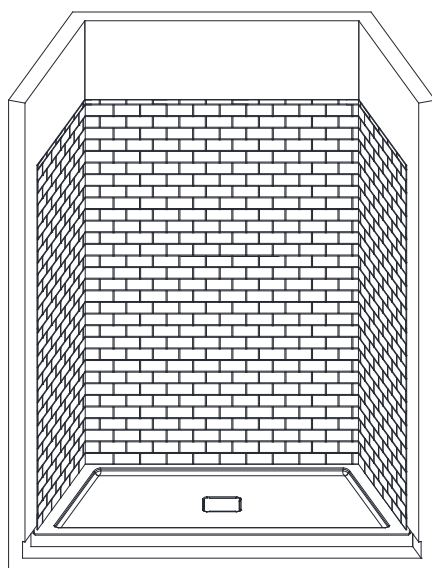


# *INSTALLATION MANUAL*

## GUIDE D'INSTALLATION

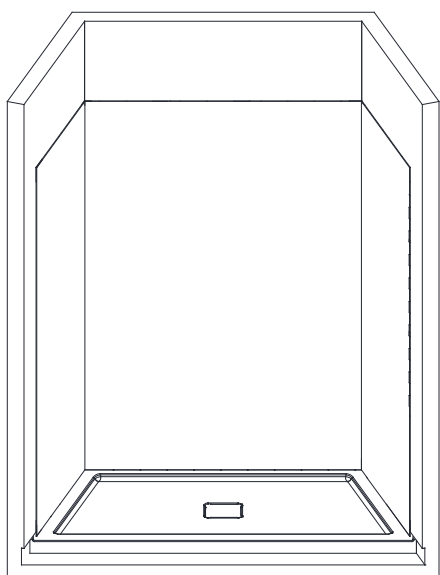


**PBA**  
**PBB**


SPECIFICATION. / SPÉCIFICATION.

| Model<br>Modèle | Dimensions*            |                 |                           |
|-----------------|------------------------|-----------------|---------------------------|
|                 | W                      | L               | H                         |
| PBA             | 30"~36"<br>[762~914mm] | 60"<br>[1524mm] | 60"~104"<br>[1524~2642mm] |
| PBB             | 30"~36"<br>[762~914mm] | 60"<br>[1524mm] | 60"~104"<br>[1524~2642mm] |

\* Tolérance sur les dimensions:  $\pm 1/4"$  [.6 cm]  
Tolerance on dimensions:  $\pm 1/4"$  [.6 cm]

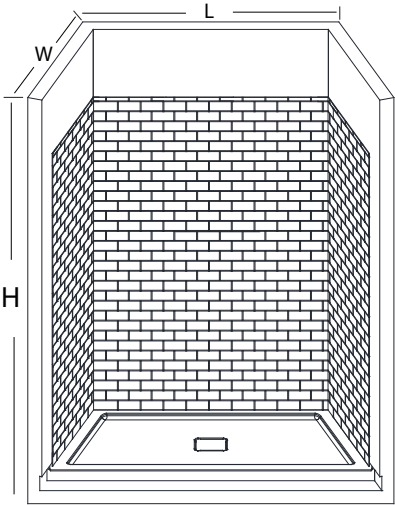


TOOLS AND MATERIALS REQUIRED. / OUTILS ET MATÉRIAUX REQUIS.

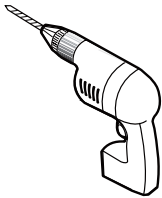

DRILL  
PERCEUSE




DRILL BITS 3/16"  
MÈCHE 3/16"

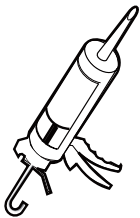


SILICONE  
SCÉLLANT



PENCIL  
CRAYON



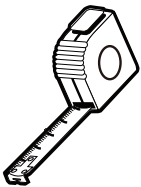



TAPE MEASURE  
RUBAN À MESURER

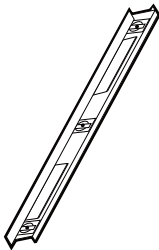


LEVEL  
NIVEAU

Elements / Pièces:

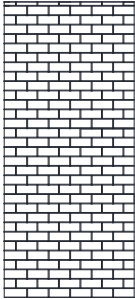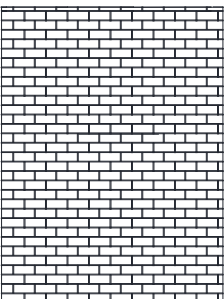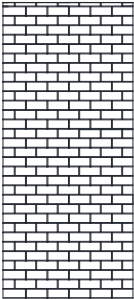
|                                                                                                 |                                                                                                |                                                                                                  |                                                                                                  |                                                                                                  |
|-------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
| A1<br><br>1X | B<br><br>1X | A2<br><br>1X | C<br><br>2X | D<br><br>2X |
|-------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|

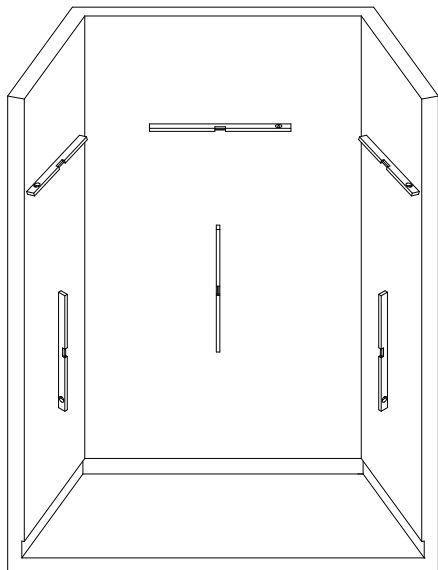


Step 1. Check if the wall is flat and vertical.

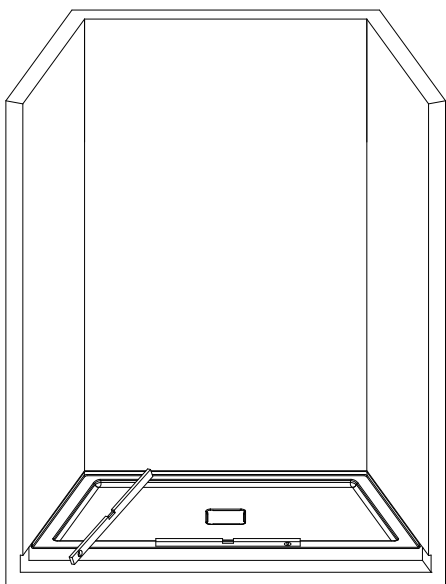


Step 2. Install the shower base to ensure it is level.

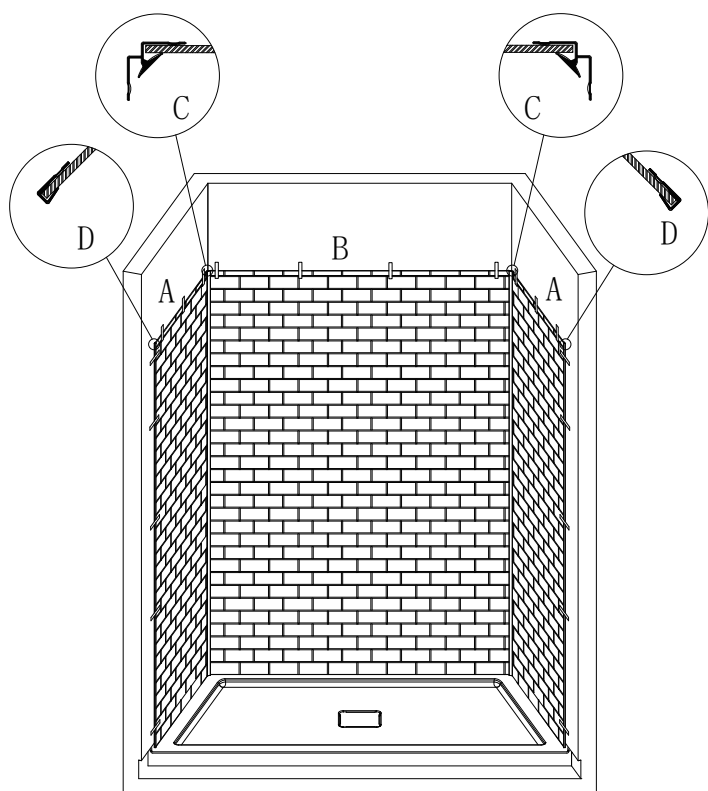


Step 3. Trial-fit the A and B wall panels and C and D trim strips on the wall, align the gaps, check if the dimensions match, then mark a positioning level line above.

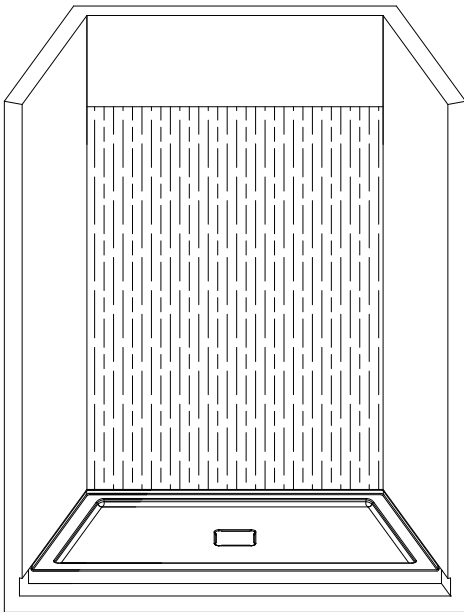


Step 4. Install the front A wall panel first, apply adhesive to the front wall surface.

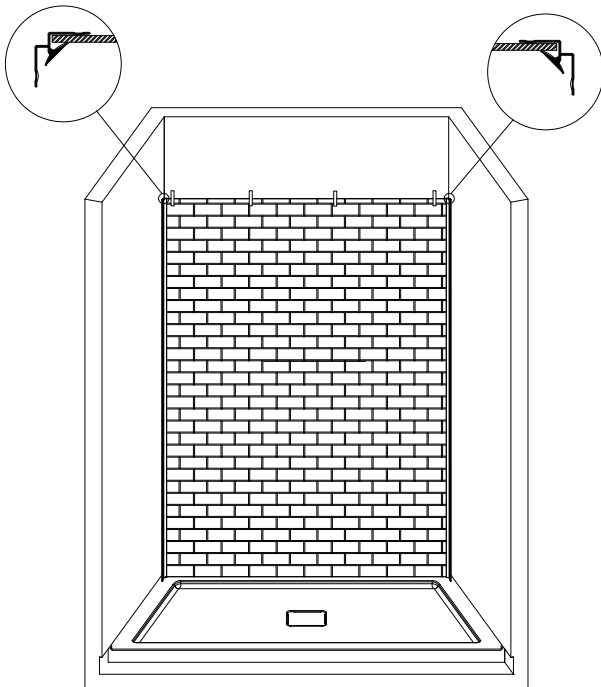


Step 5. After fitting the C corner trim strips on both sides of the A back panel, press and attach it flat onto the wall and ensure firm contact. Use masking tape at the top for auxiliary fixation to ensure a tight bond.

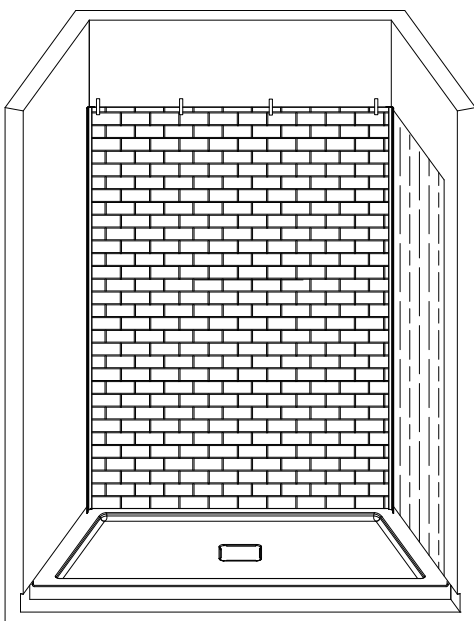


Step 6. Apply adhesive to the side wall surfaces.

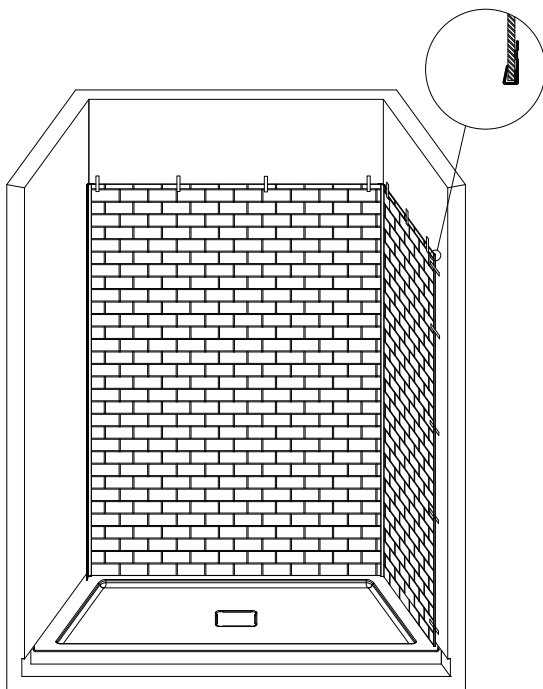

Step 7. Attach the B side wall panel, press firmly, and use masking tape at the top for auxiliary fixation to ensure a tight bond.

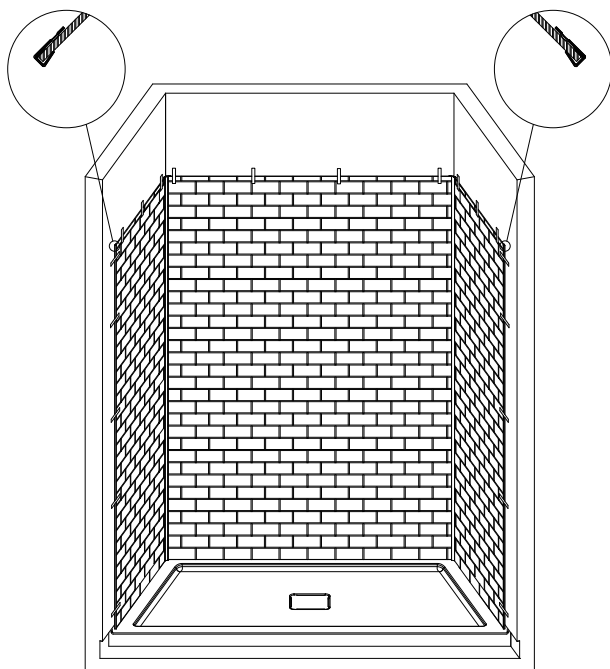

Step 8. Repeat step 6 to attach the other side panel.

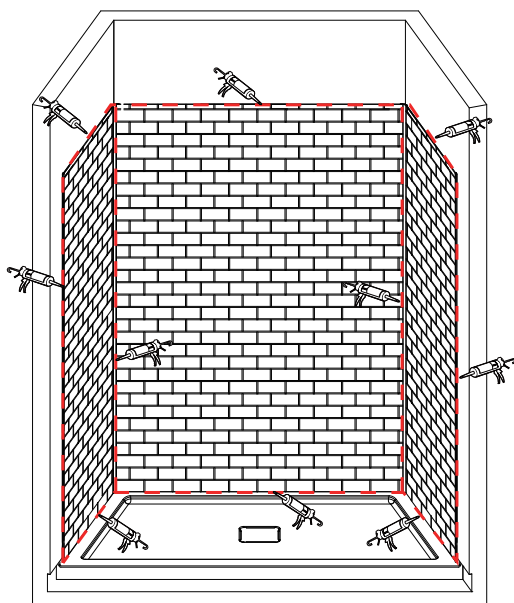

Step 9. Apply silicone sealant to the seams at the joints.