


17B adjust (if necessary)



Open the glass door. Put both black supporting blocks (5mm) onto the floor element and shut the glass door, so that both sides of the door rest on the supporting blocks. You may need to lift the door slightly using the door handle in order to be able to close it properly. After closing the door one person should be inside the booth.

Öffne die Glastür. Lege die beiden mitgelieferten Unterlegklötze (5mm) auf das Sockelelement und schließe die Glastür, sodass sie an beiden Seiten auf den Unterlegklötzen aufliegt. Ggf. musst Du die Tür beim Schließen dazu leicht am Griff anheben. Eine Person sollte nach dem Schließen der Tür in der Kabine sein.

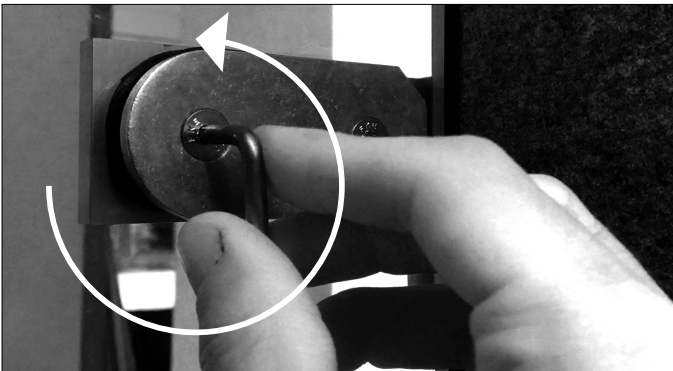

Loosen all screws using the enclosed hex wrench (4mm). One person needs to be inside the booth in order to do this. When loosening: apply some pressure on the wrench so it can't slip out and turn carefully.

Lockere alle Schrauben mit dem passenden Inbusschlüssel (4mm). Eine Person muss dafür in der geschlossenen Kabine sein. Den Inbusschlüssel vor dem Lösen mit etwas Druck in die Schraube drücken, damit der Schlüssel beim Drehen nicht abrutscht.



Now the person, that is outside of the booth, needs to make sure that a) the door is sitting straight in its frame and b) both door hinges rest firmly on the frame hinges. In order to do this push both hinges firmly down from the outside until they both rest tight on the black plastic shell and the door also rests equally on both supporting blocks.

Nun sollte die zweite Person von außerhalb der Kabine sicherstellen, dass a) die Tür gerade im Rahmen sitzt und b) beide Türscharniere fest aufsitzen. Drücke hierzu von außen beide gelockerten Türscharniere fest nach unten bis sie fest auf der schwarzen Plastikhülse aufsitzen und die Tür gleichmäßig auf beiden Unterlegklötzen ruht.



Finally, the person inside the booth, needs to tighten the screws on both hinges. Remove both supporting blocks. Done!

Nun muss die in der Kabine befindliche Person alle Schrauben an beiden Scharnieren wieder festziehen. Unterlegklötze von unter der Tür entfernen. Fertig!