


Premium Heavy Duty Drafting

Assembly instructions




Learn more in our
Assembly Library.

1

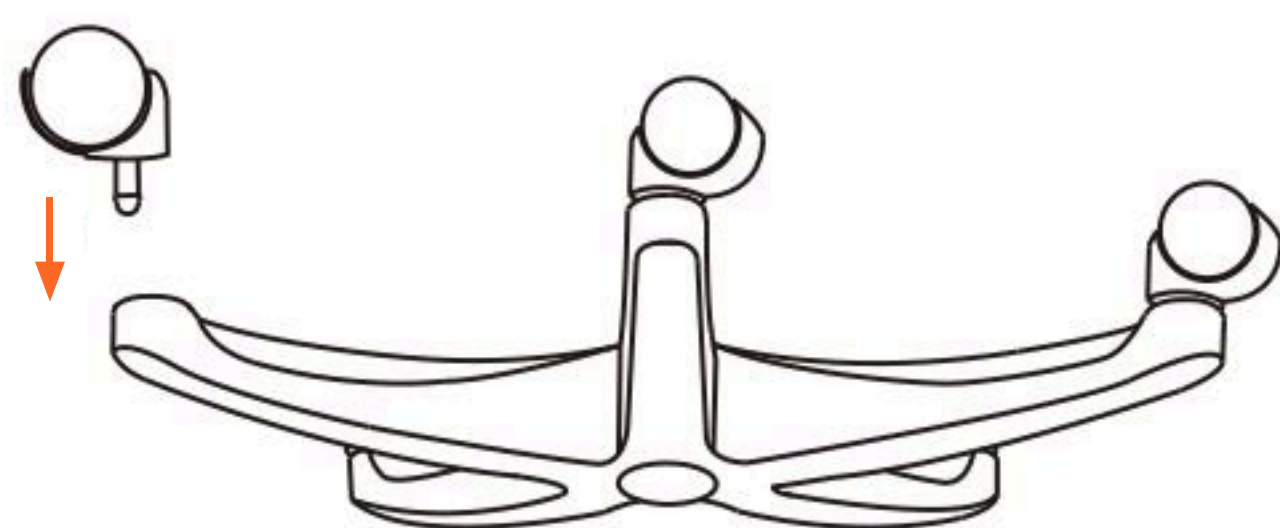


- Place the base on flat surface
- Insert castors into base

2

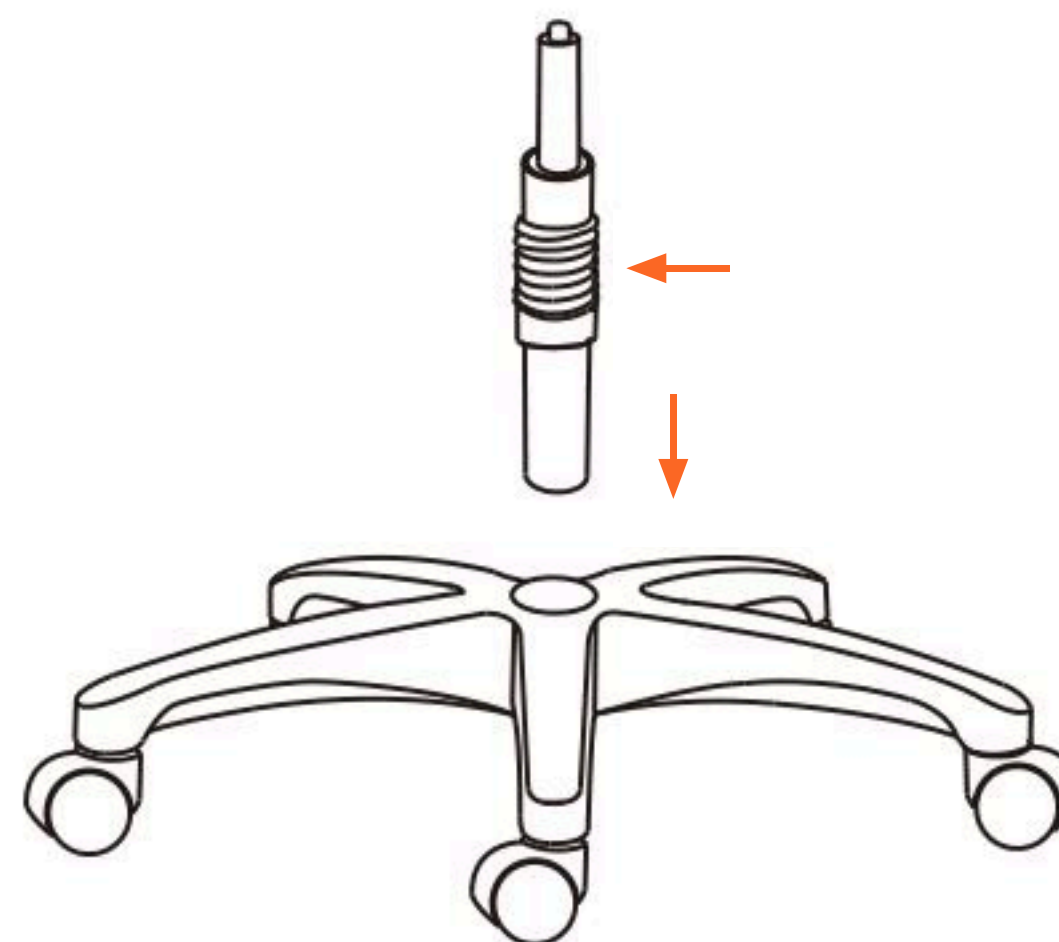

Insert gas cylinder into base

3

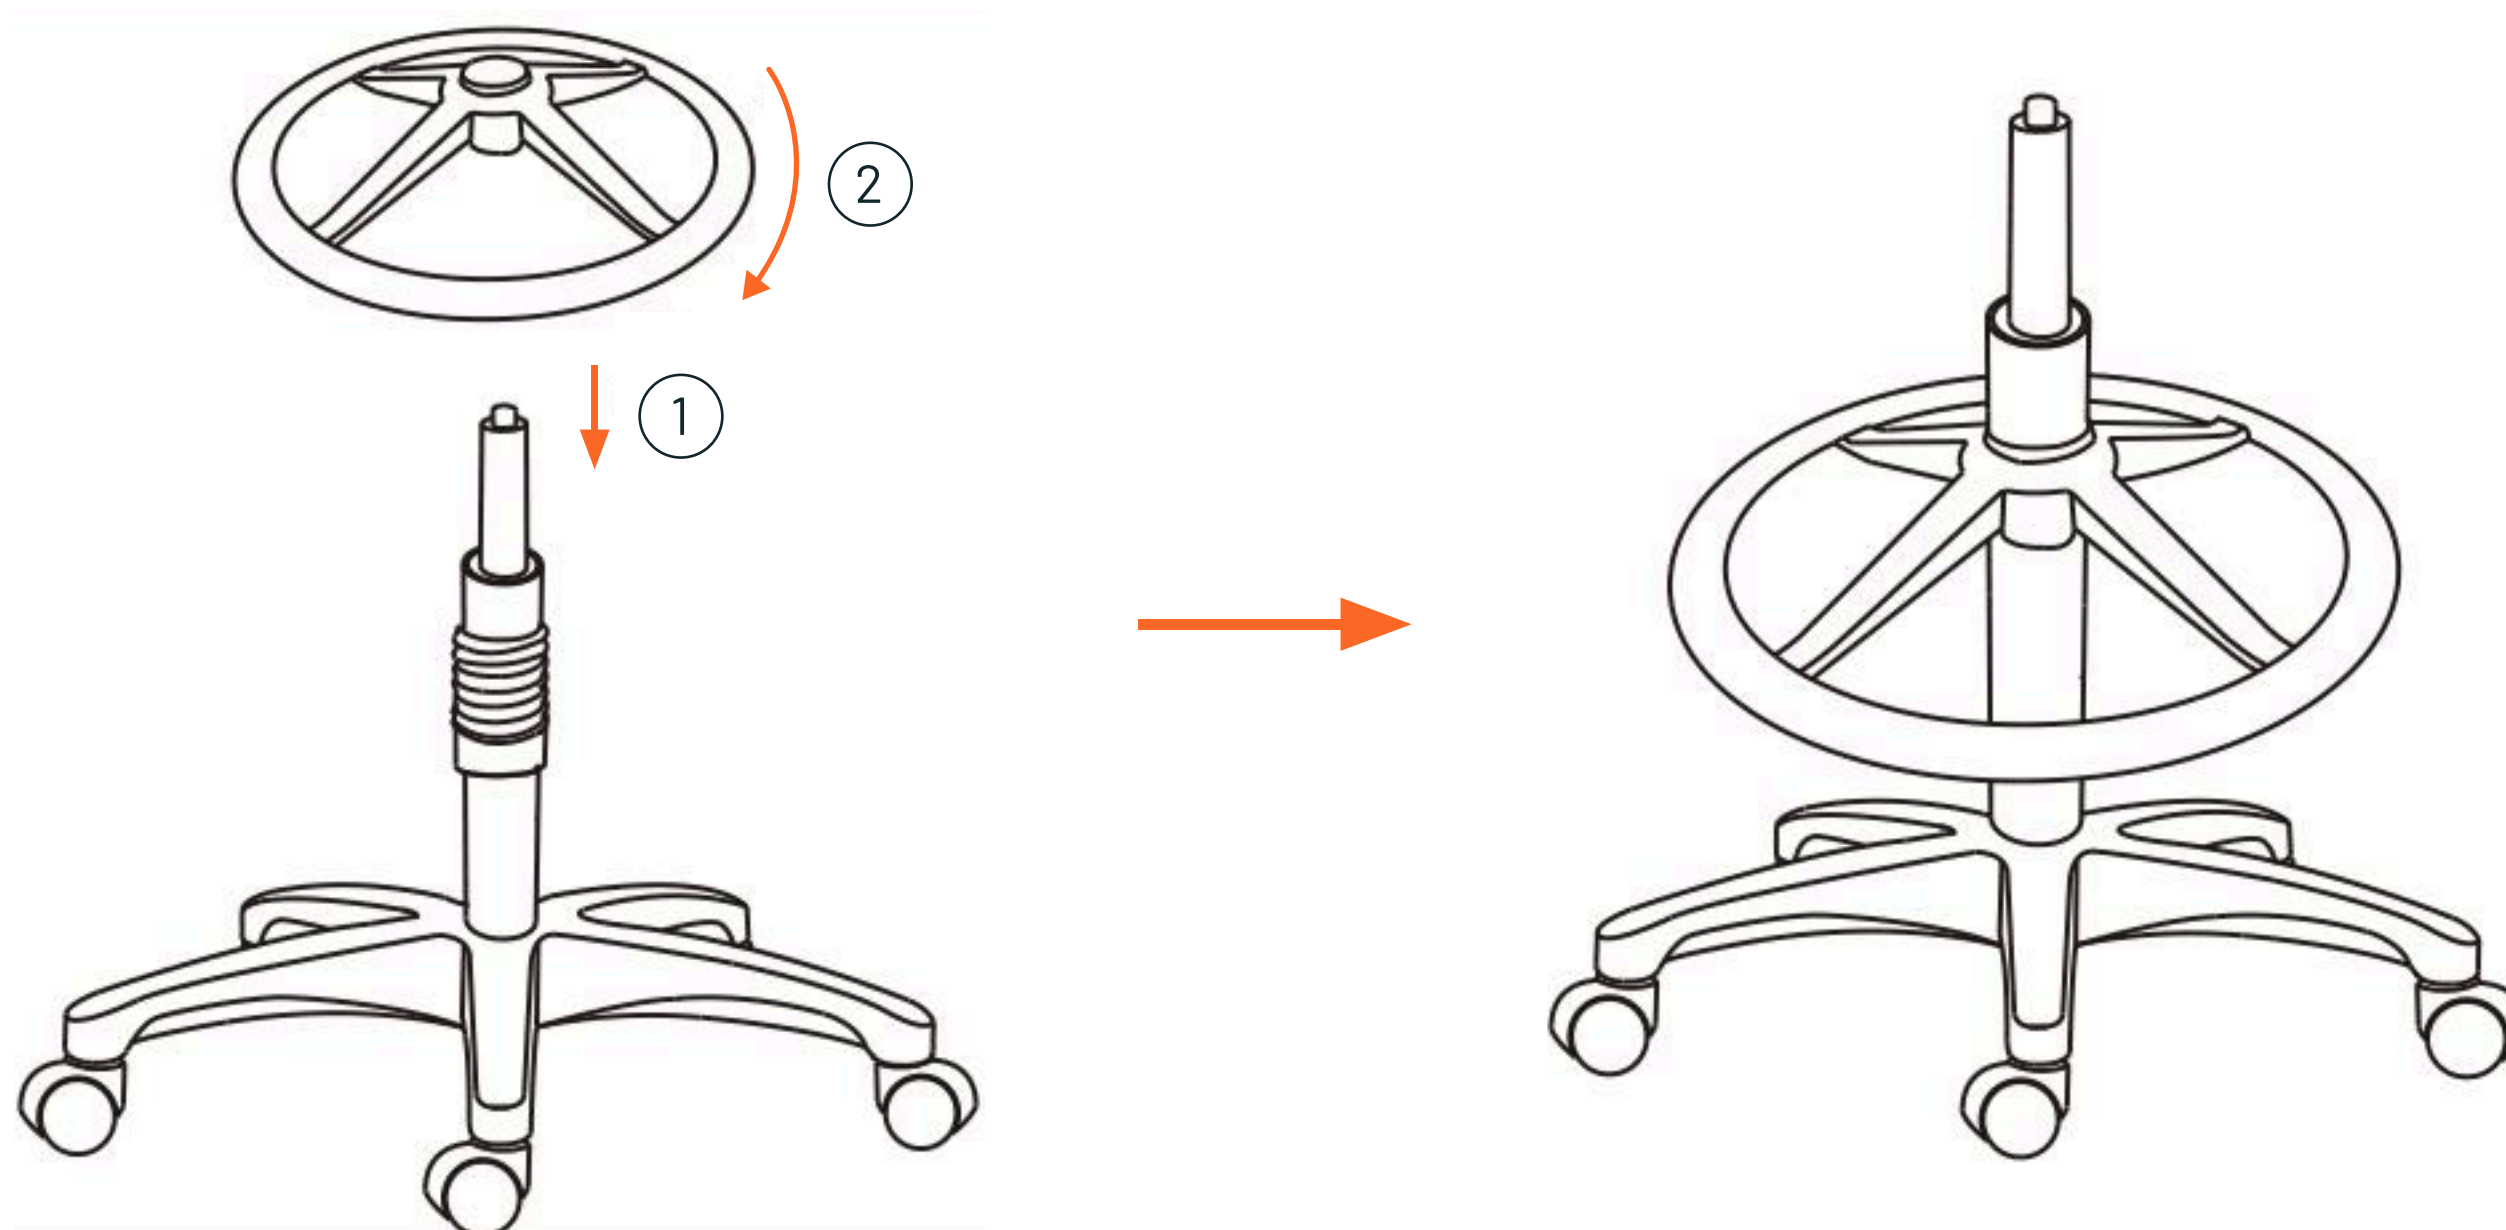

Place drafting ring over gas cylinder
and rotate clockwise to lock




1 PC



1 PC



5 PC

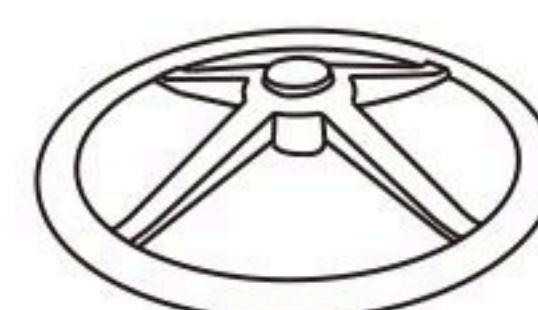

1 PC

Need help?



Assembly Videos on: www.pagointernational.com.au



support@pagointernational.com.au