


INSTALLATION TIPS


1

Plug in the Sensor Relay and check for a green LED light. Green means the sensor is connected to the cellular network. Register the Sensor Relay first, before registering the Flowie-O(s).*

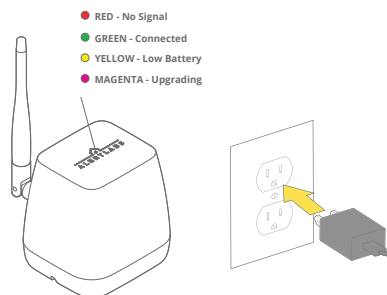


2

Strap the Flowie-O low, snug, and centered onto the water meter.

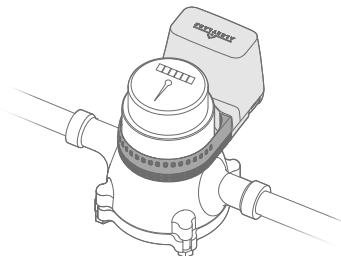


3

For compound meters, place each sensor as far away from the other meter dial as you can while keeping low and snug.

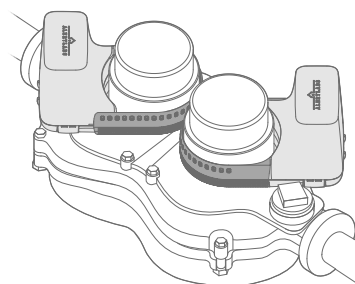


4

Check the position:

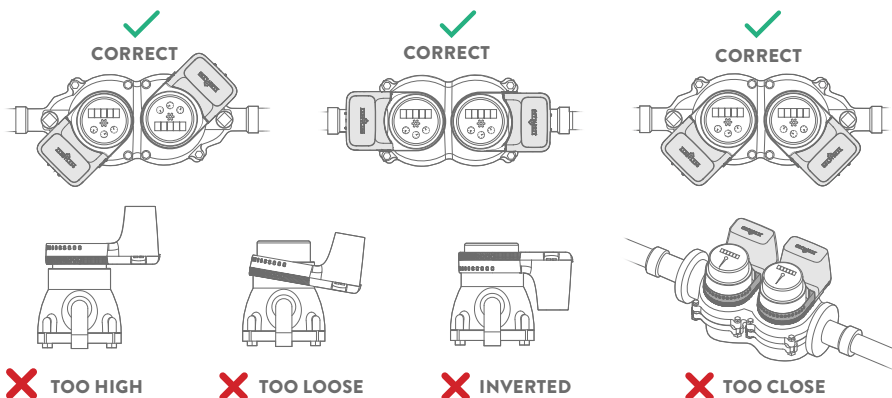

5

Write your contact info on the asset tag with a permanent marker and attach it.

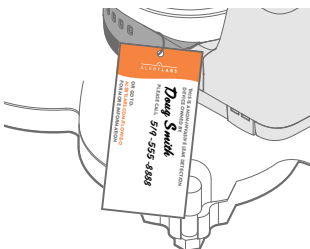

***Note:** If the sensor is already labelled with the sensor name and location, it has been pre-registered for you and you do not need to complete the registration step. To learn more about optional pre-registration services, please contact your Account Manager.