


The image shows the interior of a truck bed with a dark-colored canopy. The canopy is supported by a black metal frame with cross-bracing. The walls of the canopy are made of a dark, heavy-duty fabric. On the right side, there is a large window with a black frame. The floor of the truck bed is covered with a dark, textured material. The overall lighting is soft and even.

TUNE[®]

Pushrod Quick
Release Install Guide

REQUIRED TOOLS

Might Want: Tape Measure

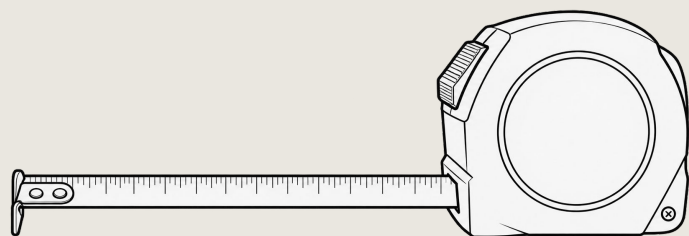

Install the Magnet Assembly

- 1 Locate the magnet assembly and detach it from the catch assembly.
- 2 Slightly loosen the M6 hammer nut on the back of the magnet assembly 2-3 turns so there is enough of a gap between the magnet and hammer nut to engage in the T-Track. (Fig. 1)
- 3 Center the hammer nut on the roof cross member T-Track using your tape measure.
- 4 Engage the hammer nut into the roof cross member T-Track by slowly tightening it. Ensure the hammer nut properly engages the T-Track and continue to tighten the magnet until it is firm against the T-Track. (Fig. 2)

→] **Separating the Magnet from the Catch**
The magnet is powerful and sometimes hard to separate from the catch assembly. Sliding the magnet sideways off the catch is the easiest way to safely separate the two items.



Magnet Assembly

Roof Cross Member T-Track



Install the Catch Assembly

- 1 Slide the catch assembly over the end of your lifting arm with the metal catch on the top. (Fig. 1)
- 2 Slide the catch assembly down the lifting arm until it lines up with the magnet assembly and fully engages in the center of it. (Fig. 2)



Fig. 1

Catch Assembly

Magnet Assembly



Fig. 2

Lifting Arm

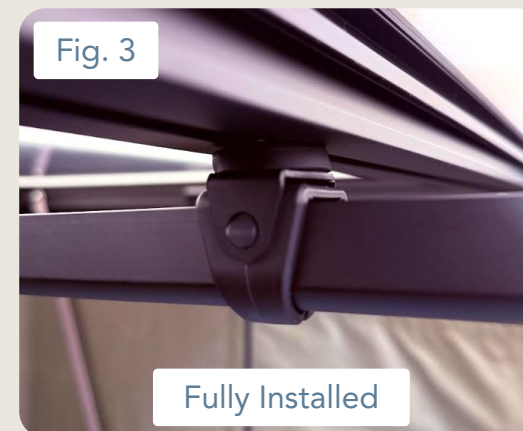


Fig. 3

Fully Installed

→] Catch Assembly Tightness

The catch assembly is designed with a tight fit so it does not slip over time. This means you may have to be firm with it as you slide it down the lifting arm.

Safety Disclaimer and Acknowledgment

By using Tune Outdoor products and their associated components, you acknowledge and agree to adhere to the following safety instructions and terms:

Proper Installation and Hardware Tightening:

All hardware must be adequately tightened to ensure secure installation of the product. Loose hardware may lead to improper installation, resulting in potential damage to the vehicle or injury.

Ensure that all fasteners are checked and tightened before use of your Tune Outdoor products. Periodic inspection is recommended to maintain safety during transportation.

Hammer Nut Engagement:

Hammer nuts must be fully engaged in the T-track to ensure the product remains securely attached. Failure to fully engage the hammer nuts may result in the propane tank and mount detaching while driving, leading to potential accidents, property damage, or injury.

Before driving, always double-check that the hammer nuts are properly secured and that the product is stable.

Responsibility and Indemnification:

By using this product, the user agrees to indemnify, defend, and hold harmless the manufacturer, distributor, seller, and their affiliates, employees, and agents from any claims, damages, injuries, or losses that result from improper use, installation, or failure to follow the provided safety guidelines.

This indemnity includes any legal costs and expenses incurred in defending against such claims, including those related to negligence, misuse, or failure to adhere to the product's instructions.

Getting Help

For replacement parts, warranty questions, or anything this guide does not cover, contact [Tune Outdoor Customer Care](#).