TUNE®

Rain Gutter Flare - Retrofit Guide

REQUIRED TOOLS

Isopropyl Alcohol

Clean Rags

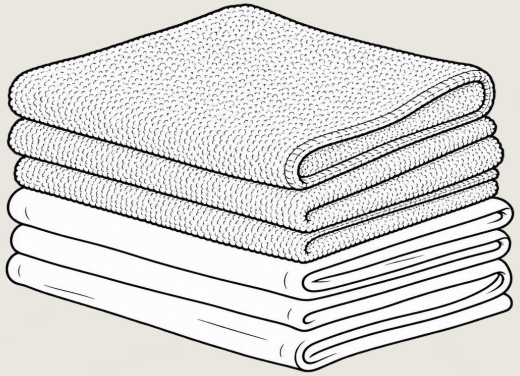

Gutter Flares (2)

Clean and Prep Gutters

1. Locate where the gutter flare will go on the underside of the truck cab side of the gutter. (Fig. 1 & 2)
2. Using your isopropyl alcohol and a clean rag, thoroughly clean the underside of each gutter where the flare will attach to.
3. Allow each gutter to air dry completely before moving to the next step.

Fig. 1

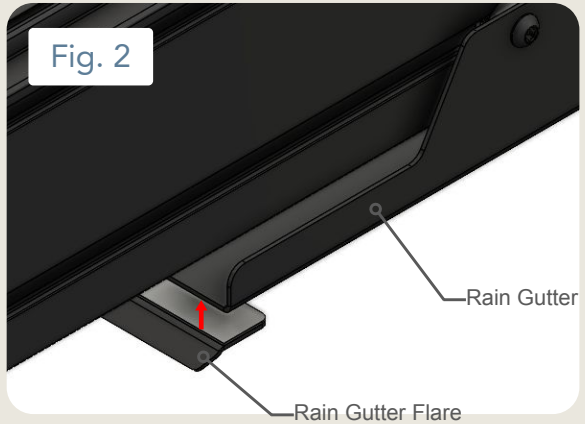

Fig. 2

Thorough Cleaning

It is important that the surface is completely clean and dry before adhering the gutter flares, or you risk them coming detached.

Adhere Gutter Flares

1. Remove the red release ply from the VHB adhesive tape on the gutter flare.
2. Carefully place the gutter flare centered on the gutter (Fig. 2), aligning the edge of the flare with the edge of the gutter.
3. Press firmly upwards on the gutter flare to ensure proper adhesion to the gutter.
4. Repeat these steps for the other side.

Fig. 1

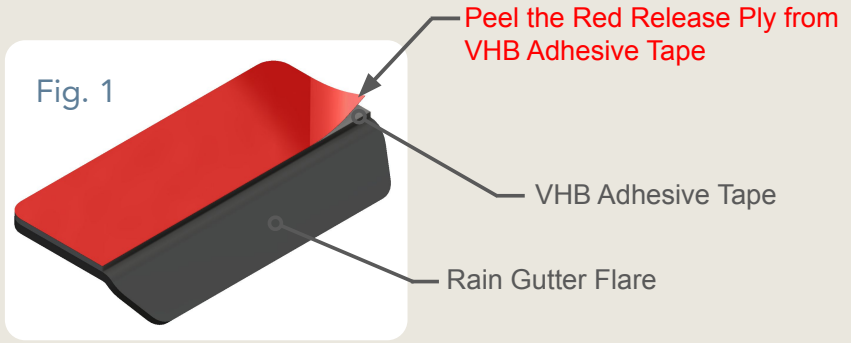

Fig. 2

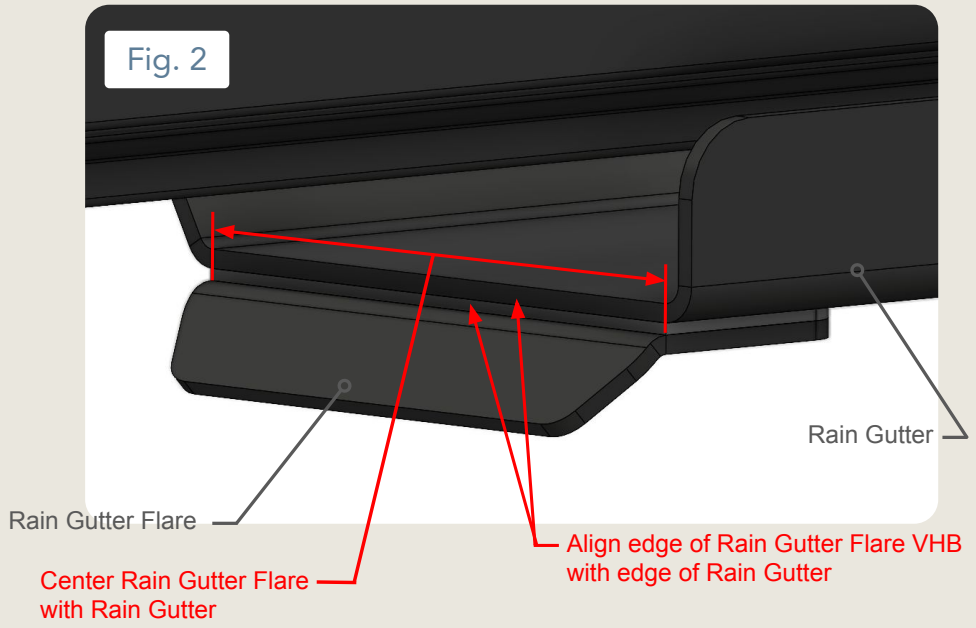

Getting Help
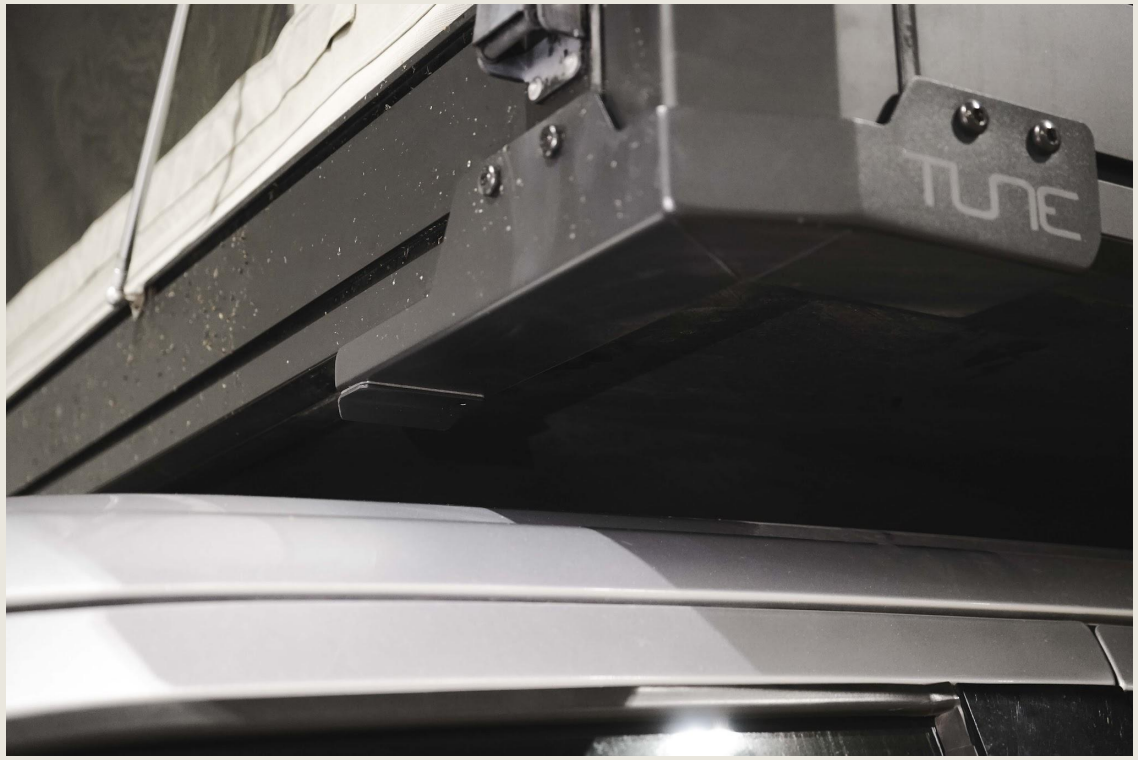
For replacement parts, warranty questions, or anything this guide does not cover, contact Tune Outdoor Customer Care.