

INSTALLATION MANUAL



Contents table



General information.....	3
Important	4
Installation.....	6
Wi-Fi.....	7
Concealed Wall Installation	7
Wall Installation with Gutter.....	10
Modbus TCP/IP	13
Concealed Wall Installation	13
Modbus RTU	16
Concealed Wall Installation	16
LoRaWAN / Sigfox.....	19
Concealed Wall Installation	19
Wall installation with gutter	23
LoRaWAN / Sigfox + Modbus RTU.....	27
Concealed wall installation	27
NB-IoT / LTE-M	31
Concealed wall installation	31
Wall Installation with Gutter.....	35
NB-IoT / LTE-M + Modbus RTU.....	39
Concealed Wall Installation	39
BACnet PoE	43
Concealed Wall Installation	43
BACnet 110 - 240V AC / 8 - 36V DC	46
Concealed Wall Installation	46
Usage notes.....	49


General information



Features

Multifunction touch button.
Customizable status light ring.
USB type C connector.
Wi-Fi Connectivity.*

Dimensions and weight

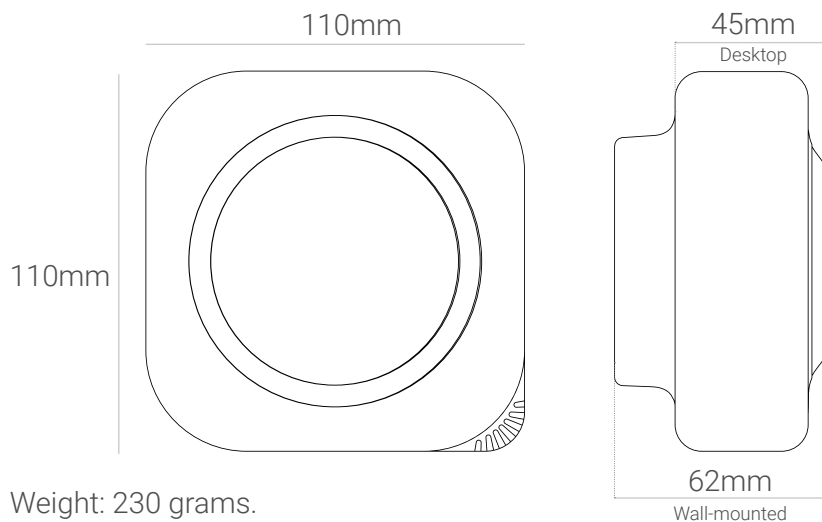

Weight: 230 grams.

Installation options

Desktop.
Wall-mounted (cable gut).
Wall-mounted (electrical box).

Power supply options **

110 - 240V AC 50-60 Hz 0.2A.
8 - 36V DC 2A 10W.
RJ45 PoE 54VDC 12.95W (802.3af and above).
USB type C 5VDC 2A (for desktop only).

Other connectivity options **

LoRaWAN 868 MHz.
LoRaWAN 915 MHz.
NB-IoT / LTE-M.
Sigfox 868 MHz.
Sigfox 915 MHz.
Ethernet.

Local communication options **

Modbus RTU (RS-485) & TCP/IP (wireless).
BACnet IP.

*The device can only connect to 2.4 GHz WiFi networks with 802.11 b/g/n (802.11n up to 150 Mbps) protocols.
Supported authentication and security protocols: WPA2 (Personal), WPA2 Enterprise, WPA3 (Personal), and WPA3 Enterprise.



IMPORTANT

BEFORE YOU BE-

Before you begin, follow these steps:

1. Identify what type of installation you are going to do: on the wall or in an electrical box.
2. Check what communication and connectivity options your MICA has at the bottom of the box.



3. Check that the box contents are correct.
4. Remove the MICA from the box and remove the back cover from the case.



Remove bottom screws (2)



Detach the back cover of the MICA

Recommendations

The recommended height to install the electrical boxes or attach the MICA to the wall is between 110cm and 180cm.




INSTALLATION

MICA models


Wi-Fi

Concealed Wall Installation

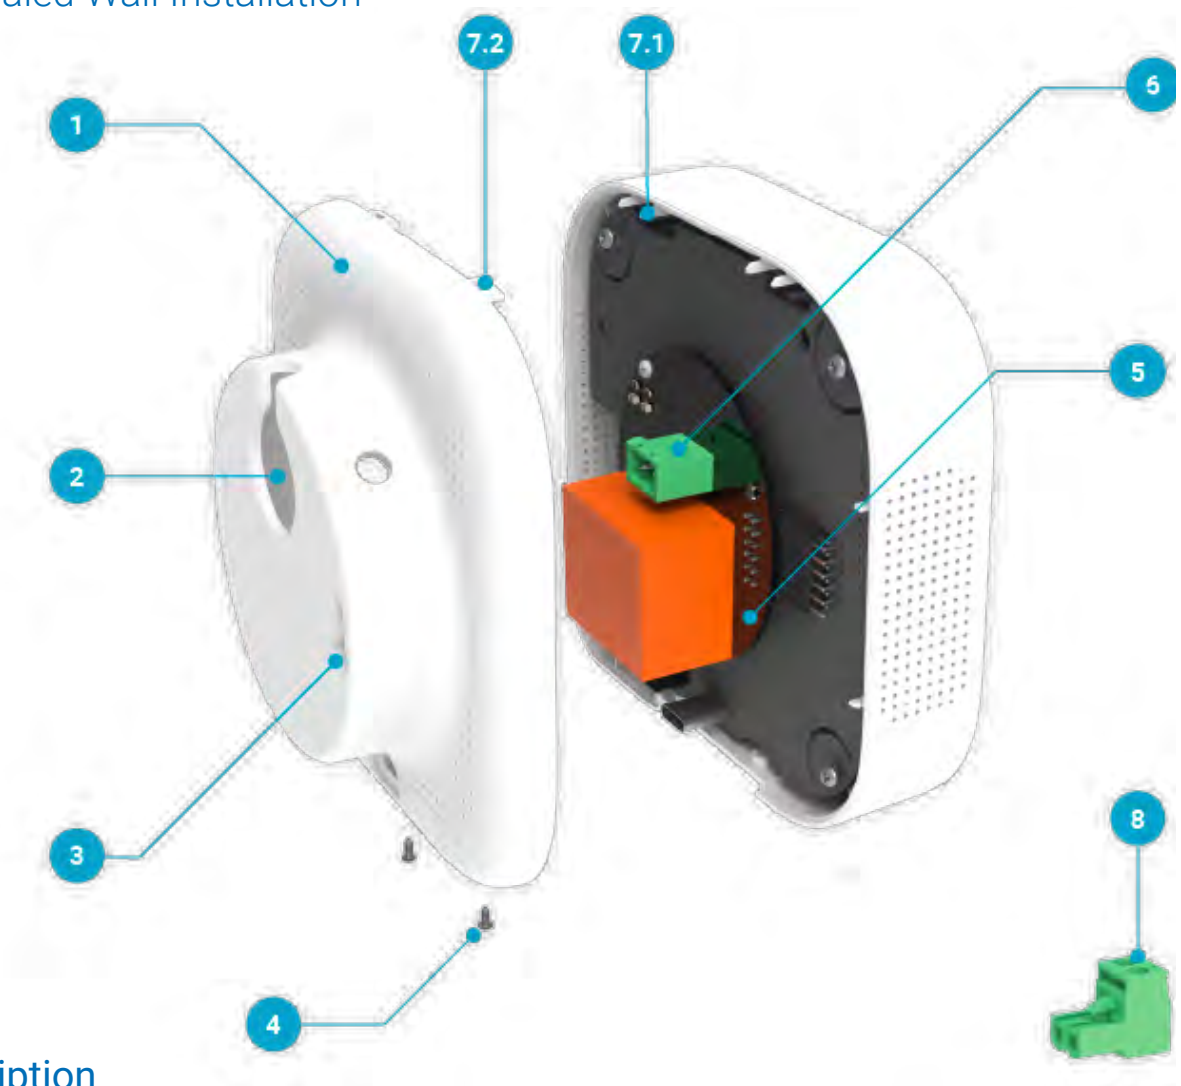



Description

1. Back cover of the case.
2. Back cover inlet hole.
3. Mounting holes (x2).
4. Assembly screws (x2).
5. Electronic Motherboard (MOBO).
6. Female power terminal
7. 1) Assembly guides (x2).
2) Assembly hooks (x2).
8. Male power terminal.

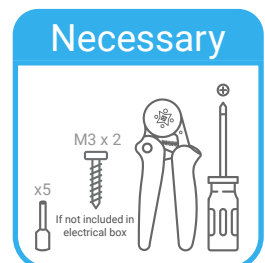

Note: The recommended height for installation is 120 - 180cm.

Installation steps

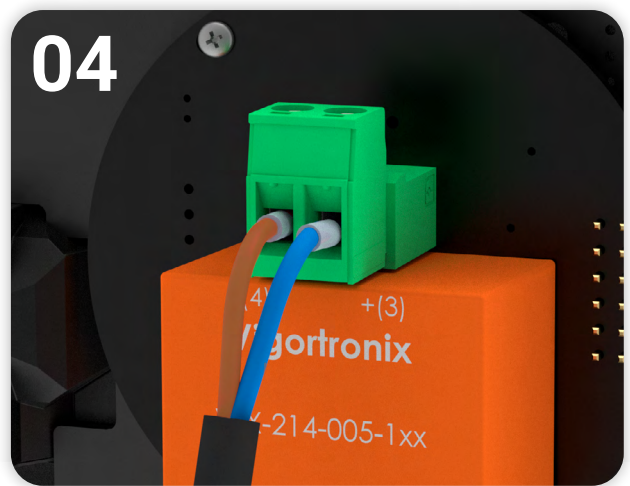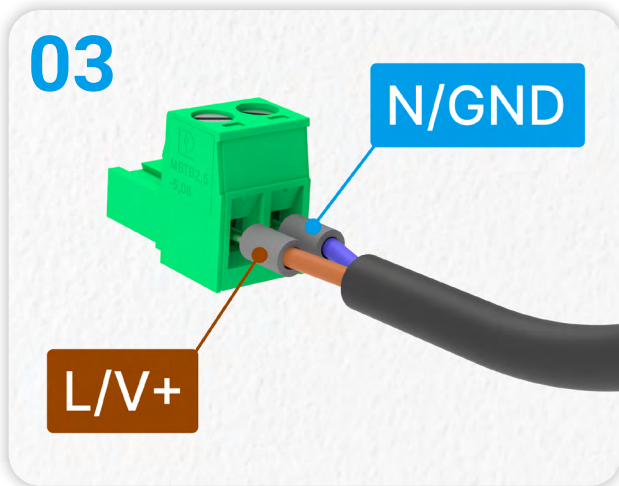


Description

1. First, mount the back cover of the case ❶ to the wall:
 - a. Place two screws into the electrical box.
 - b. Route the cables through the cable inlet hole ❷.
 - c. Insert the screws into the mounting holes ❸.
 - d. Rotate the back cover of the case ❶ so that it is straight.
 - e. Tighten the screws to secure in position.
2. Before continuing, add ferrules to the power cables.
3. Secure the power cables to the male power terminal ❸ provided in the box. If the power supply is direct current (8–36V DC), remember to respect the order of the inputs (V–GND).
4. Connect the male power terminal ❸ to the female terminal ❹ located on the MOBO ❺.
5. To close the MICA, first align the assembly guides ❷ with the assembly hooks ❷ (this must be done with the housing slightly tilted), and then close the case.
6. To finish, secure the case with the two bottom assembly screws ❹.


Wi-Fi

Wall Installation with Gutter

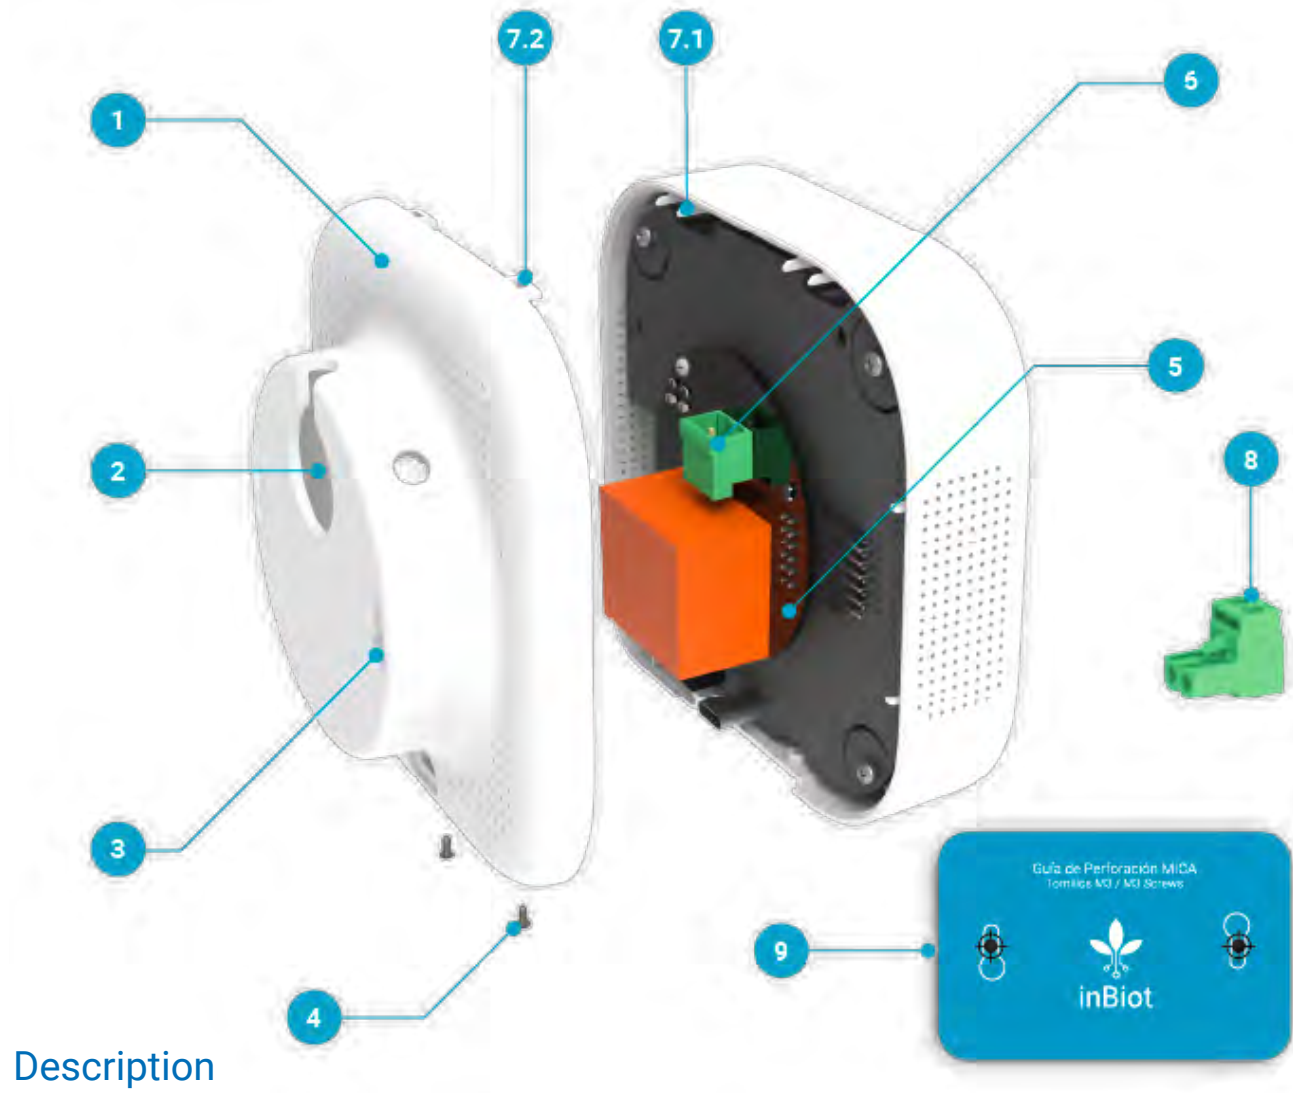

Description

1. Back cover of the case.
2. Cable inlet hole.
3. Mounting holes (x2).
4. Assembly screws (x2).
5. Electronic Motherboard (MOBO).
6. Female power terminal
7. 1) Assembly guides (x2).
2) Assembly hooks (x2).
8. Male power terminal.
9. Drilling guide (boxed).

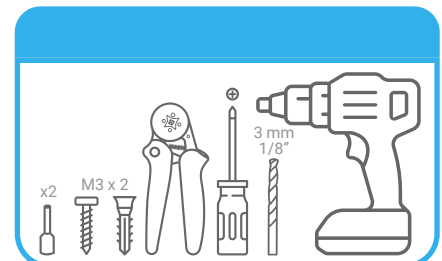


Note: The recommended height for installation is 120 - 180cm.

Installation steps

01



02




03




04




05

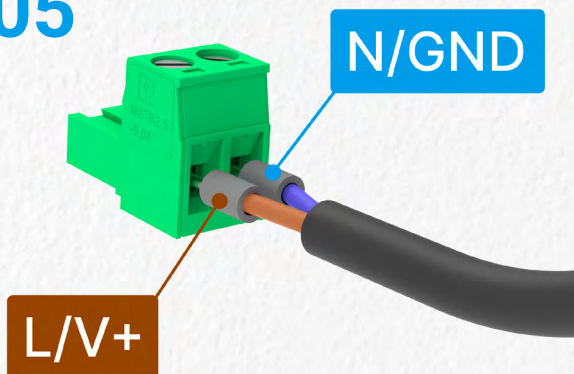

06

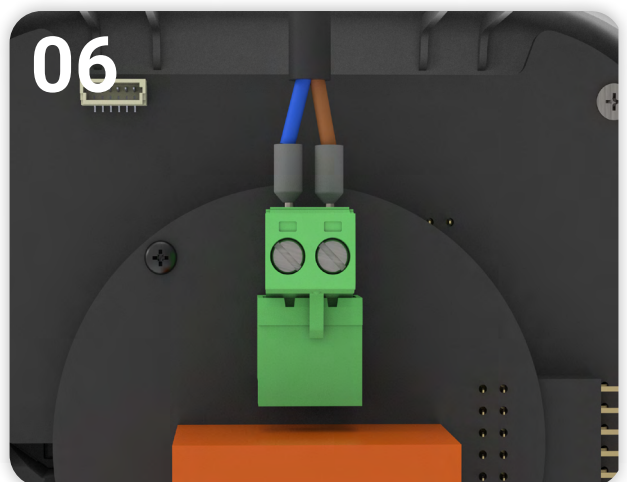

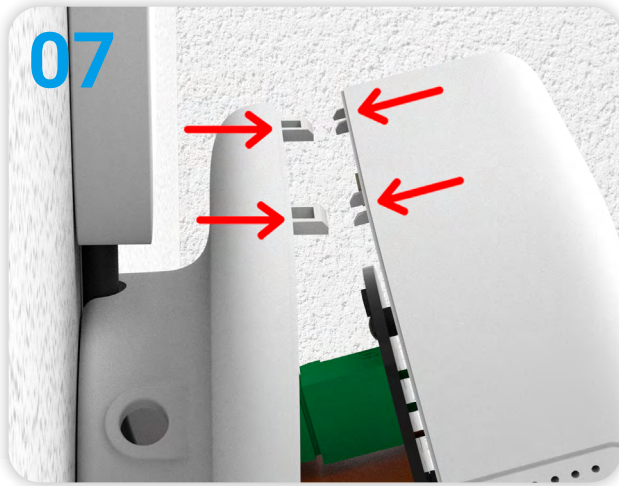


Description

1. First, drill two holes in the wall (you will need a drill), using the drilling guide ⑨ included in the box.
Recommended height: 120 - 180cm.
2. Next, insert a screw into each of the holes you have just drilled (use wall plugs if necessary), leaving at least 8mm protruding from the wall.
3. Mount the back cover of the case ① to the wall:
 - a. Route the cables through the cable inlet hole ②.
 - b. Insert the screws into the mounting holes ③.
 - c. Rotate the back cover of the case ① so that it is straight.
 - d. Tighten the screws to secure in position.
4. Before continuing, add ferrules to the power cables.
5. Secure the power cables to the male power terminal ⑧ provided in the box. If the power supply is direct current (8–36V DC), remember to respect the order of the inputs (V–GND).
6. Connect the male power terminal ⑧ to the female terminal ⑥ located on the MOBO ⑤.
7. To close the MICA, first align the assembly guides ⑦ with the assembly hooks ⑦ (this must be done with the housing slightly tilted), and then close the case.
8. To finish, secure the case with the two bottom assembly screws ④.


Modbus TCP/IP

Concealed Wall Installation

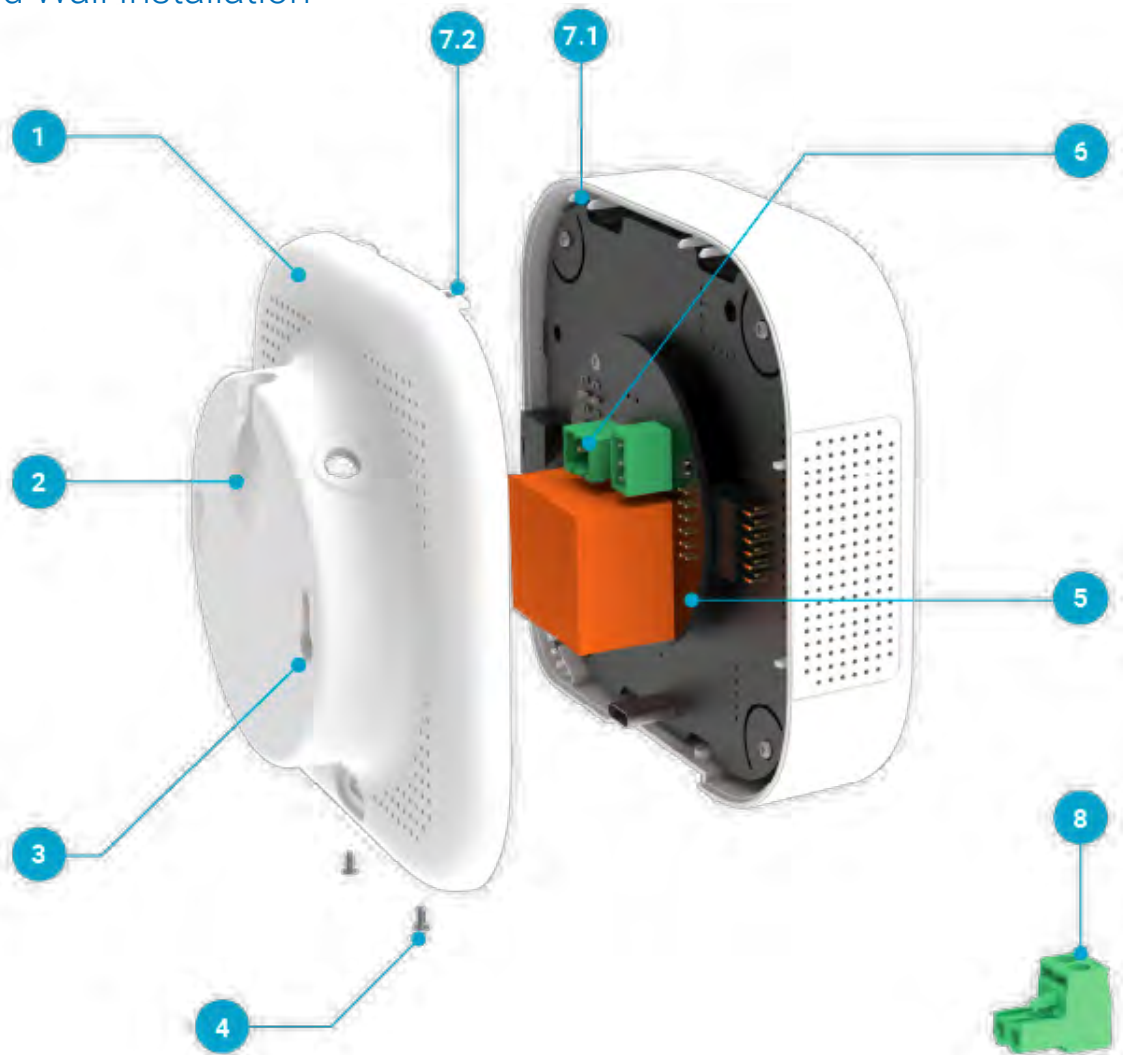



Description

1. Back cover of the case.
2. Cable inlet hole.
3. Mounting holes (x2).
4. Assembly screws (x2).
5. Electronic Motherboard (MOBO).
6. Female power terminal
7. 1) Assembly guides (x2).
2) Assembly hooks (x2).
8. Male power terminal.

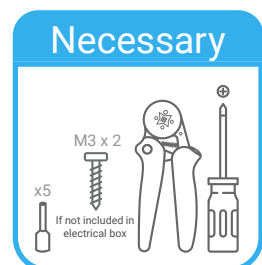

Note: The recommended height for installation is 120 - 180cm.

Installation steps

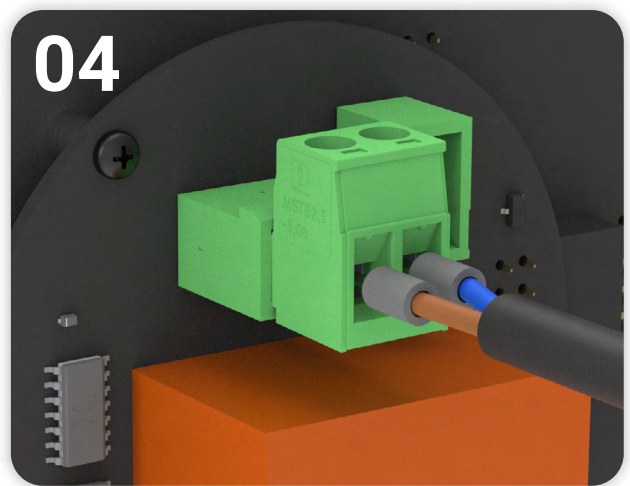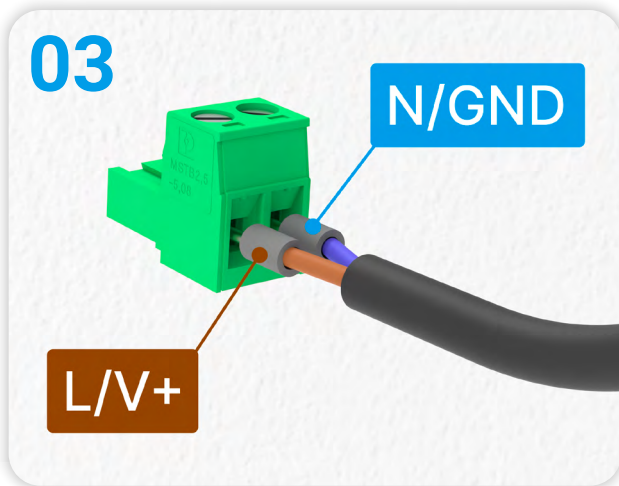


Description

1. First, mount the back cover of the case ❶ to the wall:
 - a. Place two screws into the electrical box.
 - b. Route the cables through the cable inlet hole ❷.
 - c. Insert the screws into the mounting holes ❸.
 - d. Rotate the back cover of the case ❶ so that it is straight.
 - e. Tighten the screws to secure in position.
2. Before continuing, add ferrules to the power cables.
3. Secure the power cables to the male power terminal ❸ provided in the box. If the power supply is direct current (8–36V DC), remember to respect the order of the inputs (V–GND).
4. Connect the male power terminal ❸ to the female terminal ❹ located on the MOBO ❺.
5. To close the MICA, first align the assembly guides ❷ with the assembly hooks ❷ (this must be done with the housing slightly tilted), and then close the case.
6. To finish, secure the case with the two bottom assembly screws ❹.


Modbus RTU

Concealed Wall Installation

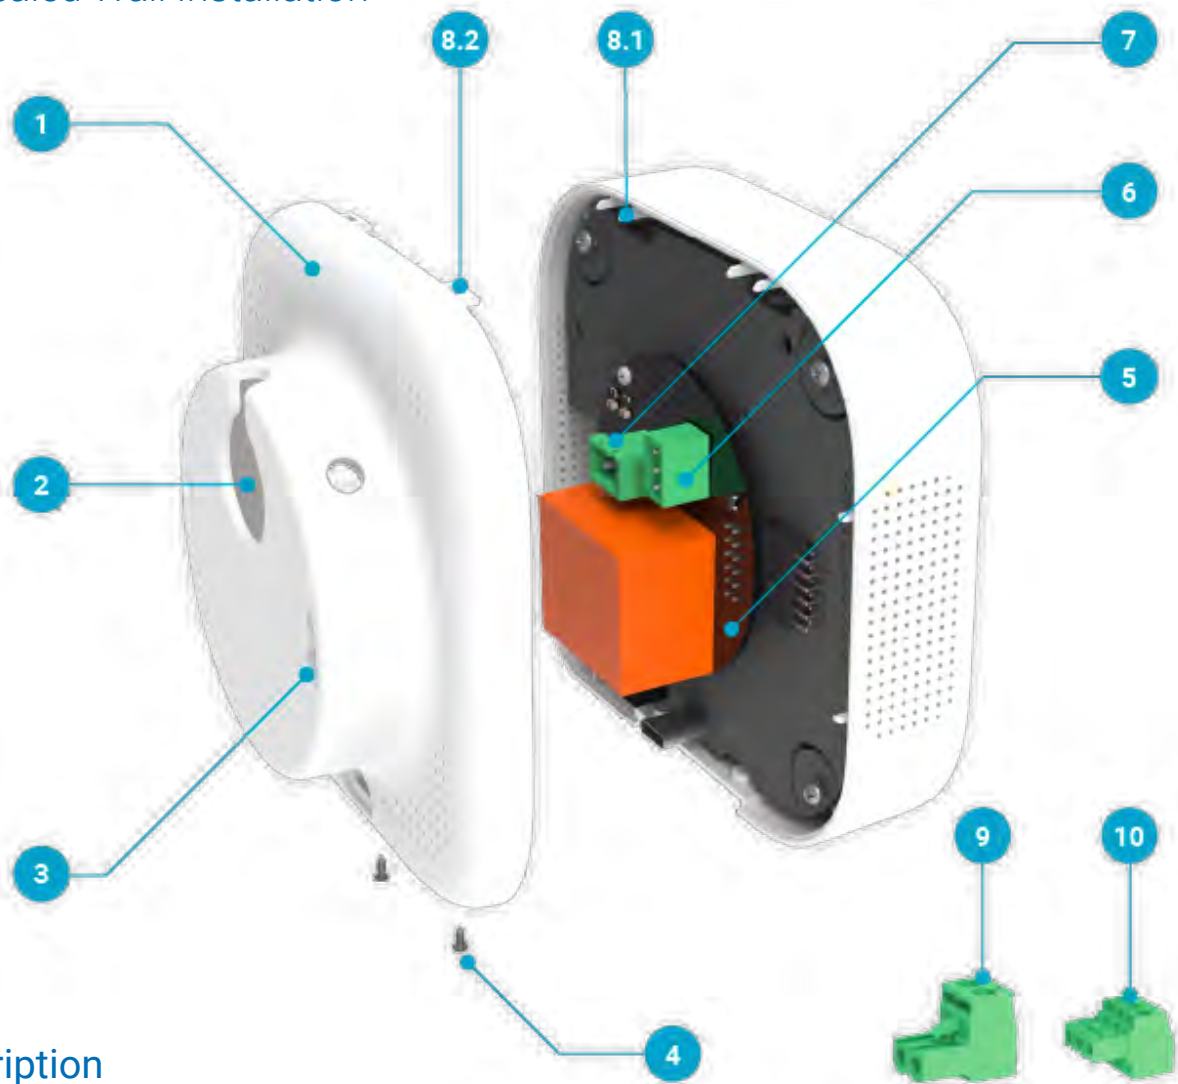





Description

1. Back cover of the case.
2. Cable inlet hole.
3. Mounting holes (x2).
4. Assembly screws (x2).
5. Electronic Motherboard (MOBO).
6. Female Modbus RTU terminal.
7. Female power terminal
8. 1) Assembly guides (x2).
2) Assembly hooks (x2).
9. Male power terminal.
10. Male Modbus RTU terminal.

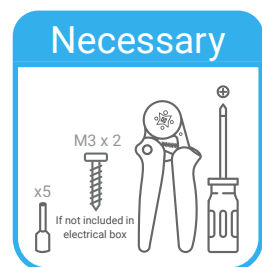

Note: The recommended height for installation is 120 - 180cm.

Installation steps

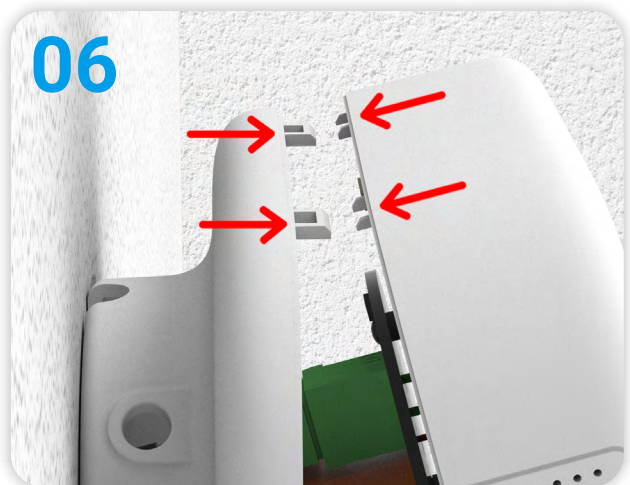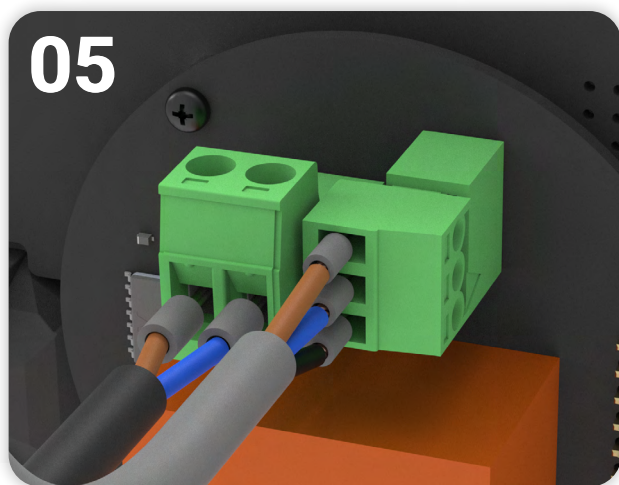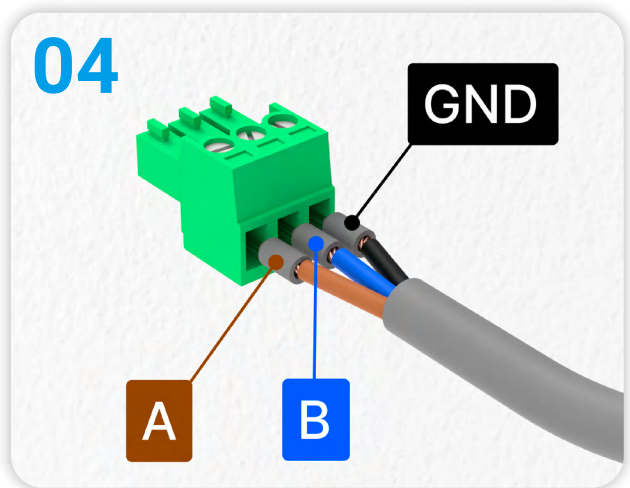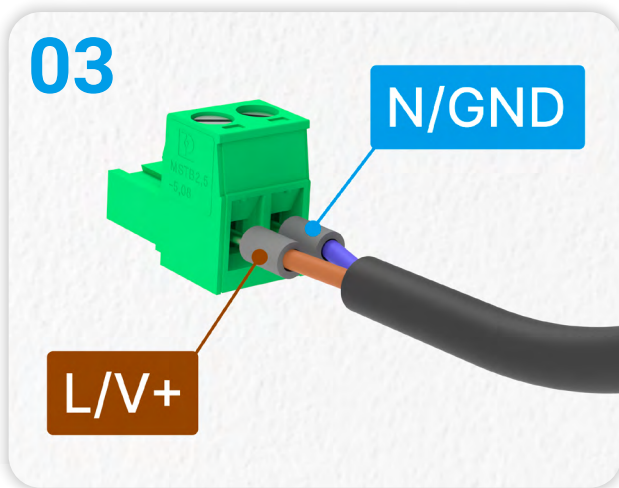




Description

1. First, mount the back cover of the case ❶ to the wall:
 - a. Place two screws into the electrical box.
 - b. Route the cables through the cable inlet hole ❷.
 - c. Insert the screws into the mounting holes ❸.
 - d. Rotate the back cover of the case ❶ so that it is straight.
 - e. Tighten the screws to secure in position.
2. Before continuing, add ferrules to the power cables.
3. Secure the power cables to the male power terminal ❹ provided in the box. If the power supply is direct current (8–36V DC), remember to respect the order of the inputs (V–GND).
4. Secure the modbus cables to the male modbus terminal ❺ provided in the box, following the order of the inputs (GND* - B - A).
5. Now, connect the male terminals (power ❹ and modbus ❺) to the female terminals (❻ & ❼) located on the MOBO ❶.
6. To close the MICA, first align the assembly guides ❸ with the assembly hooks ❸ (this must be done with the housing slightly tilted), and then close the case.
7. To finish, secure the case with the two bottom assembly screws ❷.

[*] GND: From the same device as A and B (master, etc).


LoRaWAN / Sigfox

Concealed Wall Installation

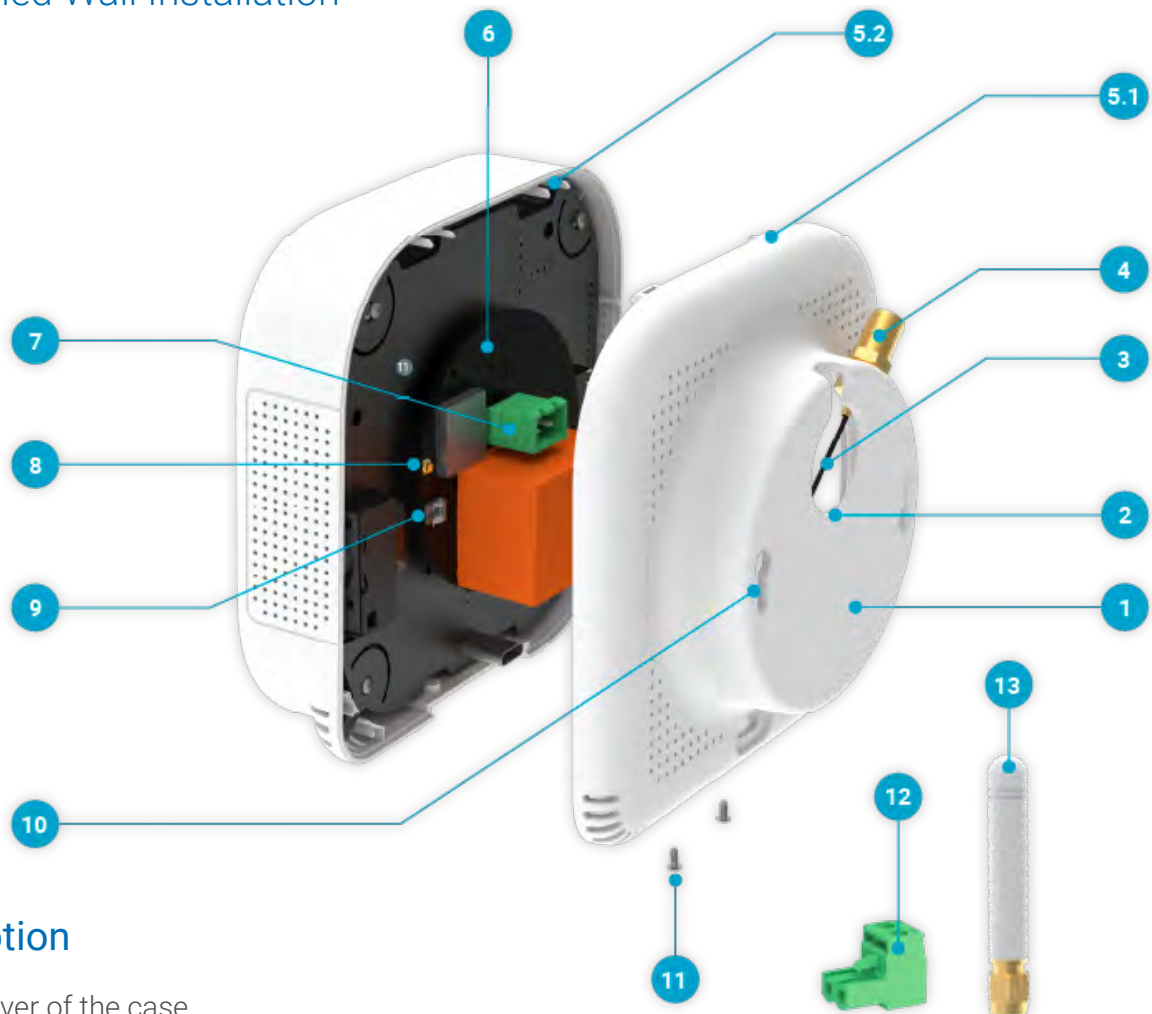



Description



1. Back cover of the case.
2. Cable inlet hole.
3. Antenna cable.
4. Antenna connection thread.
5. 1) Assembly hooks (x2).
2) Assembly guides (x2).
6. Electronic Motherboard (MOBO)
7. Female power terminal
8. Antenna connector.
9. Antenna hook.
10. Mounting holes (x2).
11. Assembly screws (x2).
12. Male power terminal.
13. Antenna (boxed).

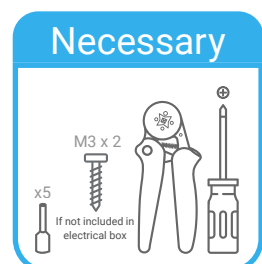

Note: The recommended height for installation is 120 - 180cm.

Installation steps

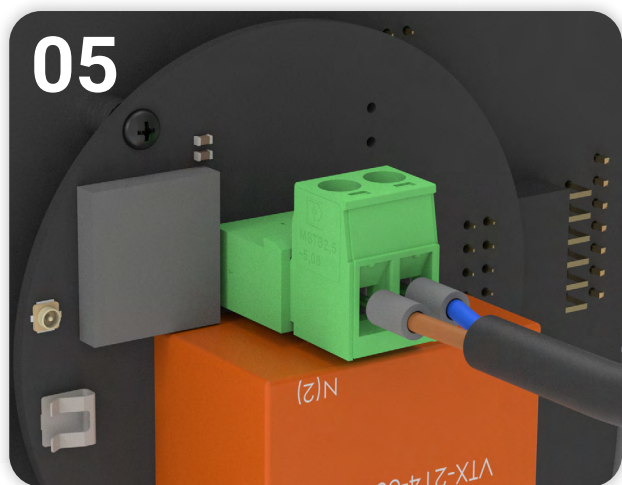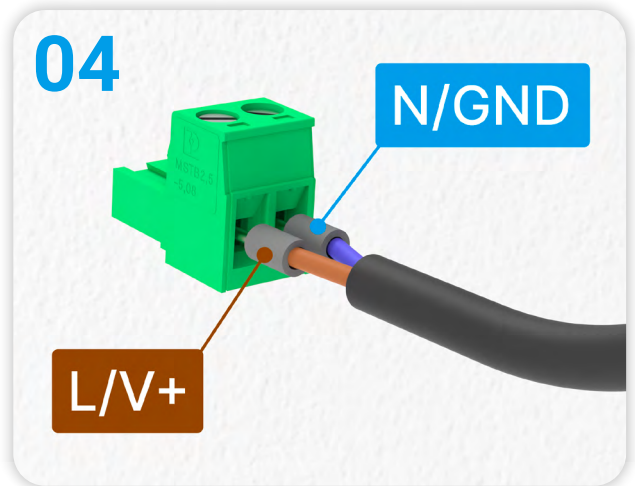

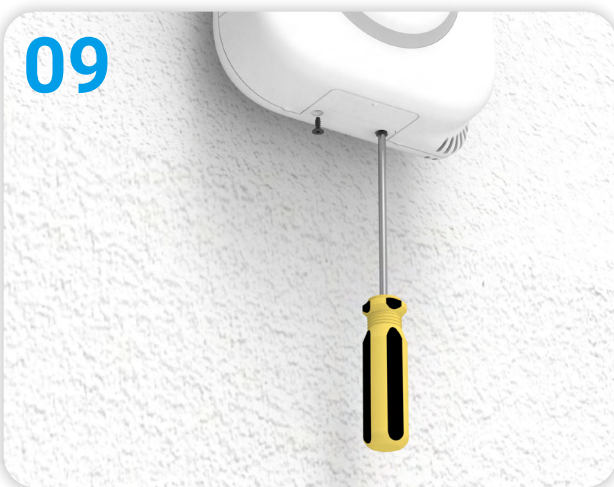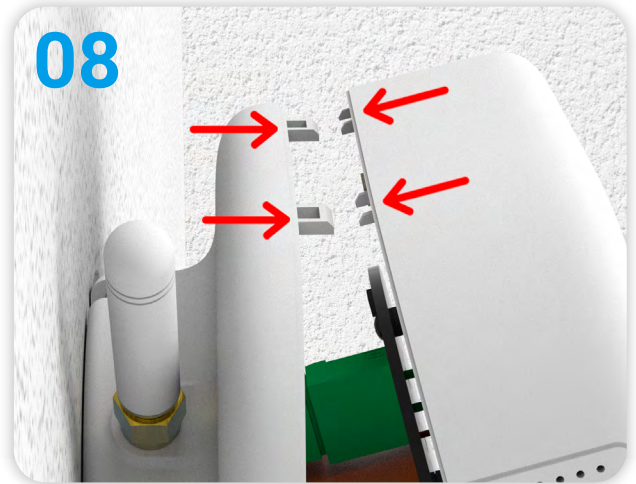


Description

1. First, secure the provided antenna ⑬ to the thread ④ fixed on the back cover of the case ①.
2. Next, mount the back cover of the case ① to the wall:
 - a. Place two screws into the electrical box.
 - b. Route the cables through the cable inlet hole ②.
 - c. Insert the screws into the mounting holes ⑩.
 - d. Rotate the back cover of the case ① so that it is straight.
 - e. Tighten the screws to secure in position.
3. Before continuing, add ferrules to the power cables.
4. Secure the power cables to the male power terminal ⑫ provided in the box. If the power supply is direct current (8–36V DC), remember to respect the order of the inputs (V–GND).
5. Connect the male power terminal ⑫ to the female terminal ⑦ located on the MOBO ⑥.
6. Connect the antenna cable ③ to its connector ⑧ located on the MOBO ⑥.
7. Before closing the MICA, hook the antenna cable ③ onto the hook ⑨ located on the MOBO ⑥.
8. To close the MICA, first align the assembly guides ⑤ with the assembly hooks ⑤ (this must be done with the housing slightly tilted), and then close the case.
9. To finish, secure the case with the two bottom assembly screws ⑪.

LoRaWAN / Sigfox


Wall installation with gutter

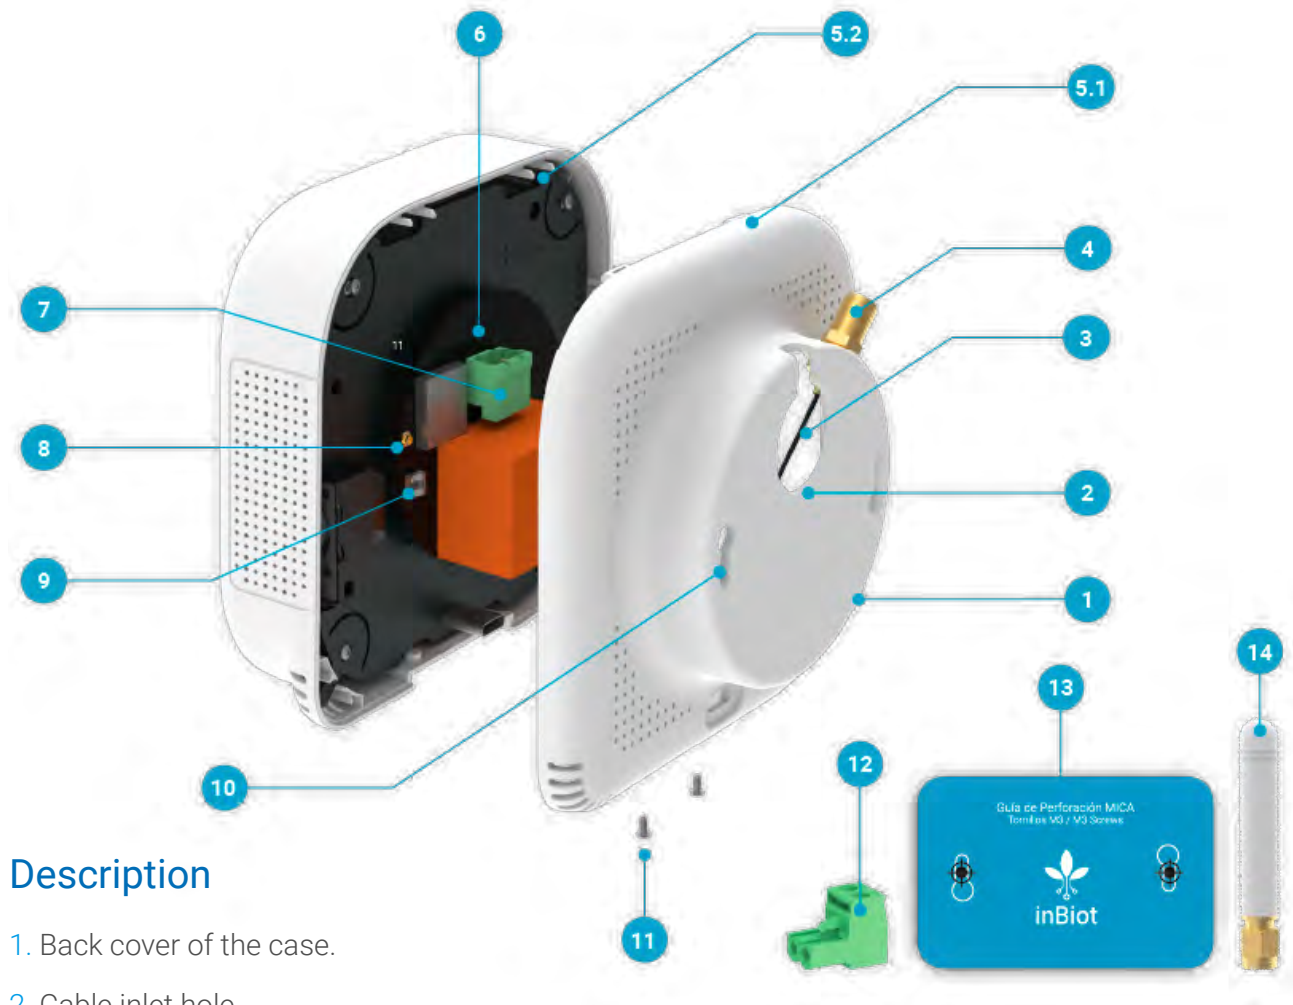

Description

1. Back cover of the case.
2. Cable inlet hole.
3. Antenna cable.
4. Antenna connection thread.
5. 1) Assembly hooks (x2).
2) Assembly guides (x2).
6. Electronic Motherboard (MOBO)
7. Female power terminal
8. Antenna connector.
9. Antenna hook.
10. Mounting holes (x2).
11. Assembly screws (x2).
12. Male power terminal.
13. Drilling guide (boxed).
14. Antenna (boxed).

Note: The recommended height for installation is 120 - 180cm.

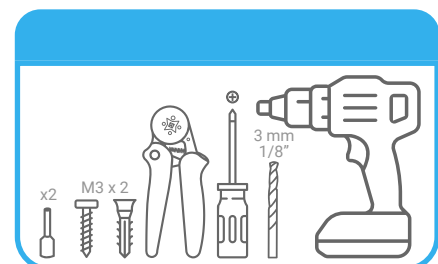


Installation steps

01



02



03




04





05



06

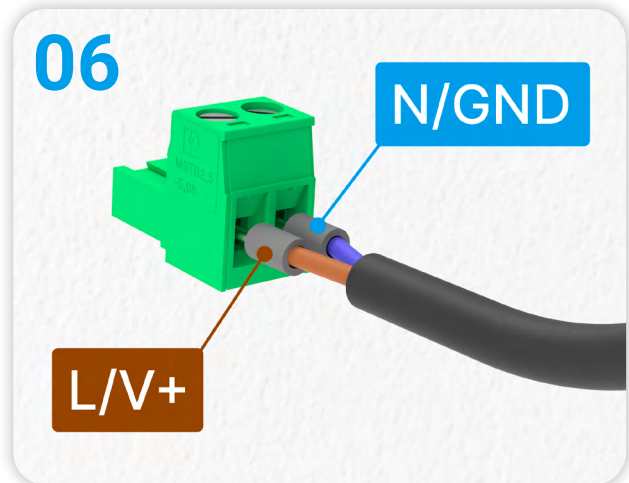

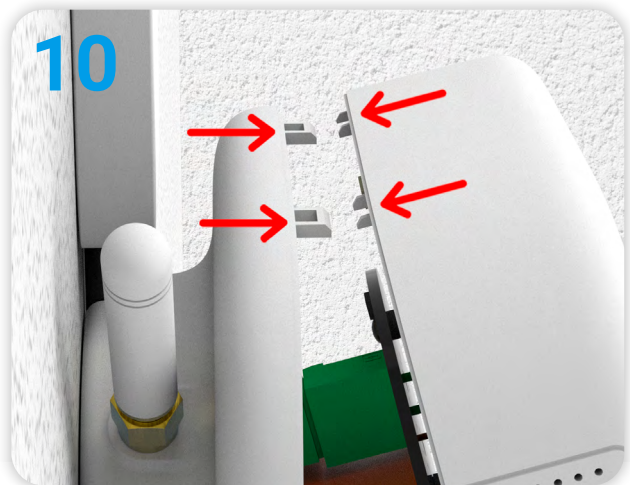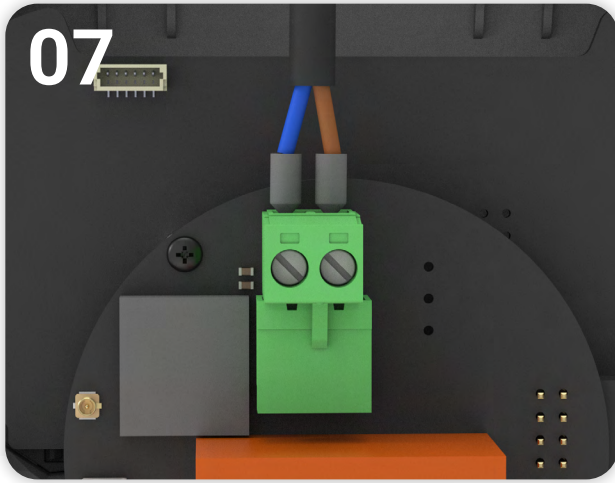


Description

1. First, drill two holes in the wall (you will need a drill), using the drilling guide 13 included in the box.
Recommended height: 120 - 180cm.
2. Insert a screw into each of the holes you have just drilled (use wall plugs if necessary), leaving at least 8mm protruding from the wall.
3. Then, secure the provided antenna 14 to the thread 4 fixed on the back cover of the case 1.
4. Next, mount the back cover of the case 1 to the wall:
 - a. Route the cables through the cable inlet hole 2.
 - b. Insert the screws into the mounting holes 10.
 - c. Rotate the back cover of the case 1 so that it is straight.
 - d. Tighten the screws to secure in position.
5. Before continuing, add ferrules to the power cables.
6. Secure the power cables to the male power terminal 12 provided in the box. If the power supply is direct current (8–36V DC), remember to respect the order of the inputs (V–GND).
7. Connect the male power terminal 12 to the female terminal 7 located on the MOBO 6.
8. Connect the antenna cable 3 to its connector 8 located on the MOBO 6.
9. Before closing the MICA, hook the antenna cable onto the hook 9 located on the MOBO 6.
10. To close the MICA, first align the assembly guides 5 with the assembly hooks 5 (this must be done with the housing slightly tilted), and then close the case.
11. To finish, secure the case with the two bottom assembly screws 11.

LoRaWAN / Sigfox + Modbus RTU


Concealed wall installation

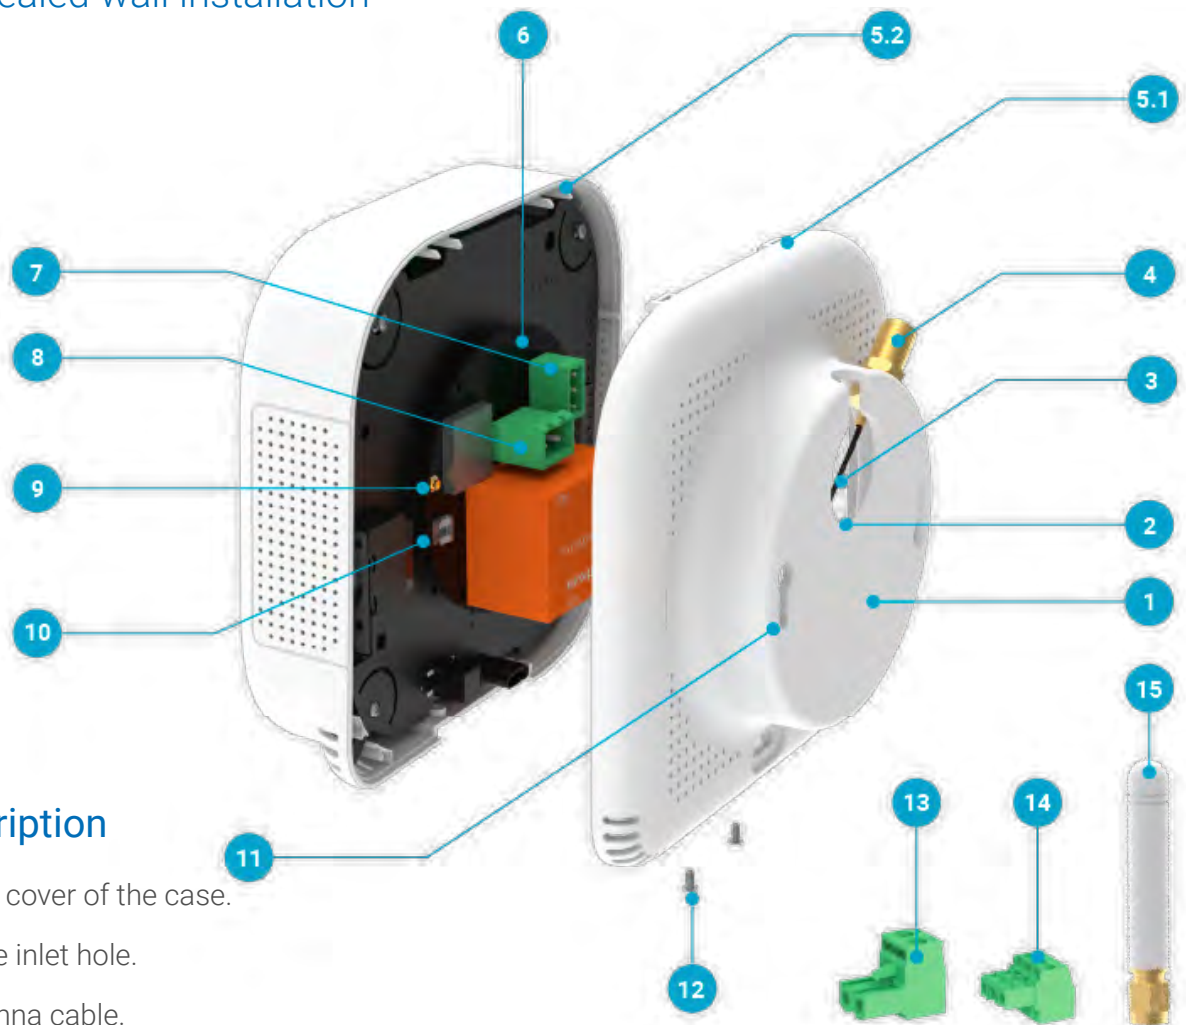




Description




1. Back cover of the case.
2. Cable inlet hole.
3. Antenna cable.
4. Antenna connection thread.
5. 1) Assembly hooks (x2).
2) Assembly guides (x2).
6. Electronic Motherboard (MOBO)
7. Female Modbus RTU terminal.
8. Female power terminal
9. Antenna connector.
10. Antenna hook.
11. Mounting holes (x2).
12. Assembly screws (x2).
13. Male power terminal.
14. Male Modbus RTU terminal.
15. Antenna (boxed).

Note: The recommended height for installation is 120 - 180cm.

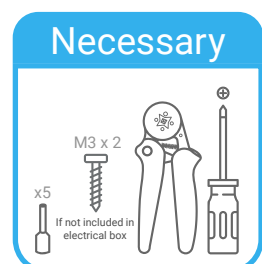

Installation steps

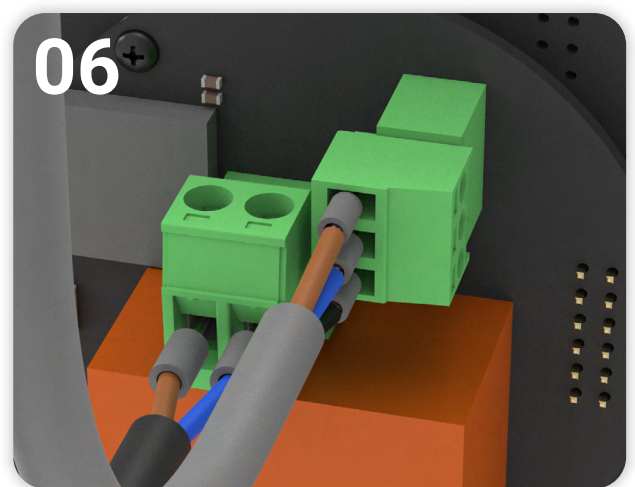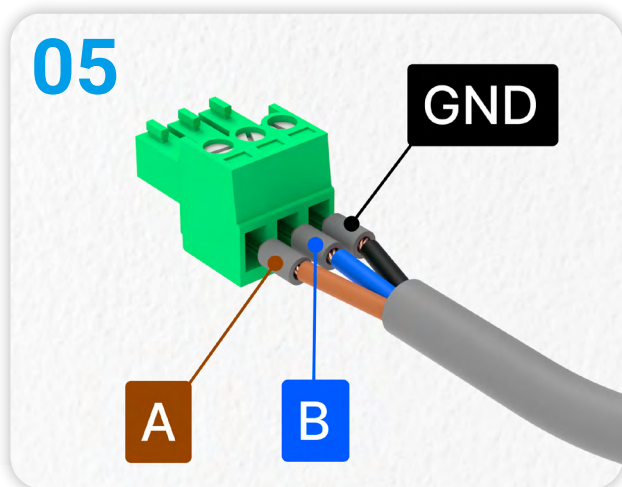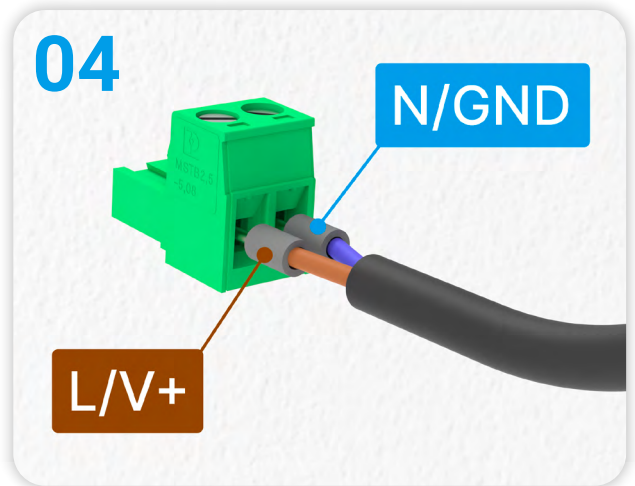

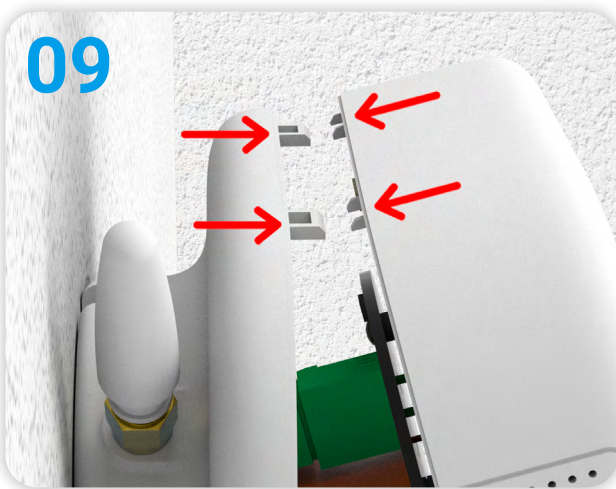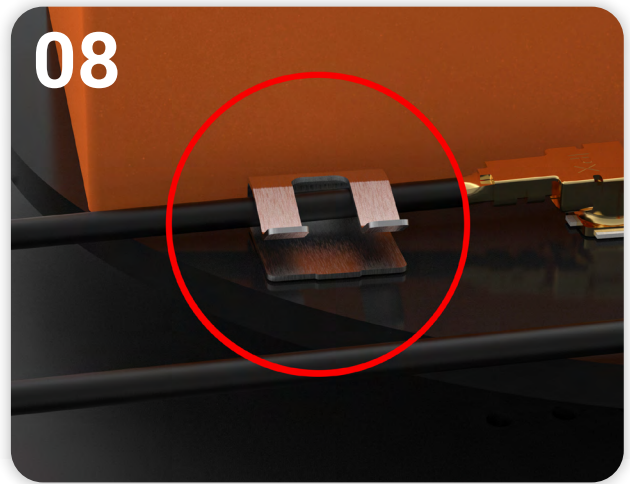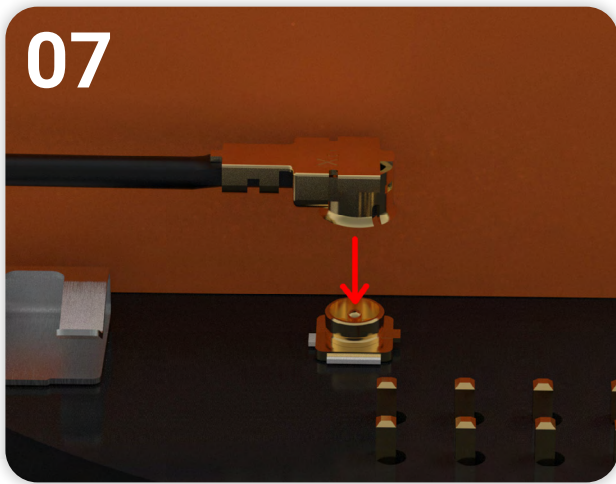


Description

1. First, secure the provided antenna ⑮ to the thread ④ fixed on the back cover of the case ①.
2. Next, mount the back cover of the case ① to the wall:
 - a. Place two screws into the electrical box.
 - b. Route the cables through the cable inlet hole ②.
 - c. Insert the screws into the mounting holes ⑪.
 - d. Rotate the back cover of the case ① so that it is straight.
 - e. Tighten the screws to secure in position.
3. Before continuing, add ferrules to the power cables.
4. Secure the power cables to the male power terminal ⑬ provided in the box. If the power supply is direct current (8–36V DC), remember to respect the order of the inputs (V–GND).
5. Secure the modbus cables to the male modbus terminal ⑭ provided in the box, following the order of the inputs (GND* - B - A).
6. Now, connect the male terminals (power ⑬ and modbus ⑭) to the female terminals (⑦ & ⑧) located on the MOBO ⑥.
7. Connect the antenna cable ③ to its connector ⑨ located on the MOBO ⑥.
8. Before closing the MICA, hook the antenna cable ③ onto the hook ⑩ located on the MOBO ⑥.
9. To close the MICA, first align the assembly guides ⑤ with the assembly hooks ⑤ (this must be done with the housing slightly tilted), and then close the case.
10. To finish, secure the case with the two bottom assembly screws ⑫.

[*] GND: From the same device as A and B (master, etc).

NB-IoT / LTE-M


Concealed wall installation

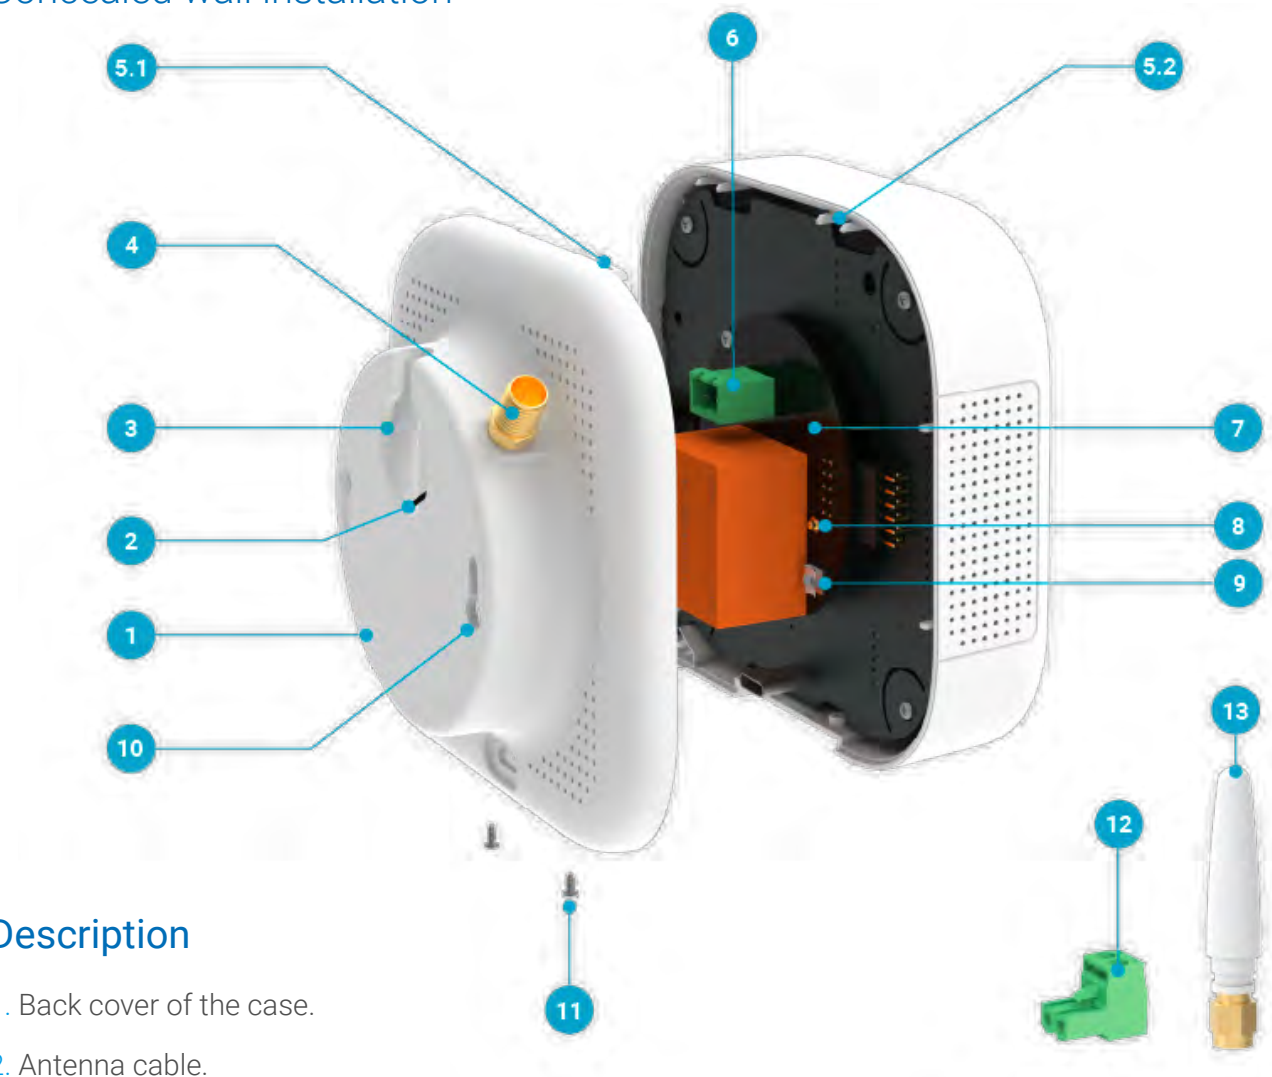





Description




1. Back cover of the case.
2. Antenna cable.
3. Cable inlet hole.
4. Antenna connection thread.
5. 1) Assembly hooks (x2).
2) Assembly guides (x2).
6. Electronic Motherboard (MOBO).
7. Female power terminal.
8. Antenna connector.
9. Antenna hook.
10. Mounting holes (x2).
11. Assembly screws (x2).
12. Male power terminal.
13. Antenna (boxed).

Note: The recommended height for installation is 120 - 180cm.

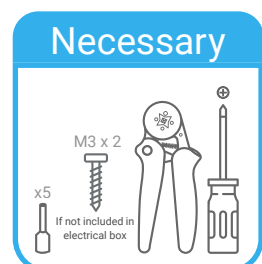

Installation steps

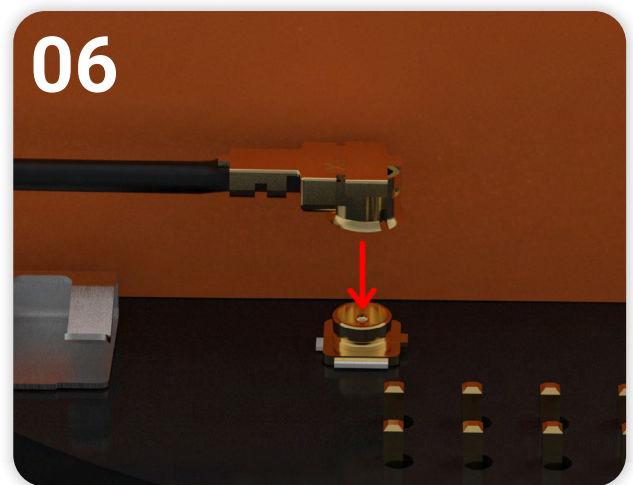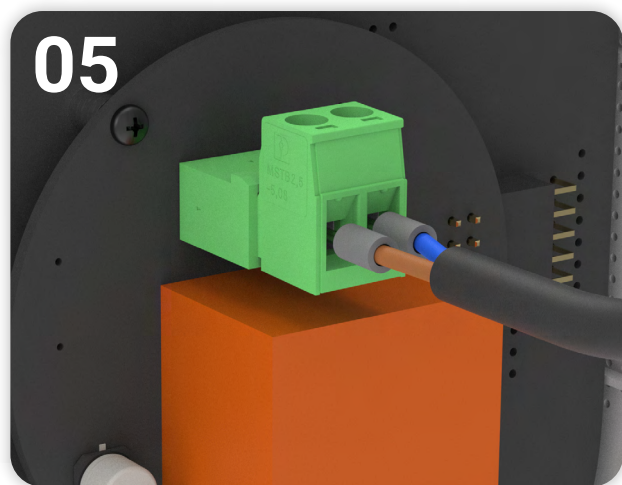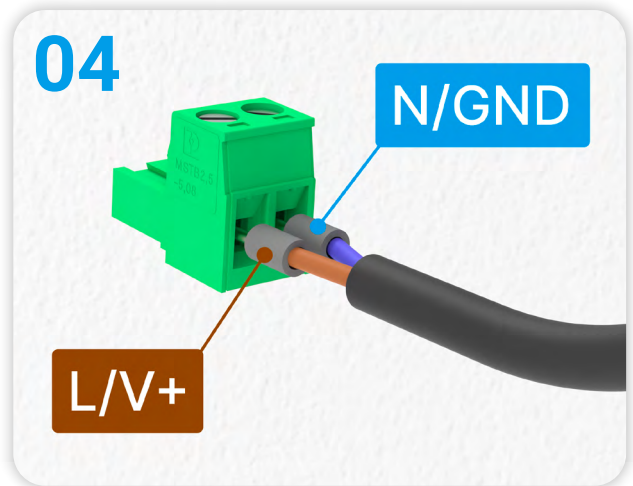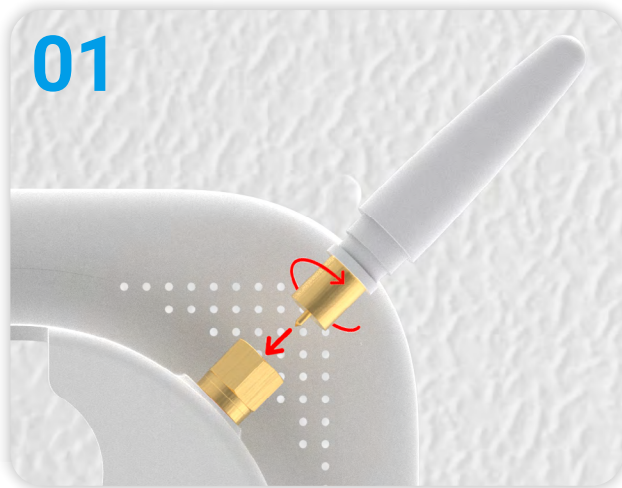

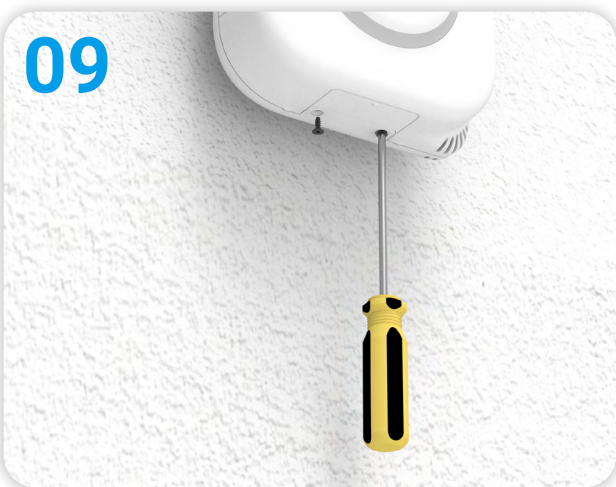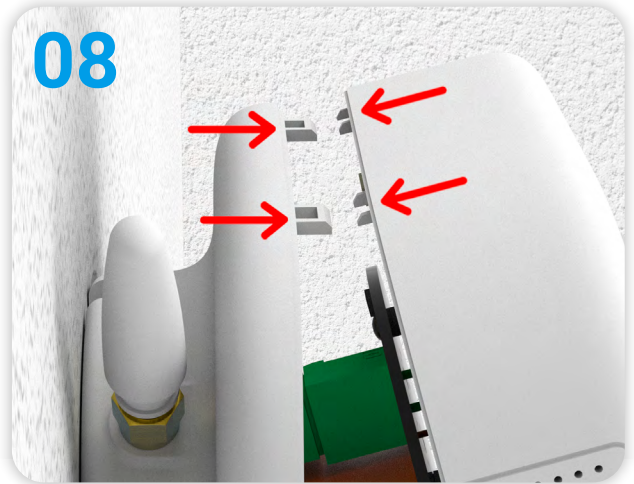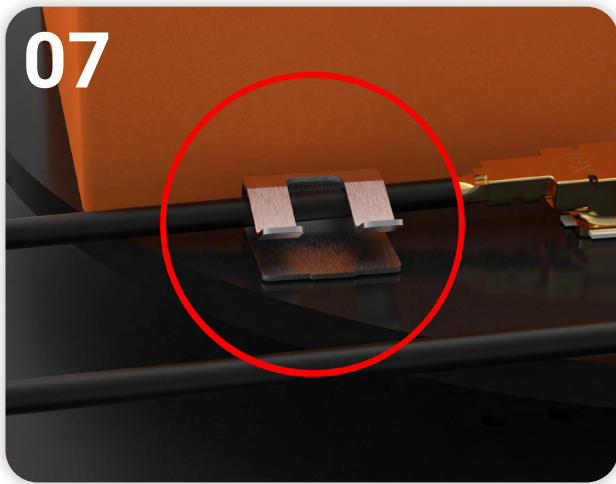


Description

1. First, secure the provided antenna 13 to the thread 4 fixed on the back cover of the case 1.
2. Next, mount the back cover of the case 1 to the wall:
 - a. Place two screws into the electrical box.
 - b. Route the cables through the cable inlet hole 3.
 - c. Insert the screws into the mounting holes 10.
 - d. Rotate the back cover of the case 1 so that it is straight.
 - e. Tighten the screws to secure in position.
3. Before continuing, add ferrules to the power cables.
4. Secure the power cables to the male power terminal 12 provided in the box. If the power supply is direct current (8–36V DC), remember to respect the order of the inputs (V–GND).
5. Connect the male power terminal 12 to the female terminal 6 located on the MOBO 7.
6. Connect the antenna cable 2 to its connector 8 located on the MOBO 7.
7. Before closing the MICA, hook the antenna cable 3 onto the hook 9 located on the MOBO 7.
8. To close the MICA, first align the assembly guides 5 with the assembly hooks 5 (this must be done with the housing slightly tilted), and then close the case.
9. To finish, secure the case with the two bottom assembly screws 11.


NB-IoT / LTE-M

Wall Installation with Gutter

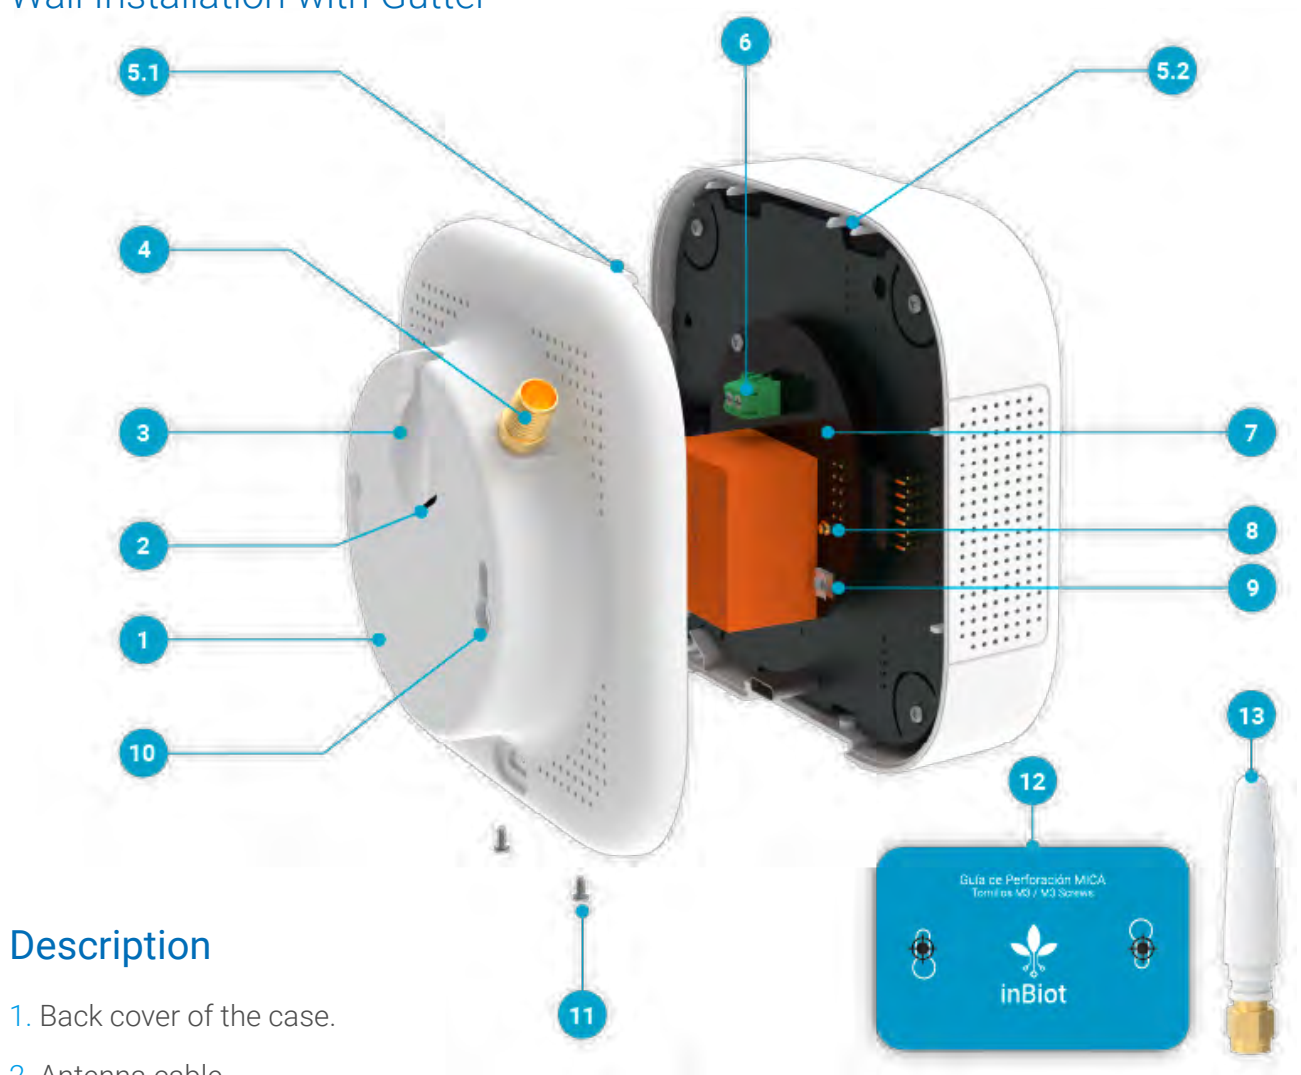

Description

1. Back cover of the case.
2. Antenna cable.
3. Cable inlet hole.
4. Antenna connection thread.
5. 1) Assembly hooks (x2).
2) Assembly guides (x2).
6. Female power terminal.
7. Electronic Motherboard (MOBO).
8. Antenna connector.
9. Antenna hook.
10. Mounting holes (x2).
11. Assembly screws (x2).
12. Drilling guide (boxed).
13. Antenna (boxed).

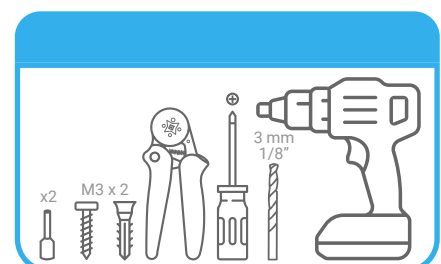

Note: The recommended height for installation is 120 - 180cm.

Installation steps


01



02



03




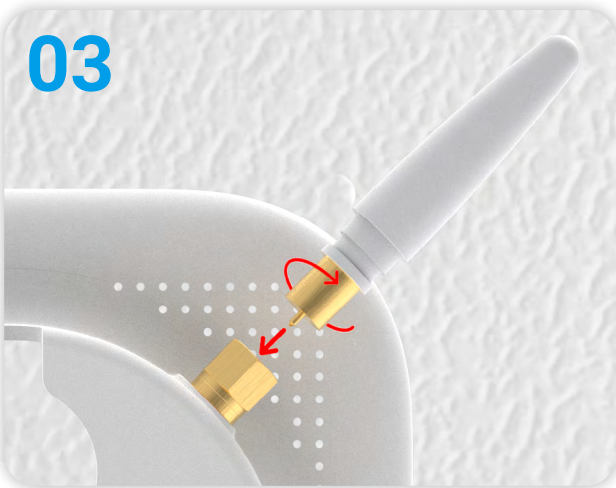


04



05



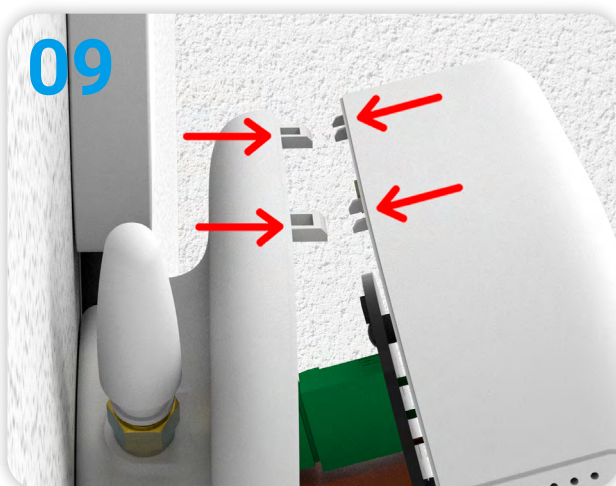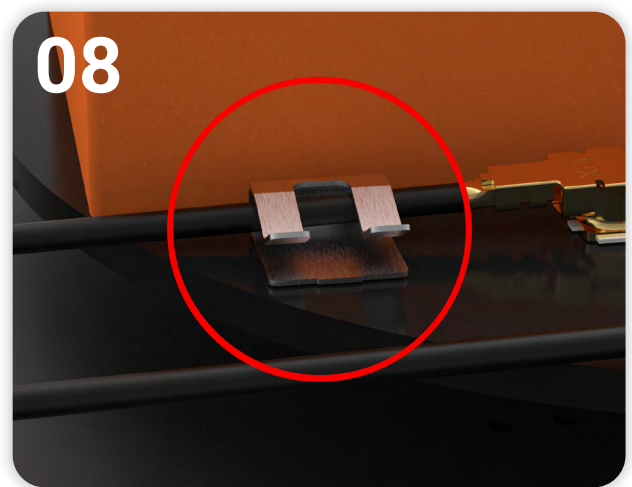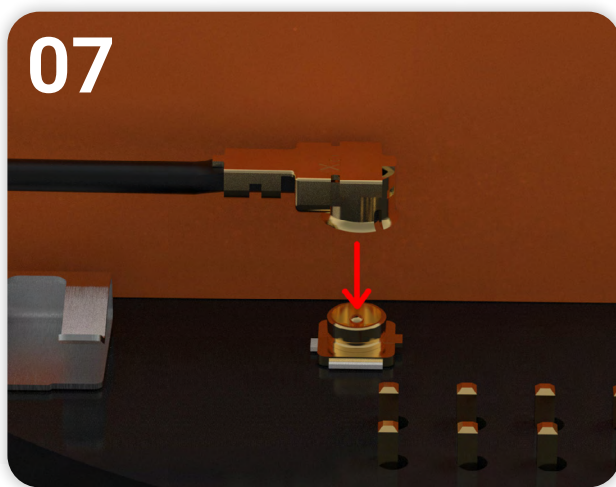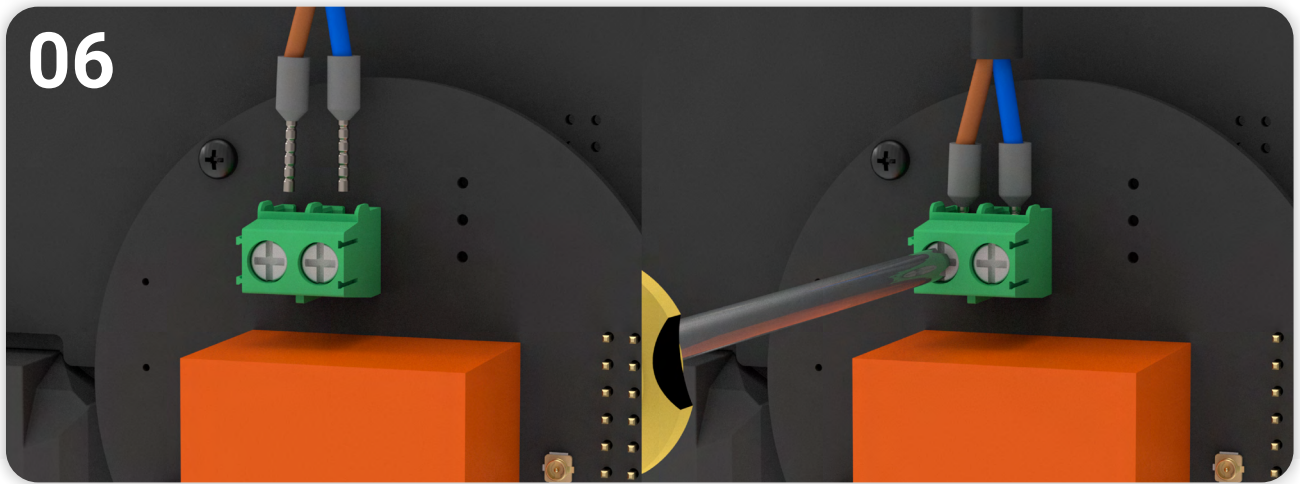


Description

1. First, drill two holes in the wall (you will need a drill), using the drilling guide 12 included in the box.
Recommended height: 120 - 180cm.
2. Insert a screw into each of the holes you have just drilled (use wall plugs if necessary), leaving at least 8mm protruding from the wall.
3. Then, secure the provided antenna 13 to the thread 4 fixed on the back cover of the case 1.
4. Next, mount the back cover of the case 1 to the wall:
 - a. Route the cables through the cable inlet hole 3.
 - b. Insert the screws into the mounting holes 10.
 - c. Rotate the back cover of the case 1 so that it is straight.
 - d. Tighten the screws to secure in position.
5. Before continuing, add ferrules to the power cables.
6. Now, insert the each end of the power cable into the terminal 6 located on the MOBO 7, and use a screwdriver to secure the cables.
7. Connect the antenna cable 2 to its connector 8 located on the MOBO 7.
8. Before closing the MICA, hook the antenna cable onto the hook 9 located on the MOBO 7.
9. To close the MICA, first align the assembly guides 5 with the assembly hooks 5 (this must be done with the housing slightly tilted), and then close the case.
10. To finish, secure the case with the two bottom assembly screws 11.

NB-IoT / LTE-M + Modbus RTU


Concealed Wall Installation

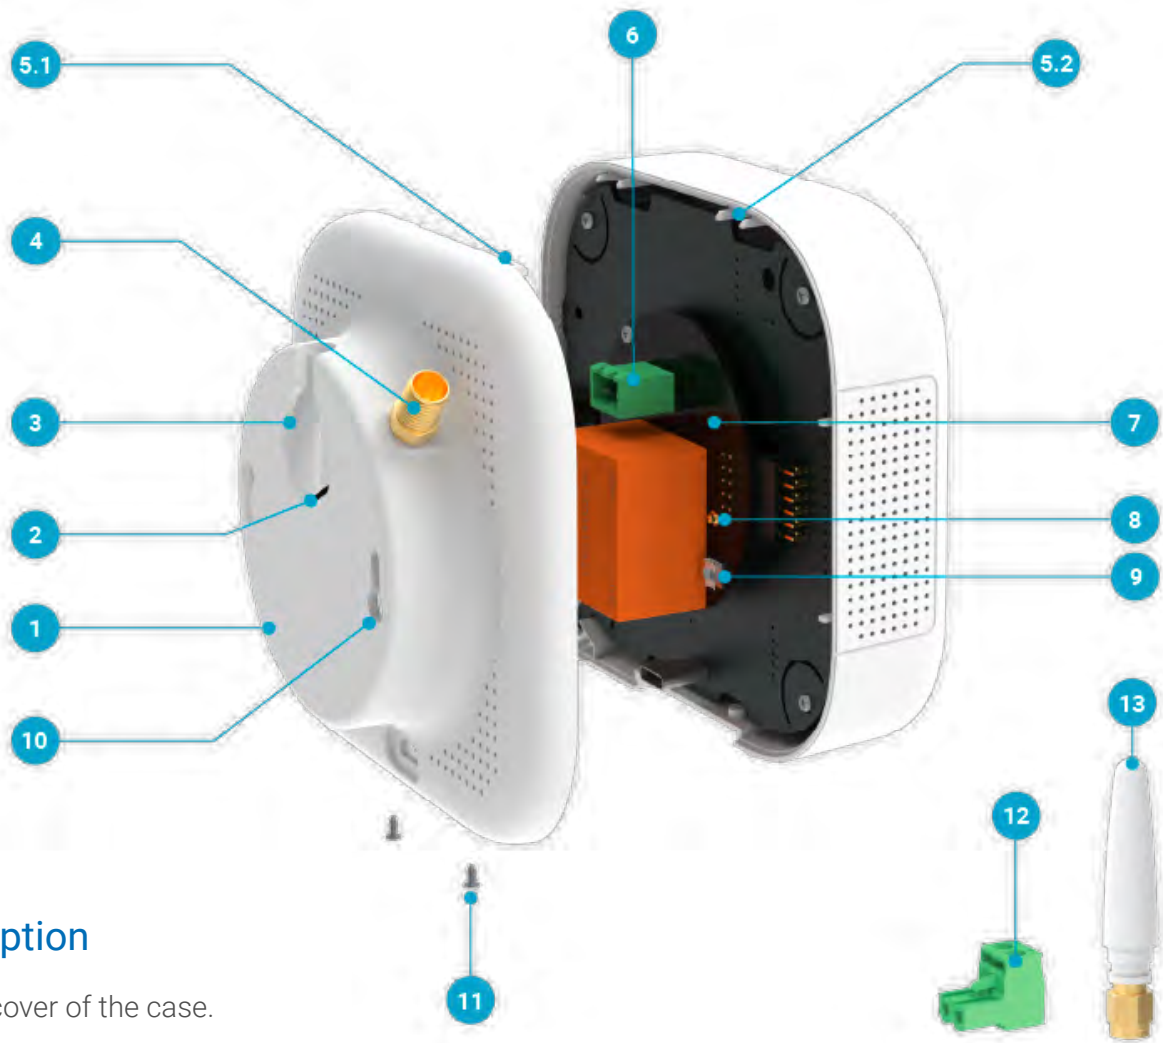





Description




1. Back cover of the case.
2. Antenna cable.
3. Cable inlet hole.
4. Antenna connection thread.
5. 1) Assembly hooks (x2).
2) Assembly guides (x2).
6. Electronic Motherboard (MOBO).
7. Female power terminal.
8. Antenna connector.
9. Antenna hook.
10. Mounting holes (x2).
11. Assembly screws (x2).
12. Male power terminal.
13. Antenna (boxed).

Note: The recommended height for installation is 120 - 180cm.

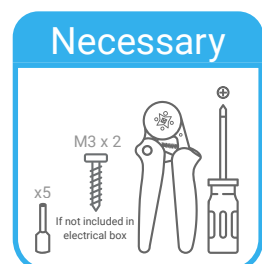

Installation steps

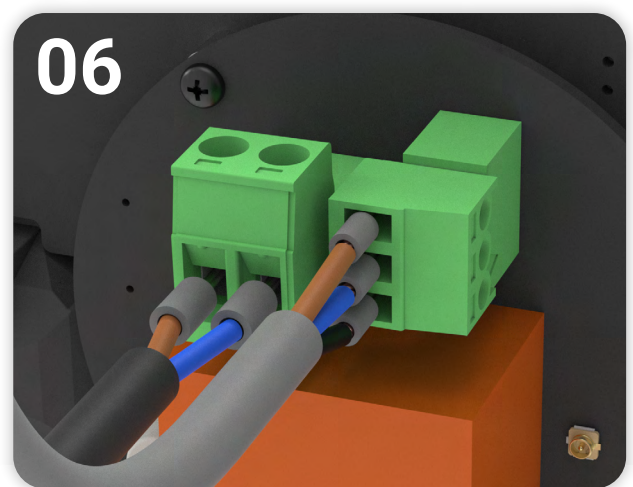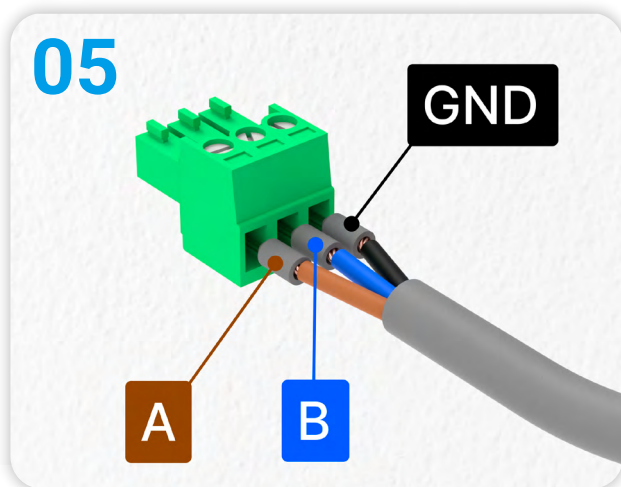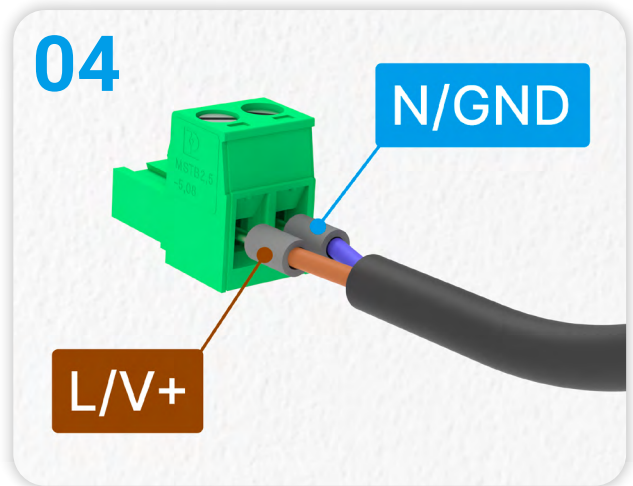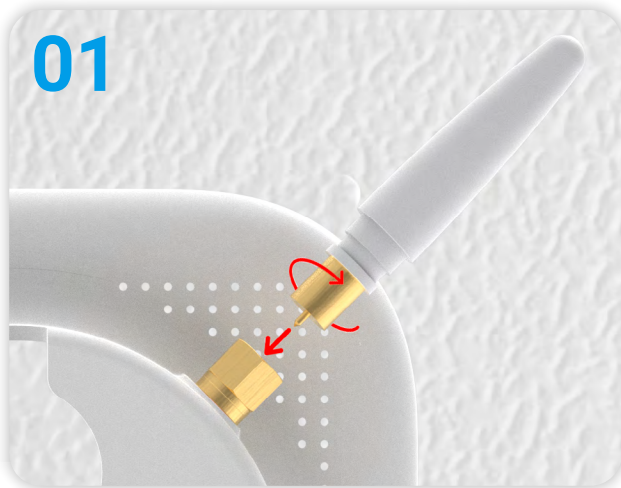

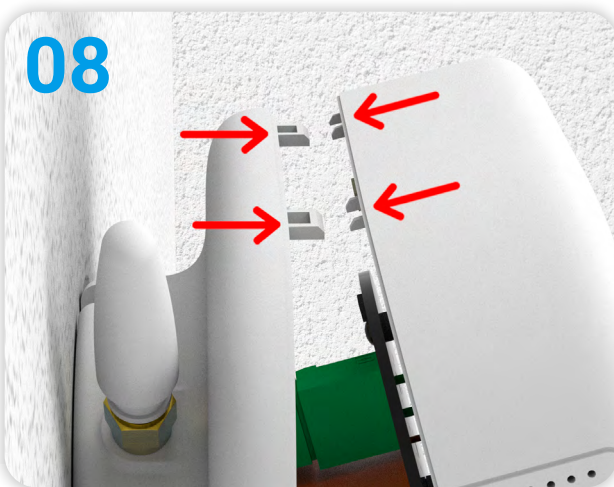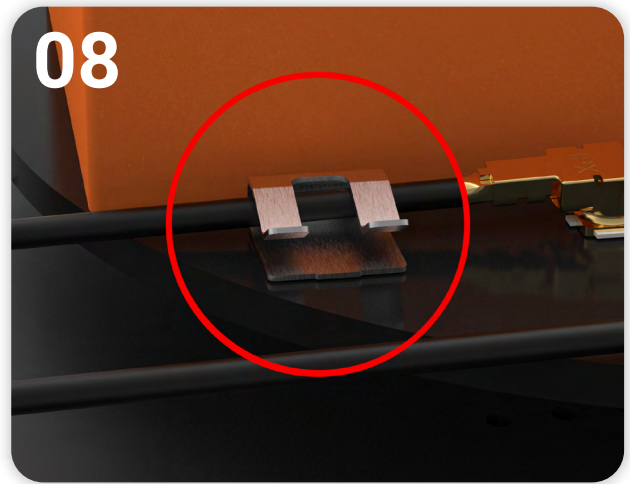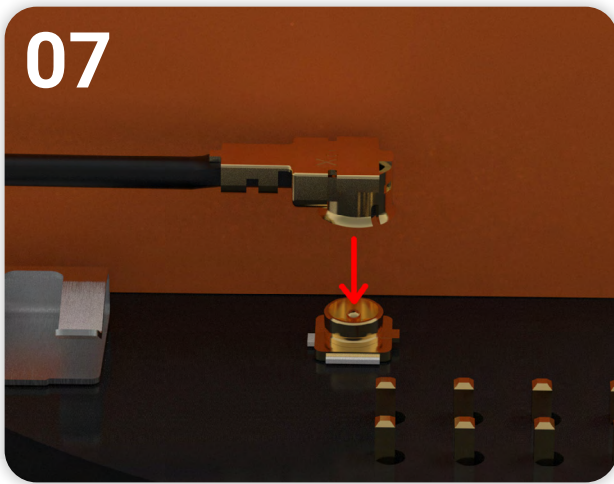


Description

1. First, secure the provided antenna 13 to the thread 4 fixed on the back cover of the case 1.
2. Next, mount the back cover of the case 1 to the wall:
 - a. Place two screws into the electrical box.
 - b. Route the cables through the cable inlet hole 3.
 - c. Insert the screws into the mounting holes 10.
 - d. Rotate the back cover of the case 1 so that it is straight.
 - e. Tighten the screws to secure in position.
3. Before continuing, add ferrules to the power cables.
4. Secure the power cables to the provided male power terminal 12. If the power supply is direct current (8 - 36V DC), remember to respect the order of the inputs (V - GND).
5. Connect the male power terminal 12 to the female terminal 6 located on the MOBO 7.
6. Connect the antenna cable 2 to its connector 8 located on the MOBO 7.
7. Before closing the MICA, hook the antenna cable 2 onto the hook 9 located on the MOBO 7.
8. To close the MICA, first align the assembly guides 5 with the assembly hooks 5 (this must be done with the housing slightly tilted) and then close the case.
9. To finish, secure the case with the two bottom assembly screws 11.


BACnet PoE

Concealed Wall Installation

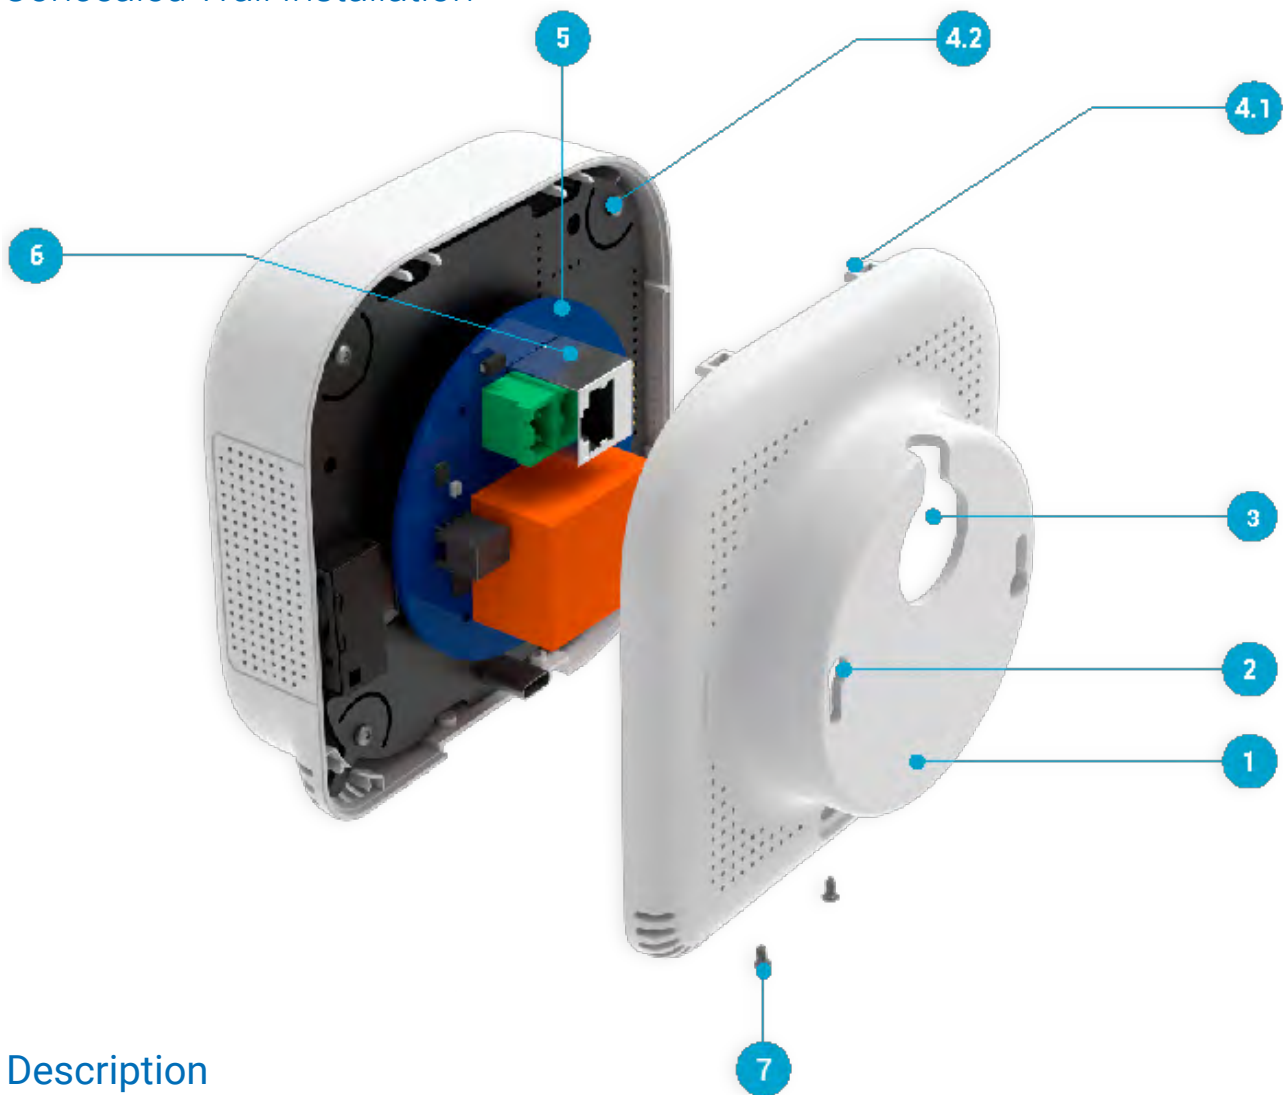




Description

1. Back cover of the case.
2. Mounting holes (x2).
3. Cable inlet hole.
4. 1) Assembly hooks (x2).
2) Assembly guides (x2).
5. Electronic Motherboard (MOBO).
6. Female Ethernet terminal.
7. Female power terminal.

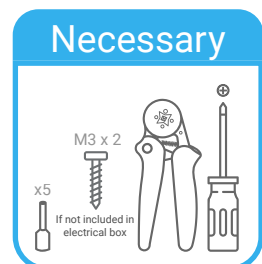

Note: The recommended height for installation is 120 - 180cm.

Steps to follow

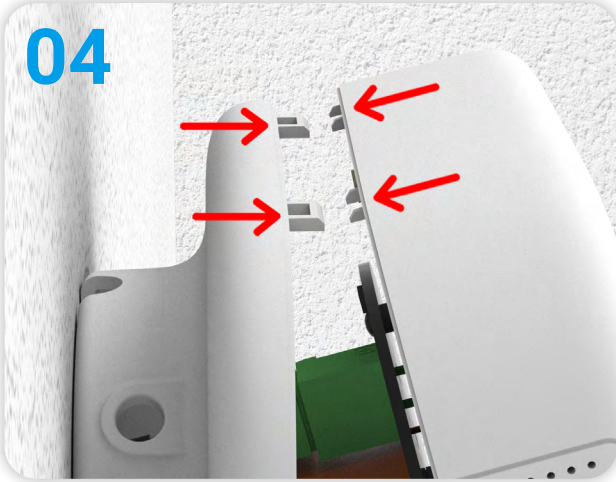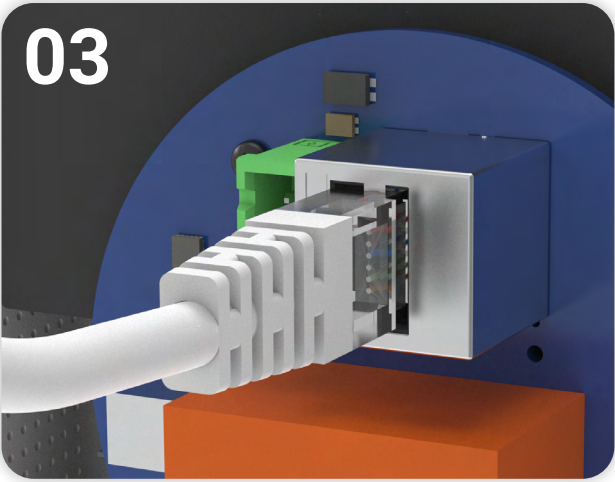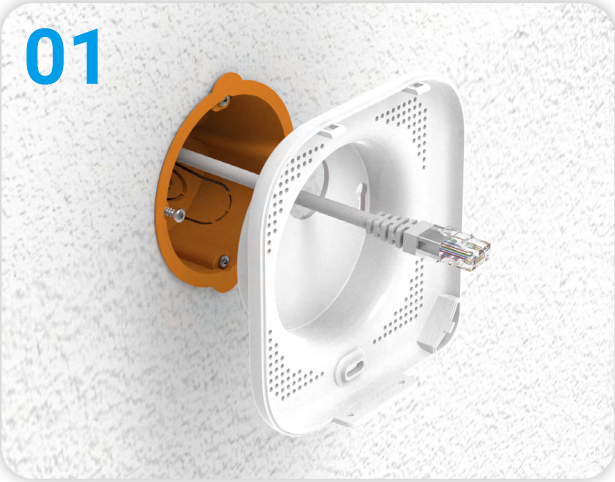


Description

1. First, place two screws into the electrical box and route the power cable (PoE) through the cable inlet hole ③.
2. Next, mount the back cover of the case ① to the wall:
 - a. Insert the screws into the mounting holes ②.
 - b. Rotate the back cover of the case ① so that it is straight.
 - c. Tighten the screws to secure in position.
3. Connect the Ethernet cable to the female Ethernet terminal ⑥ located on the MOBO ⑤.
4. You can now close the MICA: Align the assembly guides ④ with the assembly hooks ④ (this must be done with the housing slightly tilted) and then close the case.
5. To finish, secure the case with the two bottom assembly screws ⑦.

IMPORTANT: Avoid connecting the device to more than one power source at the same time. This could shorten the device's lifespan.


BACnet 110 - 240V AC / 8 - 36V DC

Concealed Wall Installation

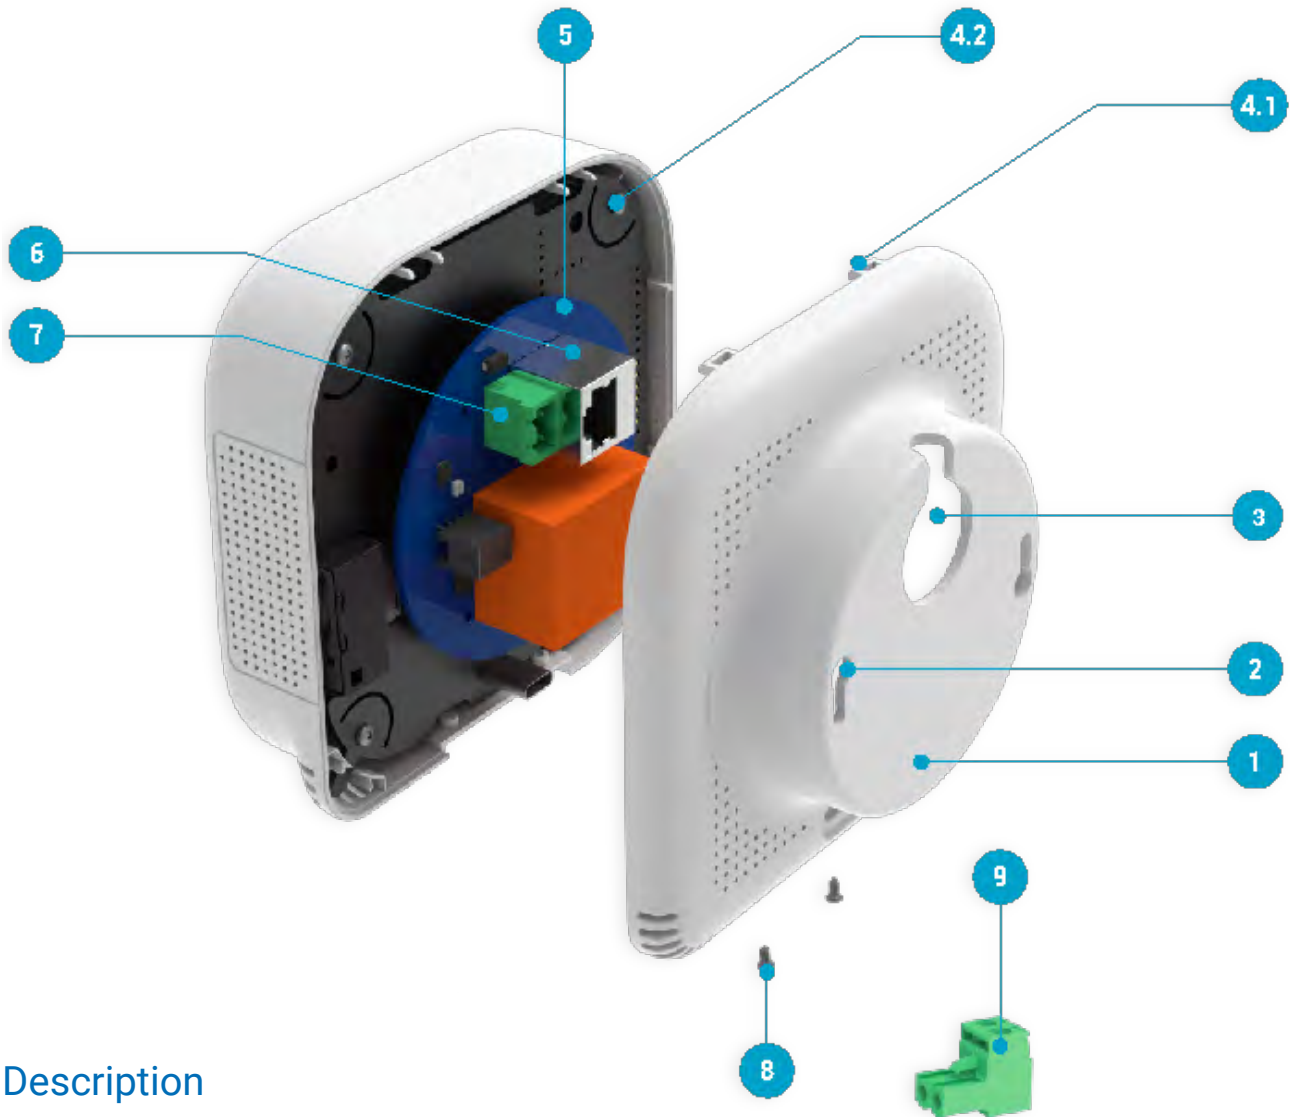




Description

1. Back cover of the case.
2. Mounting holes (x2).
3. Cable inlet hole.
4. 1) Assembly hooks (x2).
2) Assembly guides (x2).
5. Electronic Motherboard (MOBO).
6. Female Ethernet terminal.
7. Female power terminal.
8. Assembly screws (x2).
9. Male power terminal.

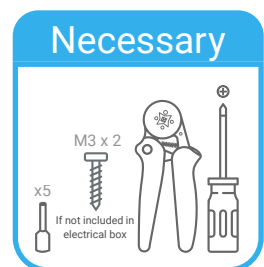

Note: The recommended height for installation is 120 - 180cm.

Steps to follow

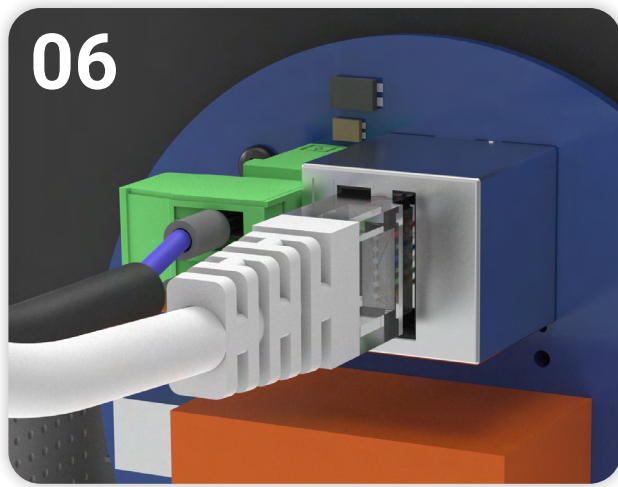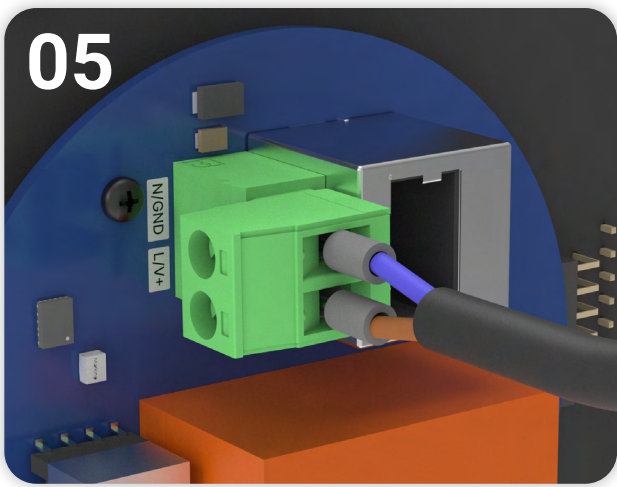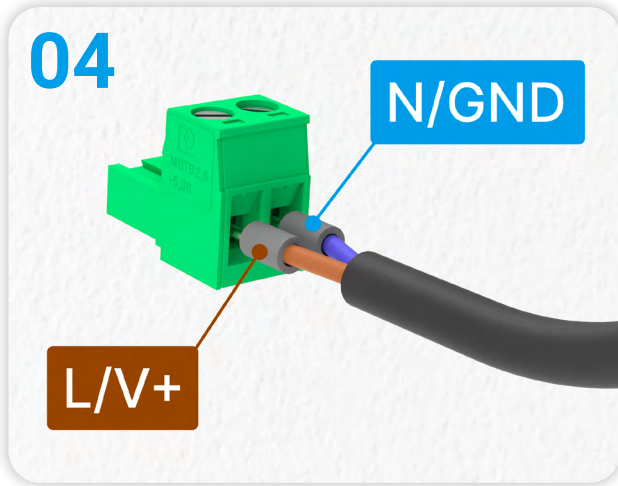



Description

1. First, place two screws into the electrical box and route the cables (power and ethernet) through the cable inlet hole ③.
2. Next, mount the back cover of the case ① to the wall:
 - a. Insert the screws into the mounting holes ②.
 - b. Rotate the back cover of the case ① so that it is straight.
 - c. Tighten the screws to secure in position.
3. **Before proceeding**, add ferrules to the wires on the power cable.
4. Next, connect the power wires to the male power terminal ⑧ provided. If the power supply is **direct current (8 - 36V DC)**, remember to respect the order of the inputs (**V+ and GND**).
5. Connect the power cable to the female power terminal ⑦ located in the MOBO ⑤.
6. Connect the Ethernet cable to the female Ethernet terminal ⑥ located on the MOBO ⑤.
7. You can now close the MICA: Align the assembly guides ④ with the assembly hooks ④ (this must be done with the housing slightly tilted) and then close the case.
8. To finish, secure the case with the two bottom assembly screws ⑧.

IMPORTANT: Avoid connecting the device to more than one power source at the same time. This could shorten the device's lifespan.

Usage notes



1. Verify that no electric current is flowing during the installation or maintenance of wall-mounted equipment (for both concealed and non-concealed wall installations).
2. To reduce risks, always entrust the installation and maintenance of the equipment to qualified personnel.
3. IMPORTANT: Avoid connecting the device to more than one power source at the same time. This could shorten the device's lifespan.
4. Download the "inBiot Setup" [mobile application](#) to configure your MICA.
5. For any inquiries, contact the support team through the [form on our support page](#).



Copyright © inBiot Monitoring SL