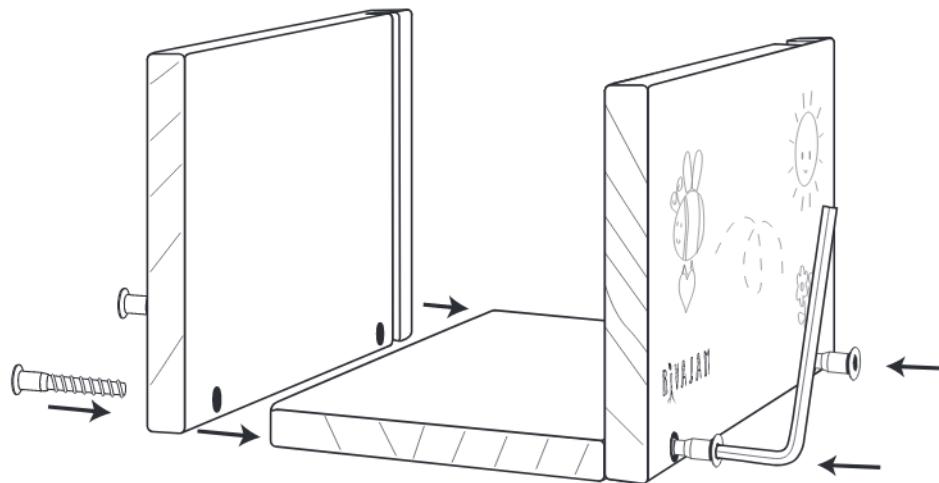
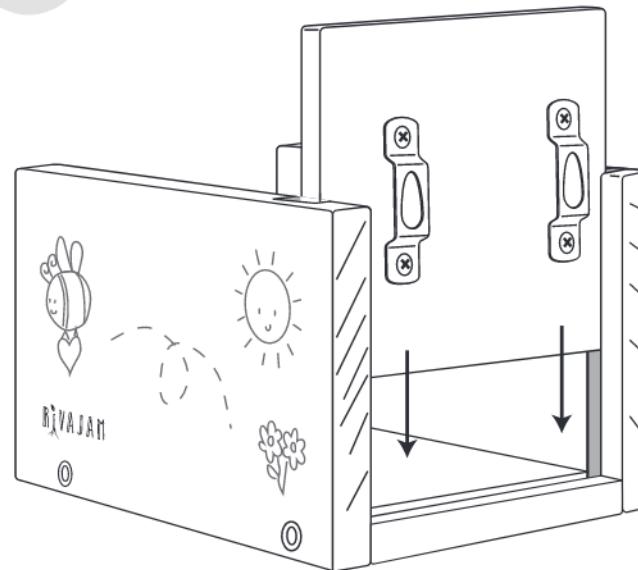
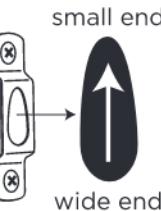


**1**

Attach two side panels to base panel with screws into the pre-drilled holes using the Allen key.

**2**


Slide in back panel.

**RIVAJAM®**


Be sure to place back panel with small end of hook teardrop hole facing up.

**3**

Attach roof with screws as shown.

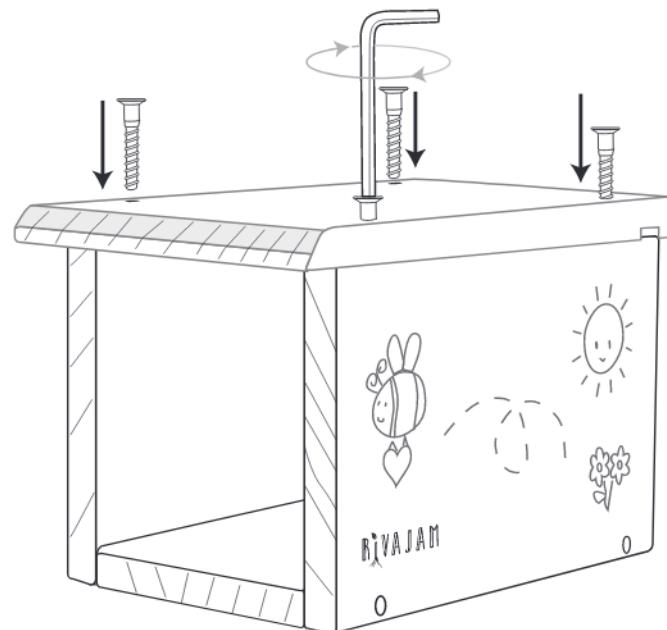**4**


Insert cardboard tubes until they are snug.

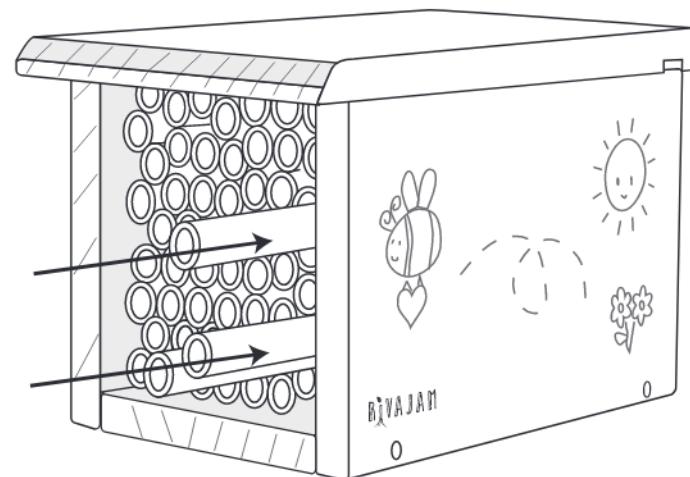**5**

Please refer to the enclosed information page for instructions on how to install your bee house.


1

Fixer les deux panneaux latéraux au panneau de base à l'aide de vis dans les trous pré-percés à l'aide de la clé Allen.

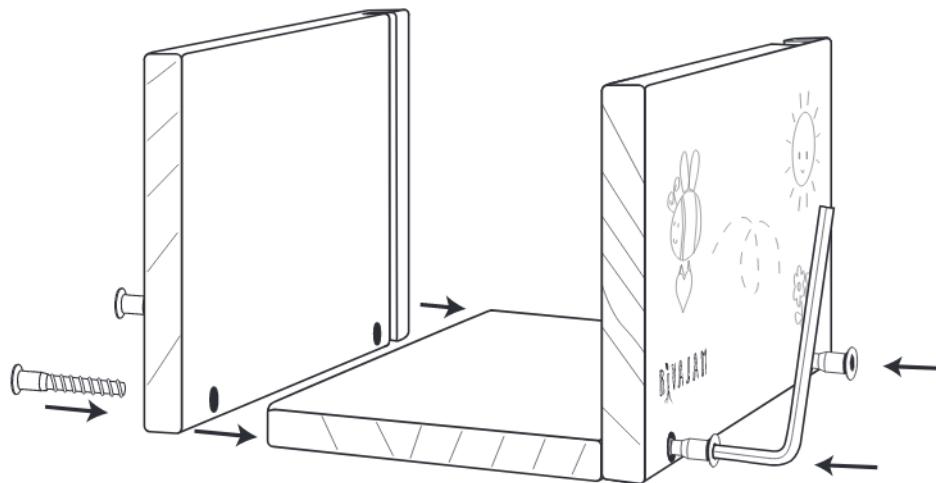


2

Glissez le panneau arrière.

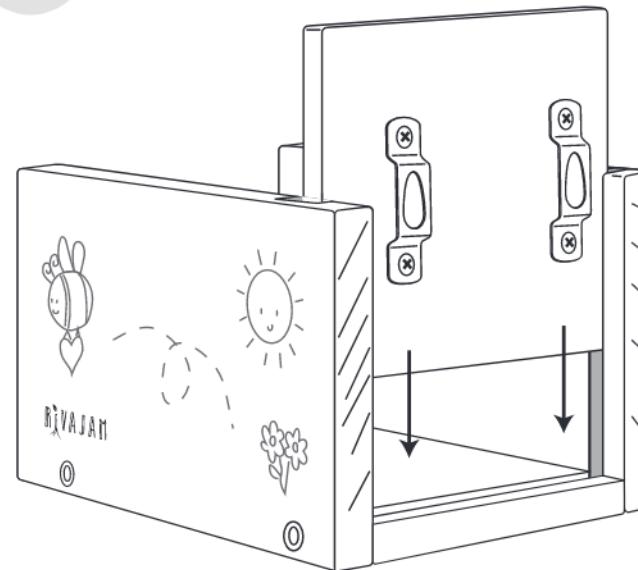

RIVAJAM®

Extrémité petite

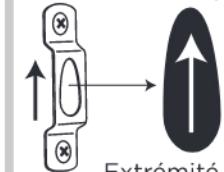


Extrémité large

Assurez-vous de placer le panneau arrière avec la petite extrémité du trou en forme de larme du crochet vers le haut.


3

Fixez le toit à l'aide de vis comme indiqué.

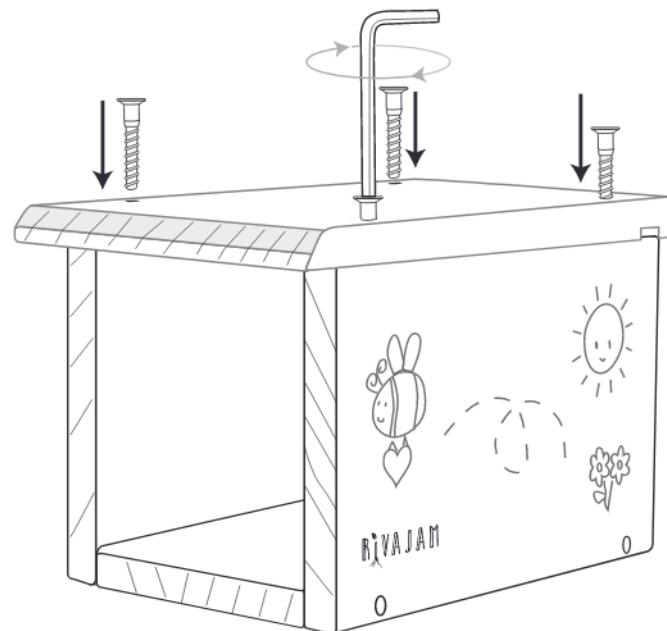

4

Insérez les tubes en carton jusqu'à ce qu'ils soient bien ajustés.

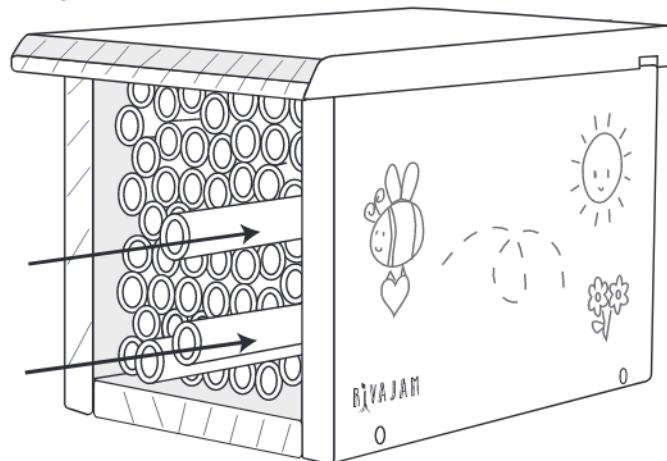

5

Veuillez-vous reporter à la page d'information ci-jointe pour obtenir des instructions sur la façon d'installer votre maison d'abeilles.