
GUARDIAN


VALLA SERIES
SLAT PACK INSTALLATION GUIDE

VALLA PANEL & GATE SETUP - 65 & 100MM

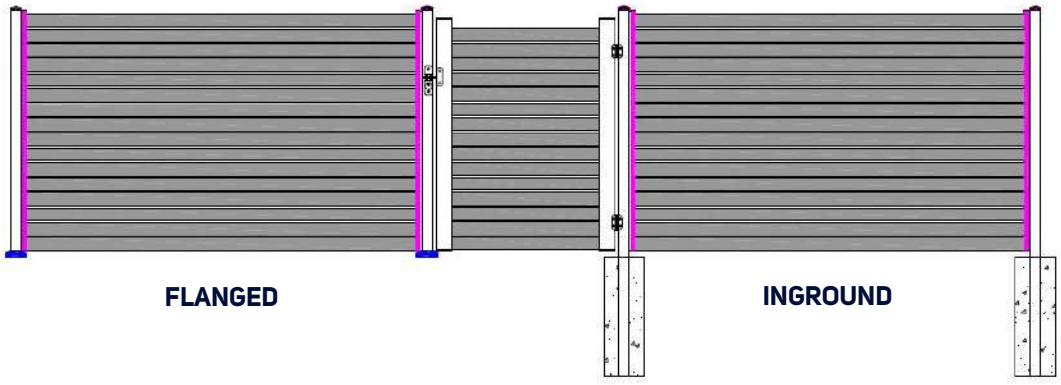


CHOOSE YOUR FENCE POST LAYOUT


END POST

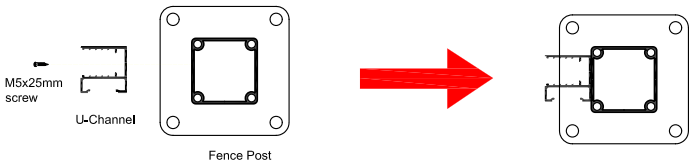

JOINER POST

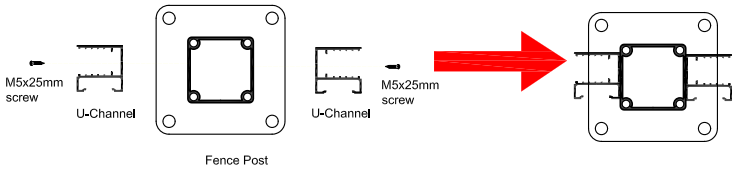


CORNER POST

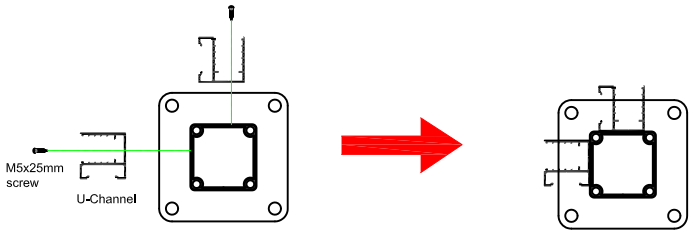


CHANNEL TO POST INSTALLATION

FLANGED POST

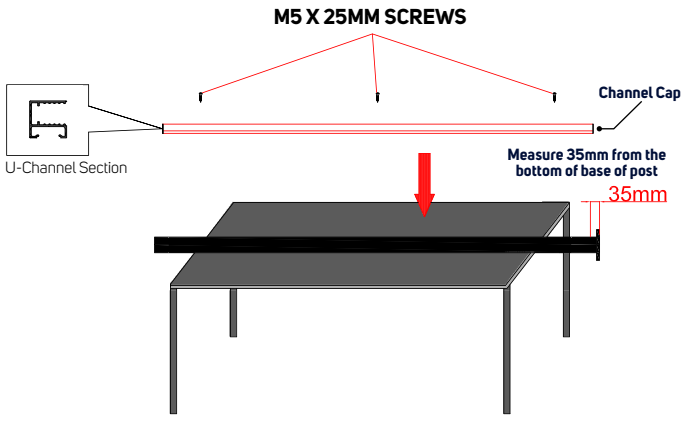


INGROUND POST

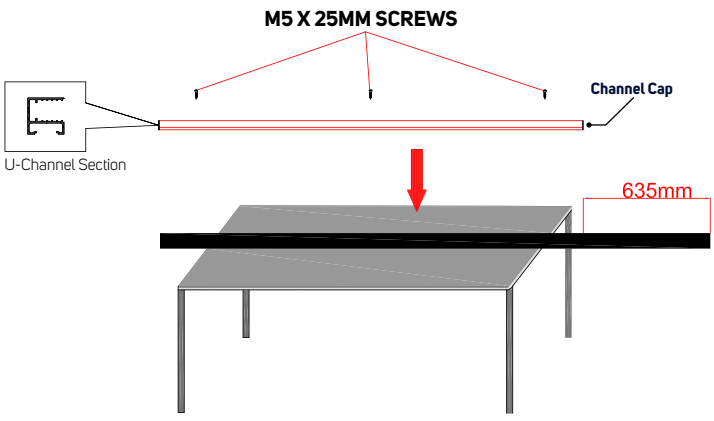


1. Place Fence Post on on flat work surface
2. Insert channel cap on bottom of U-Channel.
3. Place channel onto post following diagrams above for your post type.
4. Place the U-Channel cap end/bottom from the required mark then fix U-Channel to post using 3 M5 x 25mm screws starting at the top, centre then bottom.

FENCE POST INSTALLATION

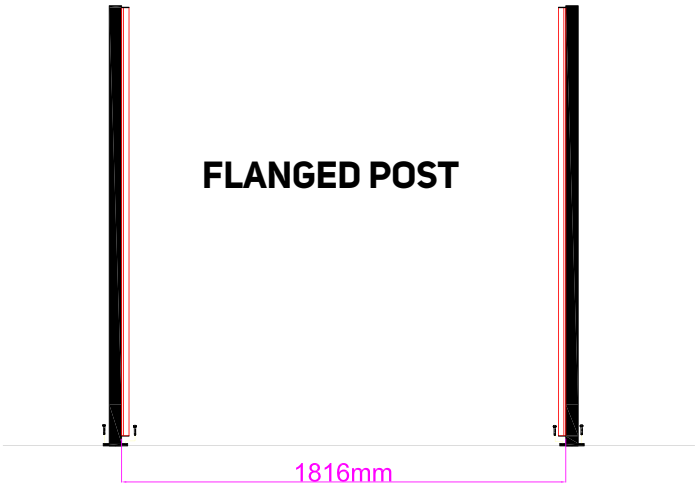



1. Install Flanged Post with suitable fixings to your hard surface.

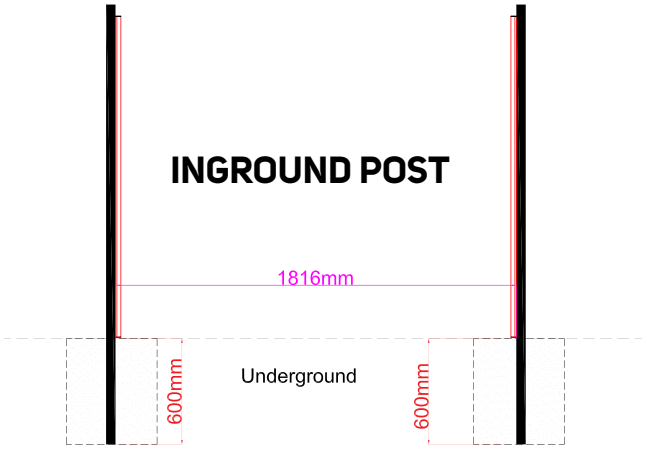

1. Place Inground Posts into 600mm cavity then fill with concrete and leave to dry.

SLAT INSTALLATION

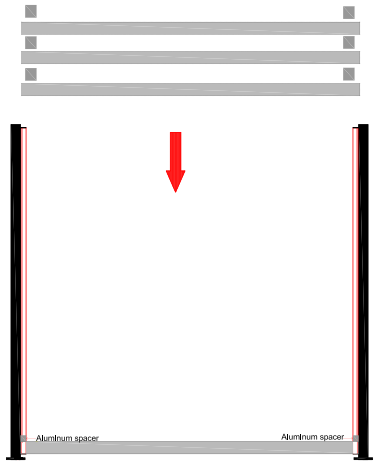

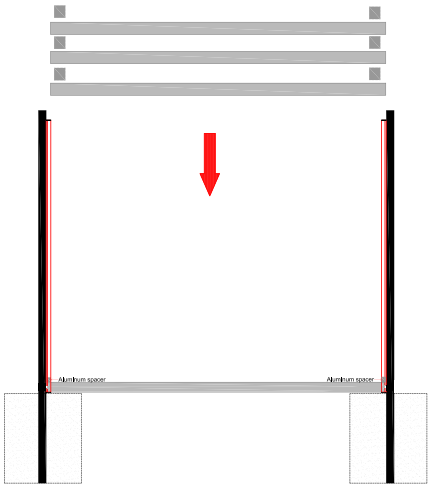


1. Insert 1 x Slat into U-Channel.
2. Insert Aluminium Spacer on both sides in U-Channel above slat. (Push spacer to click in)
3. Repeat steps 1-2 until all slats have been inserted to full height.


TIP 1: Before screwing off the slats you can raise the bottom slat up to create a flush top line.

FIXING SLATS INTO PLACE

FLANGED

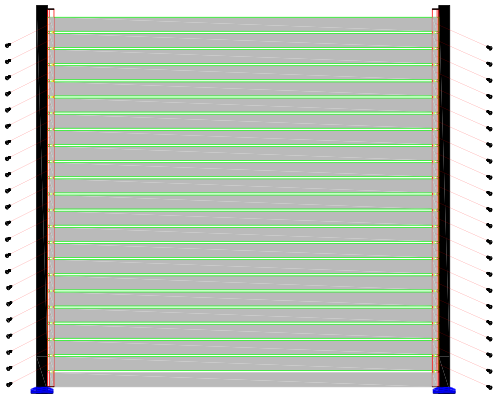


INGROUND

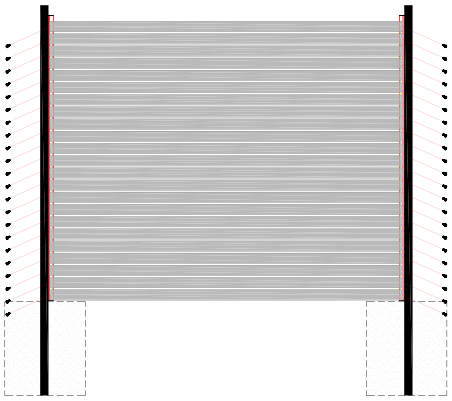

1. Fix slats in place with M4 x 16mm screws along U-Channel.

TIP 2: Use a level on the top to make sure slats are straight before screwing off.

INSTALL U-CHANNEL COVER STRIPS

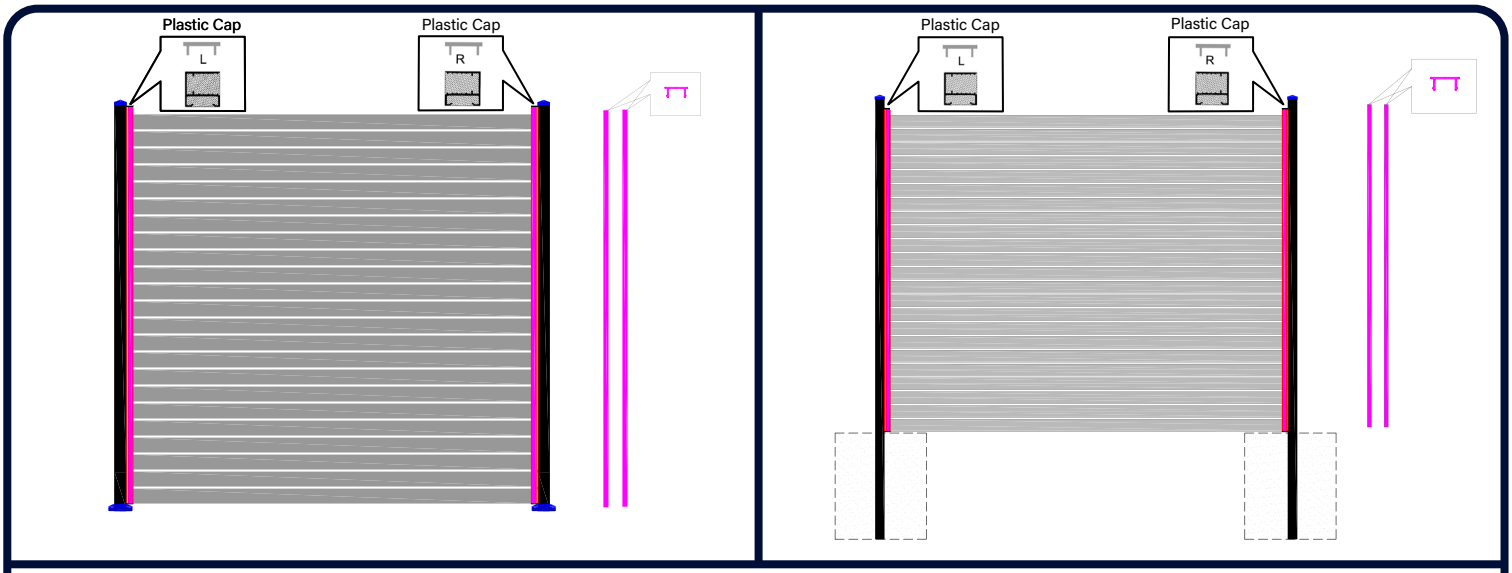

1. Click in the U-Channel cover strip followed by the top plastic U-Channel cap (Labelled L & R for Channels).

ADDITIONAL PRODUCT INFORMATION

ADD BASE PLATE COVER & POST CAPS

(Available in Black or Grey)

1. Install Base Plate covers if applicable 
2. Install Post Caps 

WANT TO SPLIT AS PANEL PACK IN HALF?

- All slat panels packs can be cut to custom width to create smaller sections. All you need is 2x extra U-Channel Packs & 1x Spacer Pack (If making Slat Pack)

GATE SELECTION

- A fully assembled gate is available to purchase for every height and style.
  All gates are 900mm wide.

DAMAGE A SLAT?

- Replacement slats are available to order.