Materials

Door frame

- Painted: All paint grades

Panel door insert:

- Clear tempered glass
- Grey tempered glass
- Frosted acrylic

Parts:

- Sliding panel door with mounting hardware attached
- Stainless steel threshold
- Mounting screws (2) self drilling

Product Details

The gen2 Sliding Door is handled and can be installed either on the outside or inside of host panel.

The Sliding Door is 1-1/2" thick and accommodates door openings of 36" and 42". The Sliding Door must match the height of the host panel 65" or 80".


The door slides along 2 wheels that ride on the ADA stainless steel threshold. The mounting bracket secures the Sliding Door to the host panel and also self-adjusts for uneven floors.

gen2 Sliding Door is available in both locking and non-locking options.

Sliding Doors ship fully assembled.


Step One

Place the threshold on the floor and install host panel on top of panel ledge lining it up with the end of the panel. The threshold will extend the length of the opening. *Optional:* Secure threshold by driving a flush head wood or concrete screw (not included) through the hole provided at the end of the threshold and into the floor.

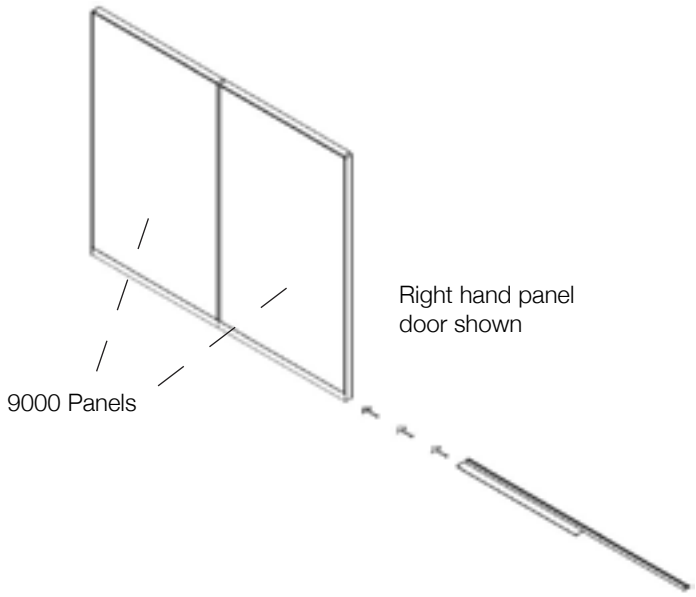


Step Two

Set the door wheels in channel on threshold and tilt the panel door up aligning the mounting bracket with the end of the panel.

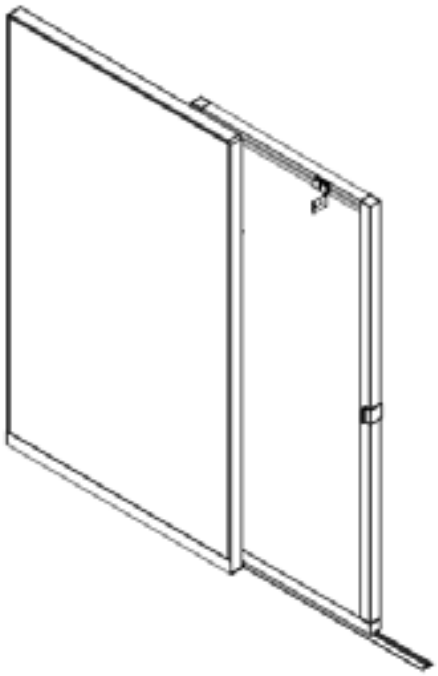


Step Three

Using two (2) self drilling screws, secure the panel door to the host panel.

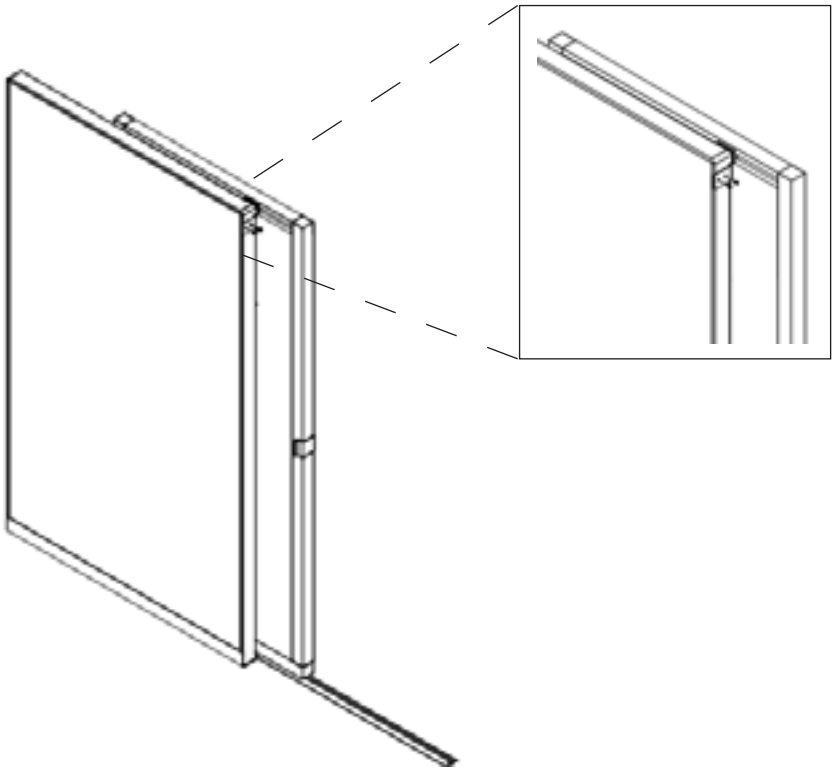


Step Four

With the door fully installed, slide door open and closed allowing the self adjusting mounting bracket to level out for any uneven floors. If more adjustment is needed, use the panel glide and adjust accordingly.

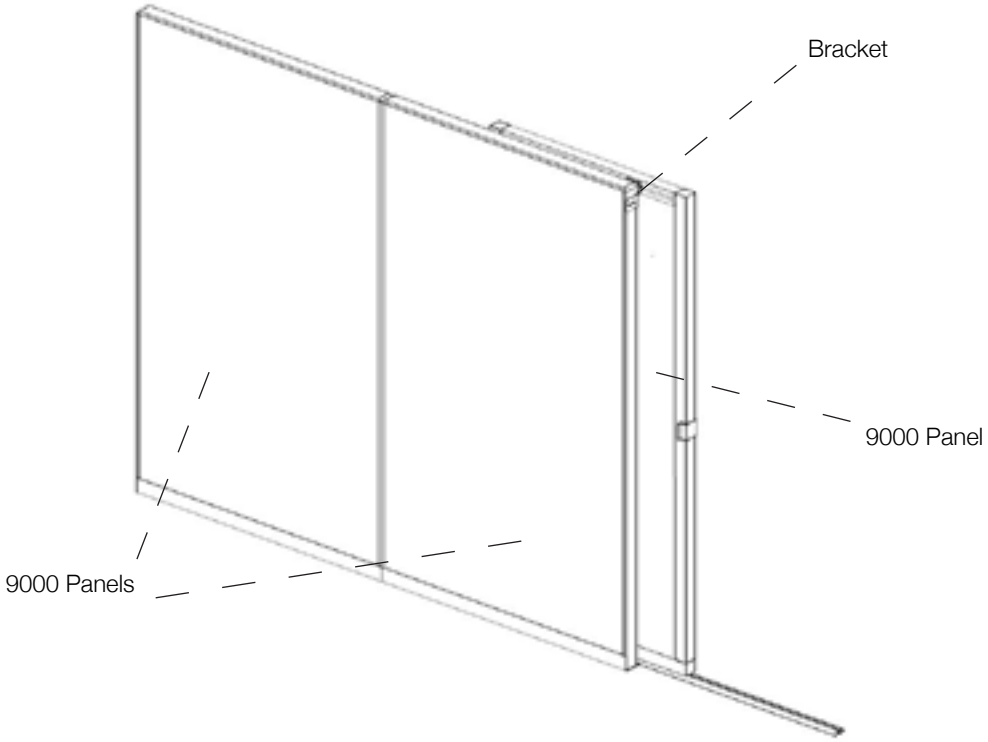


Step Four

Sliding Door Travel Adjustment: To adjust the distance the door travels in the closed position, locate the locking nut in the upper frame on the opposite side of the door pull. Place the door in the closed position and tighten the locking nut. Slide the door open and closed and adjust the locking nut as needed.

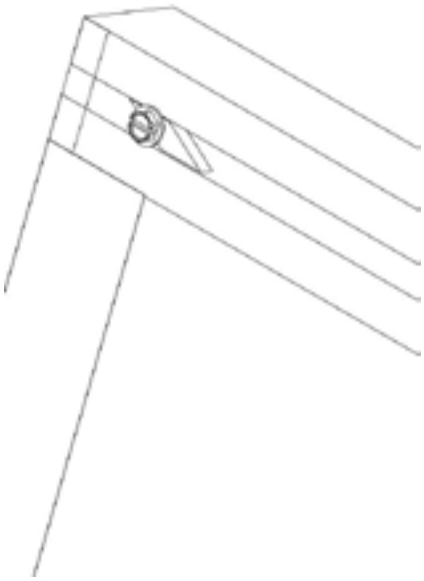

Step Five (Optional)

Sliding Door Lock Tab Install: Install door threshold per main instructions. Once in place, measure 4" back from the edge of the panel and transfer mark on to door track side of threshold. Install tab by placing the vertical part on the 4" mark. Use two (2) self-drilling screws to secure the tab to the threshold.

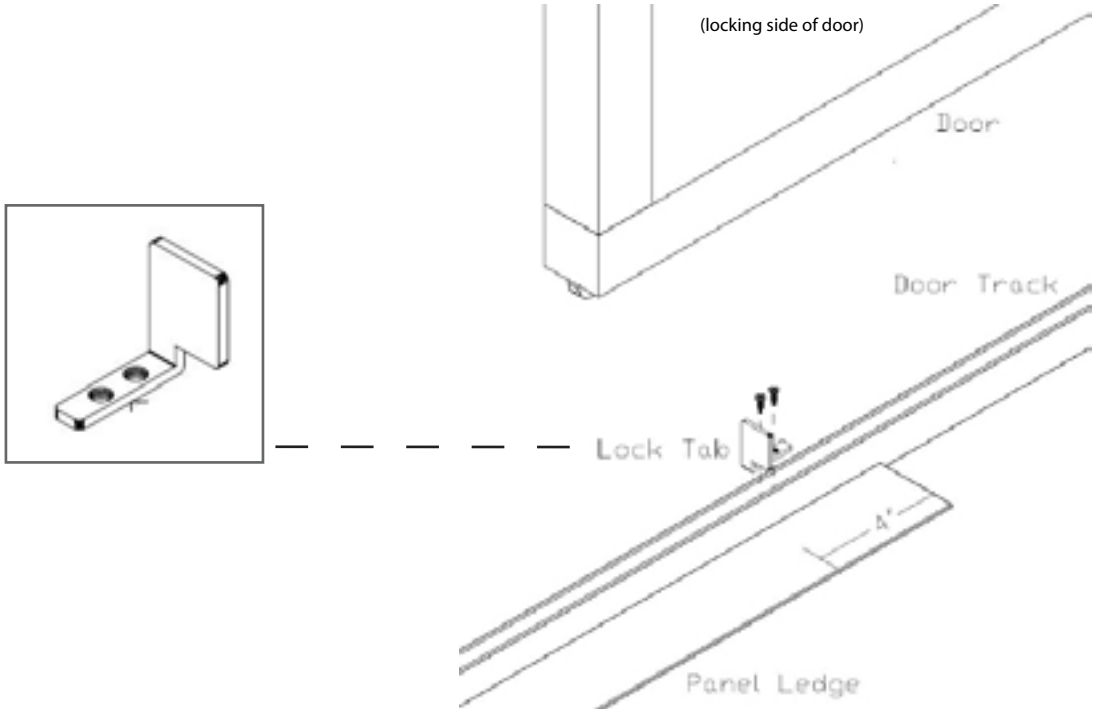

Reference Image:
Lock components

