



NATALIA LANDOWSKA CERAMICS

PORCELAIN WALL SCONCE

INSTALLATION MANUAL — HARDWIRED

CONTENTS:

HANDLING THE SCONCE	2
HANDLING THE SCONCE	3
INSTALLATION DIAGRAM: HARDWIRED — LINE VOLTAGE (110V OR 220V AC)	4
INSTALLATION DIAGRAM: HARDWIRED — LOW VOLTAGE (12V AC/DC)	5
MOUNTING ON THE WALL - TEMPLATE	6
MOUNTING ON THE WALL - PREREQUISITES	7
MOUNTING ON THE WALL - PROCESS	8
FINAL ADJUSTMENTS	9



NATALIA LANDOWSKA CERAMICS

HANDLING THE SCONCE




Please always use both hands to hold the sconce.

Never hold by the edge like a food bowl.



NATALIA LANDOWSKA CERAMICS

HANDLING THE SCONCE

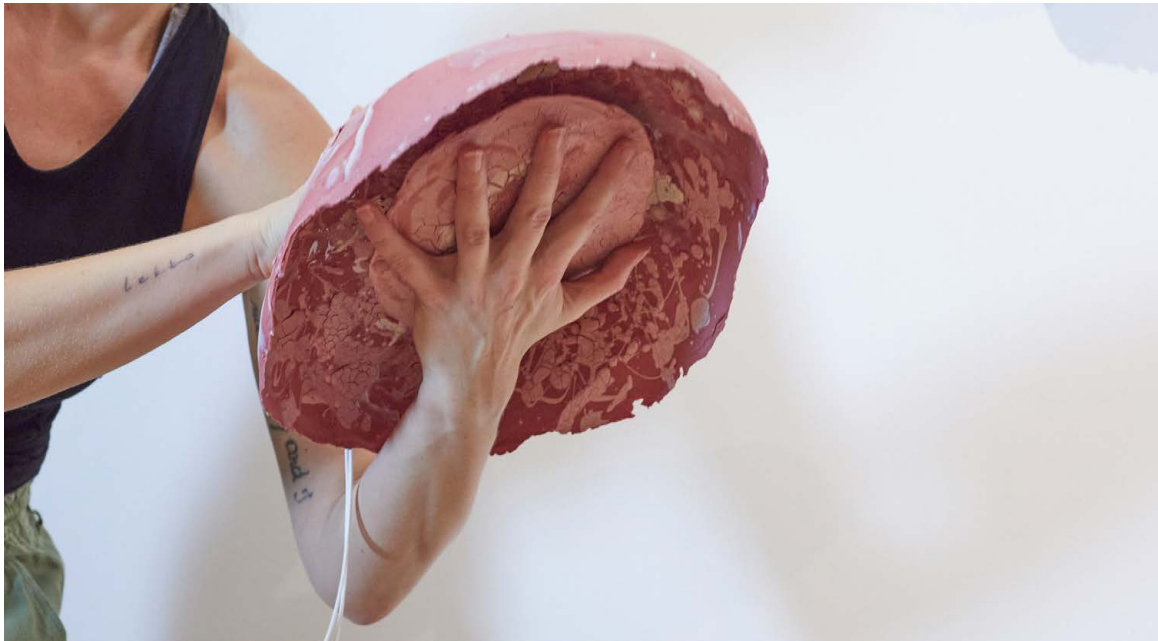


If you need to flip the sconce upside down:

Place one palm on the center plate and the other palm under, then flip.



NATALIA LANDOWSKA CERAMICS

INSTALLATION DIAGRAM: HARDWIRED — LINE VOLTAGE (110V OR 220V AC)

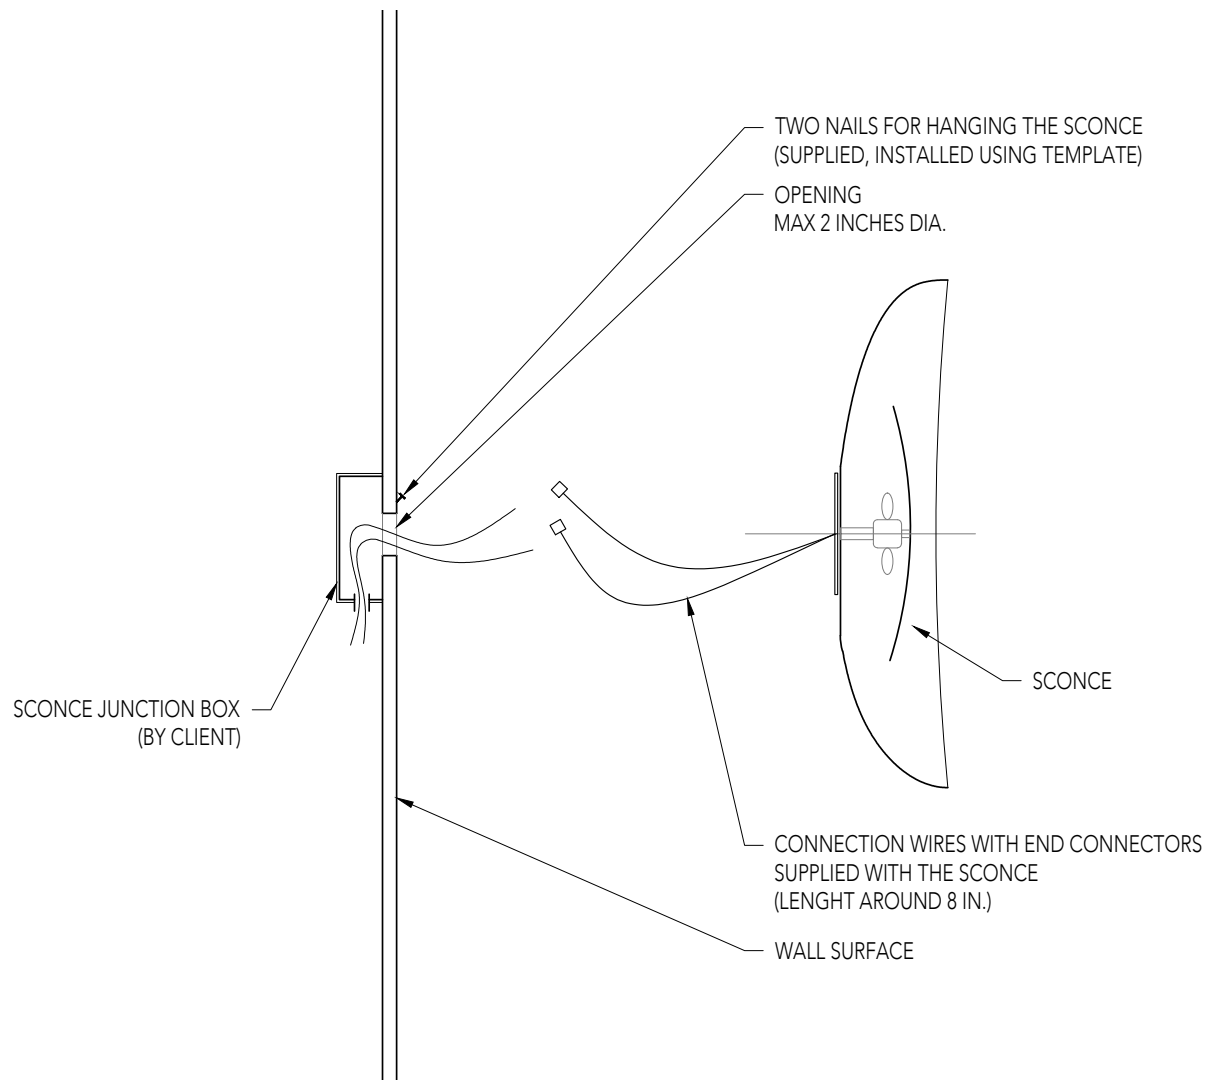


Recessed wall junction box needs to be provided by the Owner. Junction box should be controlled by a switch or dimmer. The sconce does not have a switch built in.

Bulbs installed in the sconce are dimmable LED. Installer is responsible for ensuring compatibility of dimming system and bulbs.



NATALIA LANDOWSKA CERAMICS

INSTALLATION DIAGRAM: HARDWIRED — LOW VOLTAGE (12V AC/DC)

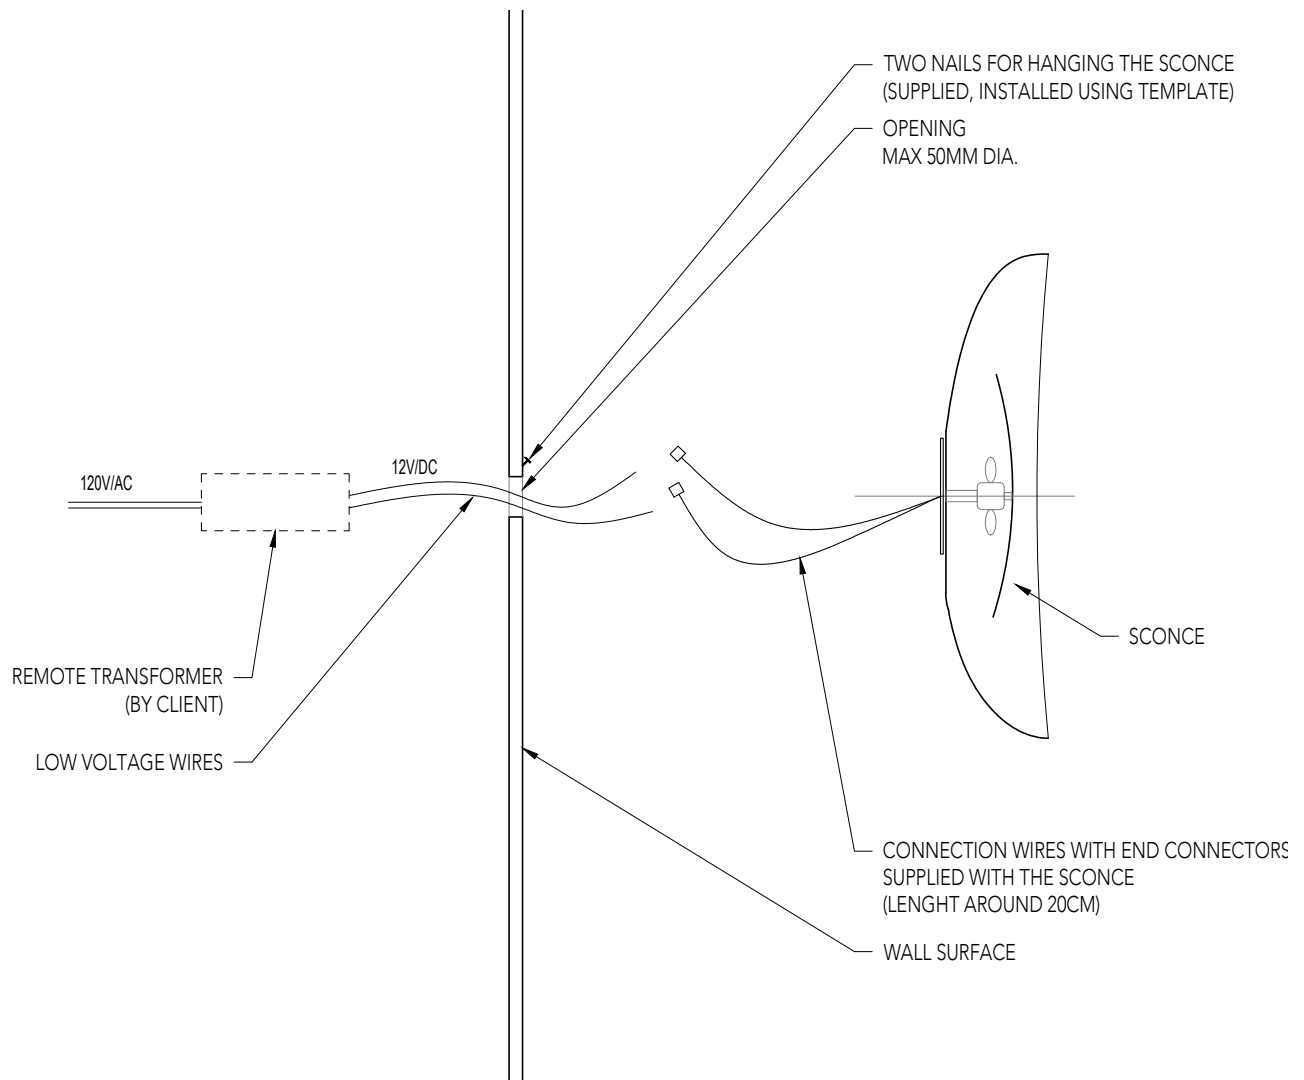

Remote transformer with 12V DC output needs to be provided and installed by the Owner. Transformer should be controlled by a switch or dimmer. The sconce does not have a switch built in.

Use soft stranded wire between transformer and sconce, 12 AWG or thinner.


Sconce requires a small recess in the wall - around 2in dia. and 1 in deep, to curl and hide the wires.

Bulbs installed in the sconce are dimmable LED. Owner is responsible for ensuring compatibility of dimming system and bulbs.



NATALIA LANDOWSKA CERAMICS

MOUNTING ON THE WALL - TEMPLATE

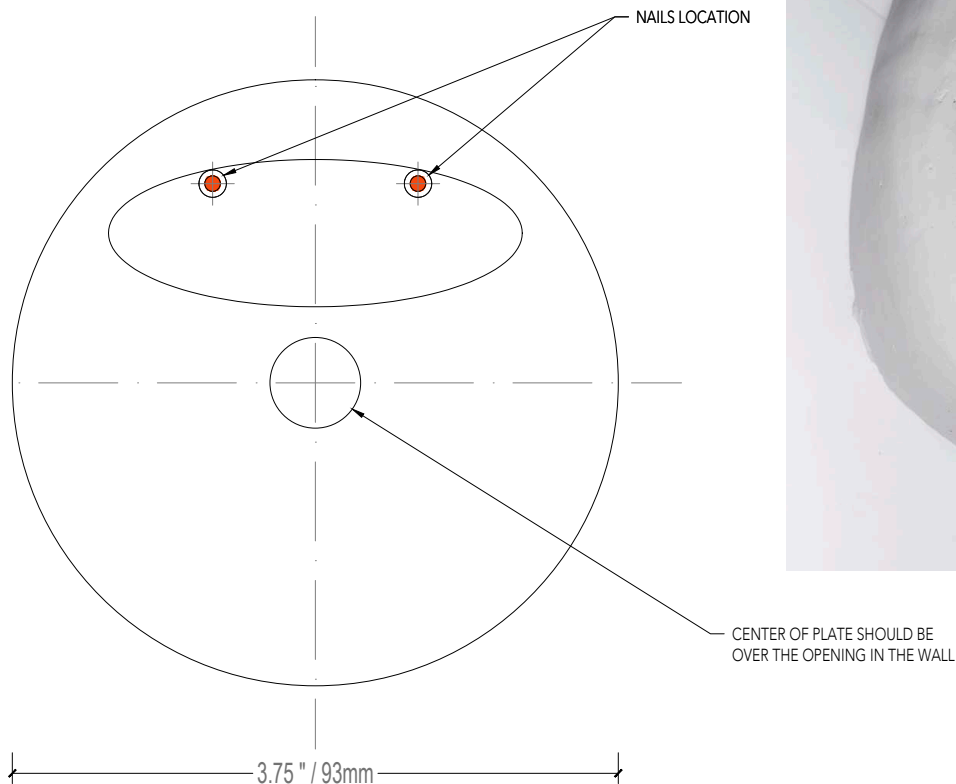

Drawing above shows the metal plate in the back of the sconce.

This template page will be included in the packaging, printed in actual scale.

Use the template to find location for nails (included).

Install nails at 45 deg angle, leaving nail heads around 5mm proud of wall surface.



NATALIA LANDOWSKA CERAMICS

MOUNTING ON THE WALL - PREREQUISITES




Required wall conditions:

- two nails installed with template
- opening not larger than 50mm dia.
- wires with about 80mm slack



NATALIA LANDOWSKA CERAMICS

MOUNTING ON THE WALL - PROCESS

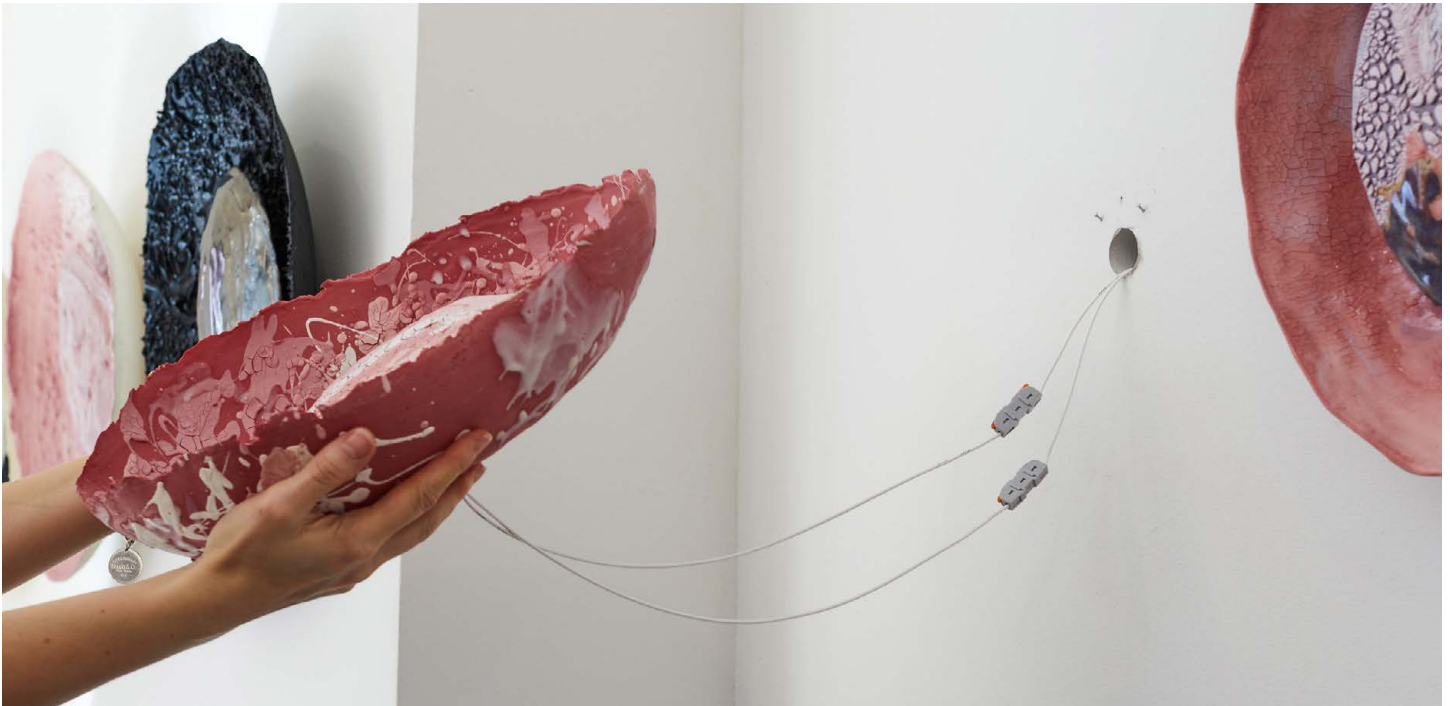

At this point you will need two people to work together.

While one person holds the sconce with both hands, close to the wall, the other connects sconce wires to the wires coming out of the wall.

There is no difference for line / neutral wire.

Push the wires into the hollow wall and hang the sconce on the two nails.



NATALIA LANDOWSKA CERAMICS

FINAL ADJUSTMENTS



Gently push the sconce towards the wall to make sure it sits as close to the wall as possible.

Make sure it hangs straight.

The center plate can be rotated of a few degrees in both directions.