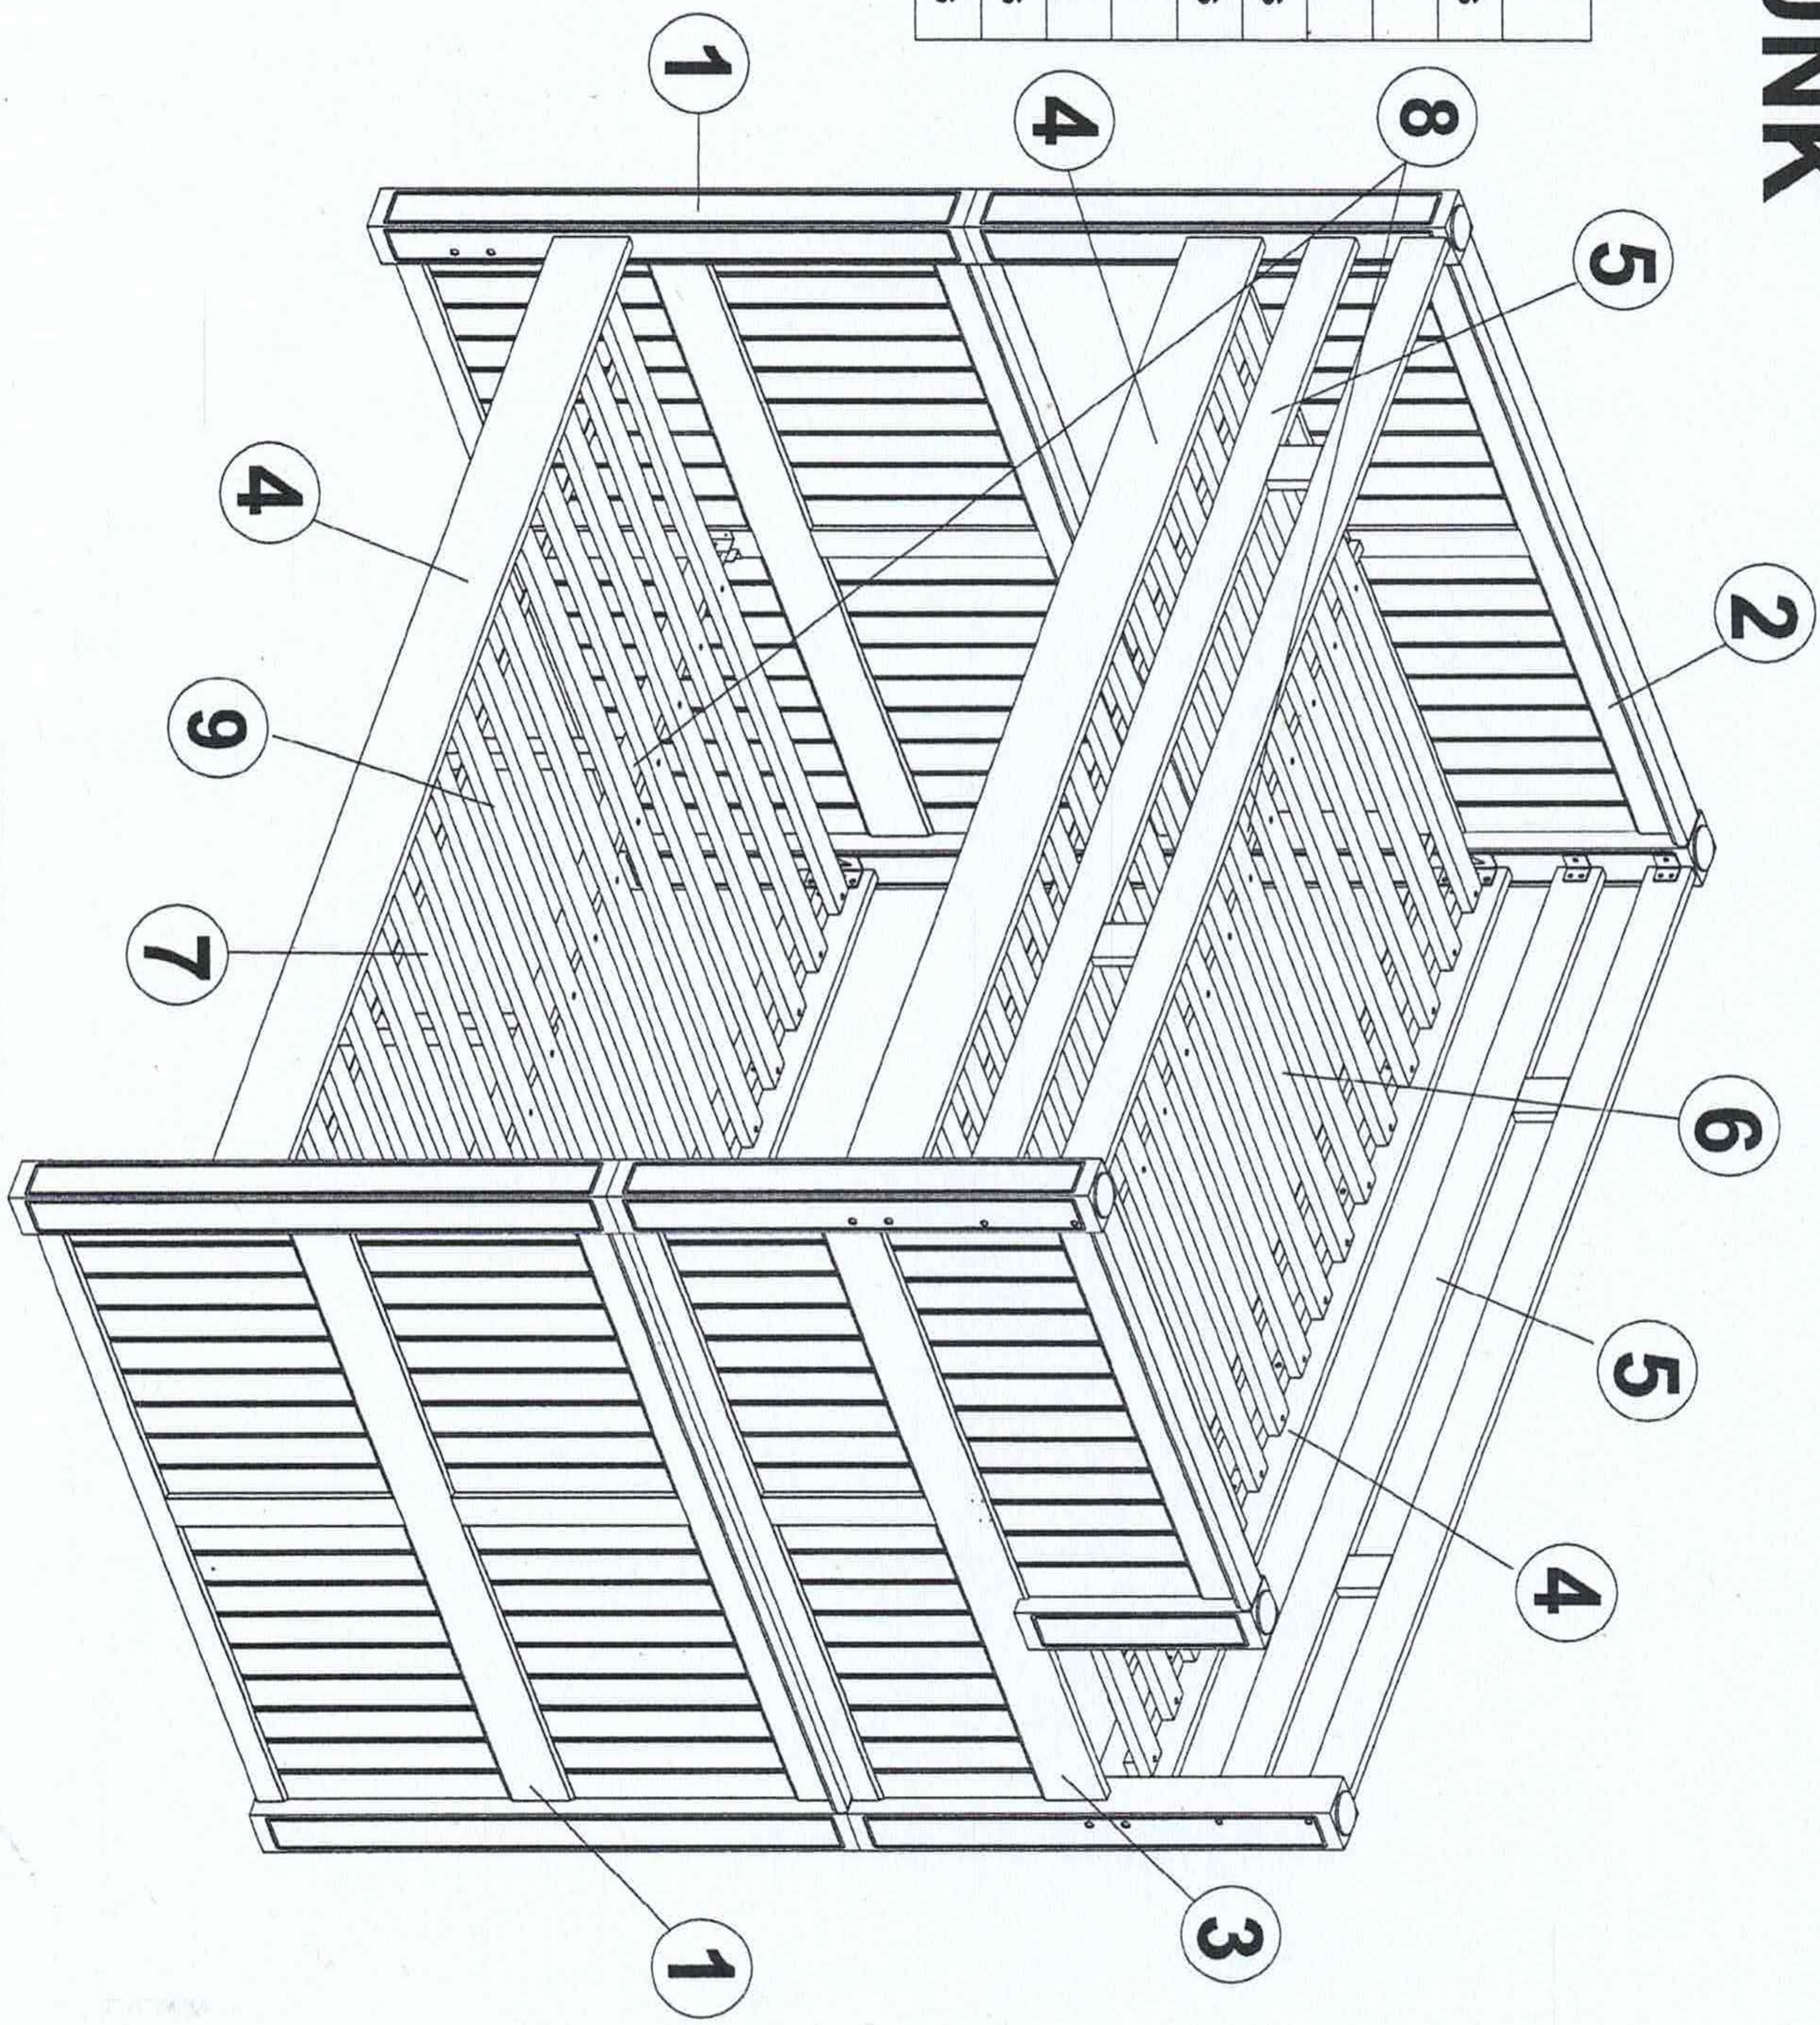


ITEM: 0363

FULL/FULL BUNK






Part List:





Item	Description	Qty
1	Bottom Head Boards	2 pcs
2	Left Upper Head Board	1 pc
3	Right Upper Head Board	1 pc
4	Side Rails	4 pcs
5	Guard Rails	2 pcs
6	Upper Slat	1 set
7	Bottom Slat	1 set
8	Center Supports	2 pcs
9	Leg Supports	3 pcs



Assembly Instruction

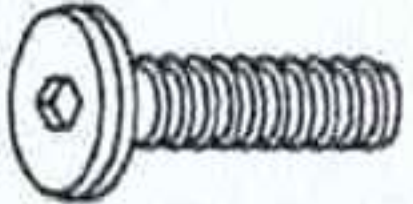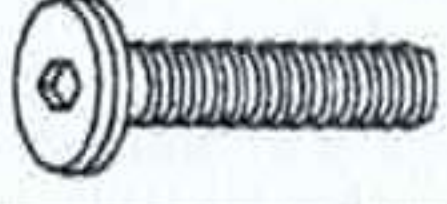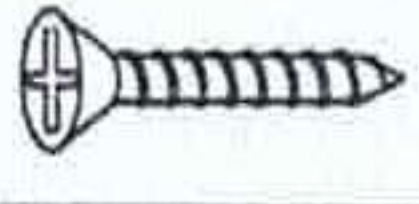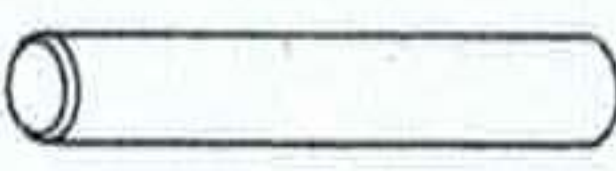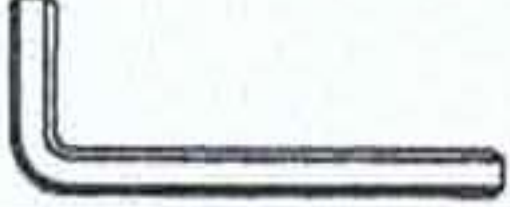
Hardware List:

Item	Description	Qty
A	JCBB M8 x 25 	16 pcs
B	JCBC M6 x 30 	8 pcs
C	Allen key M4 	1 pc
D	CSK screw M4 x 30 	118 pcs
E	Metal Pin 	4 pcs
F	Allen key M5 	1 pc

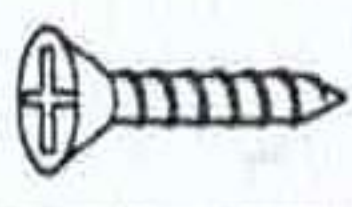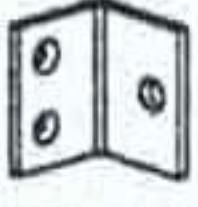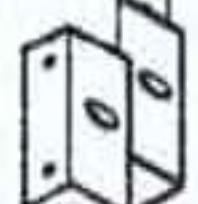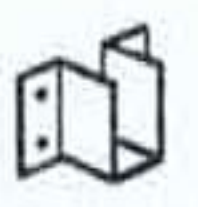Item	Description	Qty
H	CSK screw M4 x 20 	24 pcs
I	CSK screw M4 x 15 	16 pcs
J	"L" Bracket 	8 pcs
K	"U" Bottom Bracket 	2 pcs
L	"U" Top Bracket 	2 pcs
M	Wood Cap 	5 pcs

step
1

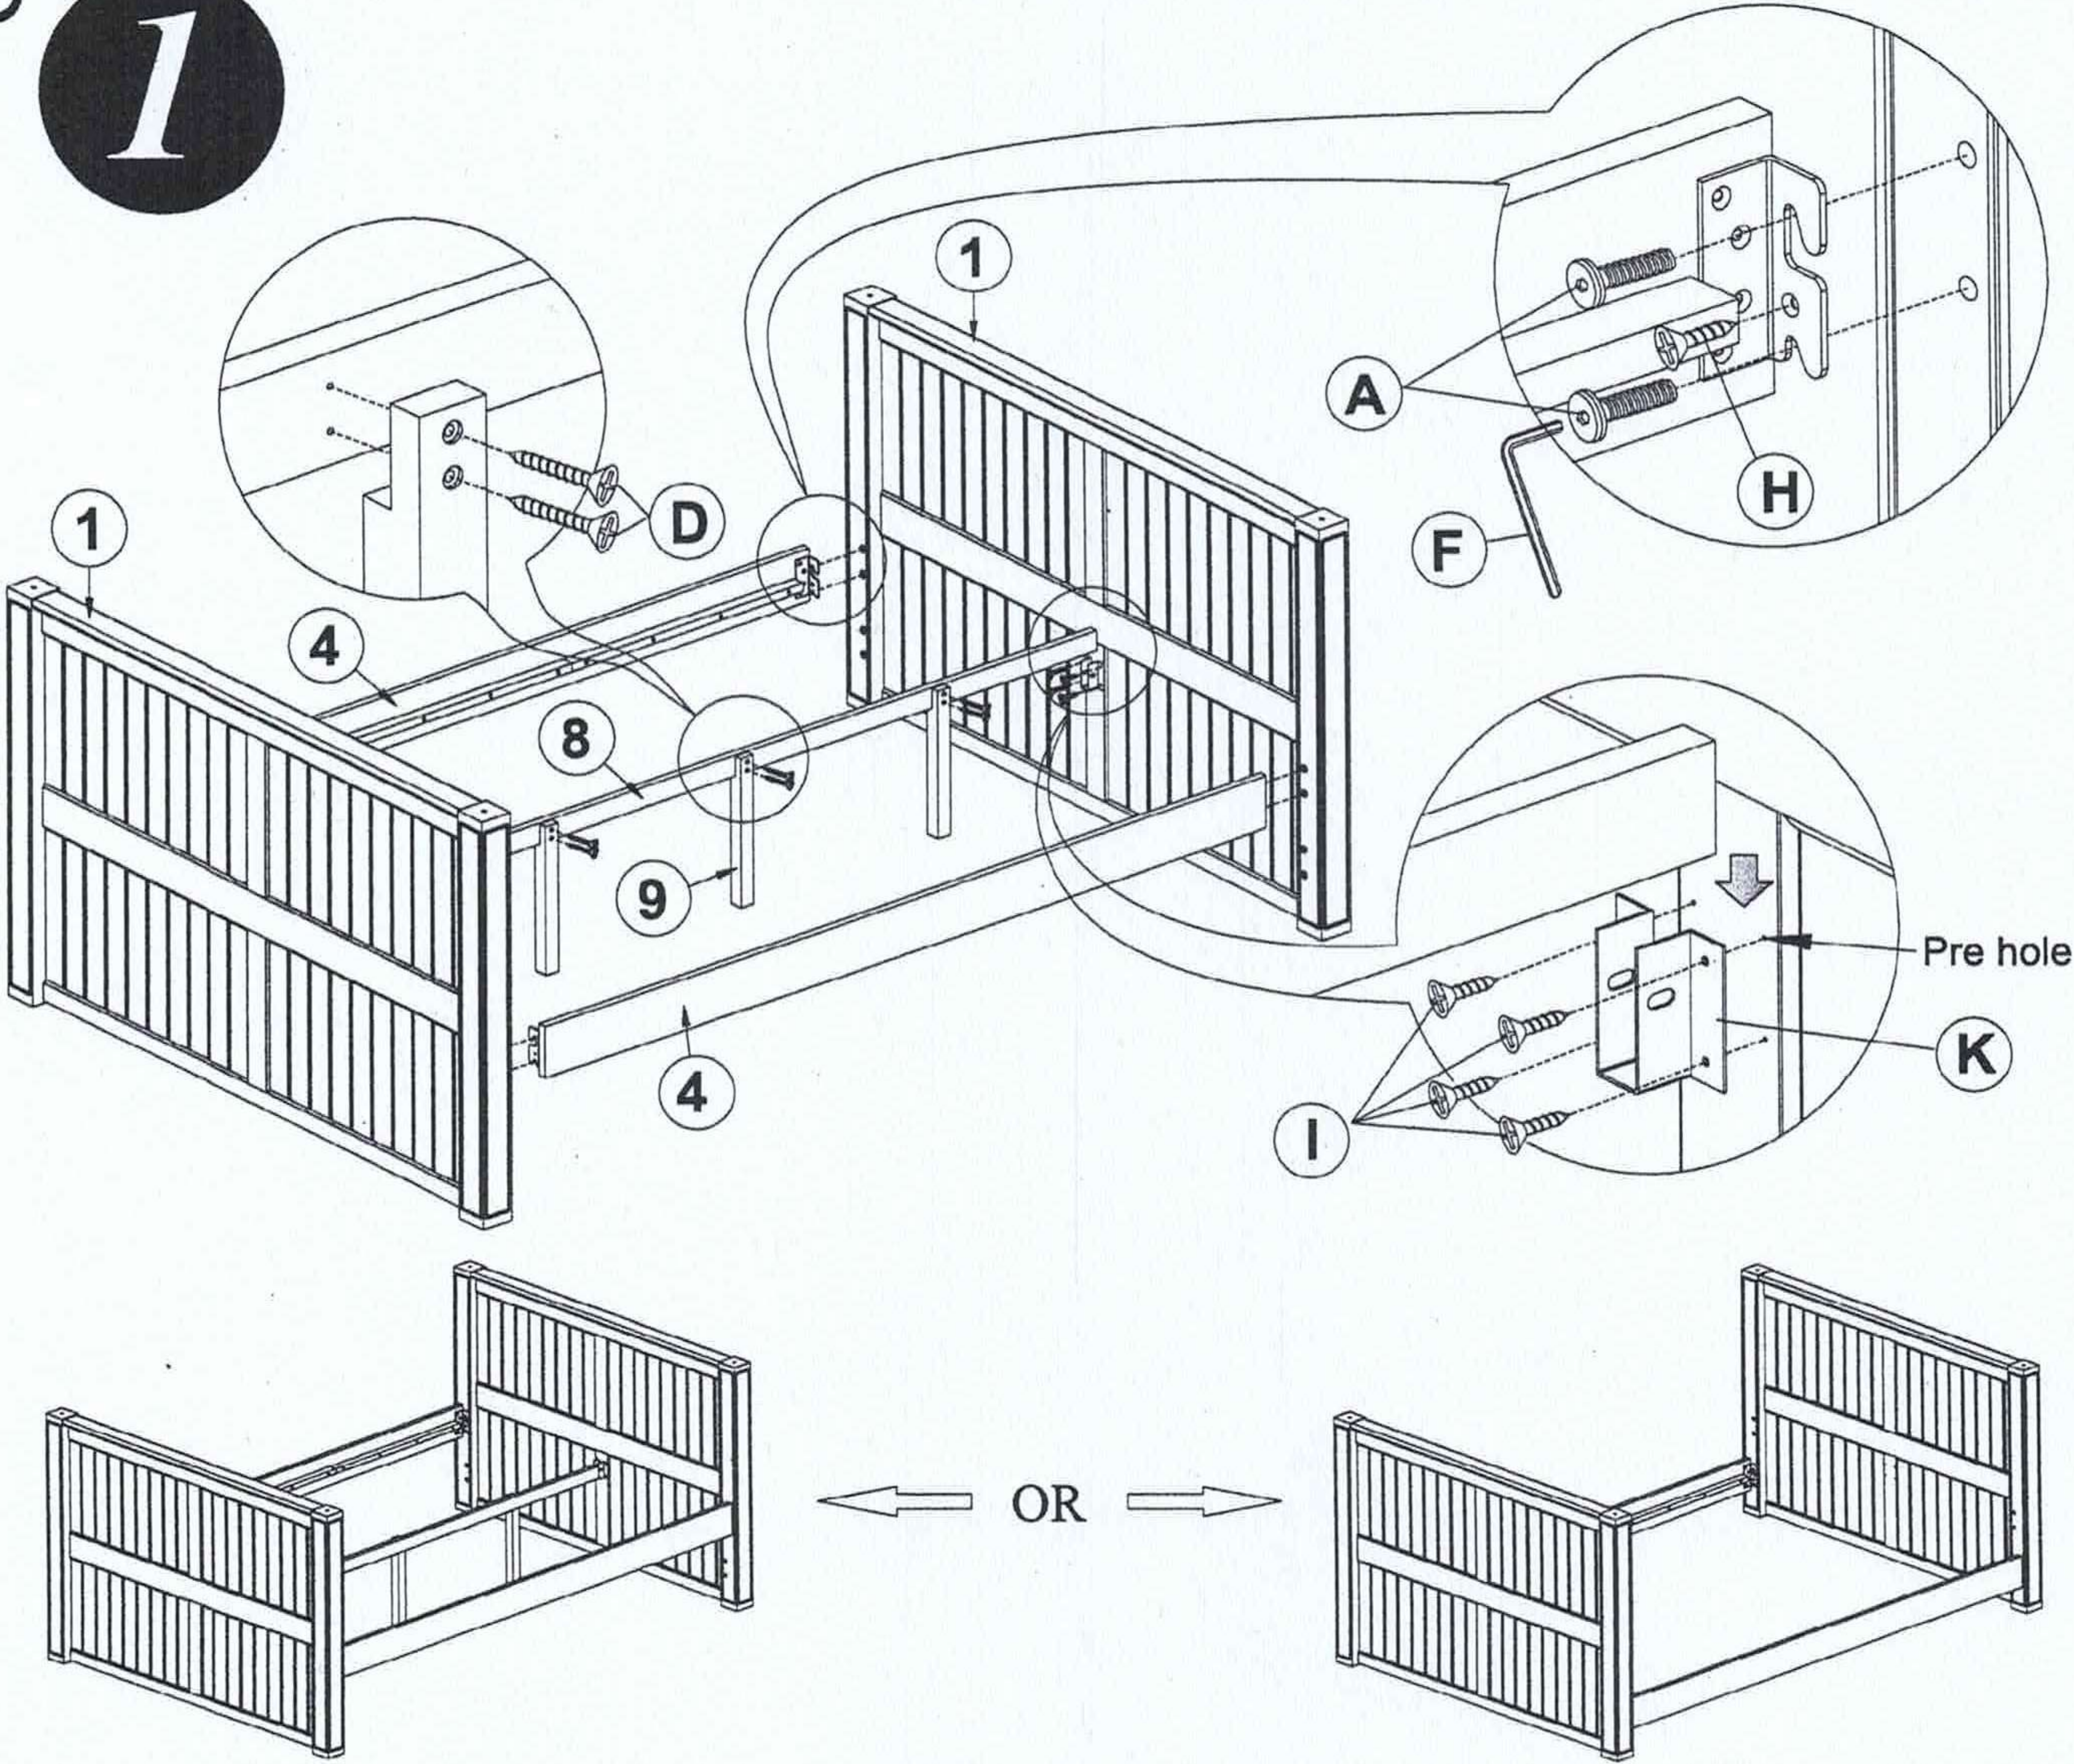DO NOT TIGHTEN SCREWS
BEFORE ALL PARTS ARE FULLY ASSEMBLED !!




step 2

These two pre holes are for the L bracket


0.0625"

The right position of bracket is slightly inside from end of guard rail

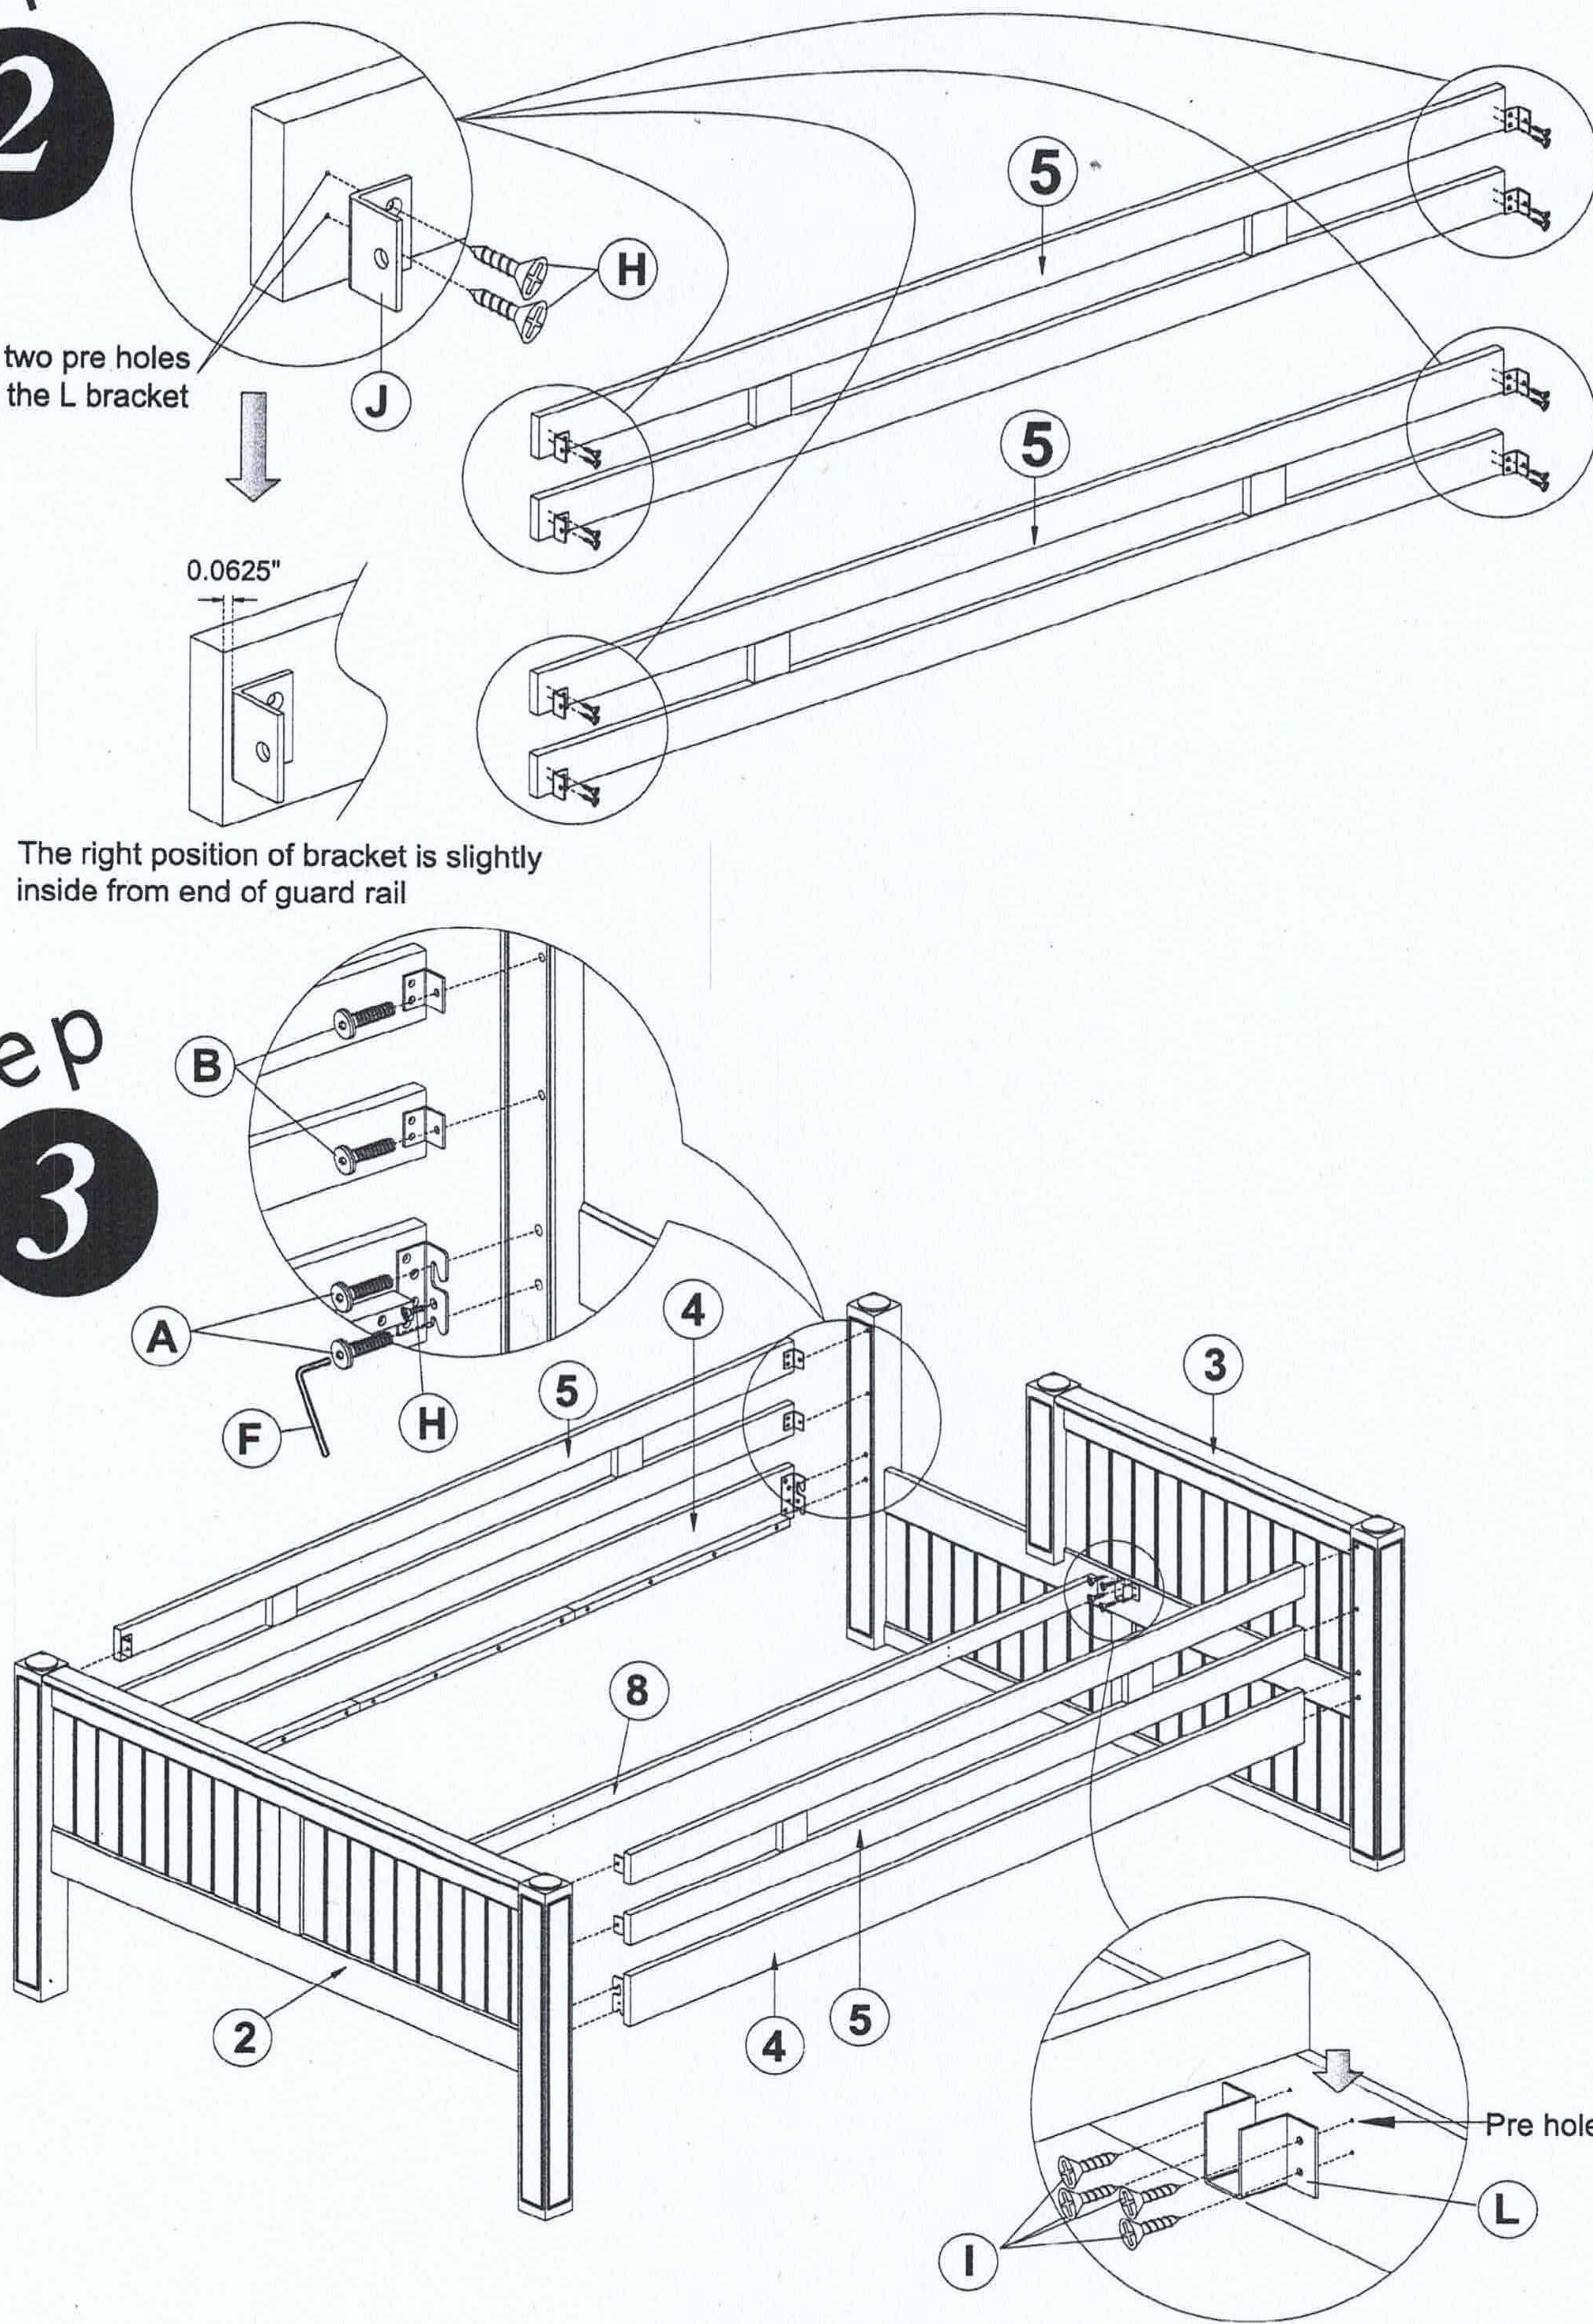step 3




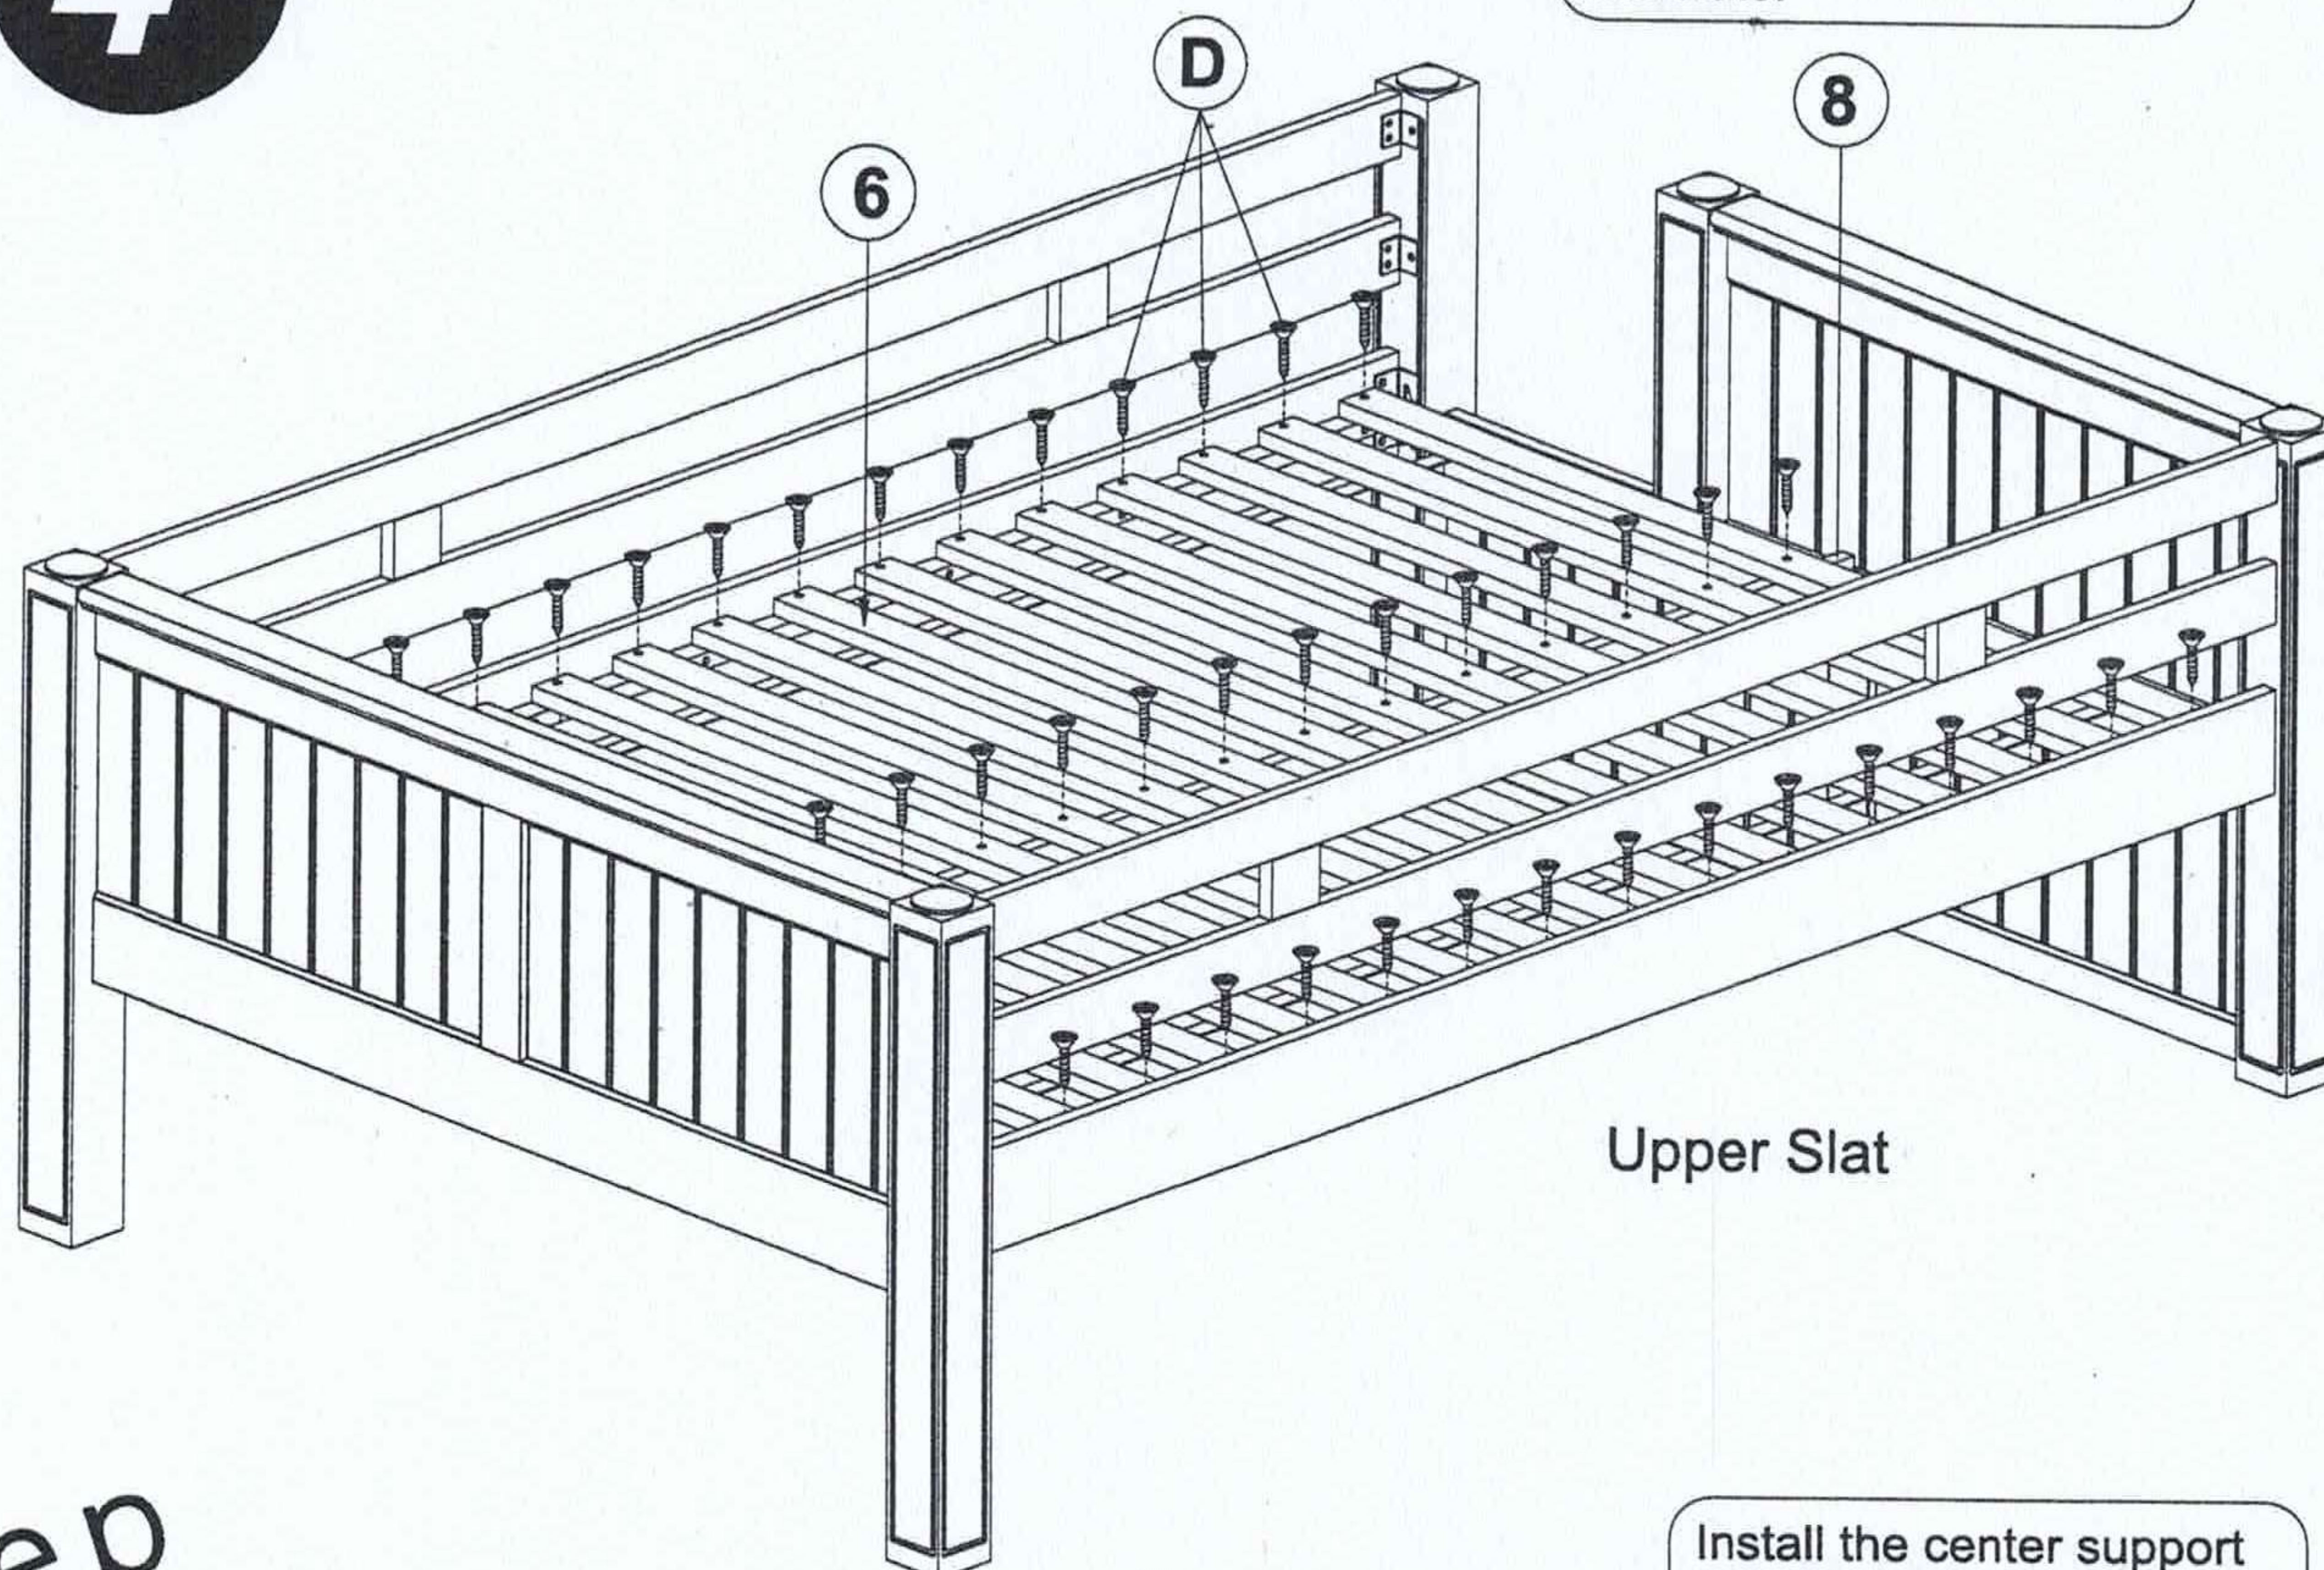step 4



Upper Slat

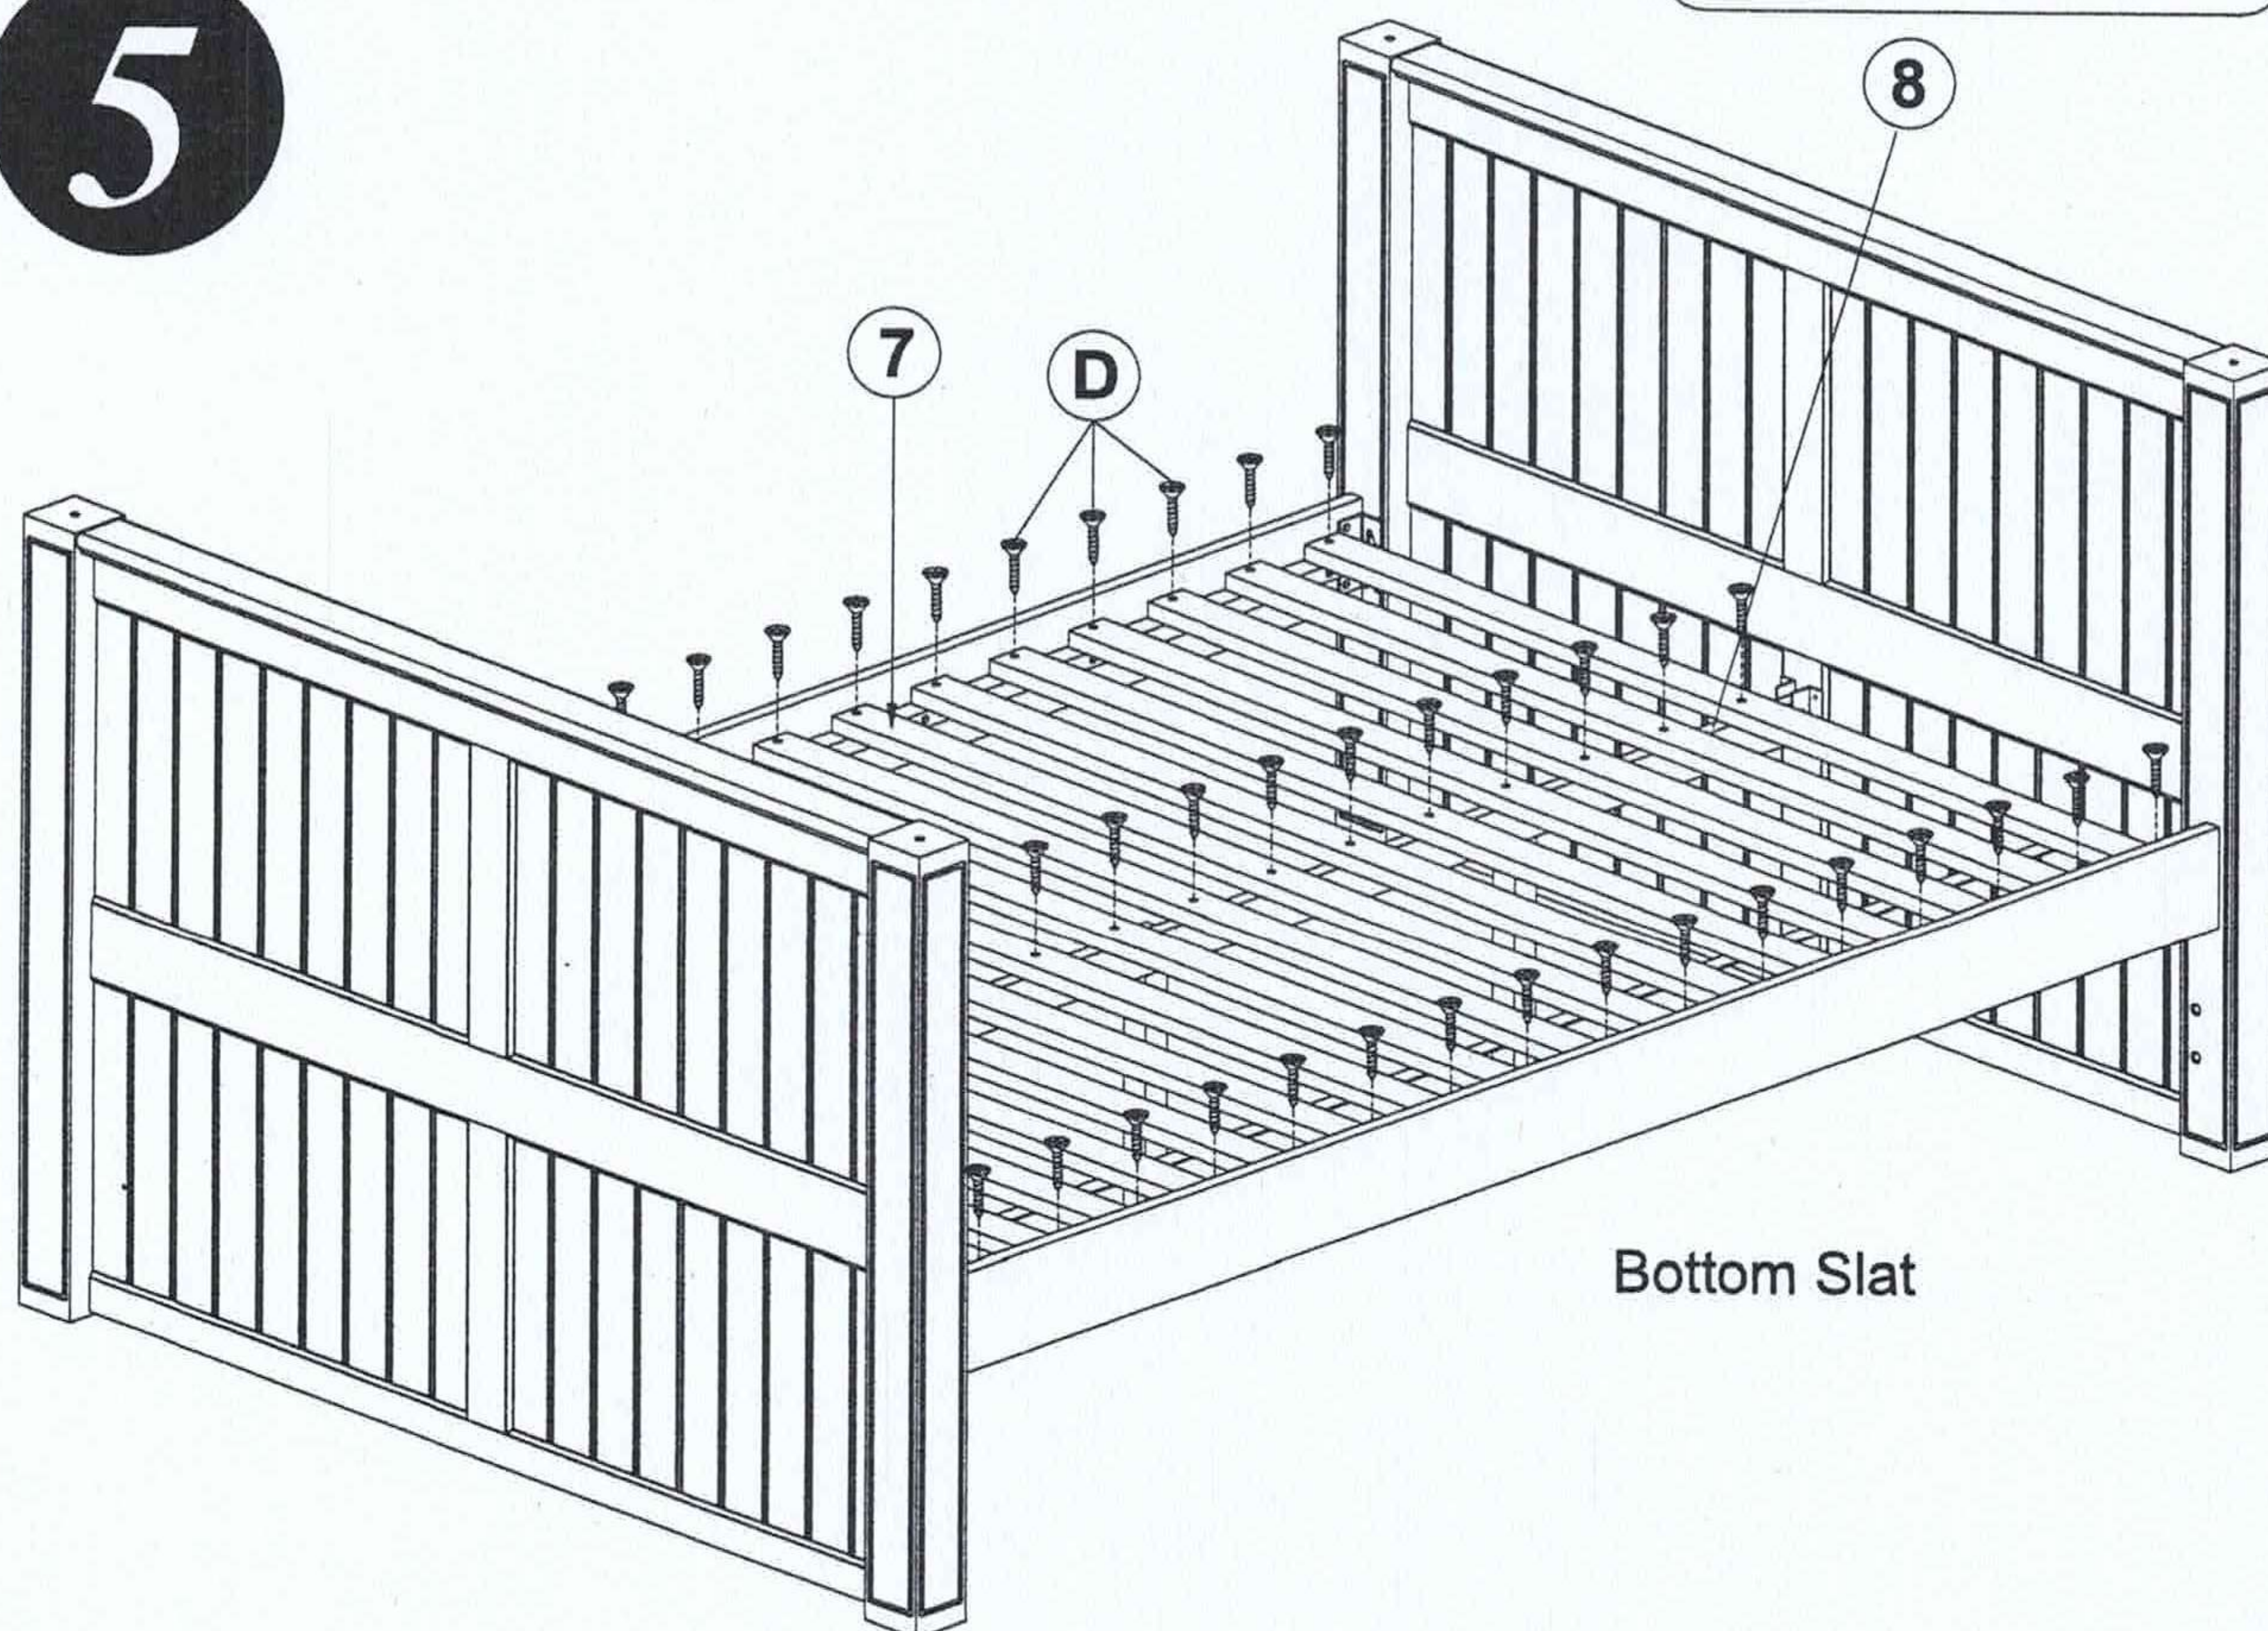step 5



Bottom Slat

step
6

