


A photograph of a room interior. A light-colored roller shade is partially pulled down over a window. To the left of the window, a framed abstract artwork hangs on the wall. In the foreground, a dark wooden chair with a curved back is visible. To the right of the chair, a wicker basket holds a white, fringed blanket. The floor is made of light-colored wood, and a portion of a patterned rug is visible in the bottom right corner.

EVERHEM

*Roller Shade
Installation Guide
Inside Mount – Cordless*


The Tools You'll Need

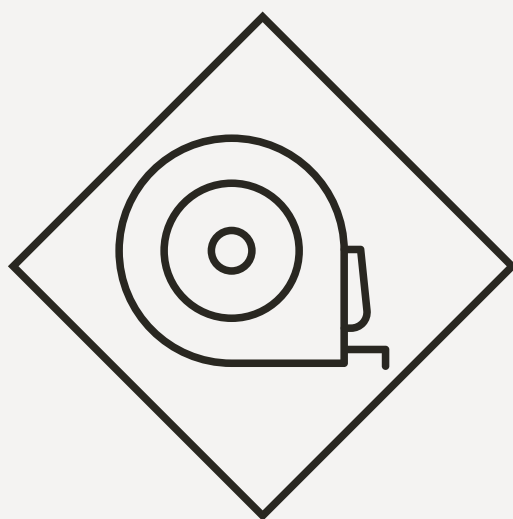


TAPE MEASURE




STEP LADDER

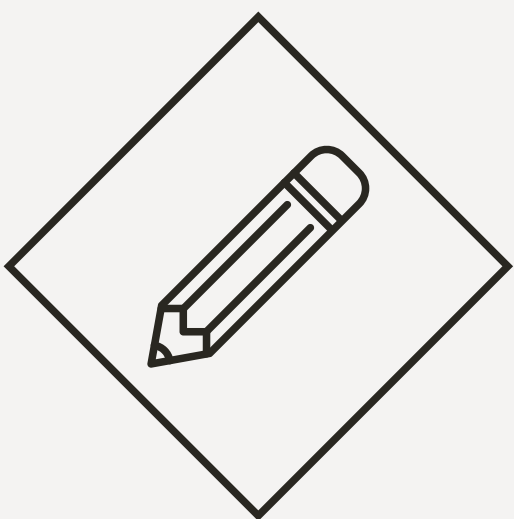


PENCIL

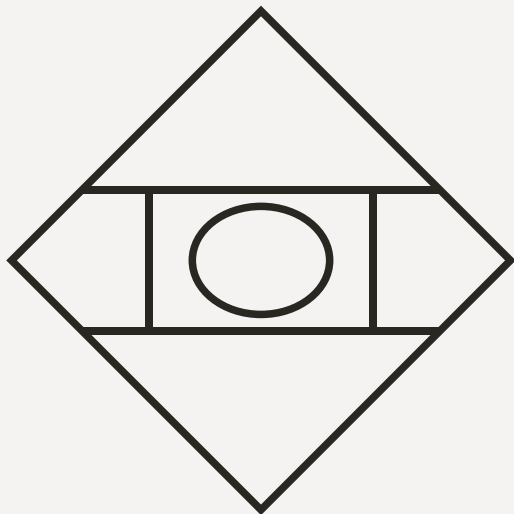


LEVEL

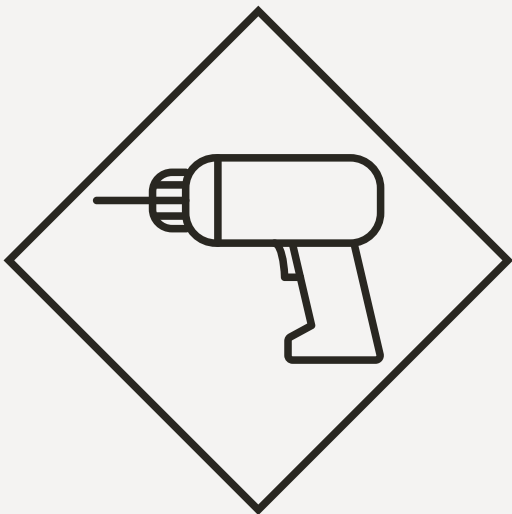


POWER
DRILL

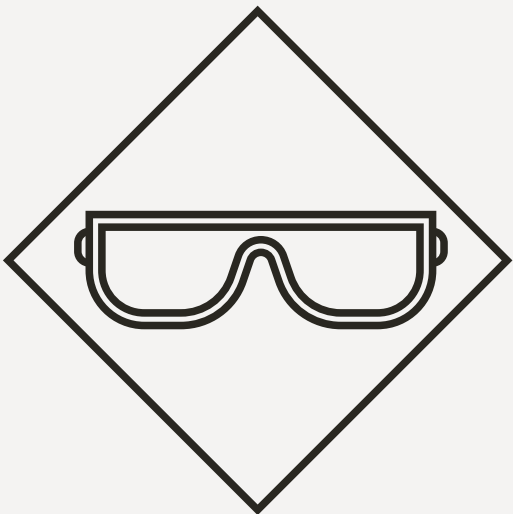


SAFETY
GOGGLES

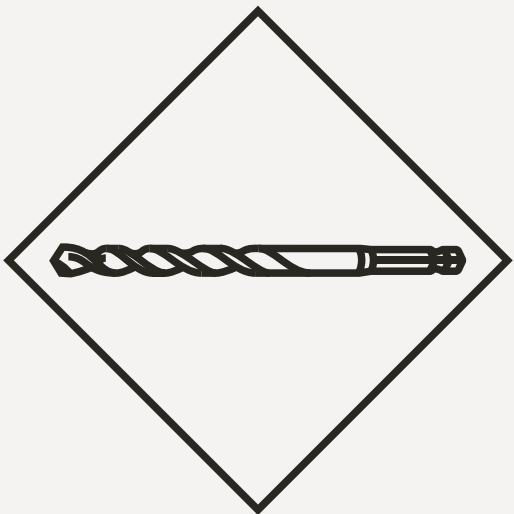


$\frac{7}{64}$ " DRILL
BIT

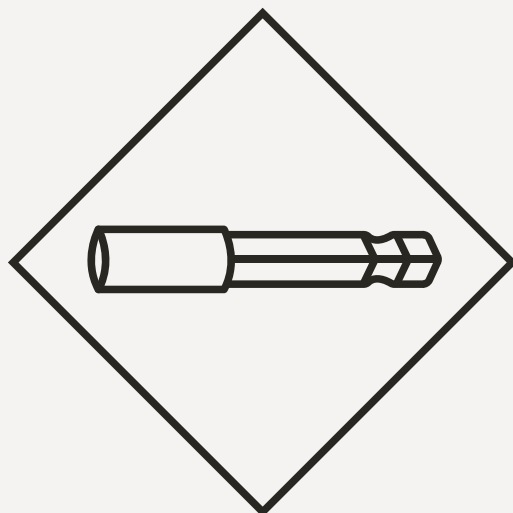

$\frac{1}{4}$ HEX
SOCKET
BIT

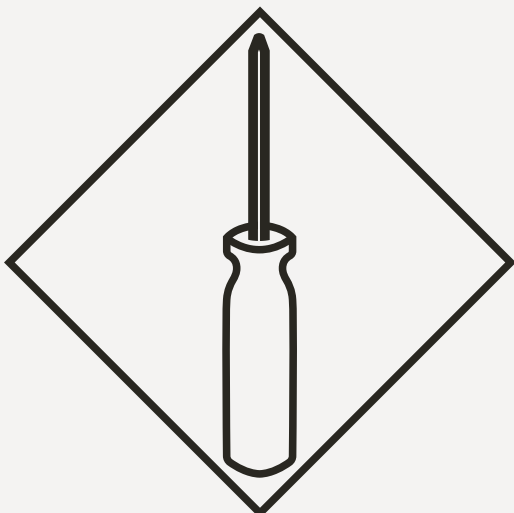

PHILLIPS
HEAD
SCREWDRIVER

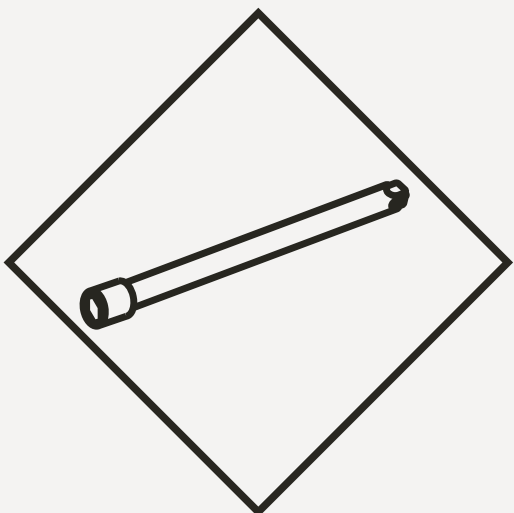

$\frac{1}{4}$ HEX
EXTENDER
TIP

The Hardware We Provide




HEADRAIL
MOUNTING
SCREWS

Step 1


Determine shade's mounting position.

Shades wider than 72" may require assistance. Center your shade's valance headrail inside the window casement horizontally. Then, make sure the valance of the shade is flush with the window trim and does not extend forward.

SIDE VIEW

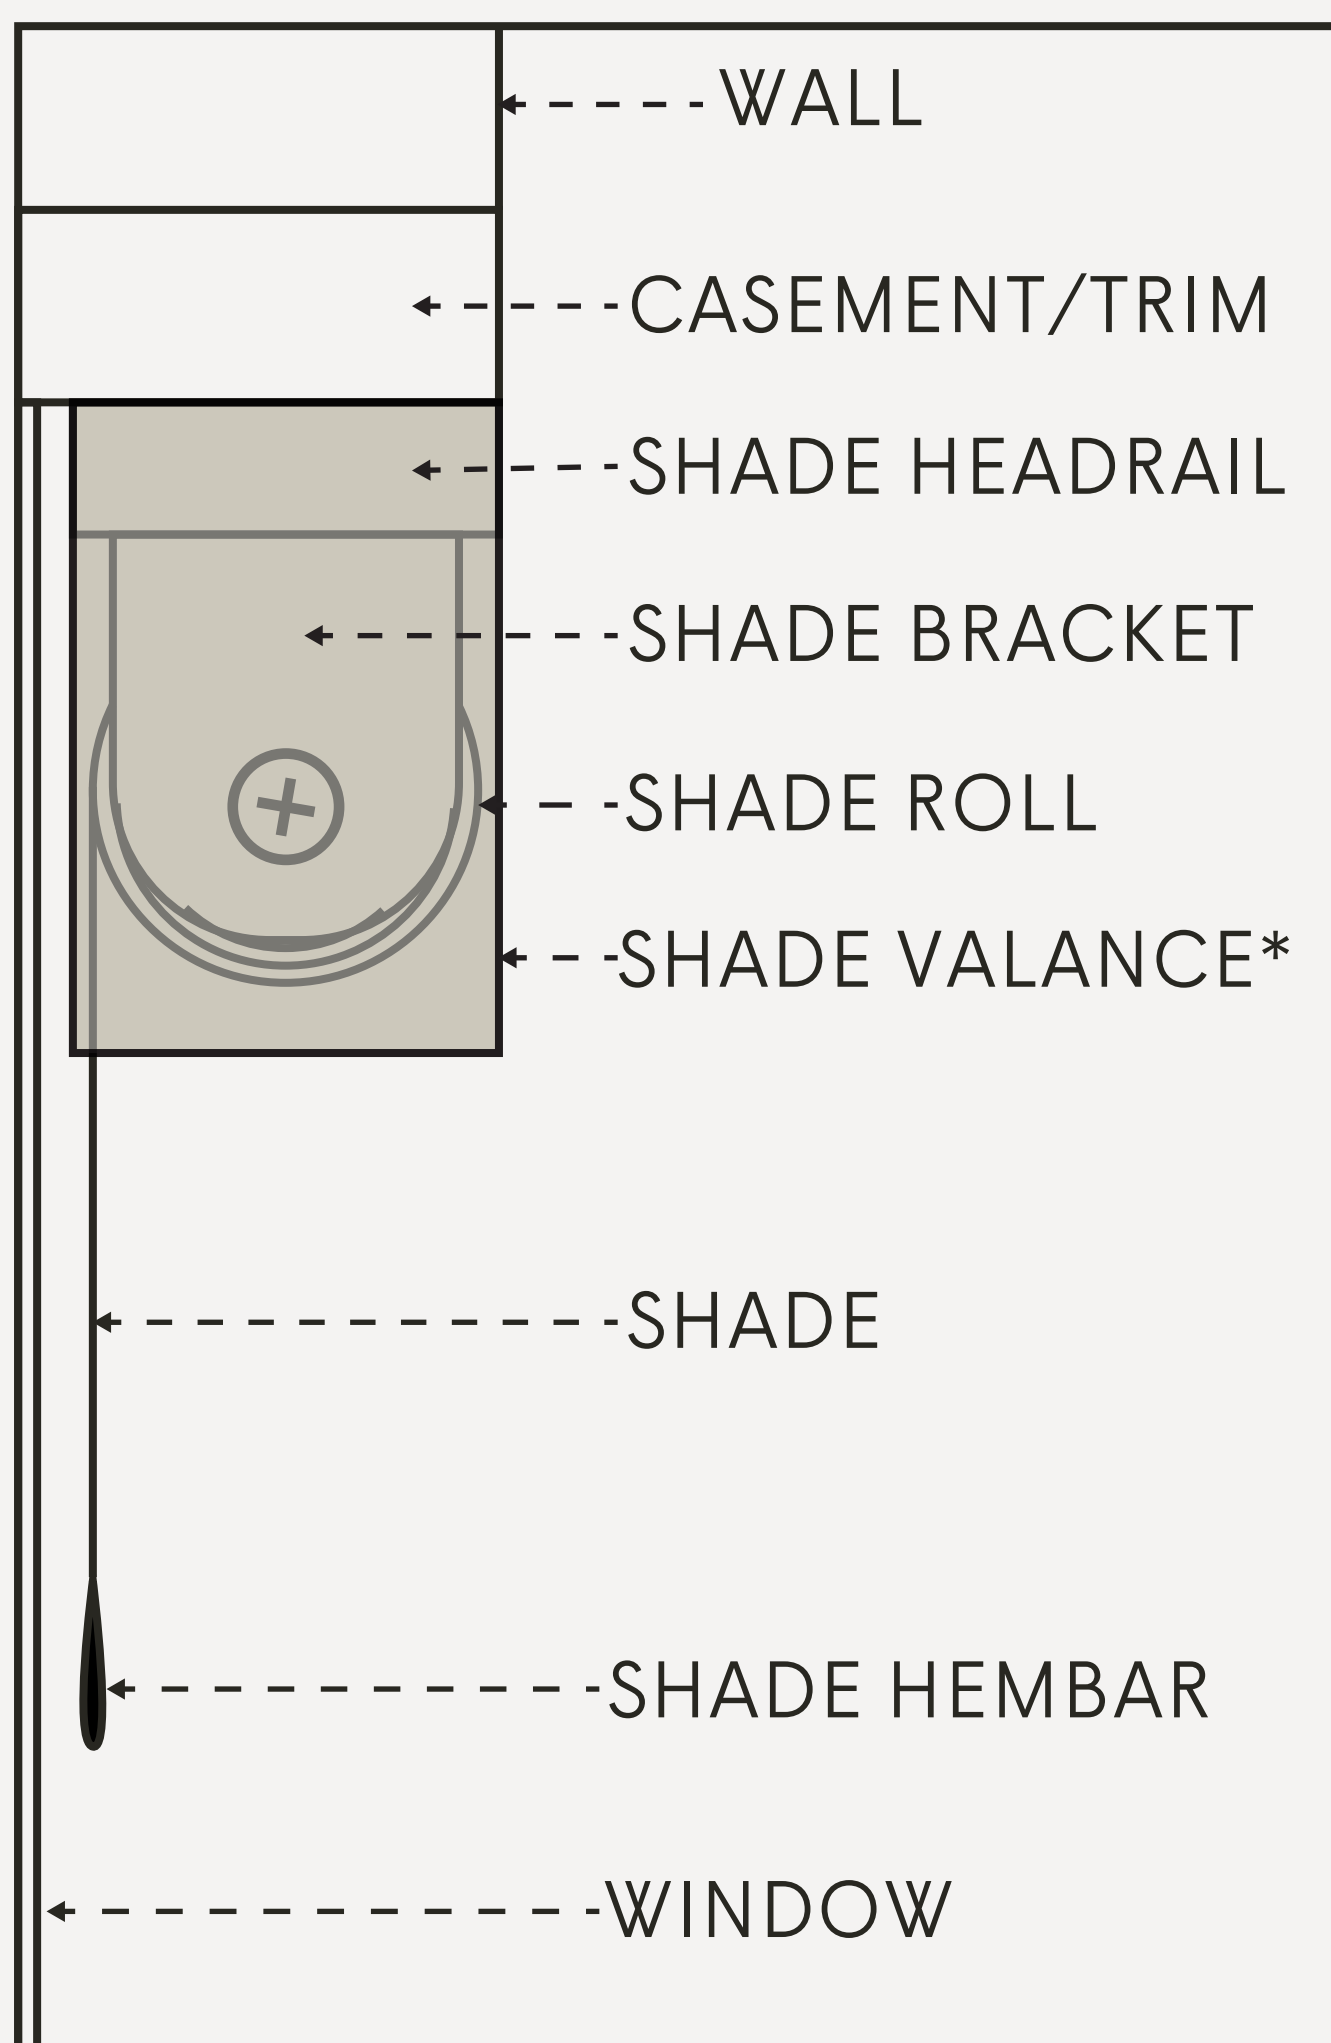


FRONT VIEW

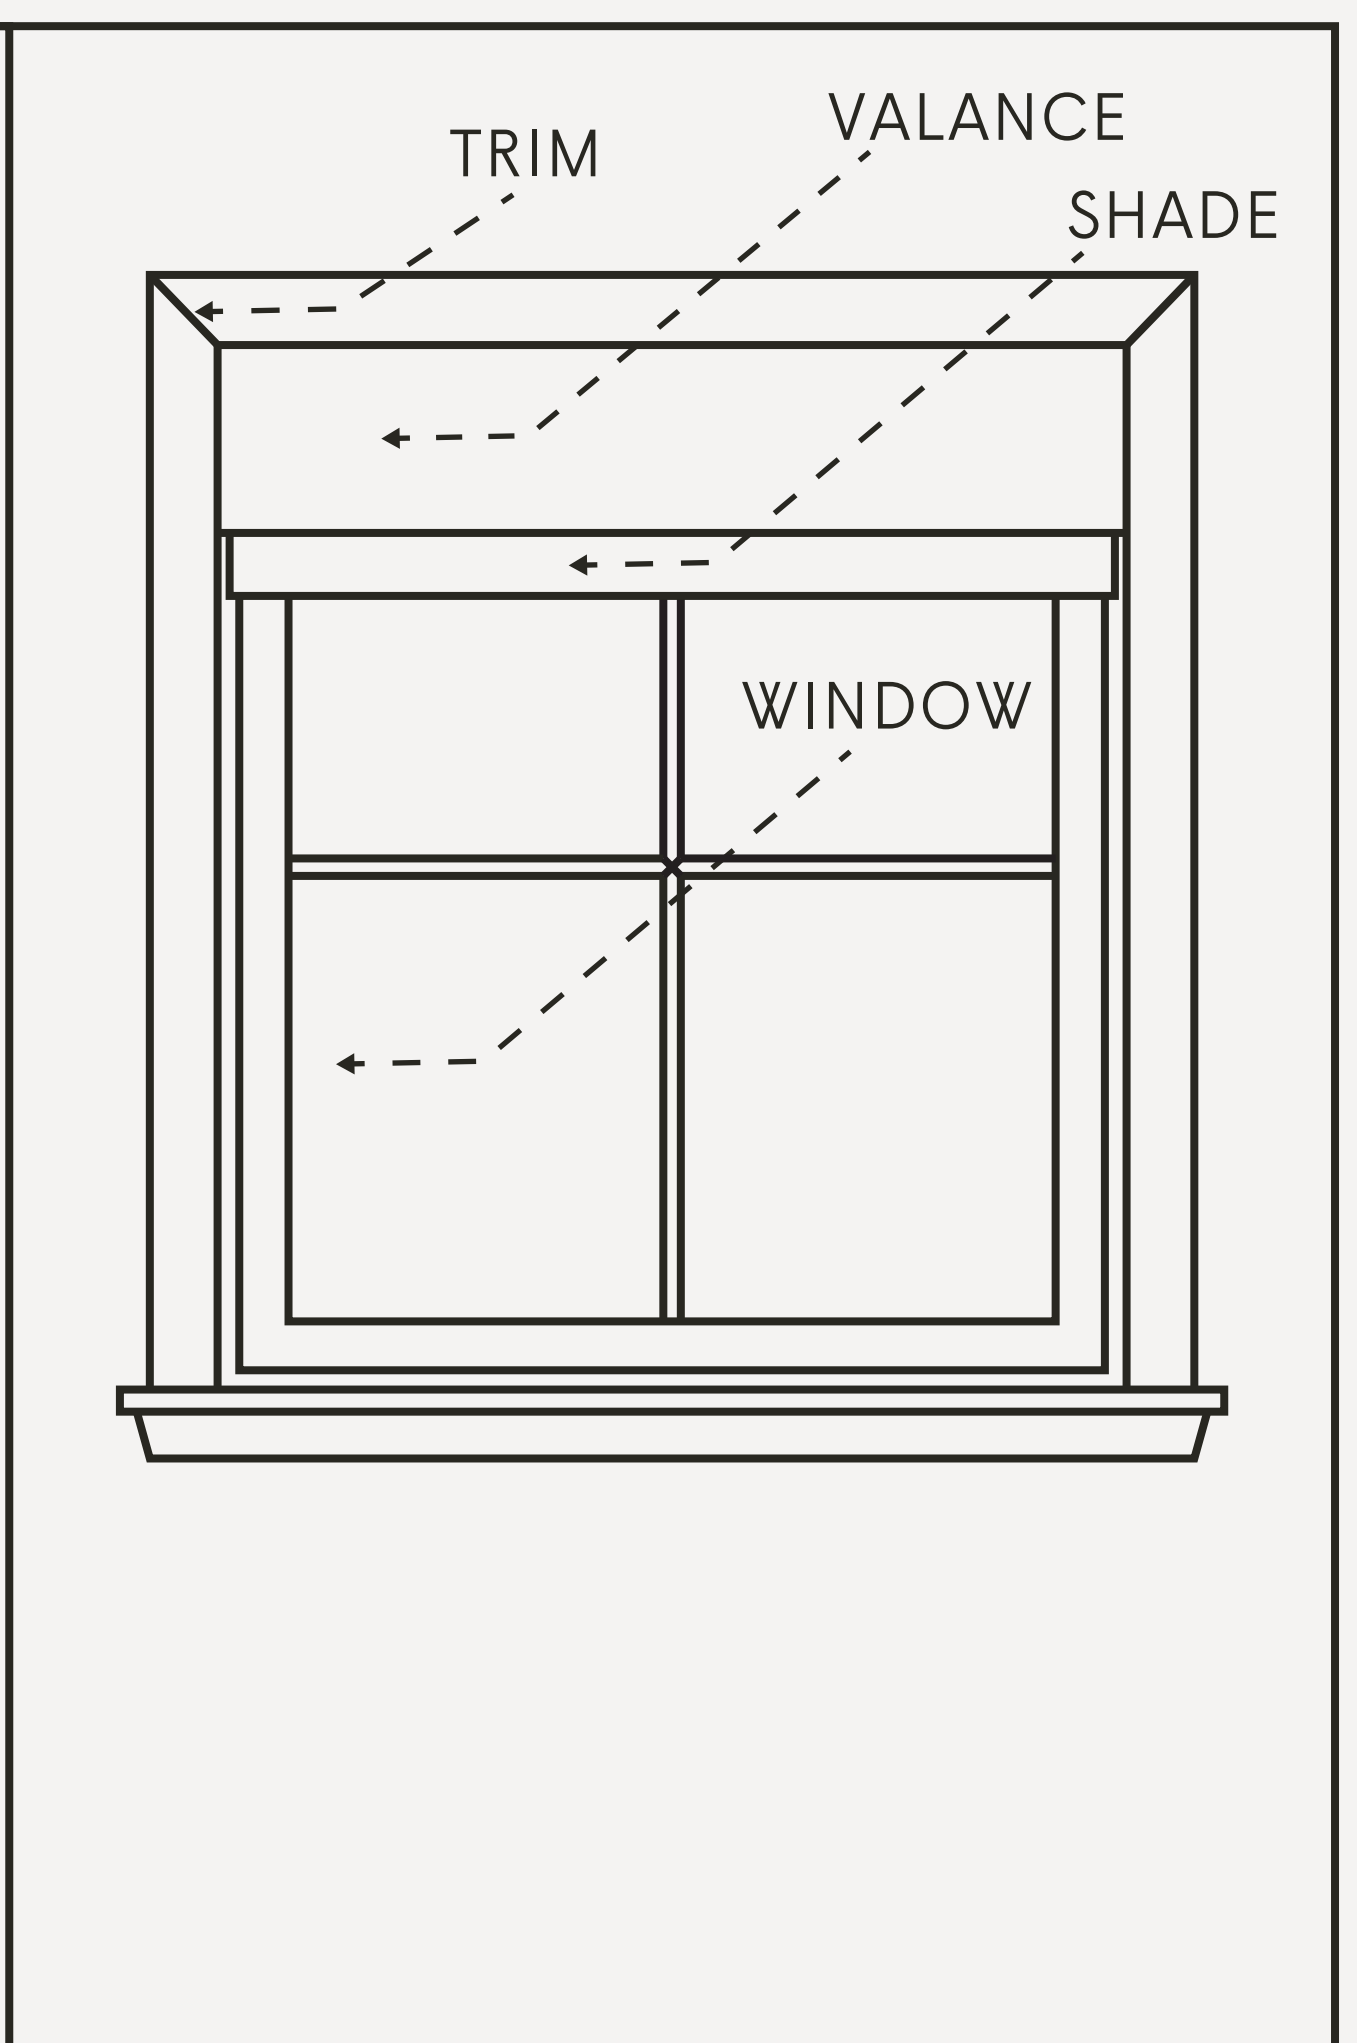

*The valance illustration uses transparency to provide a clearer view of the shade's inner structure.


Step 2

Find mounting screw holes. With the valance held firmly in place, carefully lift the valance and identify the brass-lined screw holes along the underside of the shade's headrail.

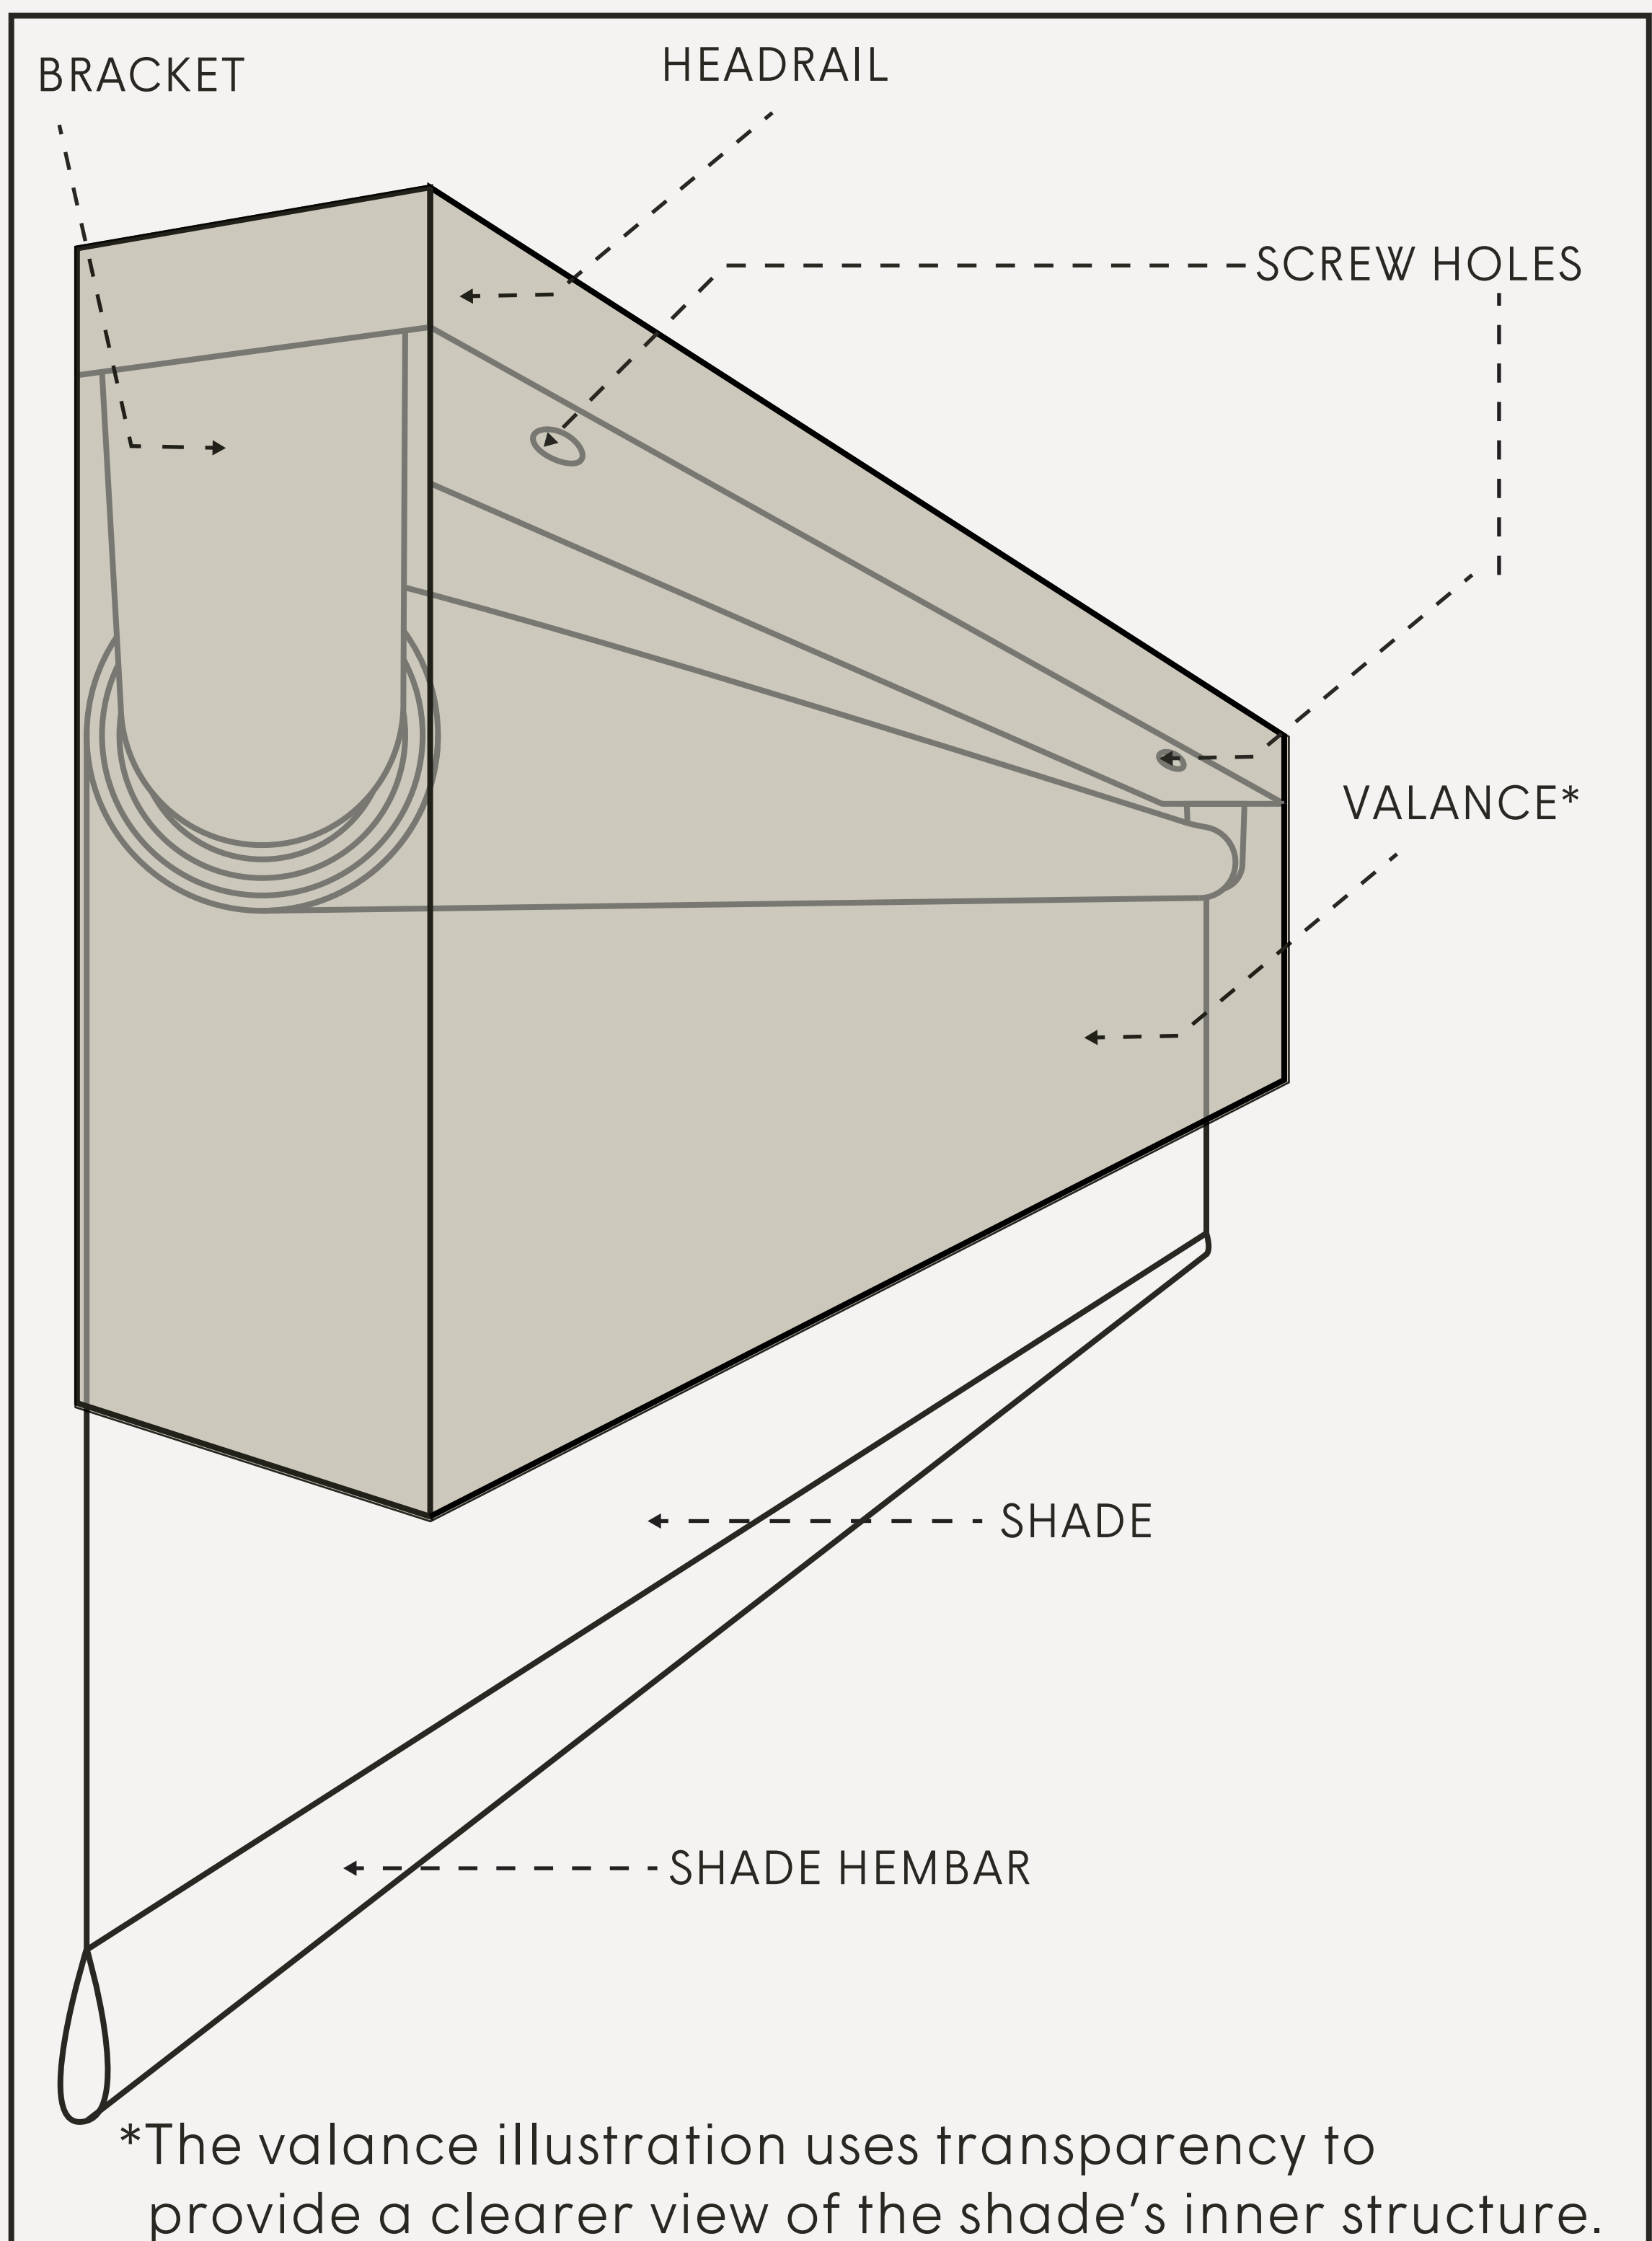

Step 3


Drill mounting screw holes. With your valance still held firmly in place and starting from the centermost mounting screw hole found in STEP 2, use your power drill and the 7/64" drill bit to drill through the screw hole and into the window casement above.

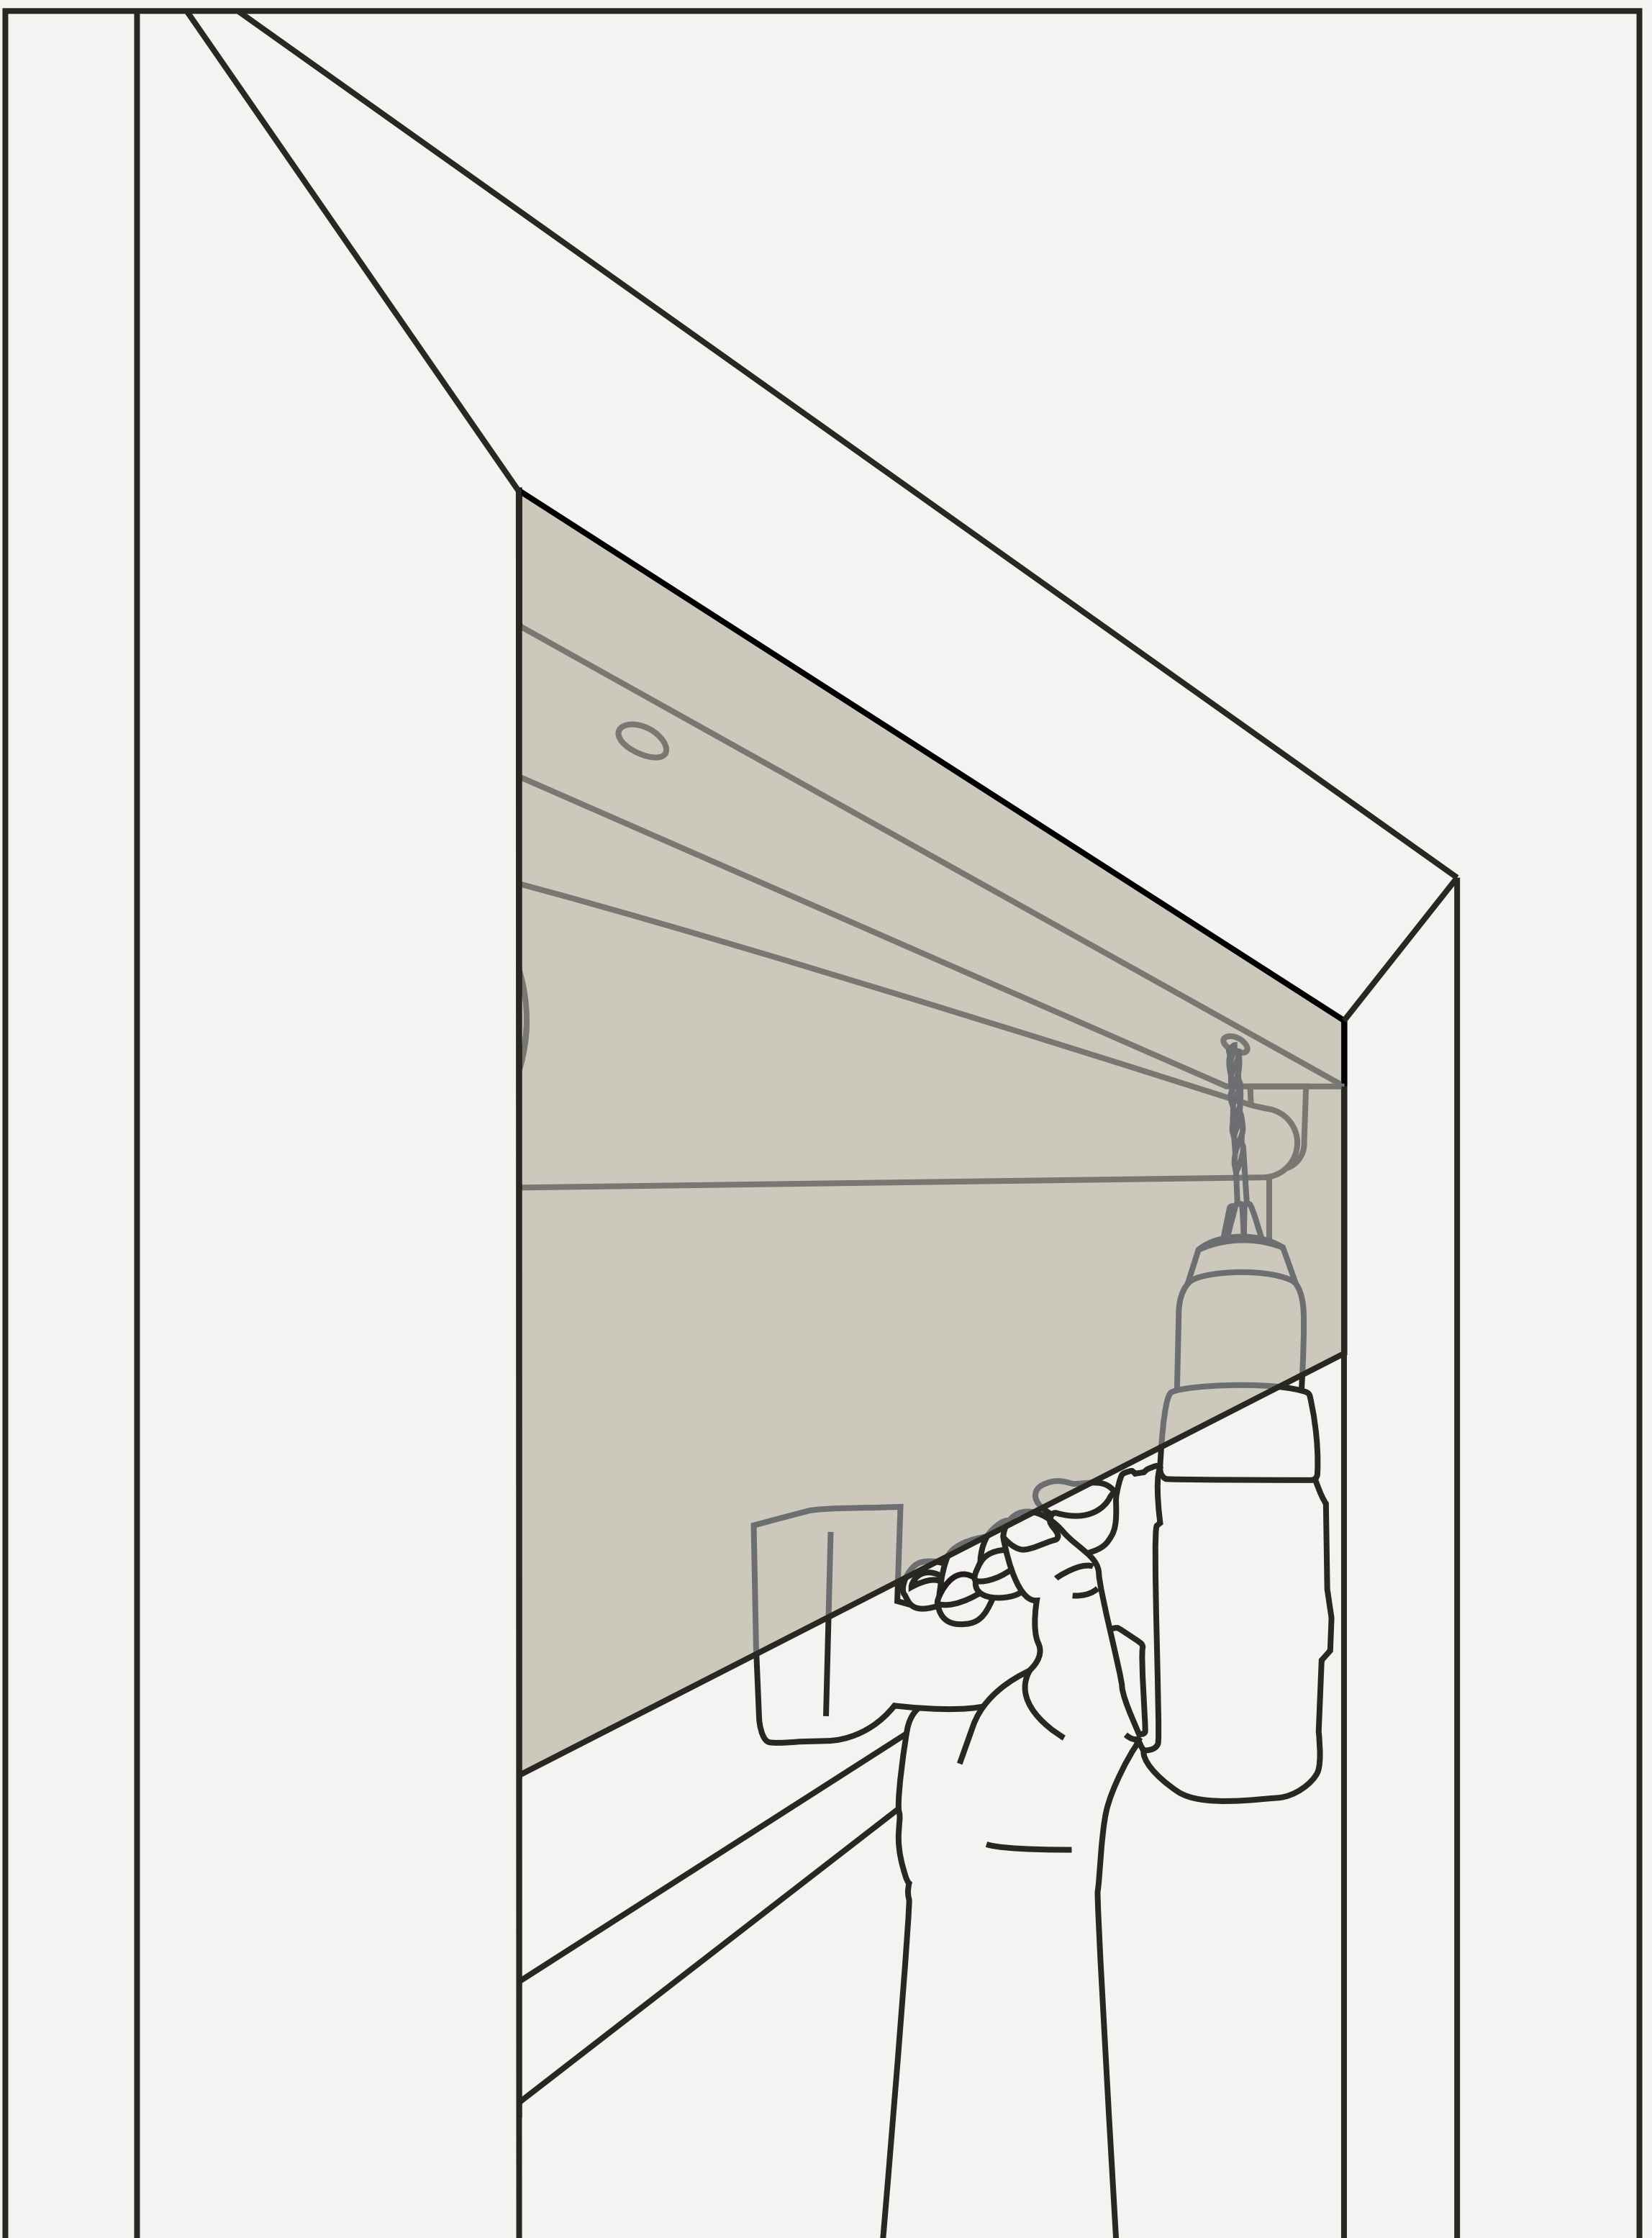


IMPORTANT: Due to the tubing present under the headrail, it is likely that you will need to drill at an angle in order to reach the window casement.

Step 4

Secure Valance to window. Holding your valance in position and beginning with the centermost screw hole, use your power drill, $\frac{1}{4}$ hex socket screw bit and the provided headrail mounting screw to secure the shade's headrail to the window casement. Repeat this process for each mounting screw hole drilled in STEP 3.

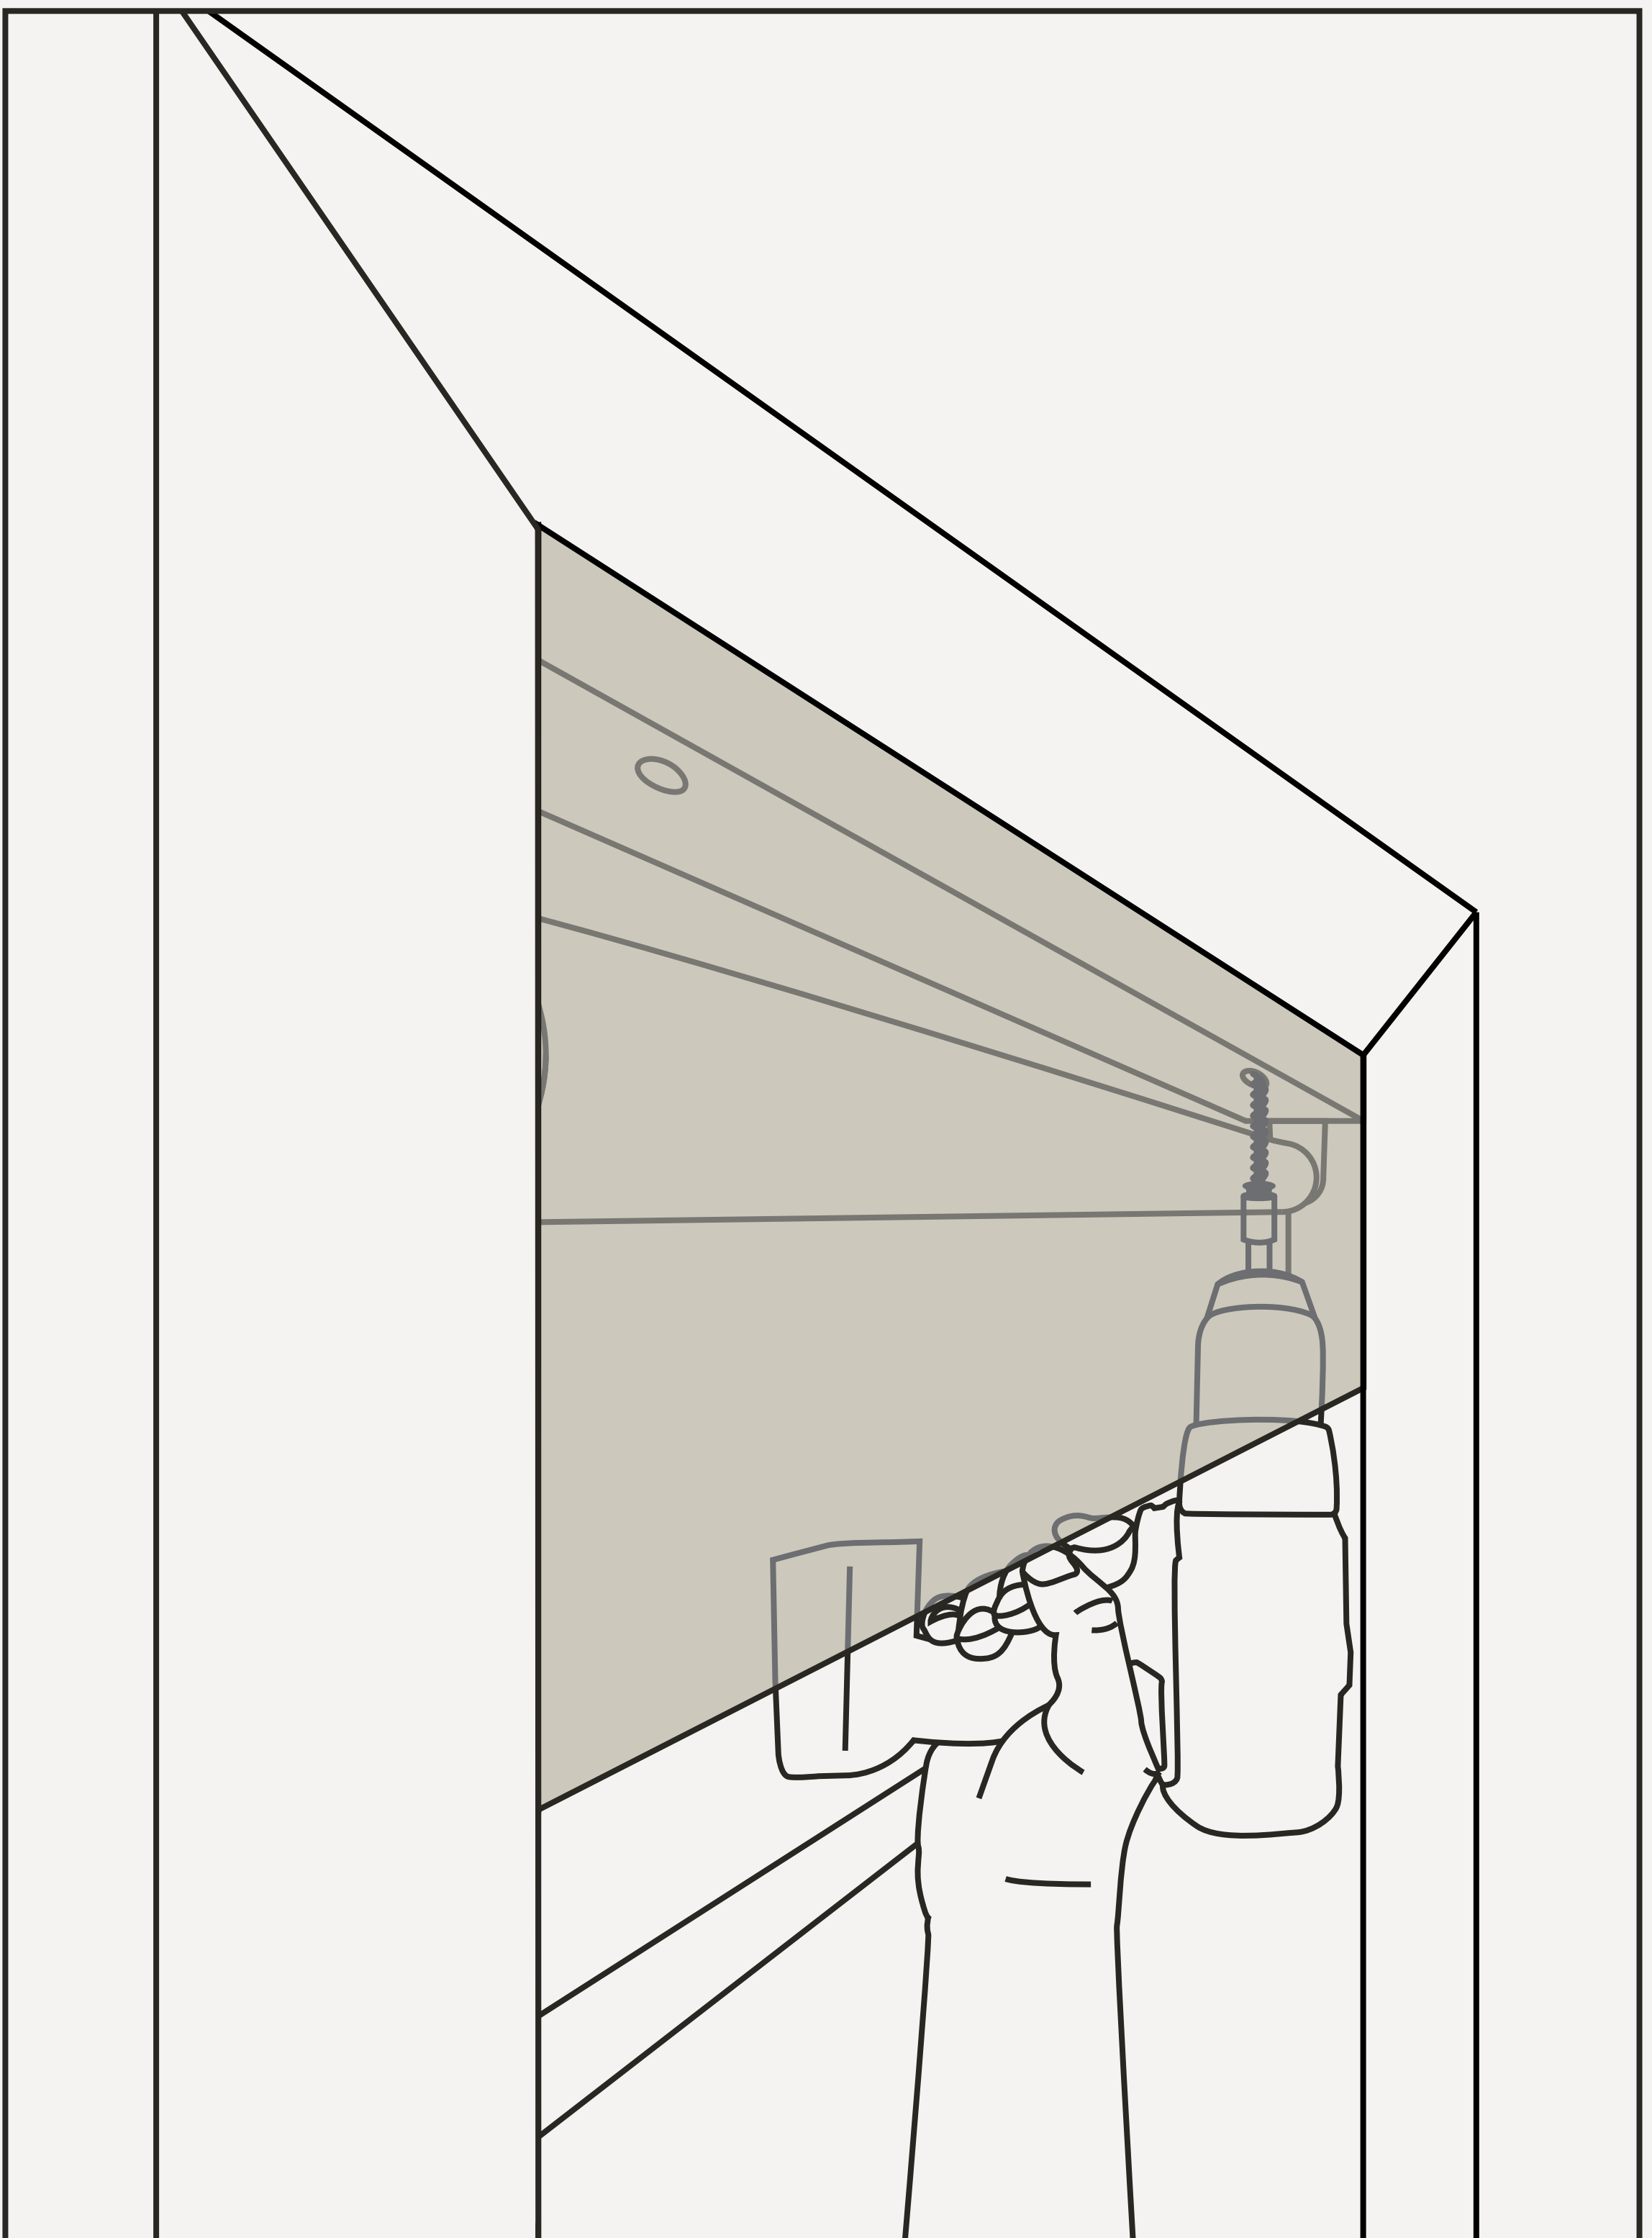

IMPORTANT: Due to the tubing present under the headrail, it is likely that you will need to drill at an angle in order to reach the window casement and an extender tip on your power drill may be necessary.

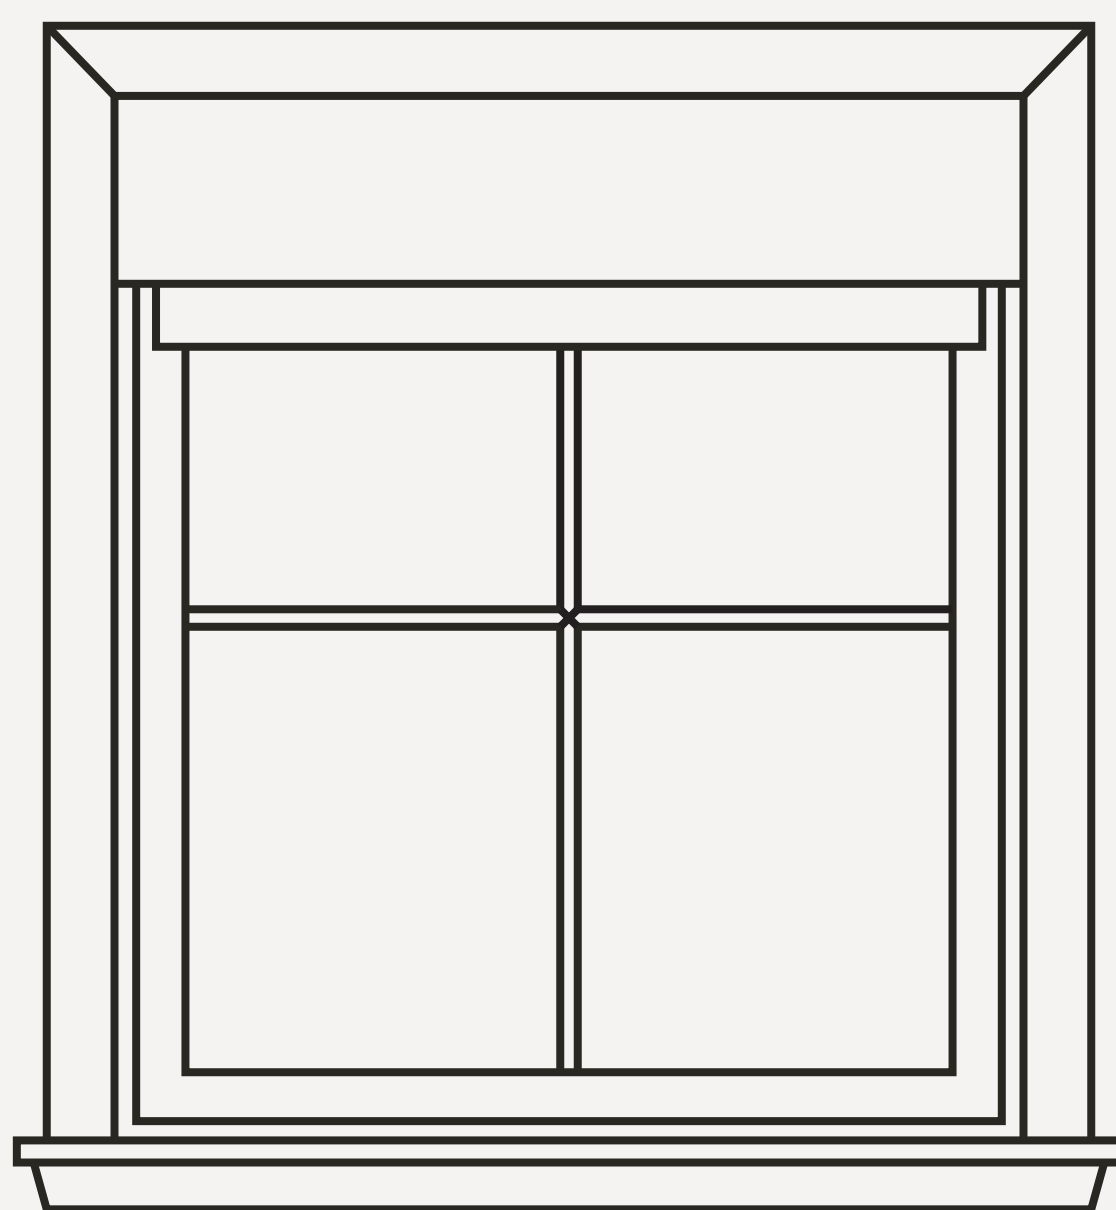

You're Done!

Now your shade is ready for safe usage. Gently pull the shade down, then guide the shade up slowly to draw it open; pull the shade down to close the shade, stopping at the desired position.

PLEASE NOTE: The cordless mechanism is delicate as it functions via a tension spring. The application of unnecessary force can compromise the mechanism. Handle with care.

EVERHEM