


WDD DRILL 4
 PILOT HOLES
 HMD TAP
 #8-32
 INSIDE ONLY
 $\phi \frac{1}{8}$ "

TEMPLATE FOR ESG F10
 CORBIN 5000
 YALE 7100

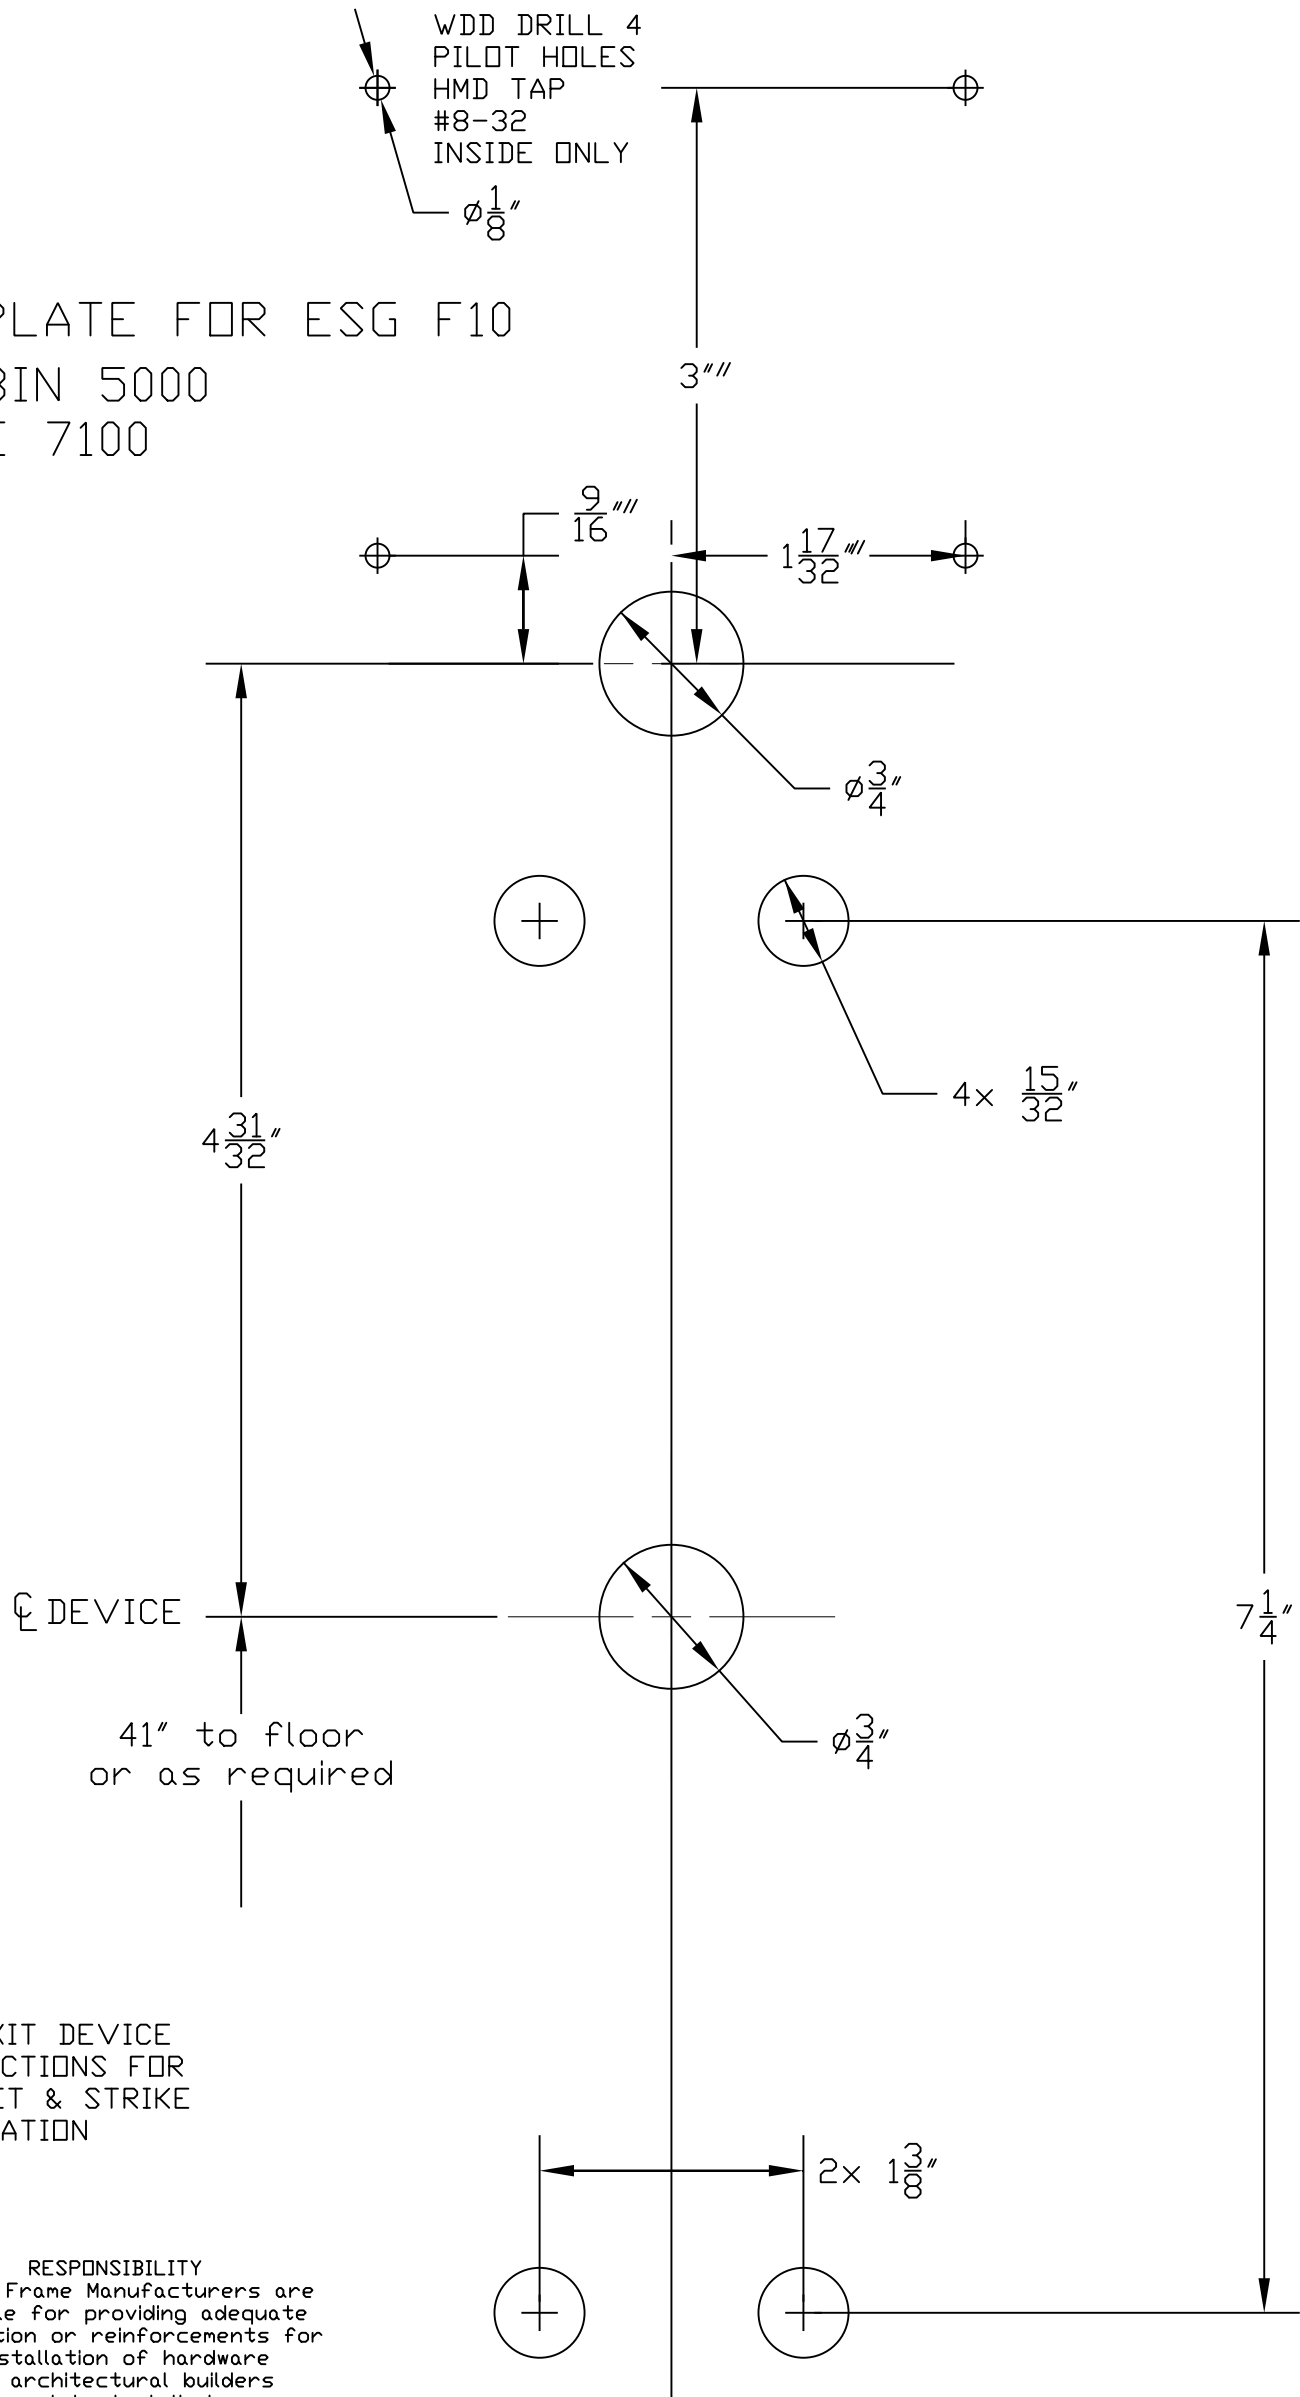

SEE EXIT DEVICE
 INSTRUCTIONS FOR
 BACKSET & STRIKE
 INFORMATION

RESPONSIBILITY
 Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

TEMPLATE SCALE IS 1:1 IF THIS MEASURES 1":