


LOCK FUNCTION	OUTSIDE		INSIDE	
	15	16	17	18
Cylinder Hole	●	●		
Thumb Turn Hole				
Cylinder Hole			●	
Thumb Turn Hole	●	●	●	
	18	17	16	15
	29			

DBM TEMPLATE

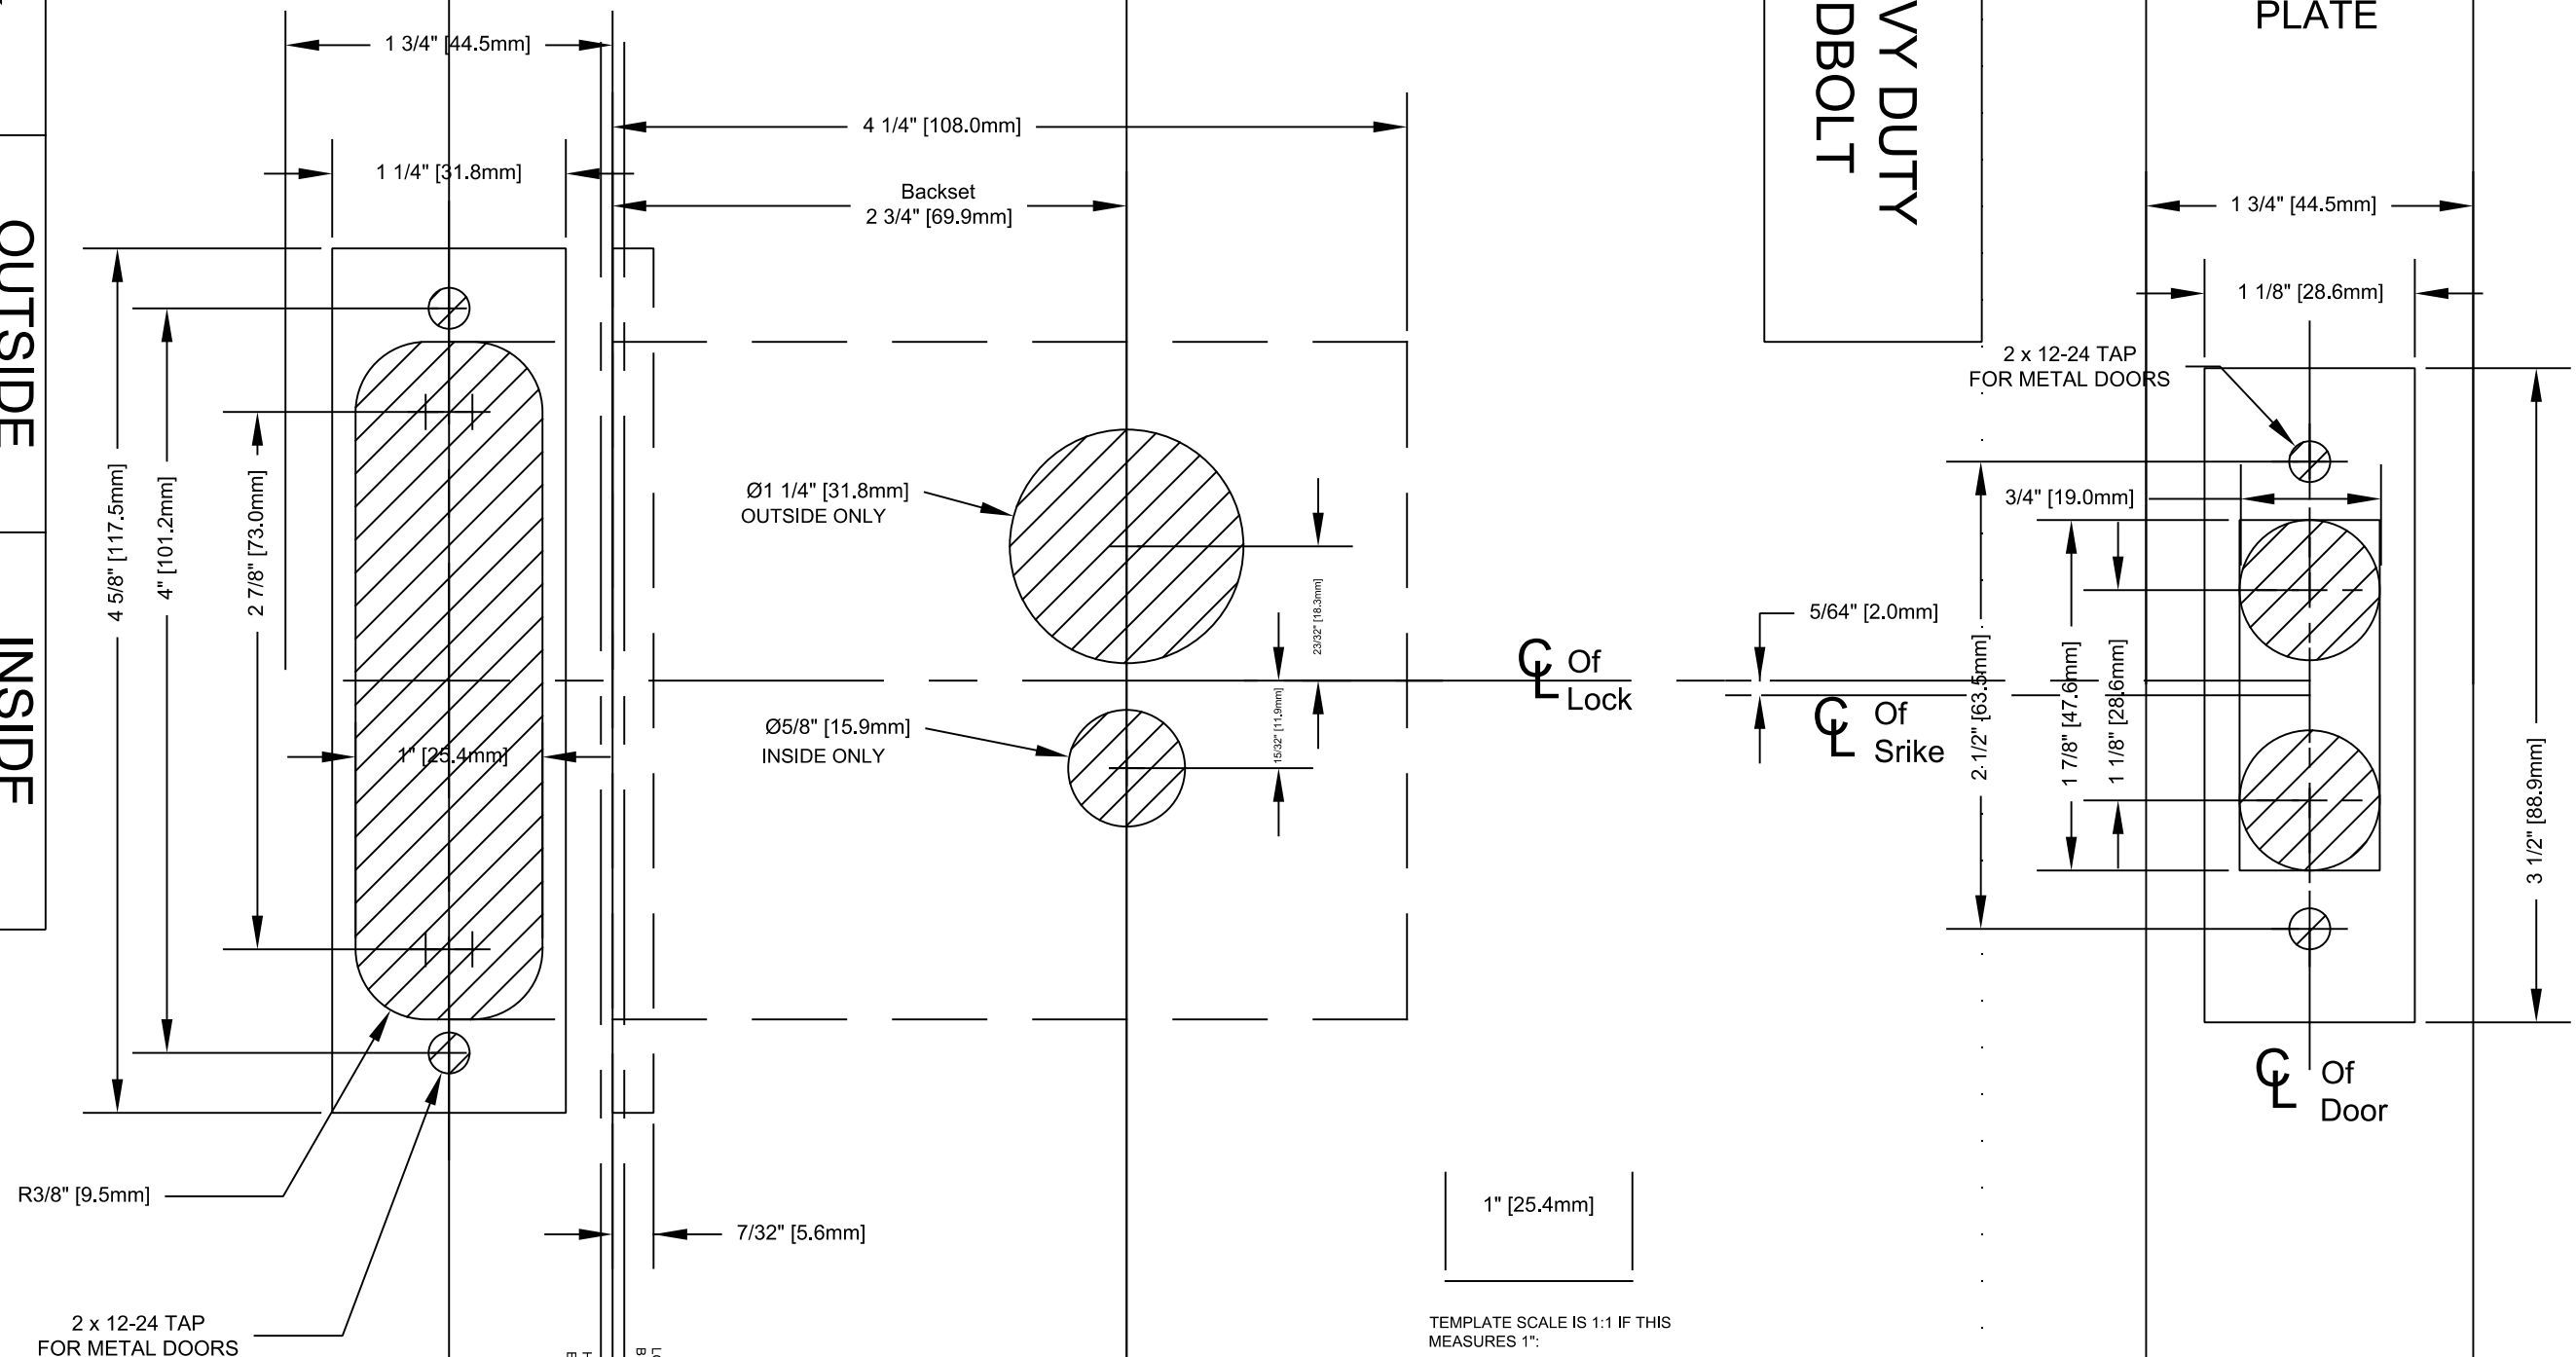

1" [25.4mm]

TEMPLATE SCALE IS 1:1 IF THIS MEASURES 1":

RESPONSIBILITY
 Doors and Frame manufacturers are responsible for providing adequate construction or reinforcement for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of constructions.

STRIKE TEMPLATE