

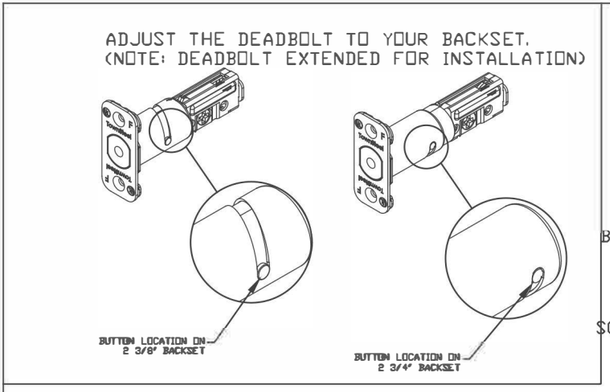


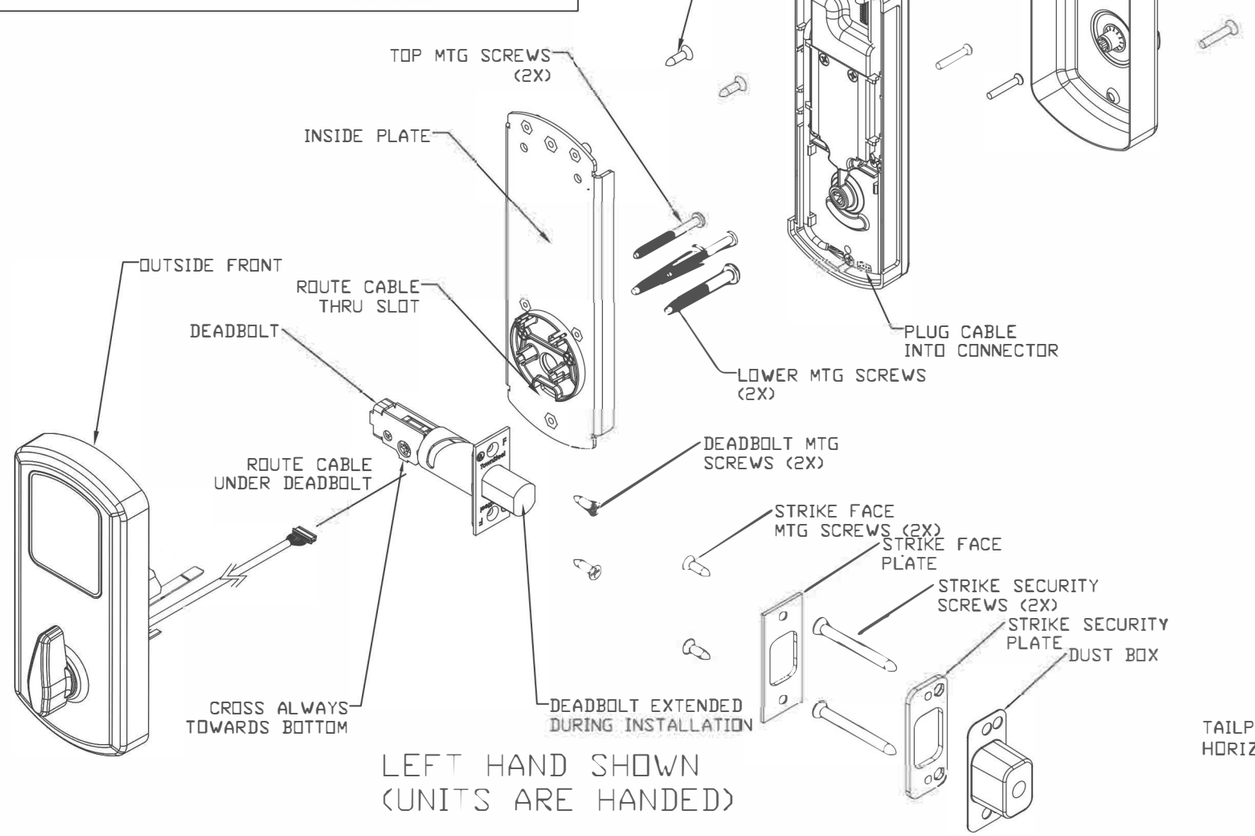

T-SMART INSTALLATION GUIDE

1. PREPARE DOOR CUTOUT PER TEMPLATE.
2. ADJUST DEADBOL T TO BACKSET DESIRED- 2 3/8" or 2 3/ 4".
3. INSTALL DEADBOLT – CROSS TOWARD BOTTOM. SECURE WITH 2 SCREWS. DEADBOL T TO BE EXTENDED FOR INSTALLA TION.
4. SET THE TAIL PIECE ON THE OUTSIDE FRONT IN HORIZONTAL POSITION.
5. POSITION OUTSIDE FRONT– TAILPIECE THRU CROSS ON DEADBOLT. ROUTE THE CABLE UNDER THE DEADBOLT.
6. POSITION THE INSIDE PLATE ON THE OTHER SIDE OF THE DOOR. ROUTE WIRE THRU LOWER SLOT.
7. SCREW IN LOWER MTG SCREWS (LARGER DIAMETER) AND UPPER MTG SCREW (SMALLER DIAMETER). MAKE SURE THE INSIDE PLATE IS ALIGNED VERTICALLY WHEN YOU INSERT THESE LAST 2 SCREWS.
8. SET HANDING ON BATTERY TRAY ARROW SHOULD POINT TO EXTENDED DEADBOLT. PLUG IN CABLE ON BATTERY TRAY. DO NOT PULL OR PINCH CABLE. MAKE SURE THE CABLE CONNECTOR IS SEATED.
9. POSITION BATTERY TRAY OVER INSIDE PLATE. TAILPIECE THRU SLOT. SECURE WITH 4 BATTERY TRAY MTG SCREWS. NOTE: DO NOT PINCH CABLE.
10. ADD BATTERIES TO BATTERY TRAY.
11. POSITION INSIDE COVER SO THAT THE THUMBTURN IS ORIENTED TOWARDS THE EDGE OF THE DOOR AND SECURE WITH COVER MTG SCREWS.
12. ADD STRIKE – DUST BOX, SECURITY PLATE, FACE PLATE – DEADBOLT SHOULD ENTER INTO THE STRIKE WITHOUT BINDING OR ANY OBSTRUCTION. ANY FRICTION WITH STRIKE AND DEADBOL T WILL CAUSE AN ISSUE.
13. TEST OPERATION OF THE LOCK BEFORE LOCKING THE DOOR.

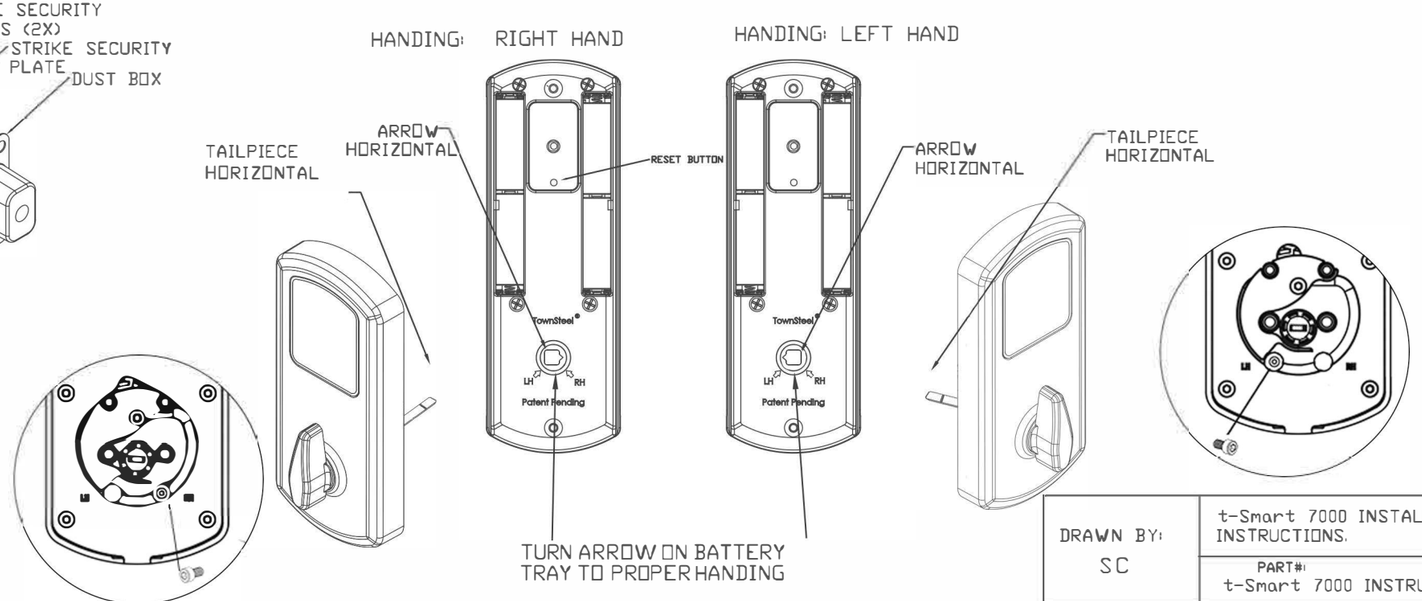


DRAWN BY: SC	t-Smart 7000 INSTALLATION INSTRUCTIONS.
	PART#: t-Smart 7000 INSTRUCTIONS
DATE: 7/08/26	TownSteel


CHANGE HANDING ON OUTSIDE ASSEMBLY

FOR THIS EXAMPLE, WE WILL BE CHANGING THE HANDING FOR RIGHT HAND LOCK TO LEFT HAND LOCK.


1) REMOVE LOCK ASSEMBLY FROM DOOR.

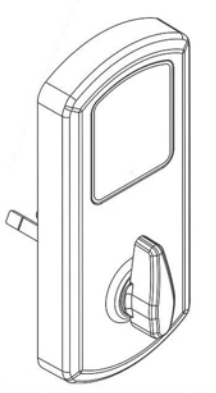

2) WITH THE TAILPIECE HORIZONTAL AND THE HANDING SCREW VISIBLE IN THE RIGHT-HAND HOLE, REMOVE THE SCREW USING A 5/64” HEX WRENCH.

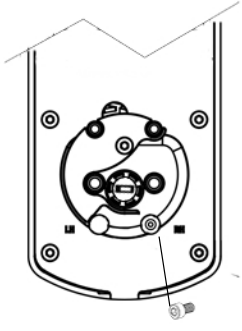

3) ROTATE THE TAILPIECE CLOCKWISE 180° UNTIL IT IS IN THE HORIZONTAL POSITION, THEN INSTALL THE SCREW IN THE LEFT-HAND HOLE OF THE LOCK ASSEMBLY.

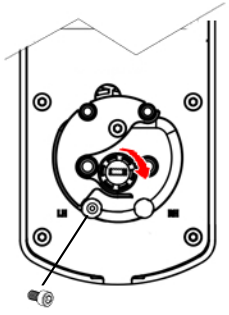

4) RE-INSTALL LOCK ASSEMBLY ON LEFT-HAND DOOR.

*