
# SUSPENDED MOUNTING CLIP + ROD



### Without Wires: Installation


#### STEP 1:

Mark the installation position of clevis on the ceiling with sufficient load-carrying capacity.




## STEP 3:

Assemble the mounting flange and the rods in order of 1,2, and 3.

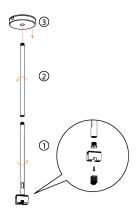

#### STEP 5:

Shield the clevis by the mounting flange and rotate anticlockwise until it clicks into place.

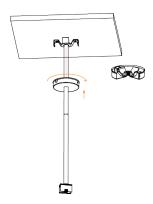


#### STEP 2:

Tighten the clevis by screws.



#### STEP 4:

Rotate and fasten them clockwise.



## STEP 6:

Adjust the clip to the angle you need (max.  $180^{\circ}$  in a clockwise direction).

