


# SUSPENDED WIRE

## Installation


### STEP 1:

Mount the attachment of cable couplers to the ceiling with sufficient load-carrying capacity and tighten them with screws.

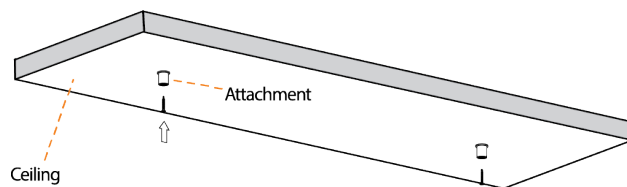


### STEP 2:

Thread the stainless steel wire through the male screw of cable couplers and then connect to the mounted attachment of cable couplers.

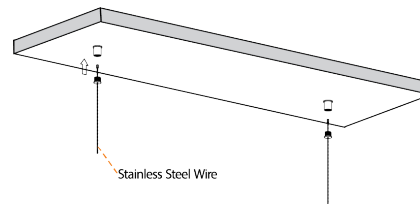


### STEP 3:

Insert the screw into the serrated aluminum profile to lock with the cable gripper sliding from the bottom slot of serrated aluminum profile.

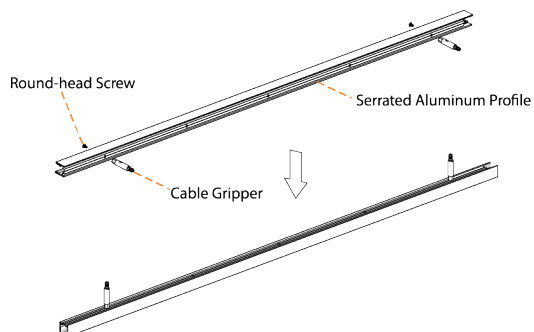


### STEP 4:

Thread the stainless steel wire through the bushing of cable gripper.

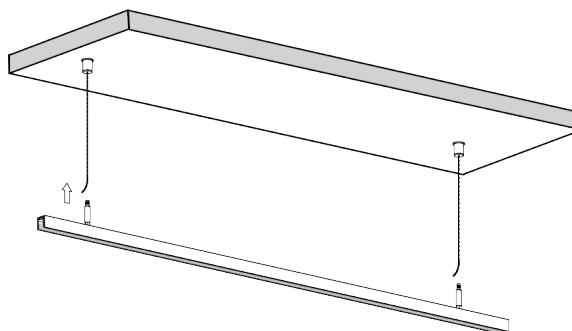

### STEP 5:

Fix the light into the aluminum profile.

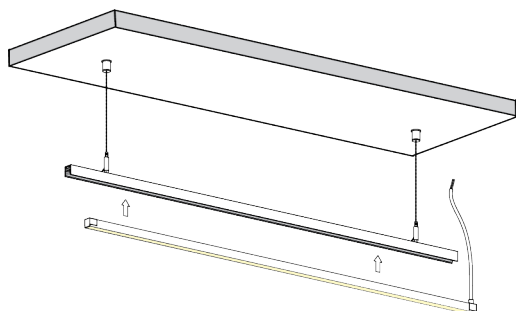

### STEP 6:

Adjust the length of stainless steel wires to the desired height. Tighten the coupling nut and cut or roll up the excess stainless steel wires after the power-on test.

