





## VALIS STAND-OFF PIN

### Installation Guide

#### 1:1 INSTALLATION TEMPLATE


1/4" diameter screws with 20 threads per inch: 1/4-20\*100mm, 1/4-20\*50mm  
5/32" diameter screws: 5/32\*30mm, 5/32\*100mm, 5/32\*1000mm

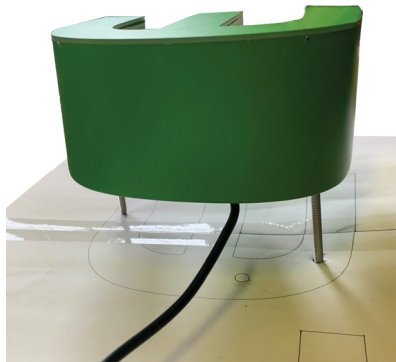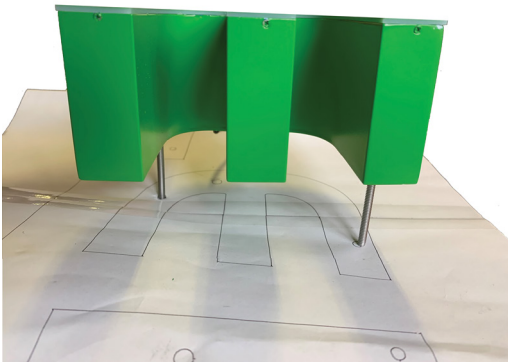

**Note:**  
All orders include a 1:1 sized paper template for an easy rough-in and installation.


#### STEP 1:

Apply Template. Ensure 1:1 paper template is properly aligned and fastened prior to beginning your installation. Step away from the sign and inspect for accuracy. Proceed with next steps.

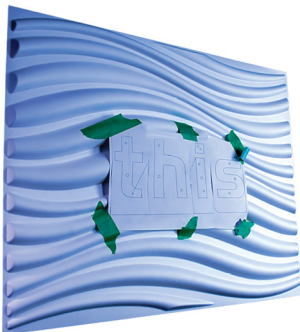

#### STEP 2:

Tap reference points. Reapply tape when dislodged. (Ensure to keep aligned.)

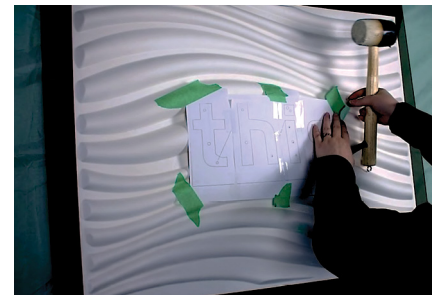


# VALIS STAND-OFF PIN

## Installation Guide

### STEP 3:

Carefully remove template.

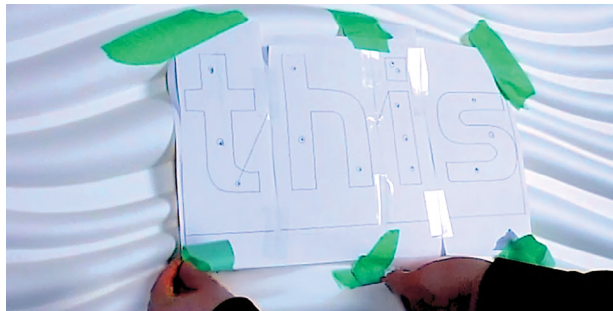


### STEP 4:

Confirm hole alignment.



### STEP 5:

Drill mounting and lead wire holes.

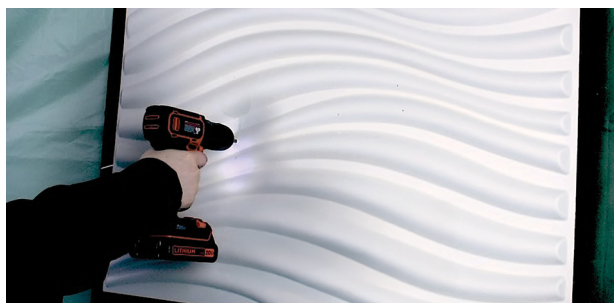


### STEP 6:

Pass lead wires through before mounting sign.



### STEP 7

Fill in mounting holes with construction adhesive.

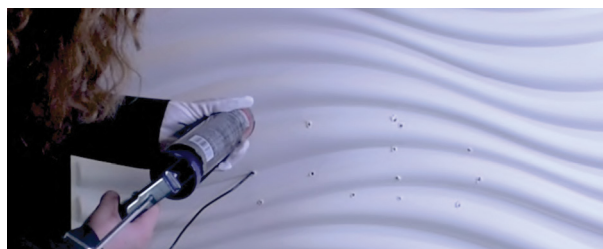

### STEP 8:

Insert mounting pin into hole.

