




Alternative connection methods





Min. M10 strut nut, penny washer & bolt torqued to min 26 Nm

This method is suitable for use with 1, 2 or 3 hooks per brace requirements

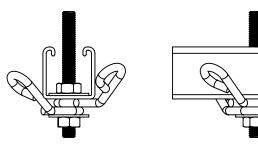

This method is only suitable for use with a 4 way transverse/longitudinal brace. Seismic hooks must be sequenced as shown to align at 45° angle

vaico

31 Whakapirau Road, Maungaturoto, New Zealand vaicoglobal.com Copyright Vaico Global © 2024

BRT1

Brace Connection Details

Drawing No.

BRT1

Revision **B**