


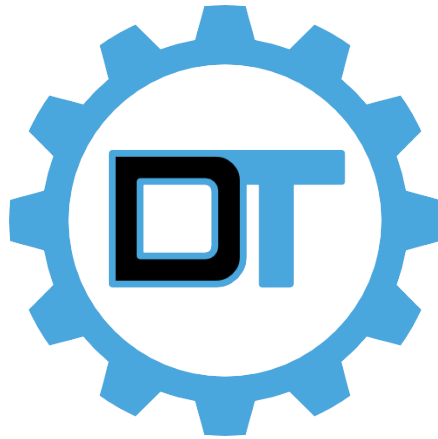

2018-2024 Cummins Bypass Cable Installation



1. Twist the tan and yellow wires so that there is at least one twist every two inches.
2. Carefully, remove the OBDII connector from the dash by depressing the tabs on the sides.
3. Remove the two grey pin retainers from the back of the connector.
4. One at a time, remove and replace the yellow and brown wires from the locations six and fourteen. (For a 2018 truck, replace the yellow with yellow and the brown with tan. For 2019-2024s, replace the yellow with tan and the brown/green with yellow. No matter the wire colors, the pints go in six and fourteen.)

NOTES:

- If you install the cable and can't connect to the truck, try swapping the wires.
- A 1.5mm wide flat terminal release tool or a pointed sewing needle works for removing pins.