


Step Eighteen: On the intake
behind the A/C compressor you
want to install the blocker plate.

Step Eighteen

On the intake
behind the A/C
compressor, you
want to install the
blocker plate.

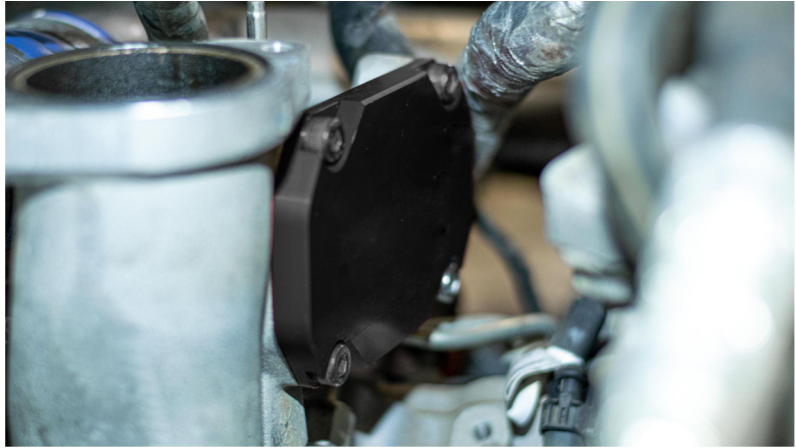

Step Nineteen

Next you'll want to
install the coolant
re-route kit on the
hoses coming out of
the firewall.

