



## FITMENT INSTRUCTIONS

### AWNING TO LOAD BAR BRACKETS

#### TOOLS REQUIRED:

- 13mm Spanner

#### TO FIT

*Please use the images with the steps as a reference to help you with the fitment.*

---



1. Open the bracket box and unwrap the brackets. Be careful not to cut the brackets whilst unwrapping them.



2. Use the bracket and turn the bracket to its correct position on the load bar (Flat face with 4 mounting holes towards the side of awning fitment).

---

3. Turn the hex bolts to the correct position, for them to slide into the load bar slots, two (2) on either side of the bracket and one (1) on top.

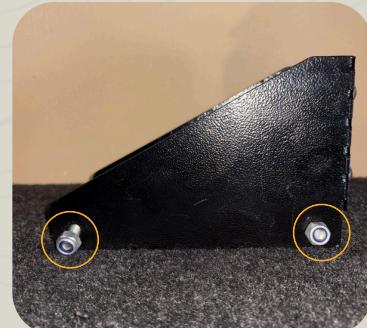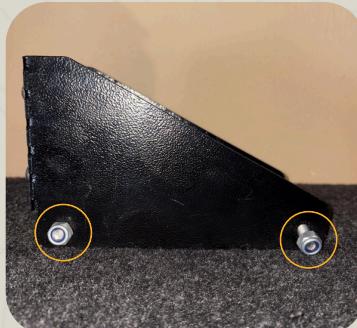



**4.** Move the bracket inwards on the load bar until the flat mounting surface of the bracket protrudes over the load bar. (This leaves enough space for the end cap to sit flush with the bracket)

---

**5. Tighten the bolts:**

Use the 13 Spanner and tighten all 5 bolts. Two (2) on either side of the bracket and one (1) on top. Insert end-caps provided into your load bar.



---

**6.** When the Bracket is secured to the load bar, you can fit the awning.



PLEASE DON'T HESITATE TO CONTACT US IF YOU NEED ANY SUPPORT REGARDING THE FITMENT.  
THANK YOU FOR YOUR SUPPORT, WE HOPE YOU LOVE YOUR QUICK PITCH PRODUCT.