



FITMENT INSTRUCTIONS

QUICK-EN-SUITE TO FRONT RUNNER

TOOLS REQUIRED:

- 13mm Spanner
- 3 Allen Key
- Measuring Tape

TO FIT

Please use the images with the steps as a reference to help you with the fitment.

1. Carefully **open** the Quick-en-Suite to Front Runner brackets. Make sure not to cut the brackets while unwrapping.
2. Use the 3 Allen key and loosen the corner cap of the roof rack, and remove the cap.
3. Once the corner cap is removed, loosen the bottom bolt on the bracket.
4. **Slide** the top bolt into the top slot of the roof rack.
(Repeat steps 2-4 for the second bracket.)



Slide bracket into roof rack




Top bolt in top slot



Inserting of the bottom bolt and nut

5. Measure the distance between the mounting holes of the shower with a measuring tape. Adjust the brackets to match this distance and tighten them securely using a 13mm spanner.

(Distance between the mounting holes should be 1025mm on the bag and 1060mm on the box)

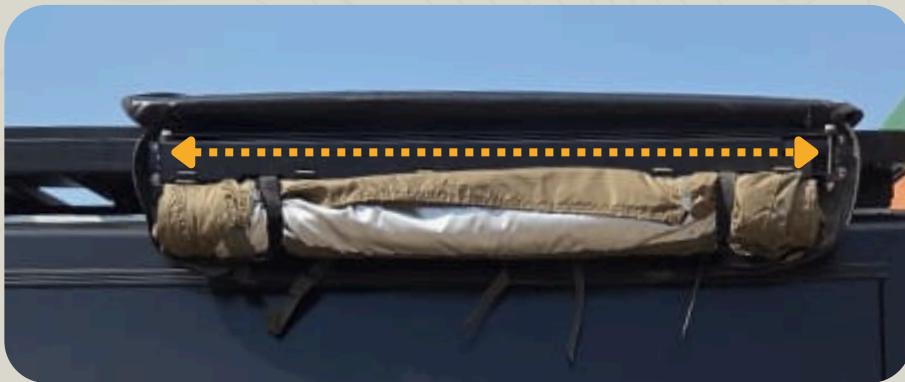

6. Once the brackets are tightened and in place, use the bolt and nuts removed in Step 3 to fasten the bracket from the bottom. (Drill a hole in the roof rack if necessary)

7. Mount the shower onto the brackets and tighten.

8. To fit a Quick-en-Suite unit, please look at the correct fitment instructions for installing the shower cubicle.



PLEASE DON'T HESITATE TO CONTACT US IF YOU NEED ANY SUPPORT REGARDING THE FITMENT.
THANK YOU FOR YOUR SUPPORT, WE HOPE YOU LOVE YOUR QUICK PITCH PRODUCT.