

## FITMENT INSTRUCTIONS

### ROOFTOP TENT

#### TOOLS REQUIRED:


- 13mm Spanner

*\*Please note that if you mount the RTT on an SUV, you need to mount it on 3 load bars.*

#### TO FIT

*Please use the images with the steps as a reference to help you with the fitment.*

1. Open the RTT Box and unwrap the tent carefully; do not cut the RTT whilst you unwrap it.
2. Unclip the latches and open the tent.
3. Remove the list below from the tent, and put it aside.  
(2) Two x RTT mount bracket packages with (2) two per package  
(1) One x Ladder bracket package  
(1) One x Telescopic Ladder  
(1) One x Shoe bag  
(1) Springrodsteel bag
4. Once the packages are removed, place the tent on stillages

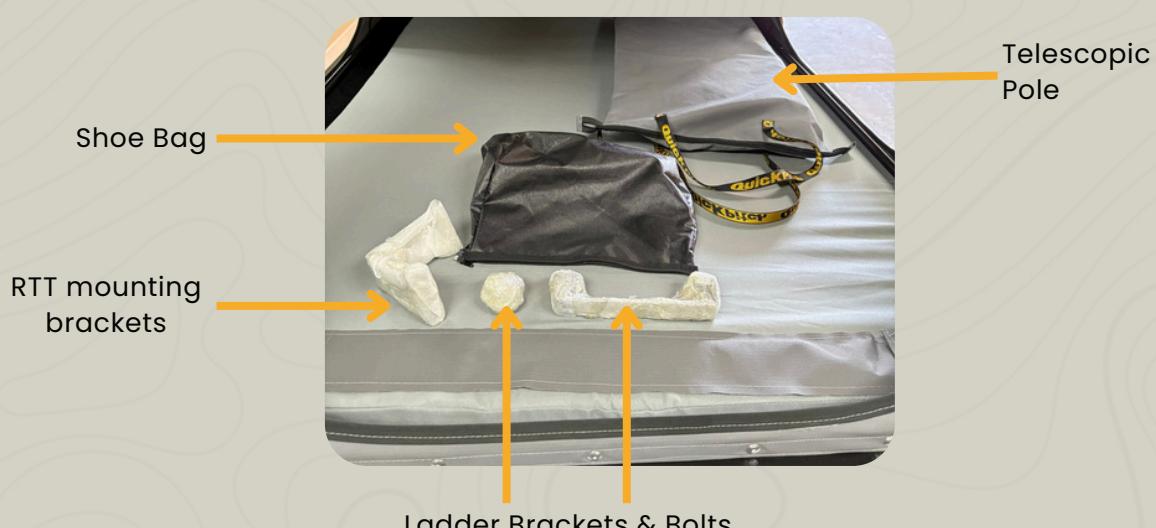

**5.** Open the ladder bracket packages and slide (2) two cup square bolts into the accessory rail on the side of the tent. Insert the ladder bracket onto the bolts and tighten.

**6.** Open the (2) Two RTT Mount Bracket packages and slide (2) two cup square bolts into the accessory rail on the side of the tent. Then, take (8) eight hex bolts and slide (4) four in the mounting rail underneath on either side of the tent. Insert the bracket onto the bolt and loosely tighten.

**Step 5**



Cup Square Bolts

**Step 6**



Cup  
Square  
Bolts

Hex Bolt

---

**7.** Measure the mounting surfaces and move the tent mount brackets on the tent to the measured length.

**8.** Hoist the tent onto the mounting surface and fasten all the bolts.

**9.** Take extra precaution and ensure that all the bolts and brackets are fastened and secured.



PLEASE DON'T HESITATE TO CONTACT US IF YOU NEED ANY SUPPORT REGARDING THE FITMENT.  
THANK YOU FOR YOUR SUPPORT, WE HOPE YOU LOVE YOUR QUICK PITCH PRODUCT.