



FITMENT INSTRUCTIONS

270 & 2M WEATHERSHADE AWNING FITMENT

TOOLS REQUIRED:

- 13 Spanner x 2
- 5 Allen Key
- 5mm Drill Bit
- 8mm Drill Bit
- Chamfer Tool
- Pop Rivet gun
- Button Head (Included with brackets)

TO FIT

Please use the images with the steps as a reference to help you with the fitment.

1. Open Awning Box and unwrap the awning. Be careful to not cut the awning bag whilst unwrapping the awning.
2. Unzip the awning bag and remove the wrapping around the hinge of the awning.
3. Use a chamfering tool to open the four (4) holes at the hinge of the awning.



4. Insert M8 bolts on the existing four (4) holes of the awning hinge and through the mounting bracket.

Fasten using 2x13 spanners from the top down.



5. Insert two (2) button head bolts with M8 washers in the two existing holes on the awning pan and the mounting brackets. Fasten using a 13mm spanner and a 5 Allen key.


NB: If the pre-laser existing holes in the awning pan can't be used, drill two (2) new holes that align horizontally with the existing holes and bracket, using an 8mm drill bit. (1200mm min)

6. Open the awning and align the tension strap to your tensioning position on the square arm (5th arm) of the awning.

NB: The Strap position is determined by the mounting surface and needs to be as close as possible to perpendicular (90 degrees) with the 5th arm.



7. Drill a hole using a 5mm drill bit, into the square arm of the awning to where you aligned the tensioning strap.

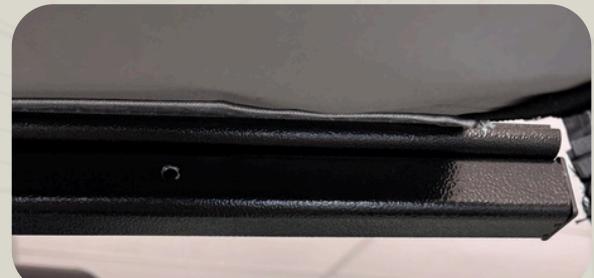

8. Fold the tensioning strap double at the end where the buckle is attached and puncture the folded strap to insert the pop rivet to fix to the square arm.



9. Insert the pop rivet into the square arm and fasten the pop rivet to the arm with a pop rivet gun.

10. Hook your tensioning strap to an M8 bolt, or around a load bar and enjoy the awning shade.



PLEASE DON'T HESITATE TO CONTACT US IF YOU NEED ANY SUPPORT REGARDING THE FITMENT.
THANK YOU FOR YOUR SUPPORT, WE HOPE YOU LOVE YOUR QUICK PITCH PRODUCT.