


WOODLINE

SLAT WALL

3 M / 10'

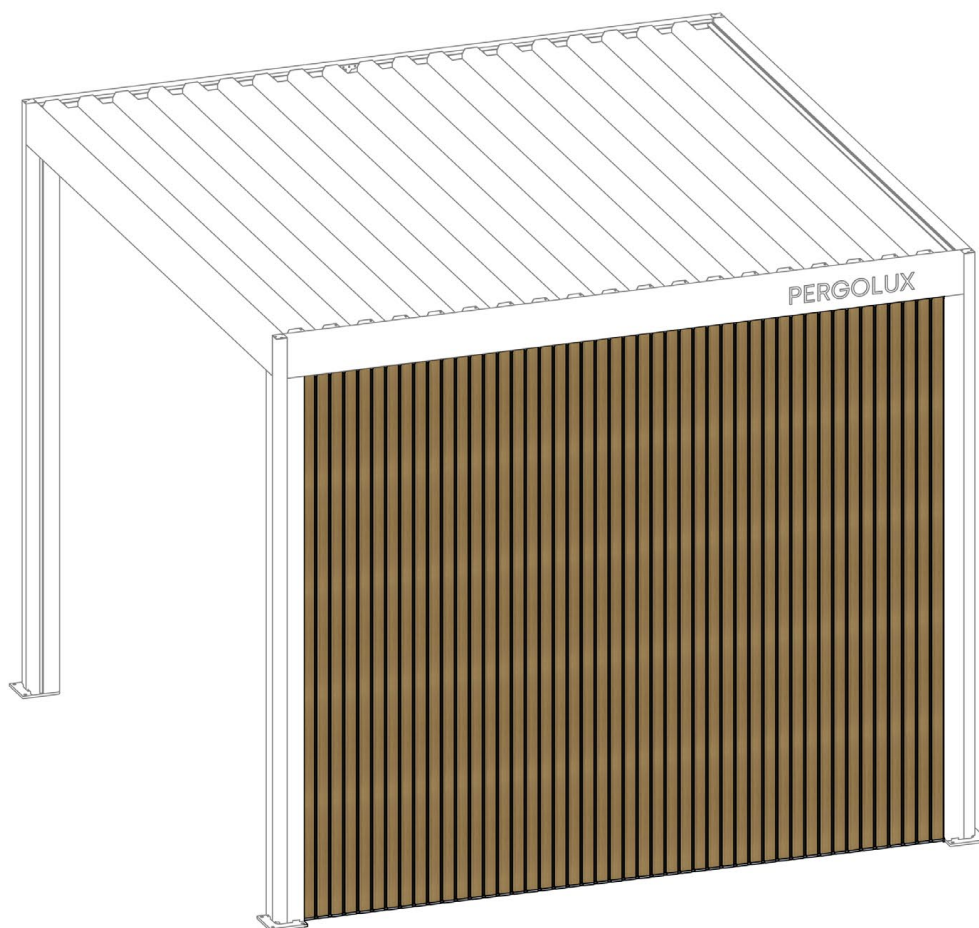

PERGOLUX

PERGOLUX I N F O R M A T I O N

Congratulations and thank you for choosing a PERGOLUX Product!

To enjoy this product for a long time as well as for your own and others' safety, please follow the installation instructions. Before you start assembling and using the pergola, ensure that all the parts listed in the manual are delivered and intact. If you need help with the installation, you can contact us by chat, phone, e-mail or via our website.

We wish you good luck with the assembling process!

Contact:



pergolux.de



pergolux.co.uk



pergoluxshop.com



pergolux.dk



pergolux.se



pergolux.no



Australia



pergolux.fr



pergolux.ch



pergolux.it



pergolux.nl



at.pergolux.de



pergolux.cl



pergolux.com.br

PERGOLUX

INFORMATION

Having some issues and need to submit a claim?

If you are faced to an issue with your PERGOLUX products and needs to submit a claim please read this article:



Complaints and Technical Issues



Reklamation einreichen. Schritt für Schritt Anleitung

Submit the claim here:



Anfrage einreichen



Submit a request



Anfrage einreichen



Send oss en henvendelse



Een aanvraag indienen



Skicka oss en förfrågan



Submit a request



Send os en forespørgsel



Submit a request



Envoyer une demande



Enviar una solicitud





Invia una richiesta



Enviar una solicitud

PERGOLUX | SLAT WALL

INFORMATION

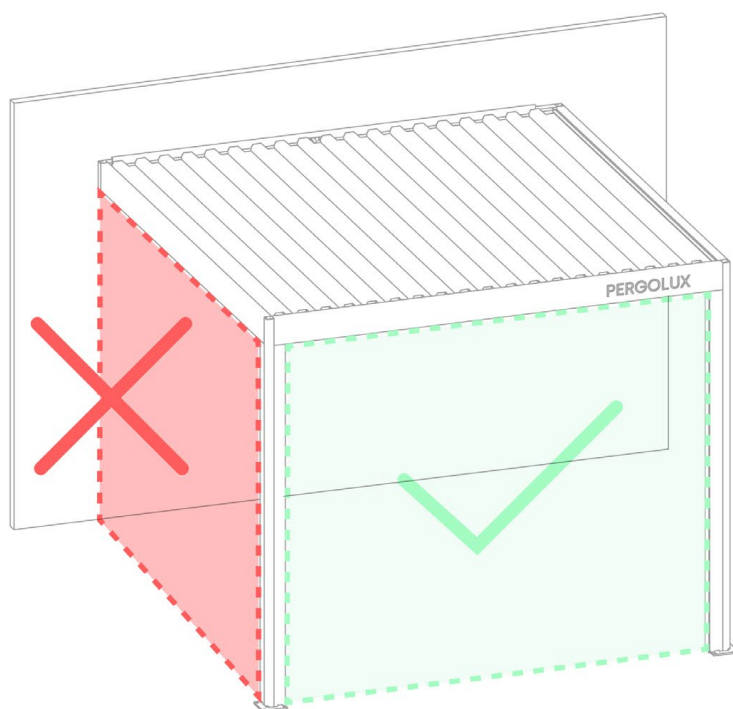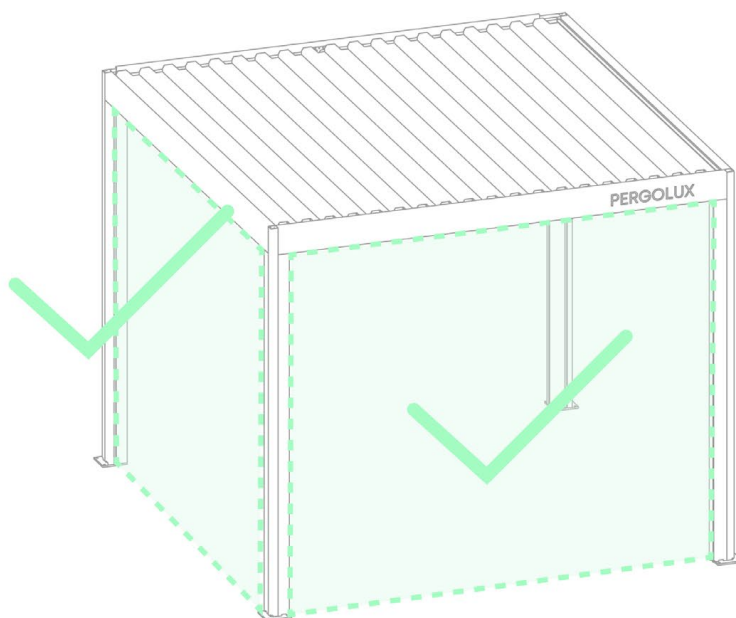

This slat wall cannot be installed
on the wall mounted side and
Skydance model (S1/S2/S3)

SYMBOL EXPLANATION



Indicates the outside of the pergola structure.



This item must be purchased separately.



Indicates the inside of the pergola structure.



Do not use a regular hammer, as it may cause damage.



Required tools for assembly.





Repeat this step as many times as the number indicates










Turn around

PERGOLUX | SLAT WALL


INFORMATION

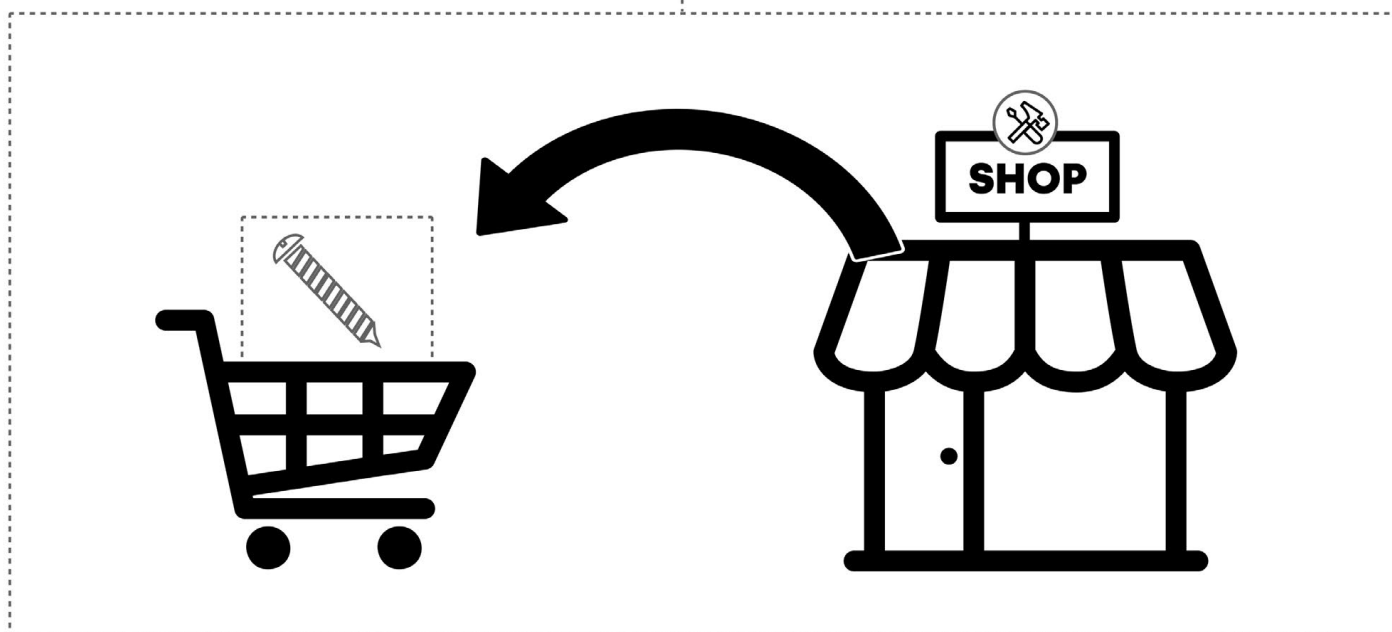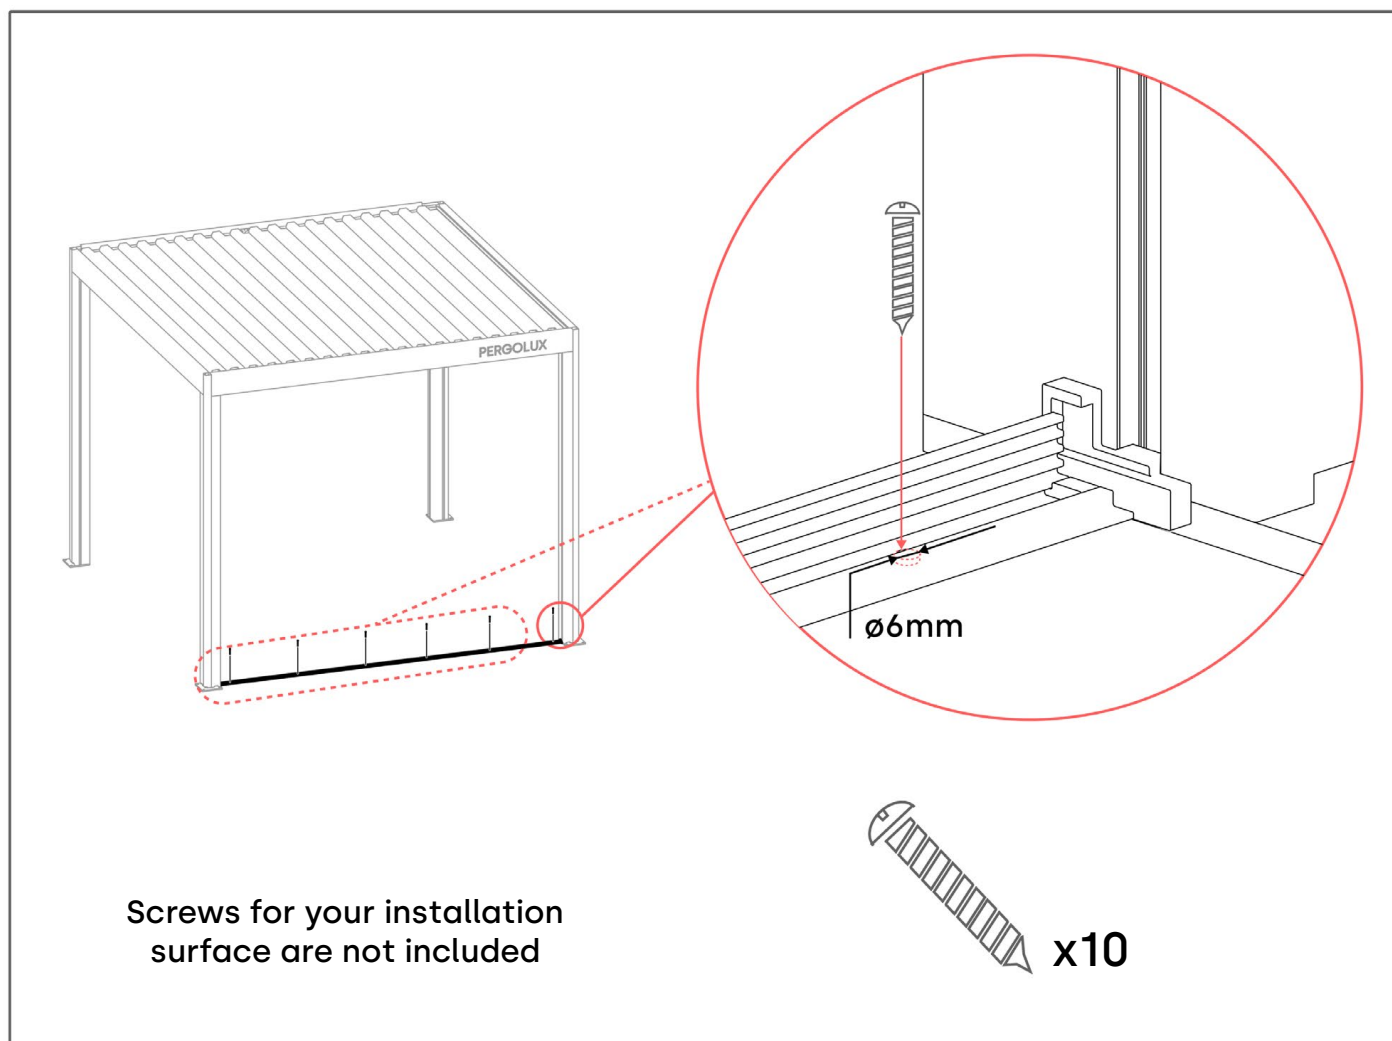

TOOLS

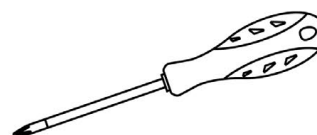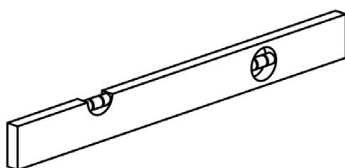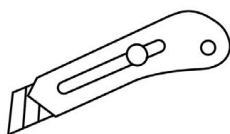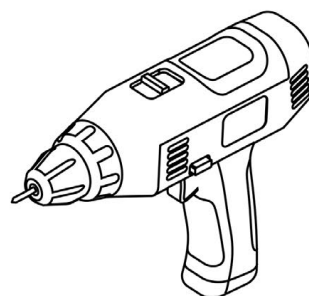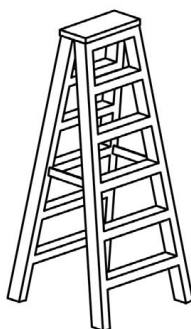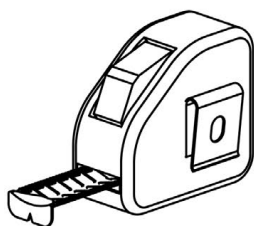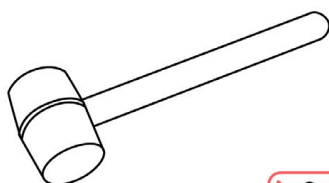


PACKAGE OVERVIEW

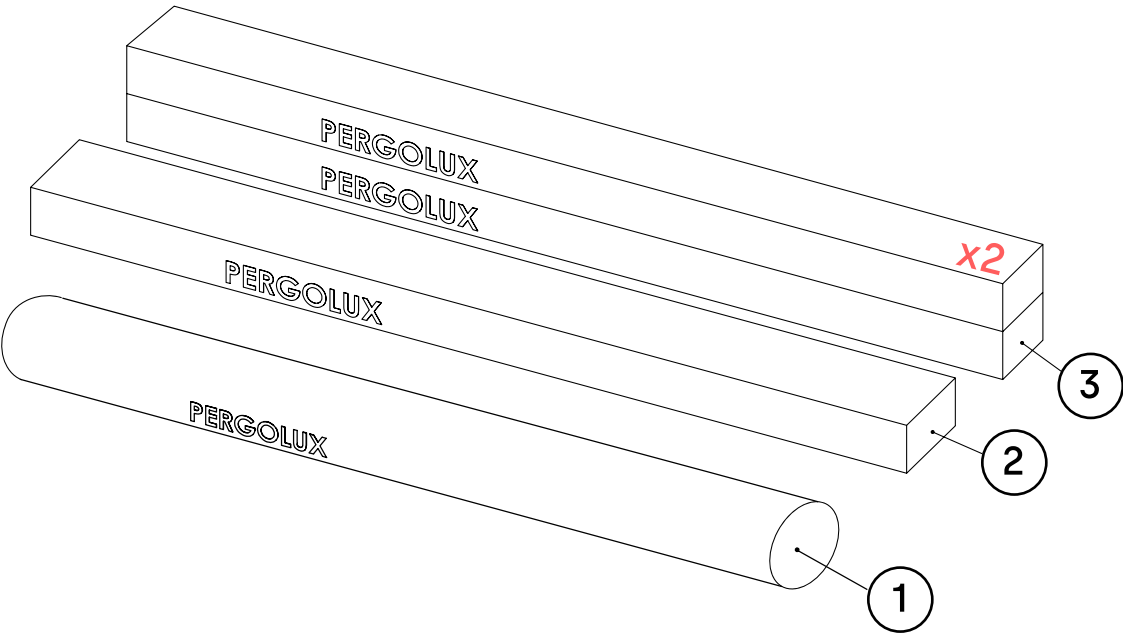



①	W102 FRAME 3M PACKAGE
②	W100 SLAT PACKAGE 16
③	W101 SLAT PACKAGE 15 x2

ITEMS IN BOX

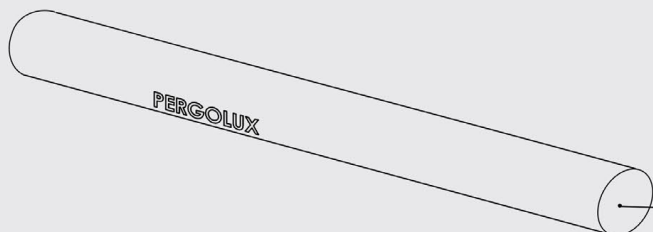



W102 FRAME 3M PACKAGE

1

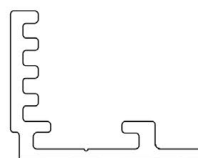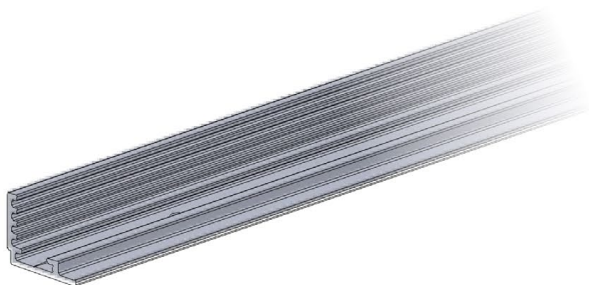



Ground Fixation 3M
PN-200002516

1x

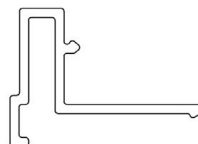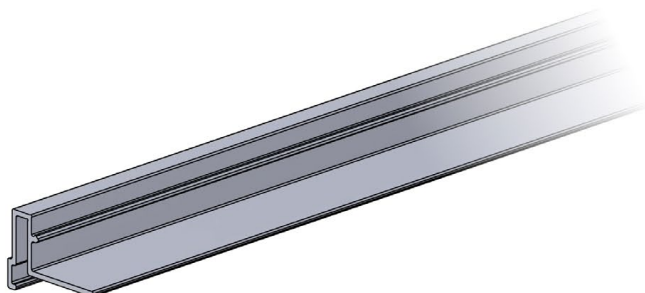


Slat Fixation 3M
PN-200002520

1x

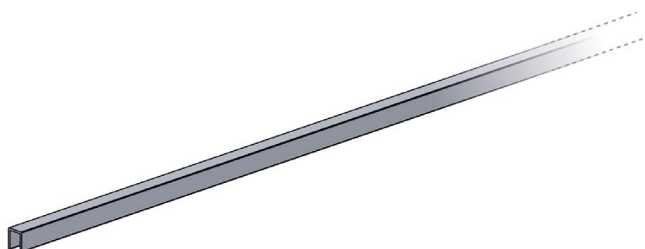


Slat Lock 3M
PN-200002518

1x

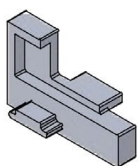

End Cover Left
PN-200002510


1x

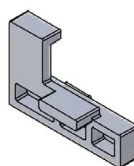

End Cover Right
PN-200002513



1x

ITEMS IN BOX


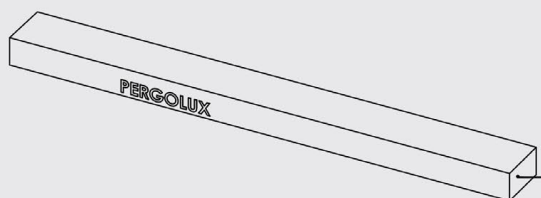


W100 SLAT PACKAGE 16


2

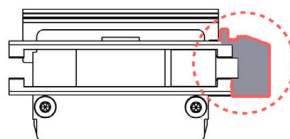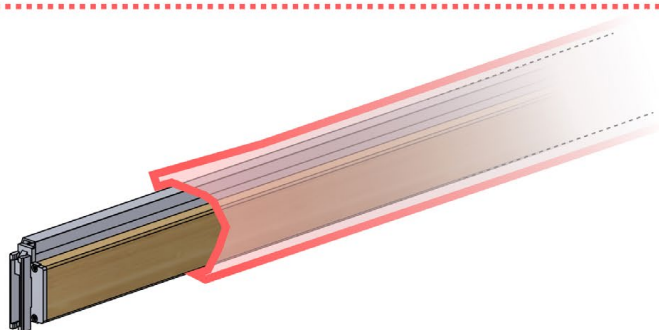

Slat Right
PN-200002509
1x

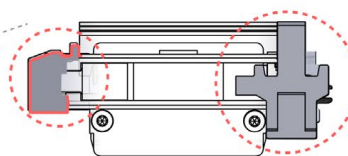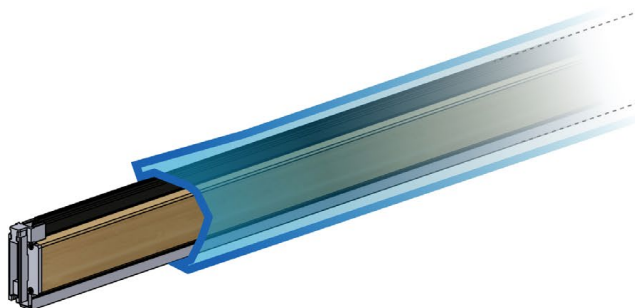


Slat Left
PN-200002508
1x

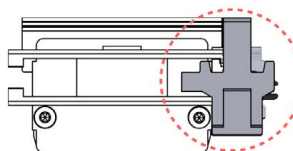



Slat Center
PN-200002507
14x

IN BOX

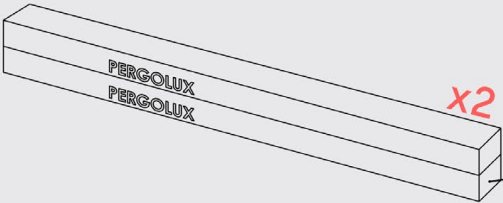


W101 SLAT PACKAGE 15

3

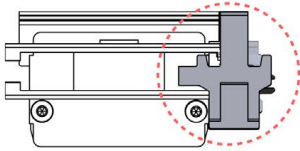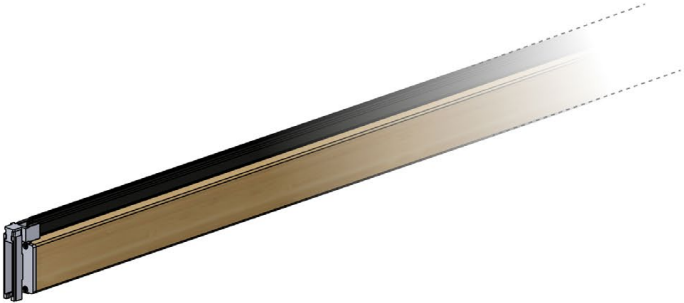

Slat Center
PN-200002507
30x

OVERVIEW 3M/10'

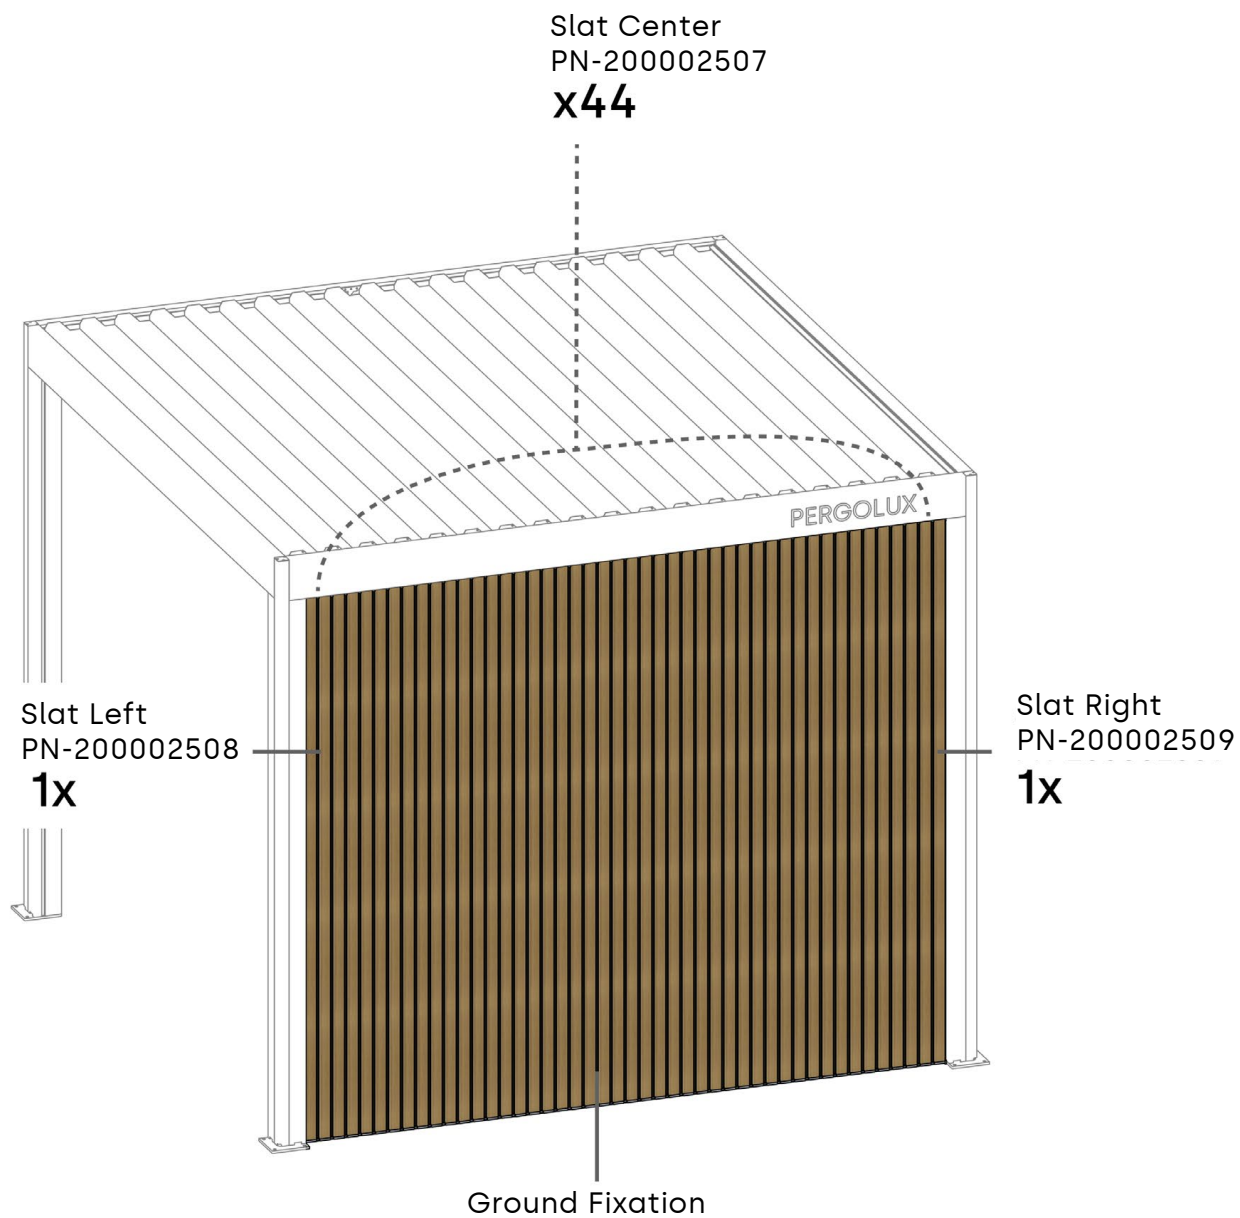

CLOSED / OPEN

OPTION 1 (Closed):





NOT see through



Water protection



Wind protection

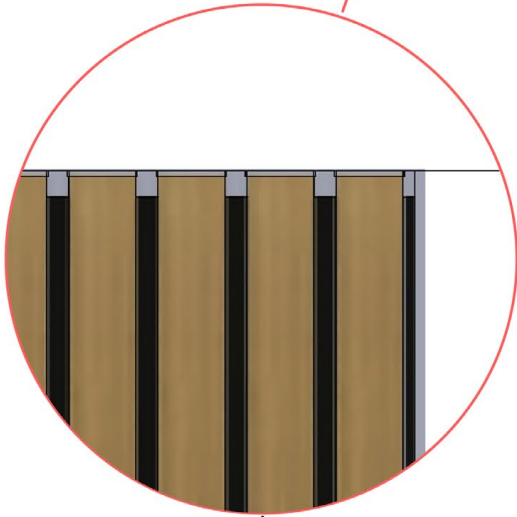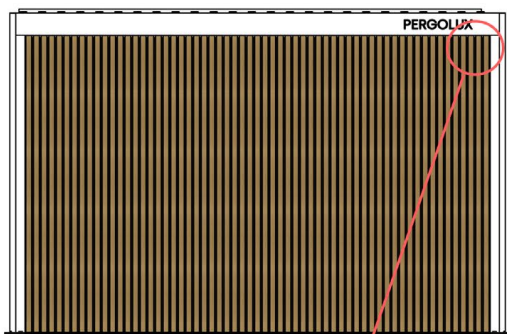

Continue assembling
from **Step 1**

OPTION 2 (Open):





See through



NO Water protection



NO Wind protection

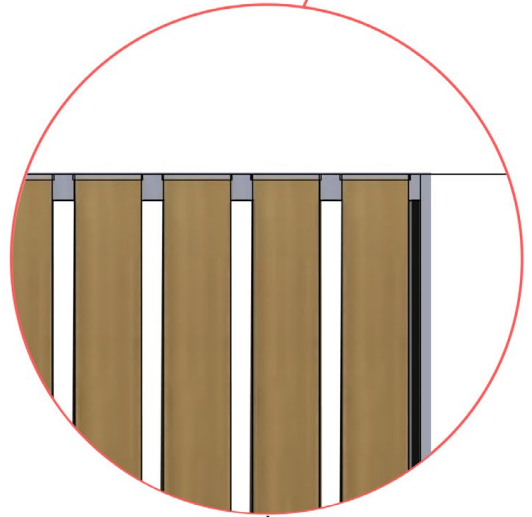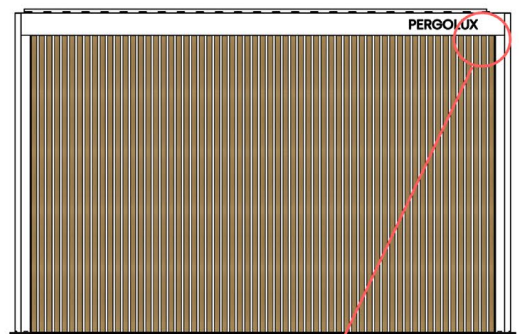


See next
page




OPTION 2 (OPEN)



** Only for option 2

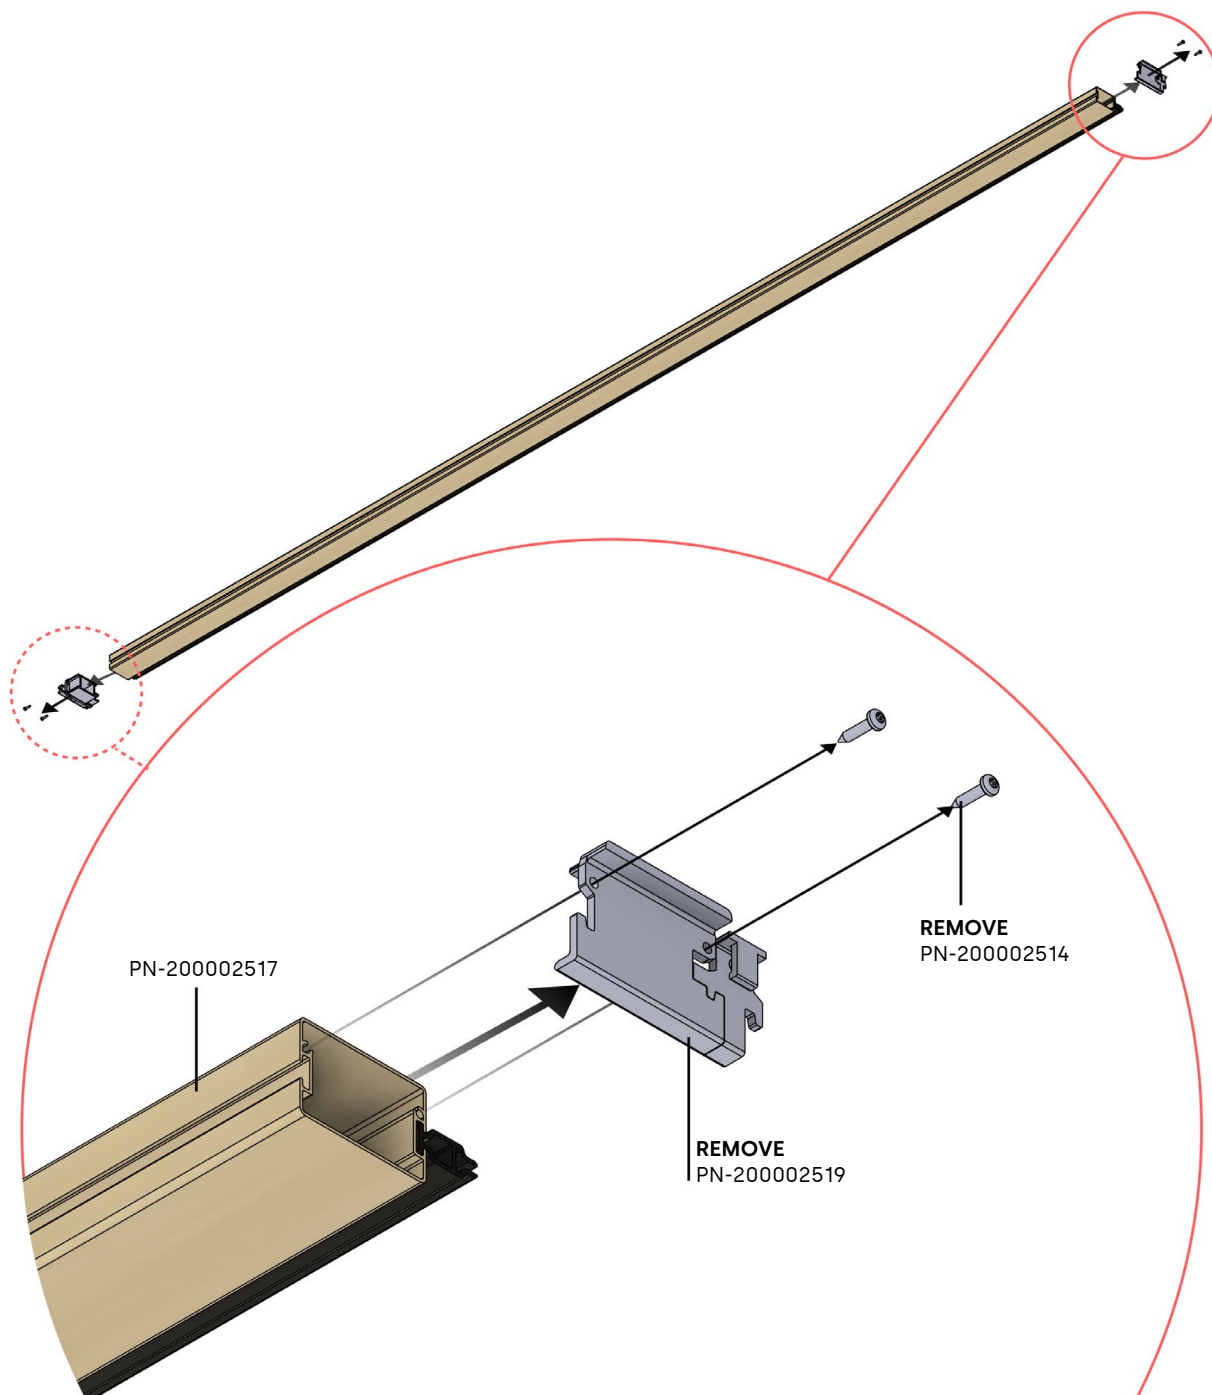

PLEASE NOTE: Do not remove the slat connection profile on the left and right slats, as these will be installed and fixed into the posts.

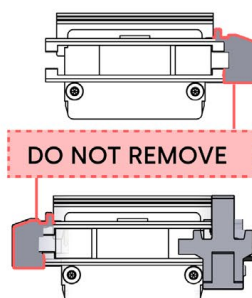


Slat Right
PN-200002509
1x

Slat Left
PN-200002508
1x


OPTION 2 (OPEN)




** Only for option 2

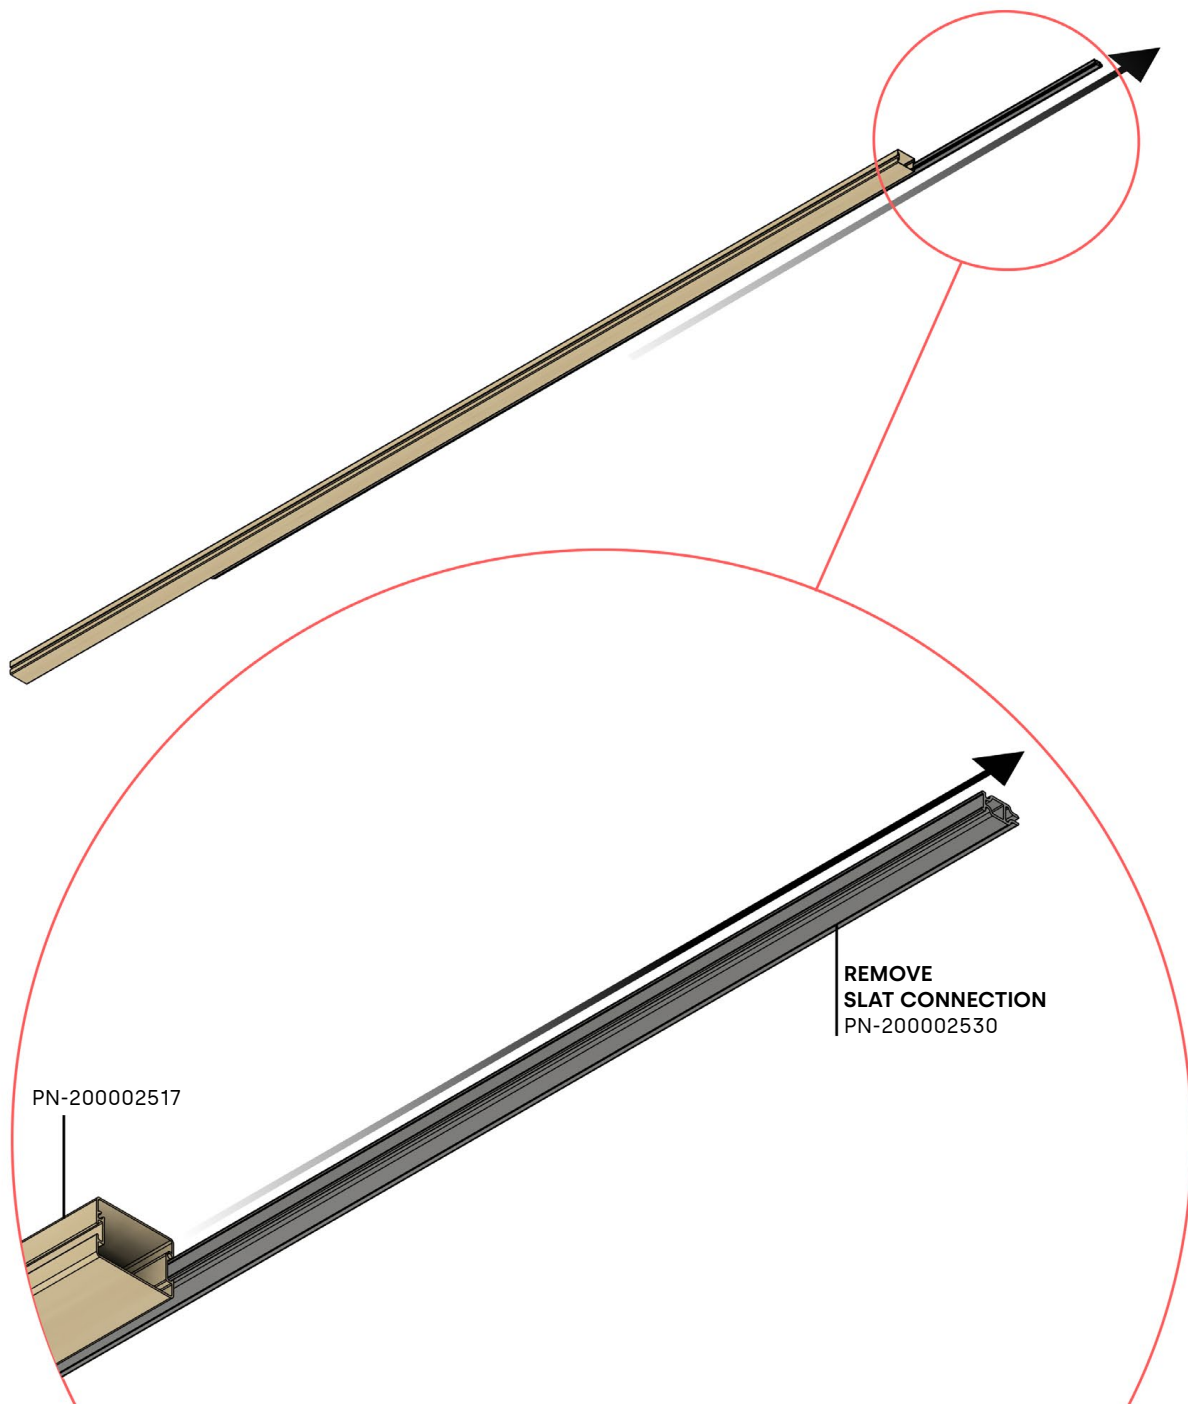

PLEASE NOTE: Do not remove the slat connection profile on the left and right slats, as these will be installed and fixed into the posts.



DO NOT REMOVE




Slat Right
PN-200002509
1x

Slat Left
PN-200002508
1x

OPTION 2 (OPEN)



** Only for option 2

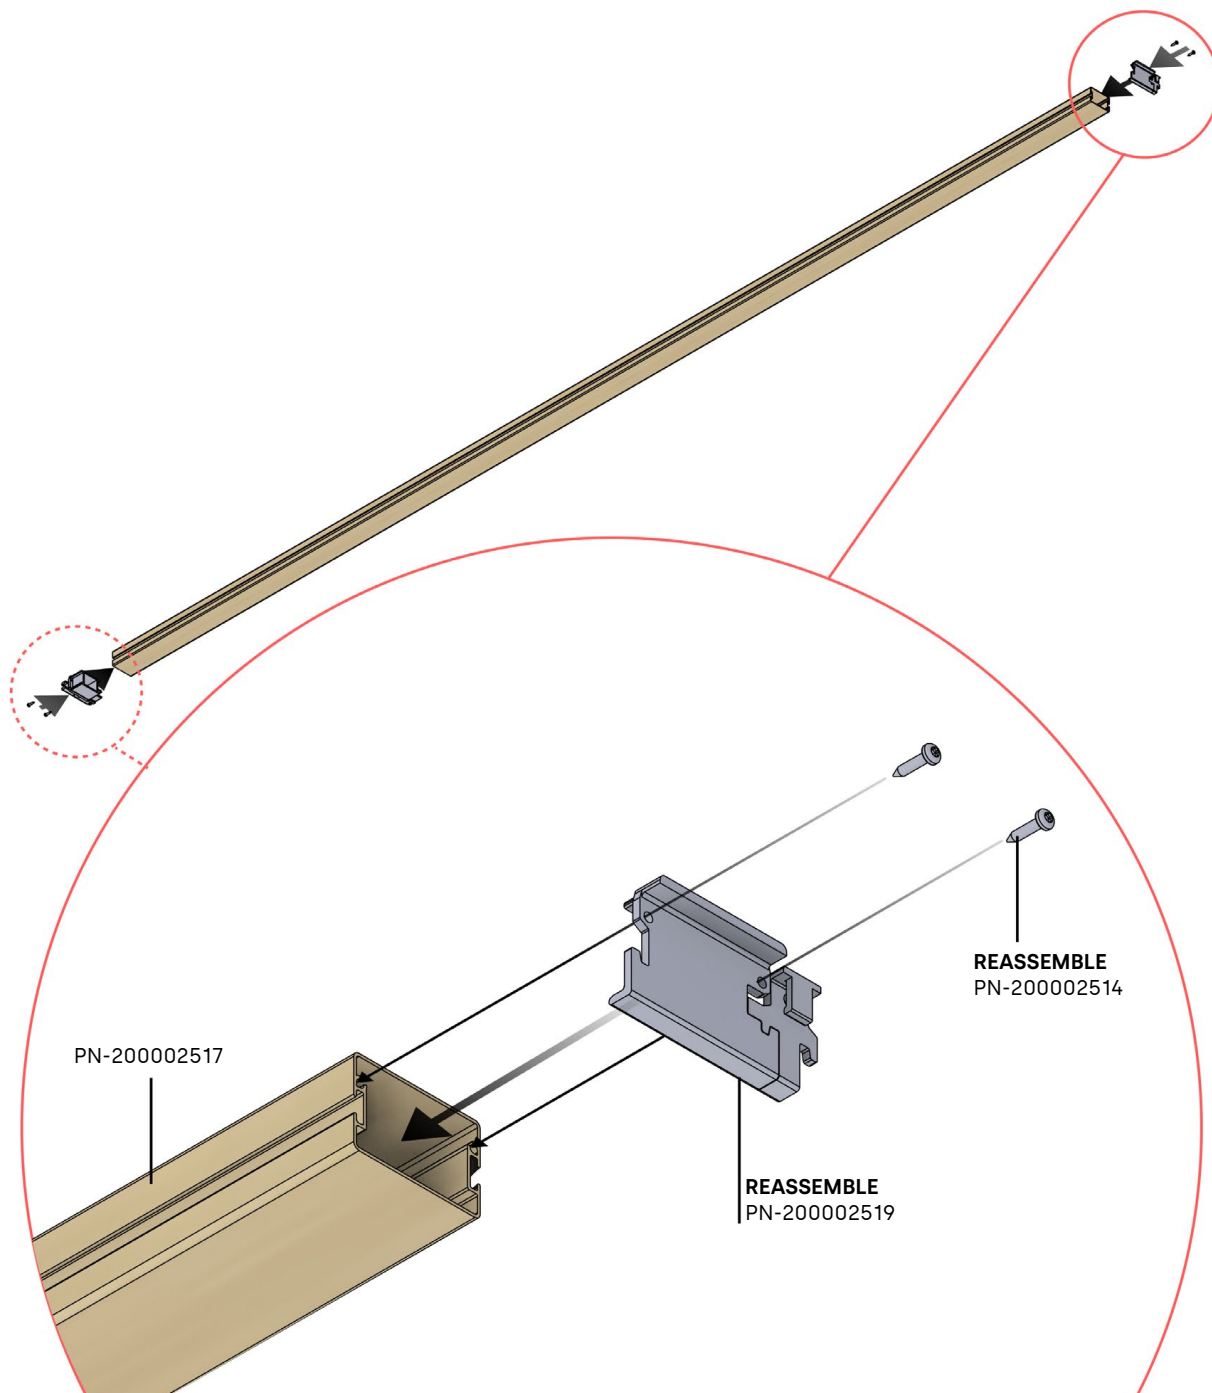


PN-200002517

REASSEMBLE
PN-200002514

REASSEMBLE
PN-200002519

PLEASE NOTE: Do not remove the slat connection profile on the left and right slats, as these will be installed and fixed into the posts.

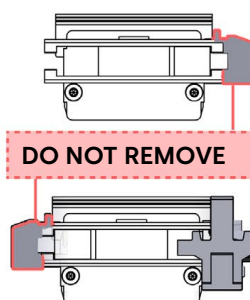


Slat Right
PN-200002509
1x


Slat Left
PN-200002508
1x

REMOVE COVER AND CLIPS


Remove the cover and clips entirely from the beams and posts on the side where you plan to install the slat wall.

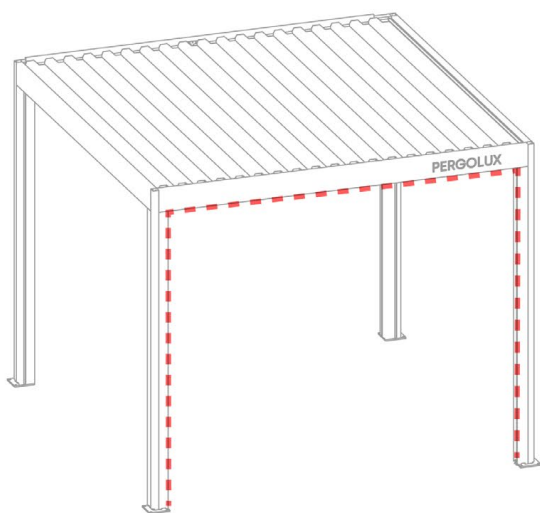

Cover and clip

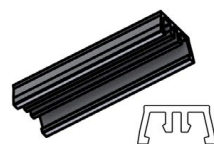


PN-200000512
STRIP COVER CLIP



SnapFIT Cover


Beams PERGOLA

Remove cover and clips from **beams**.




Beams SUNDREAM

Remove cover and clips from the underside of the **beams**.



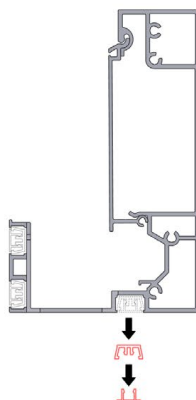


Posts

Remove cover and clips from **posts**.


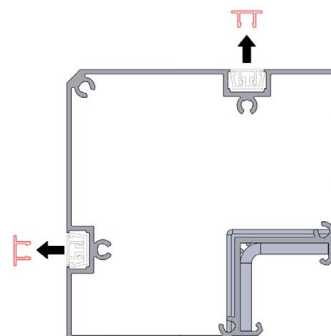


1

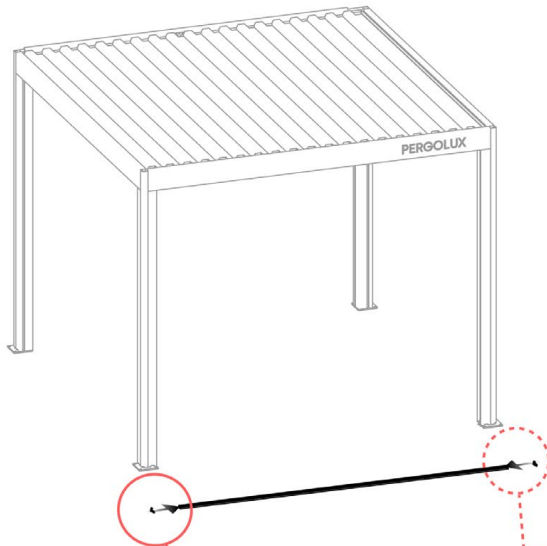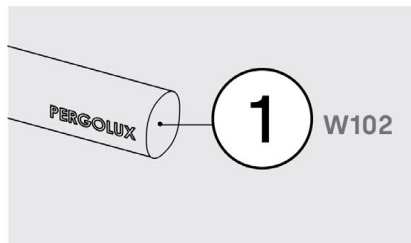



Ground Fixation
3M
PN-200002516

1x

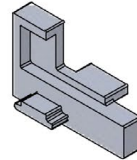


End Cover Left
PN-200002510

x1

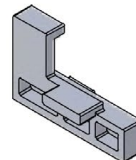


End Cover Right
PN-200002513

x1




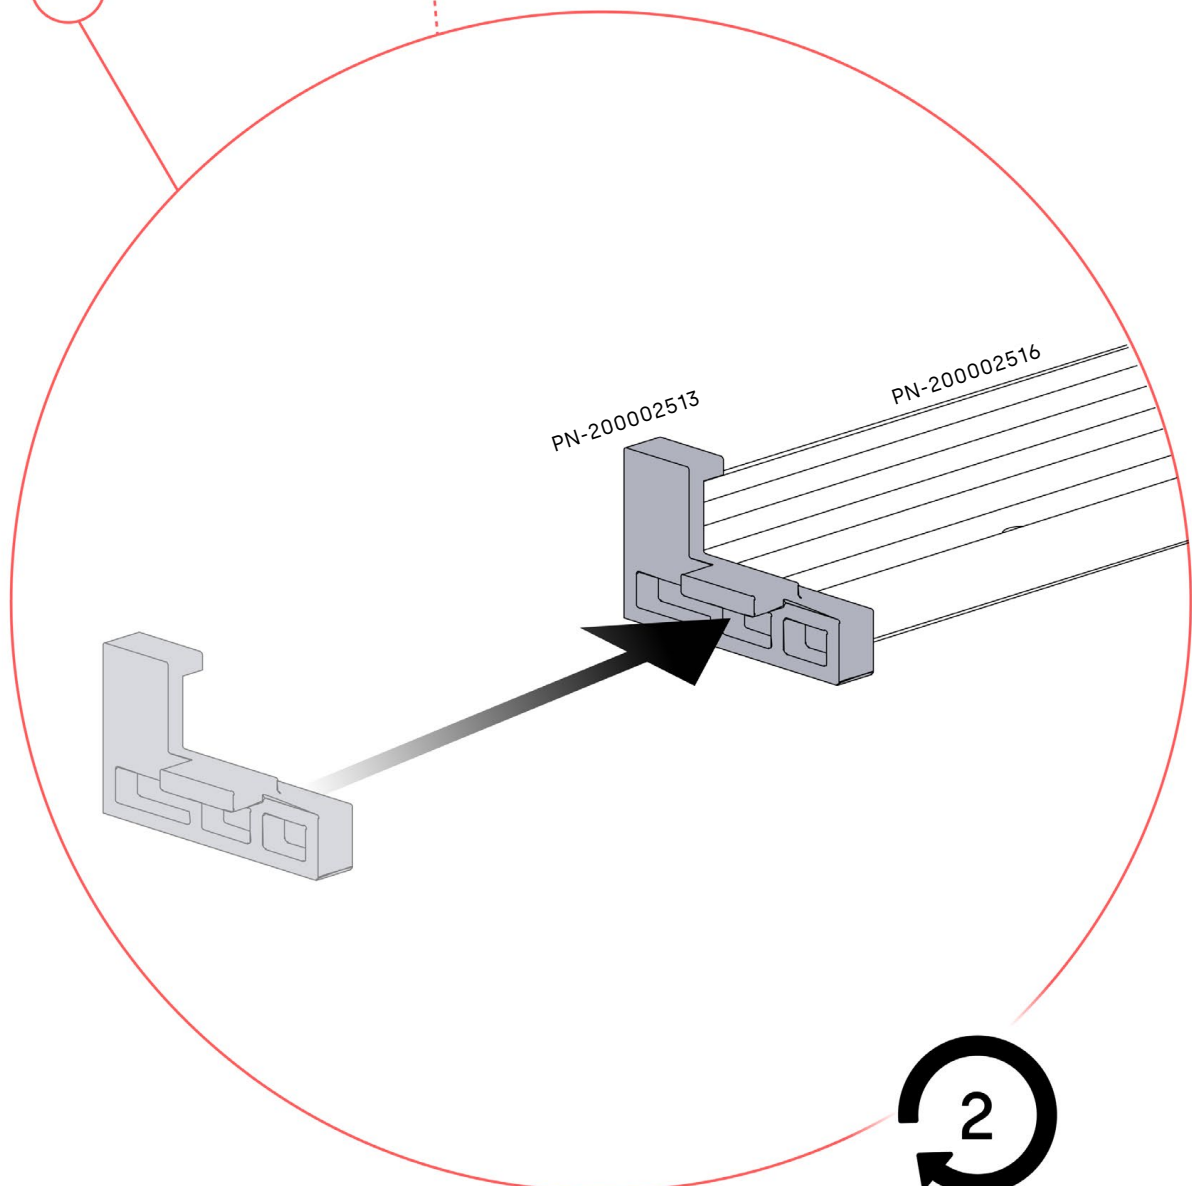


2





2

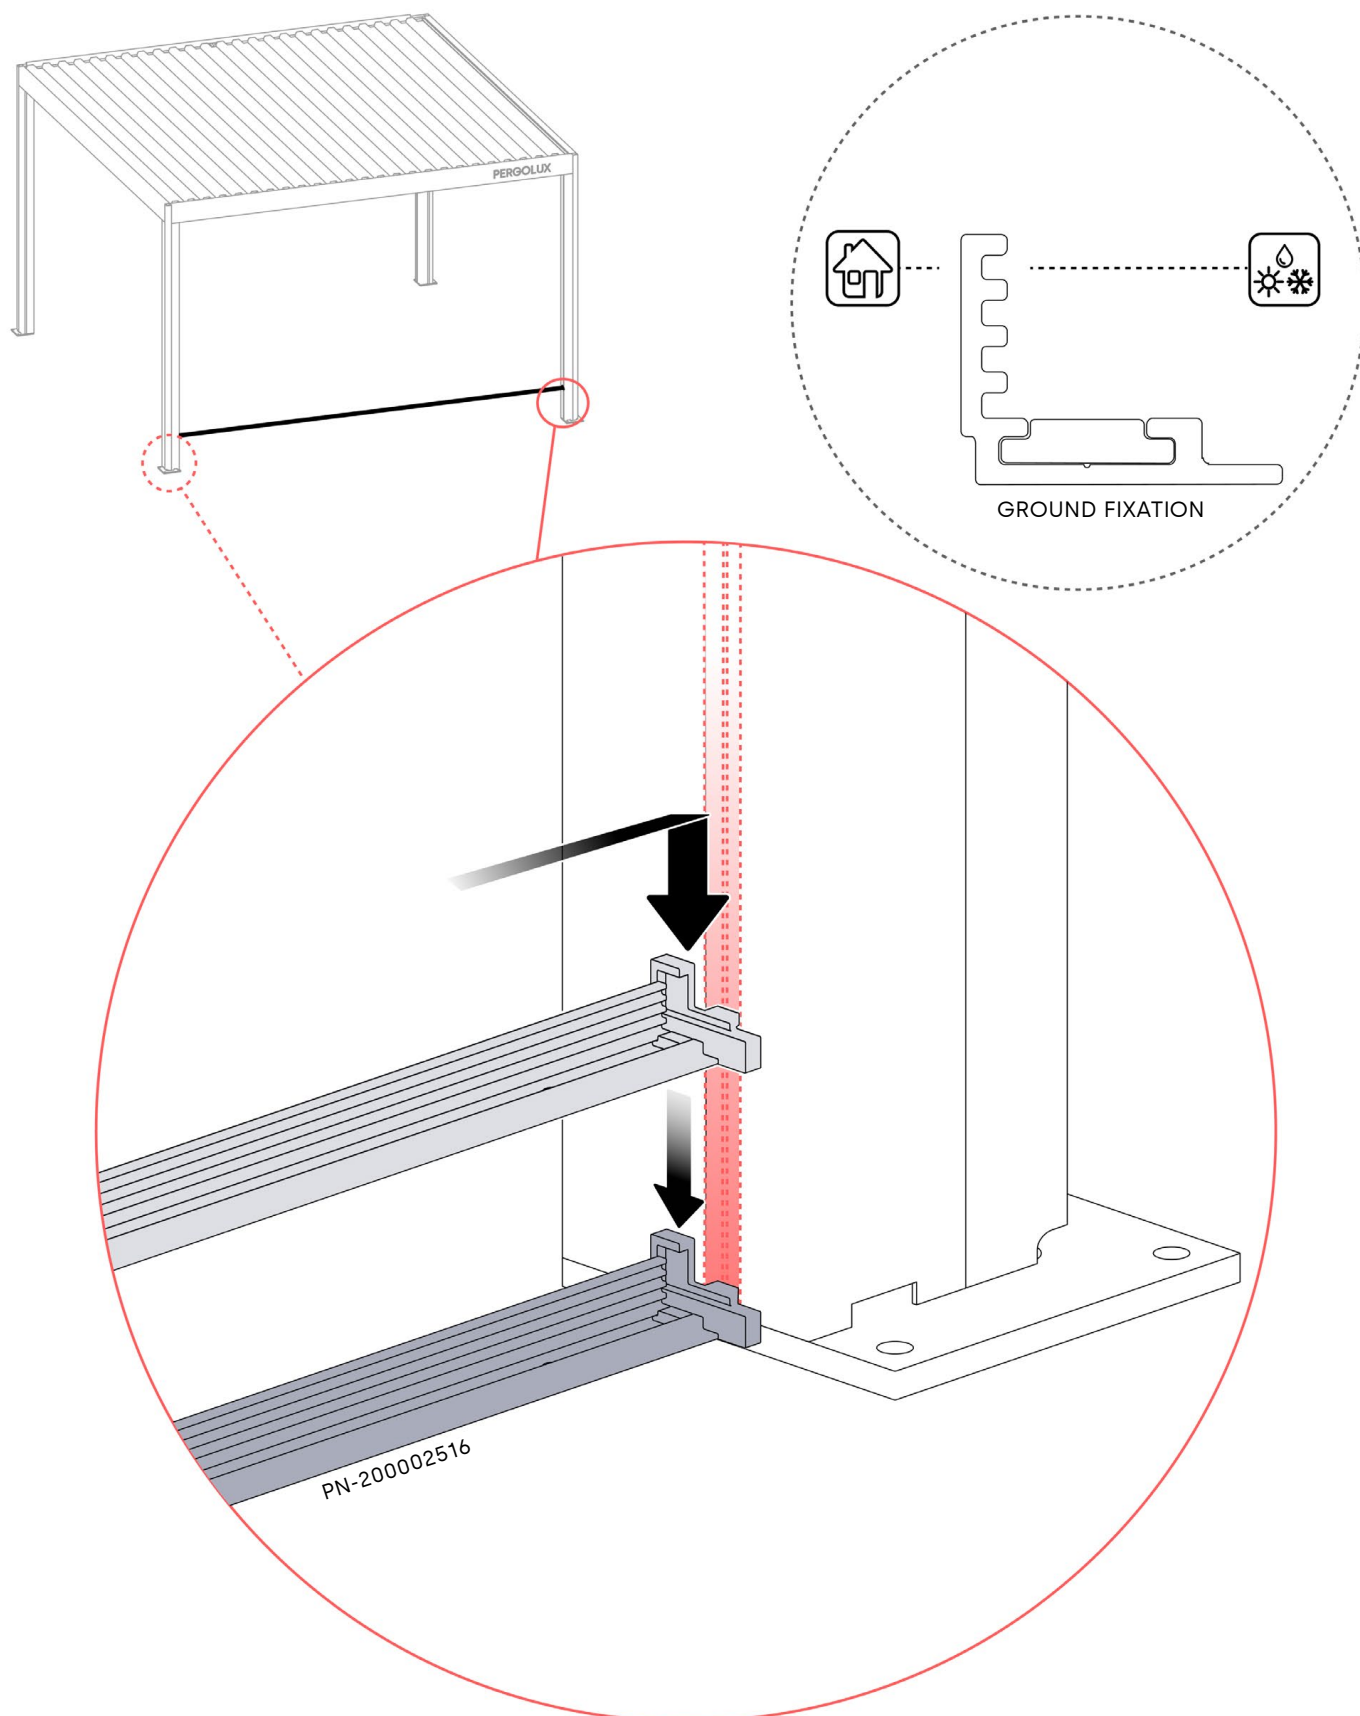

3

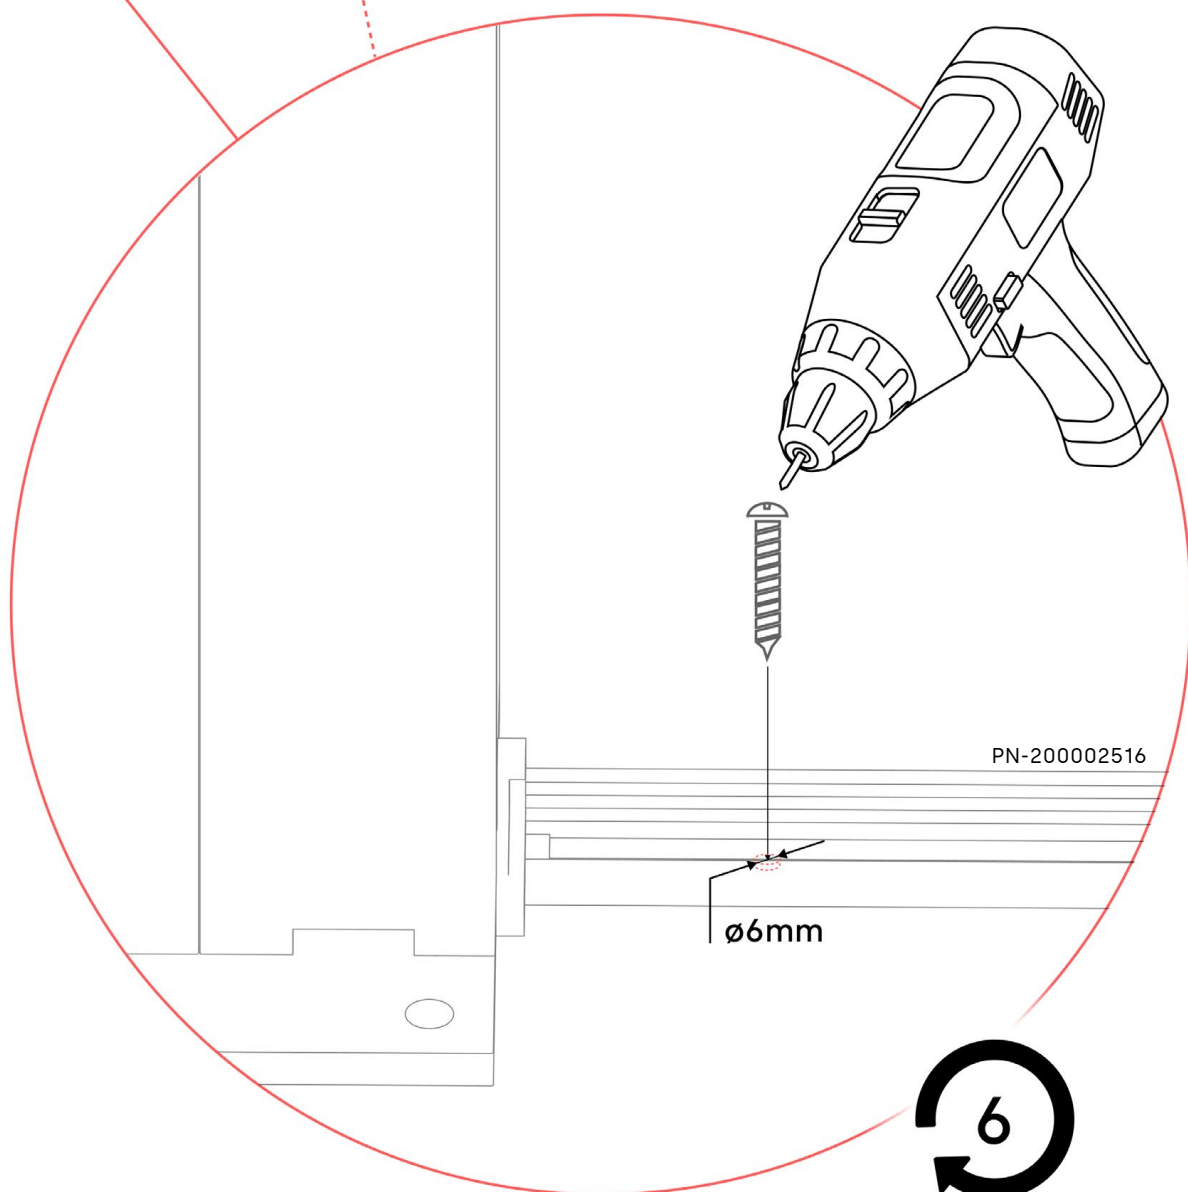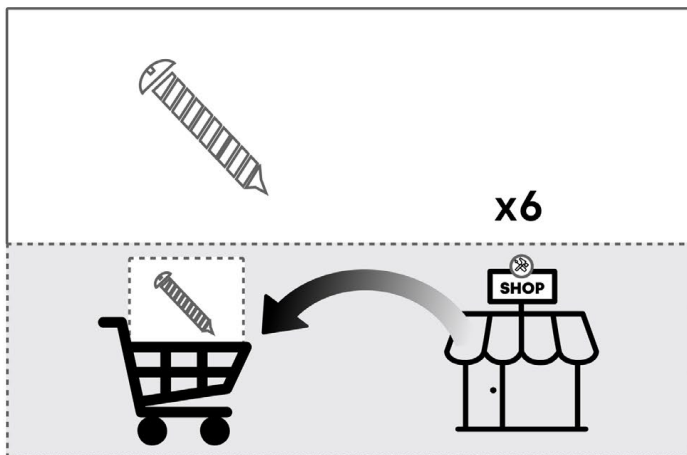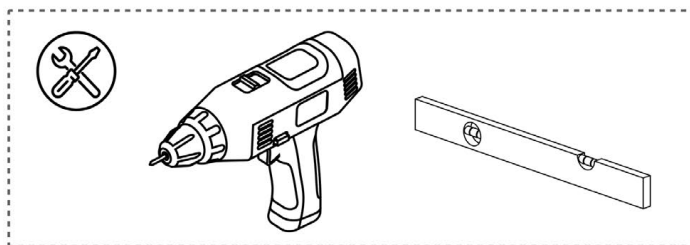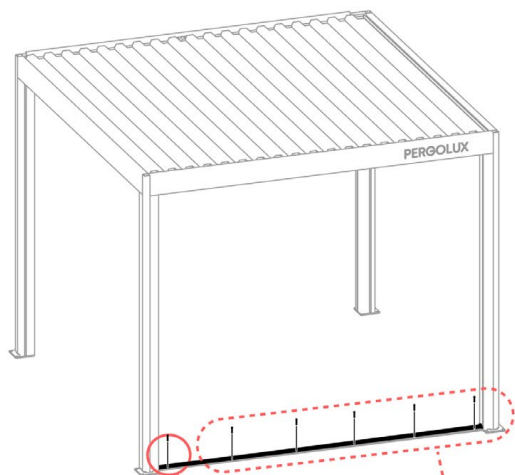


4

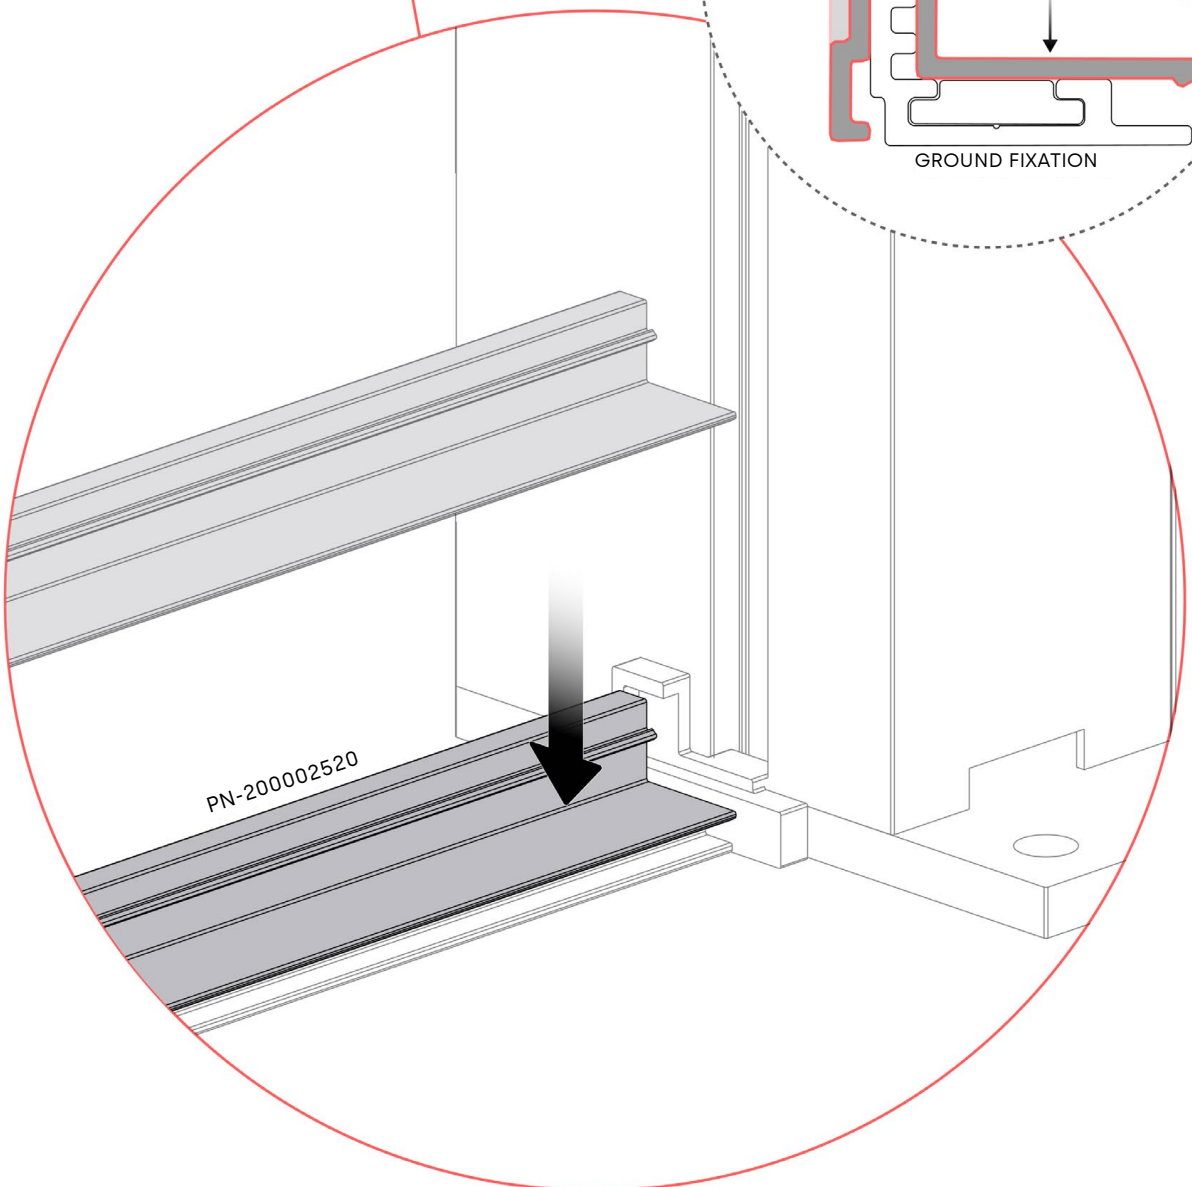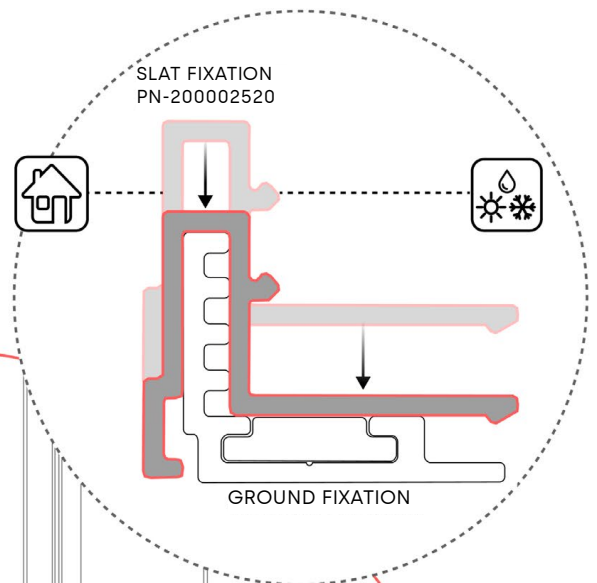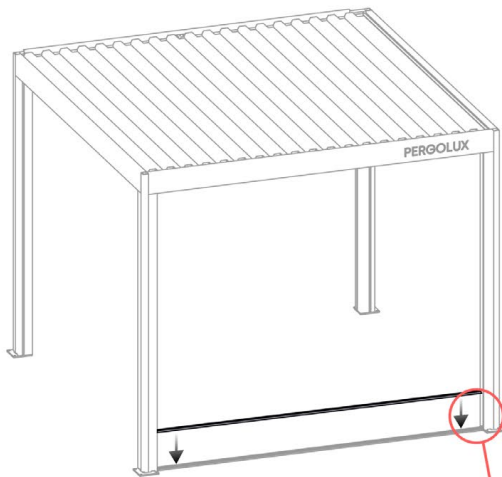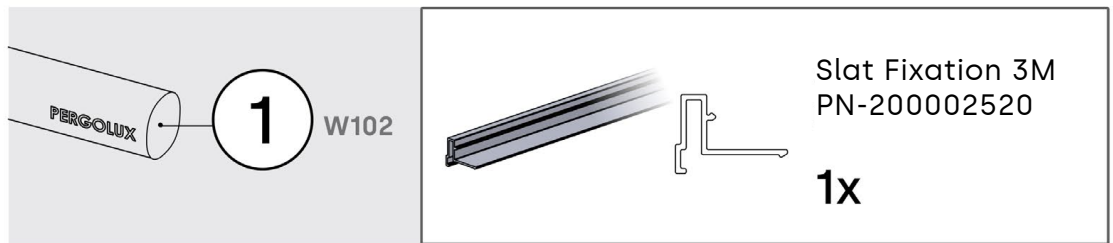

SLAT OVERVIEW


Slat Right
PN-200002509

1x

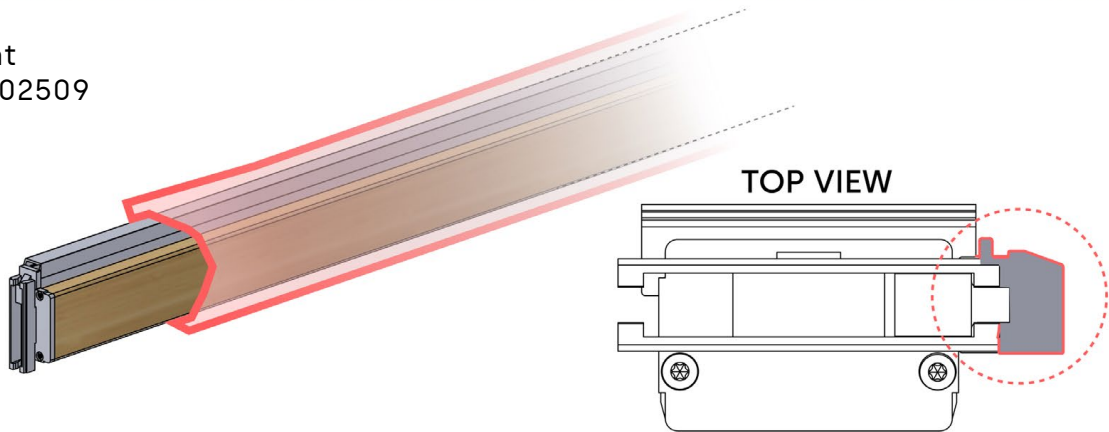


Slat Left
PN-200002508

1x





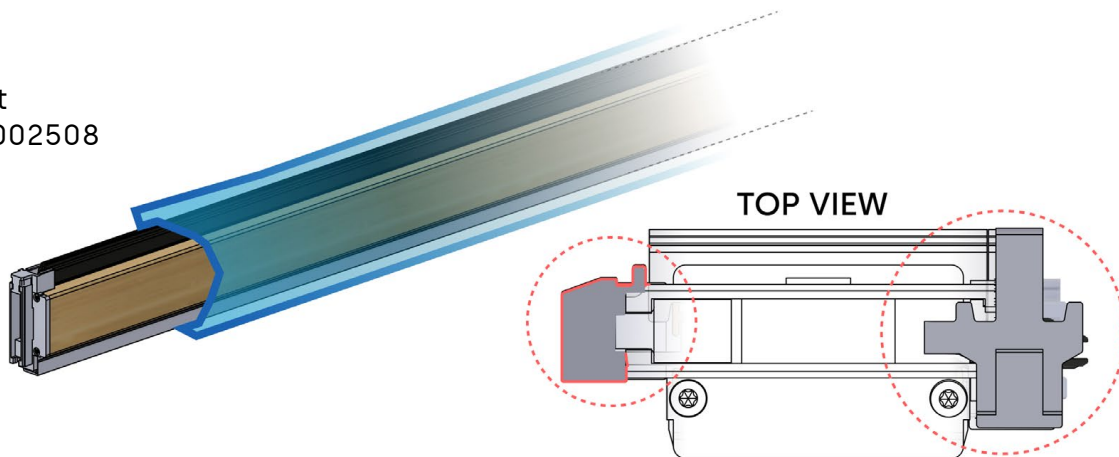


Slat Center
PN-200002507




44x

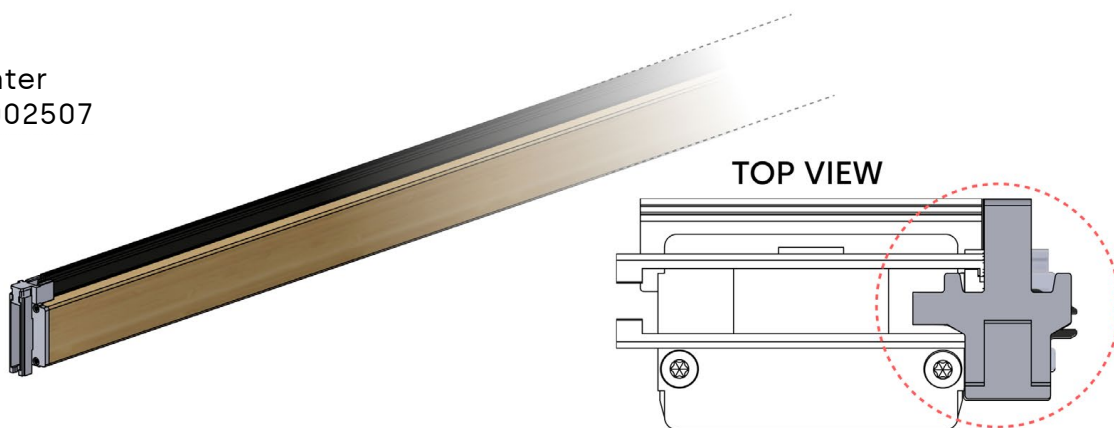



5

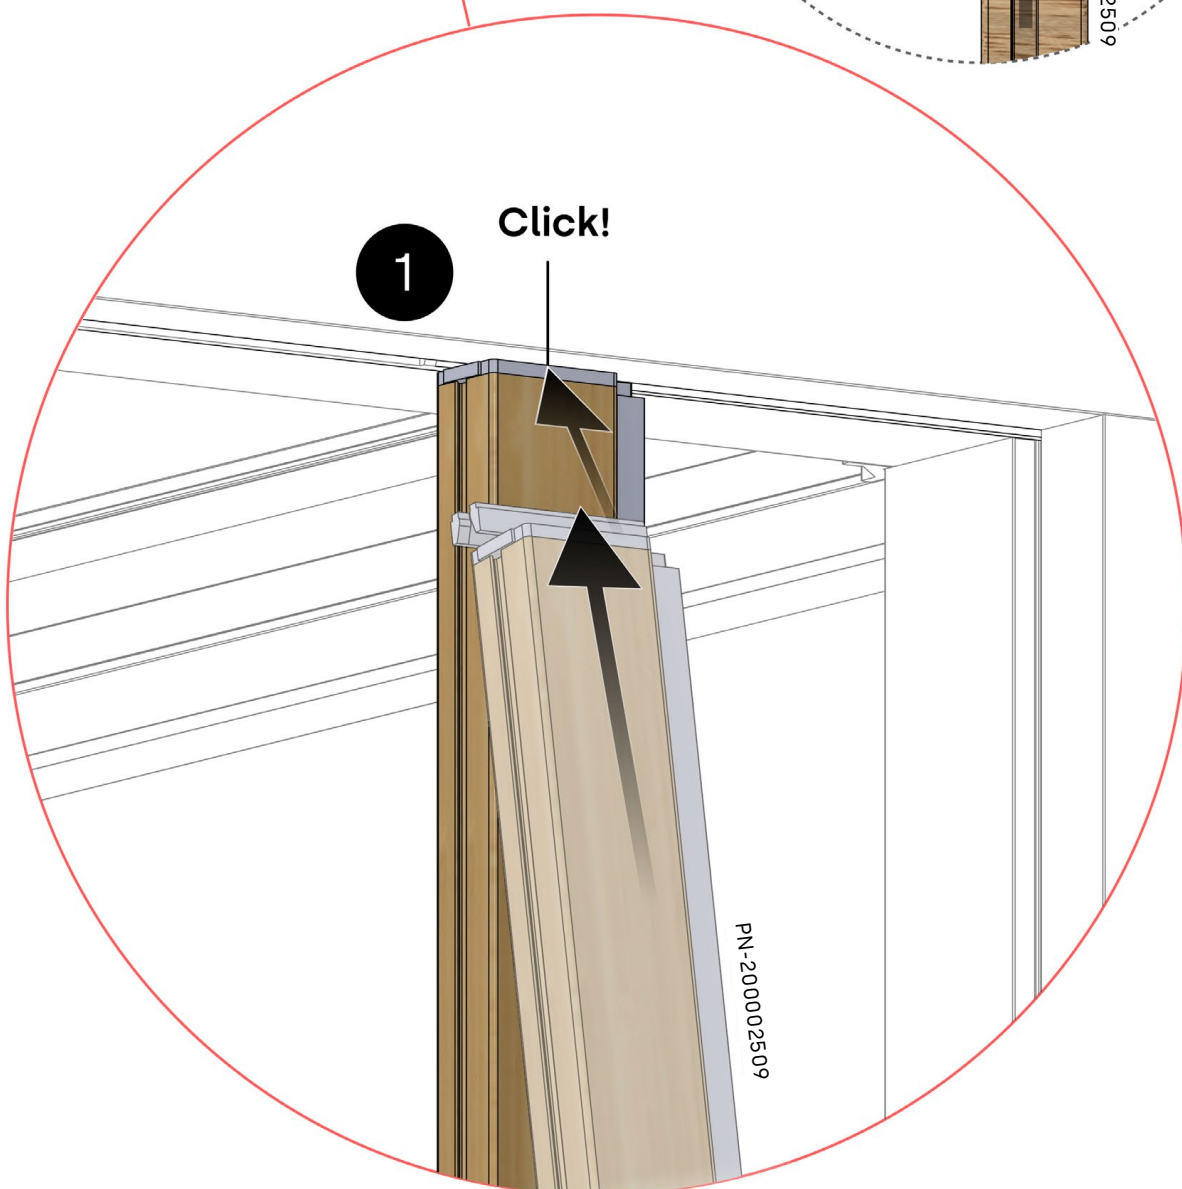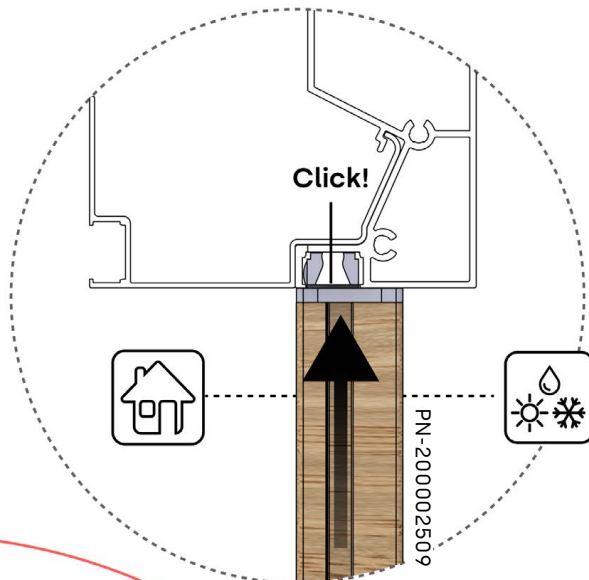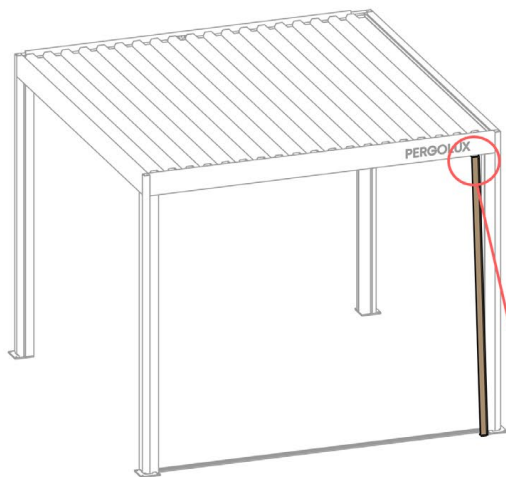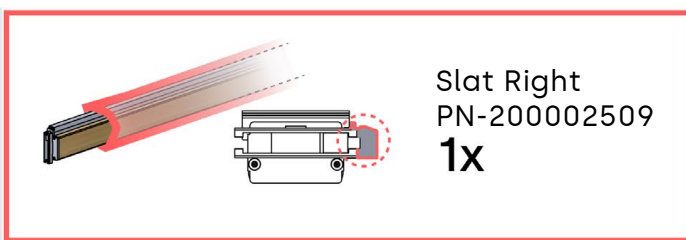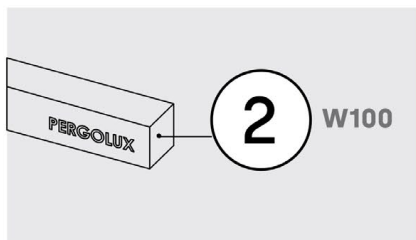




6

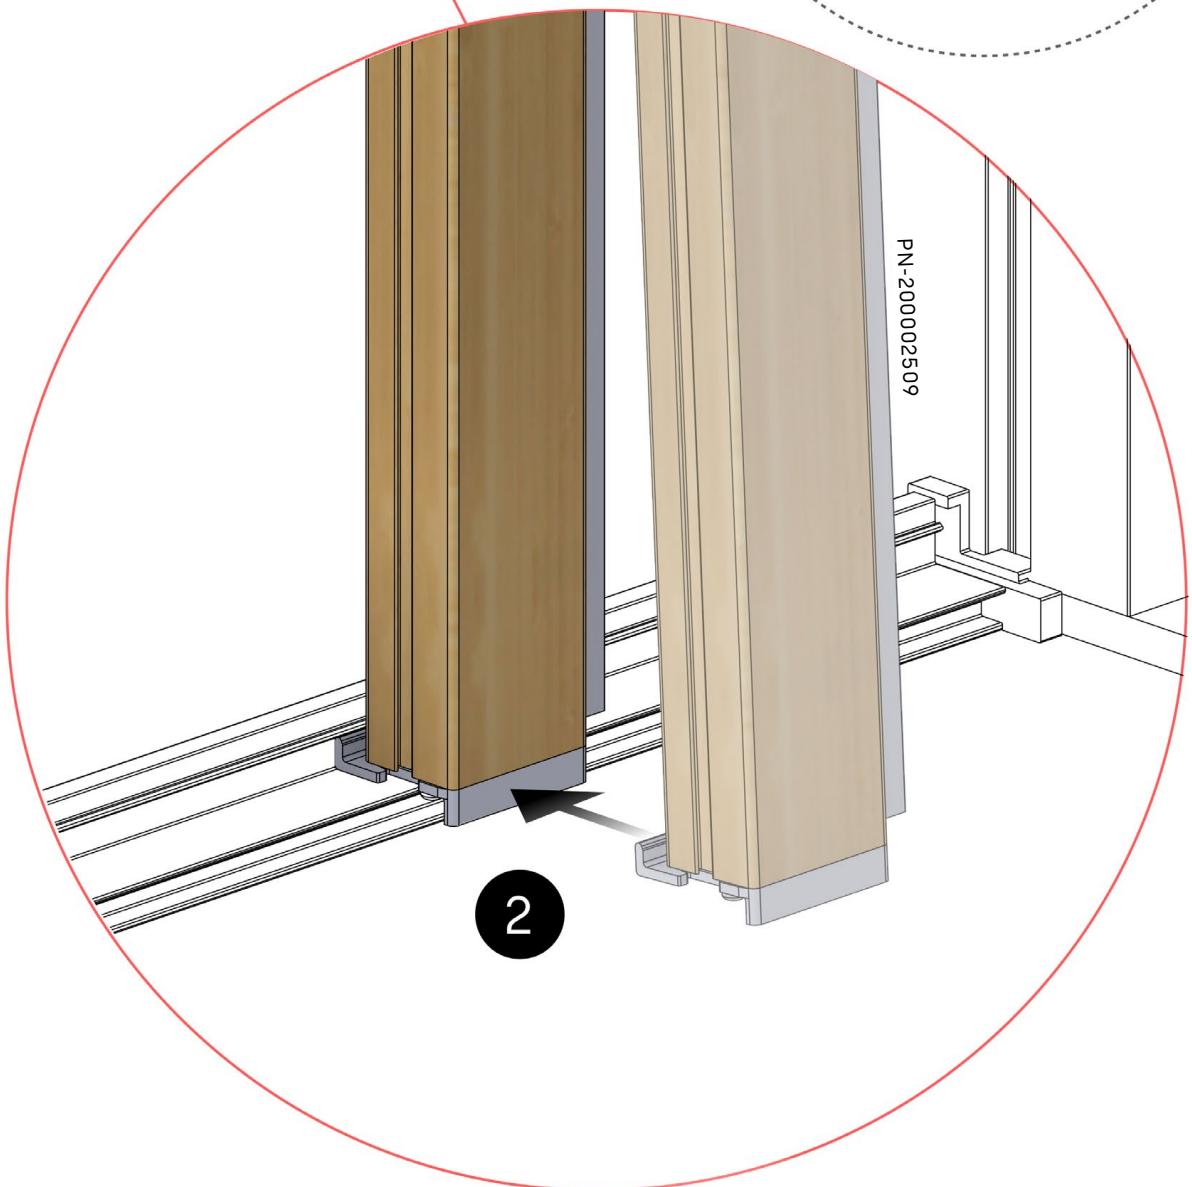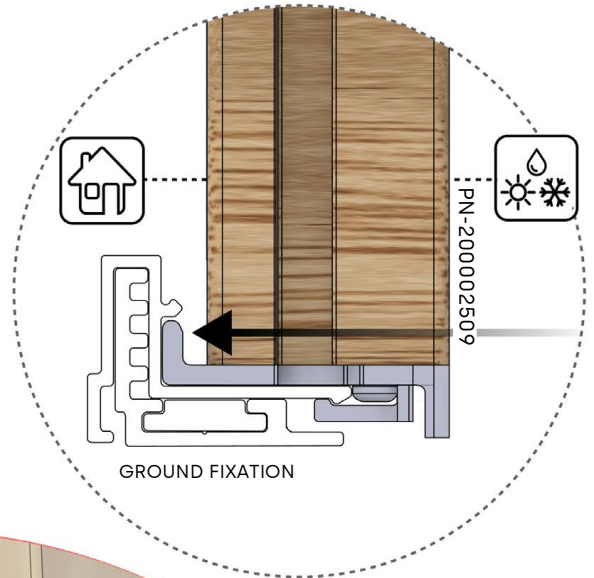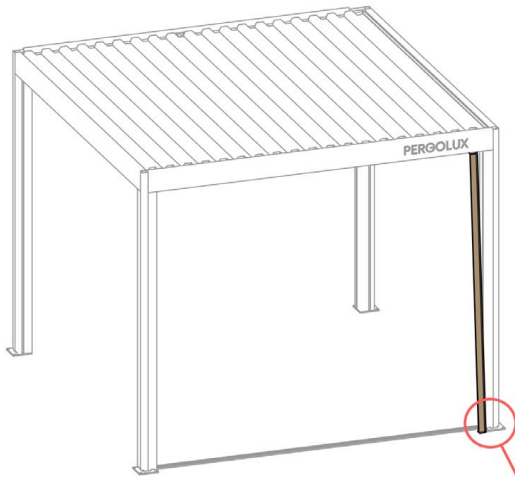






7

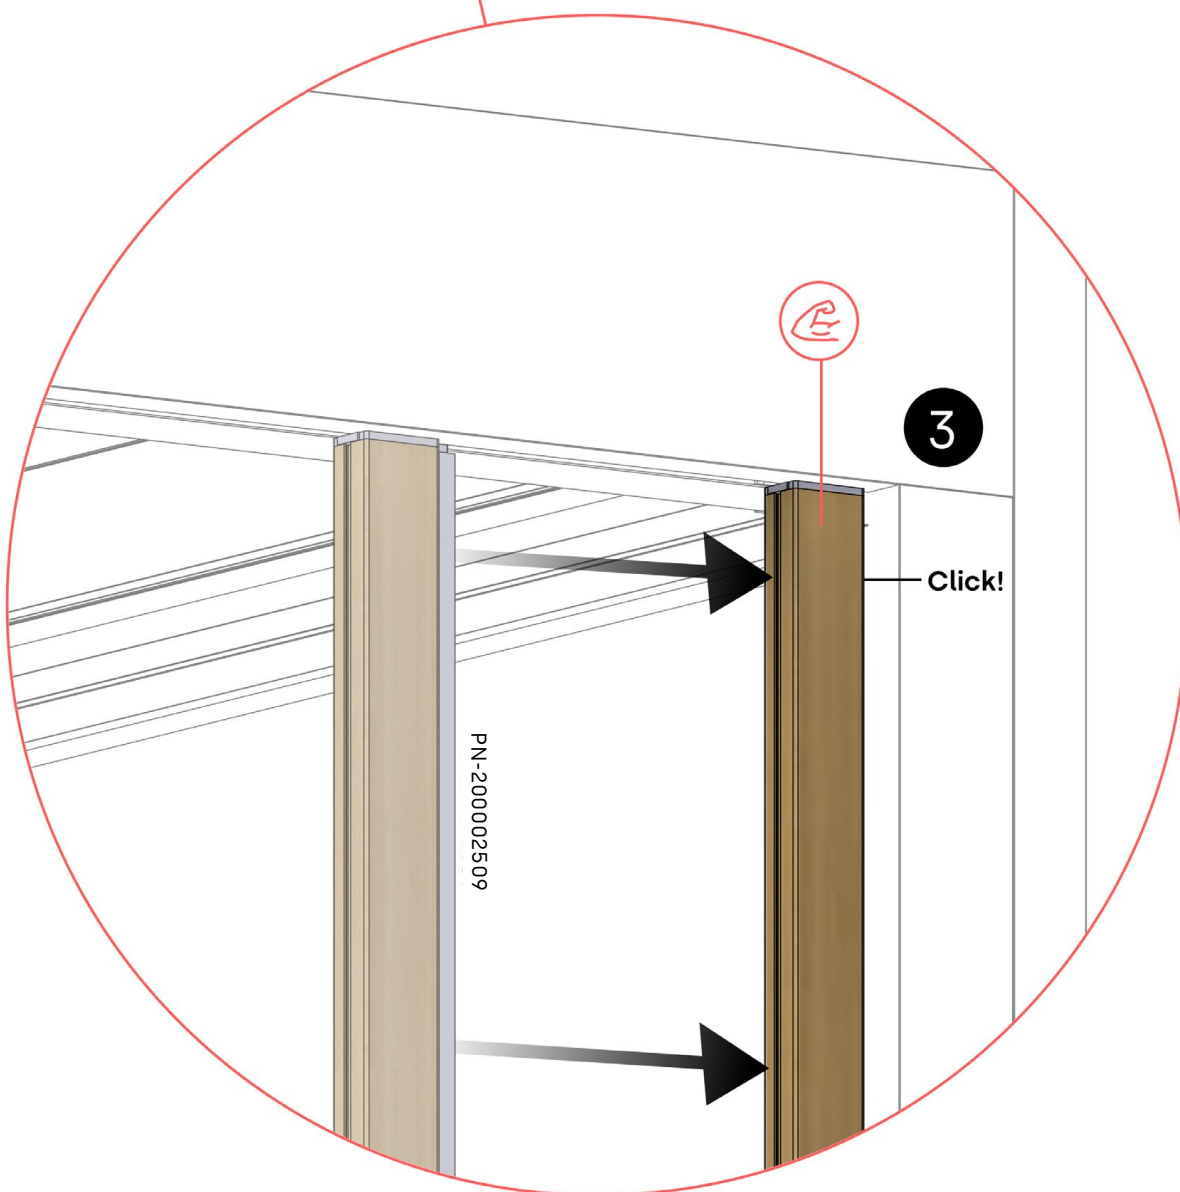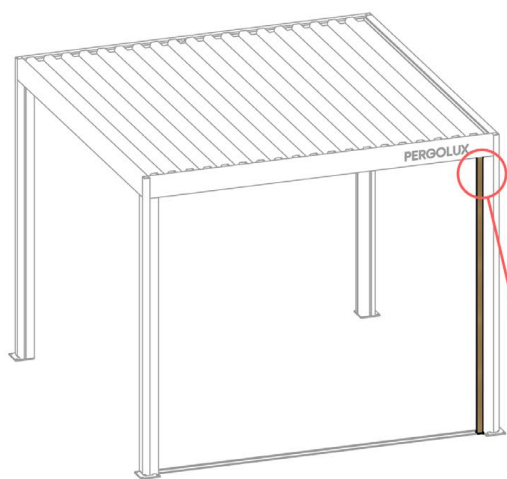




8

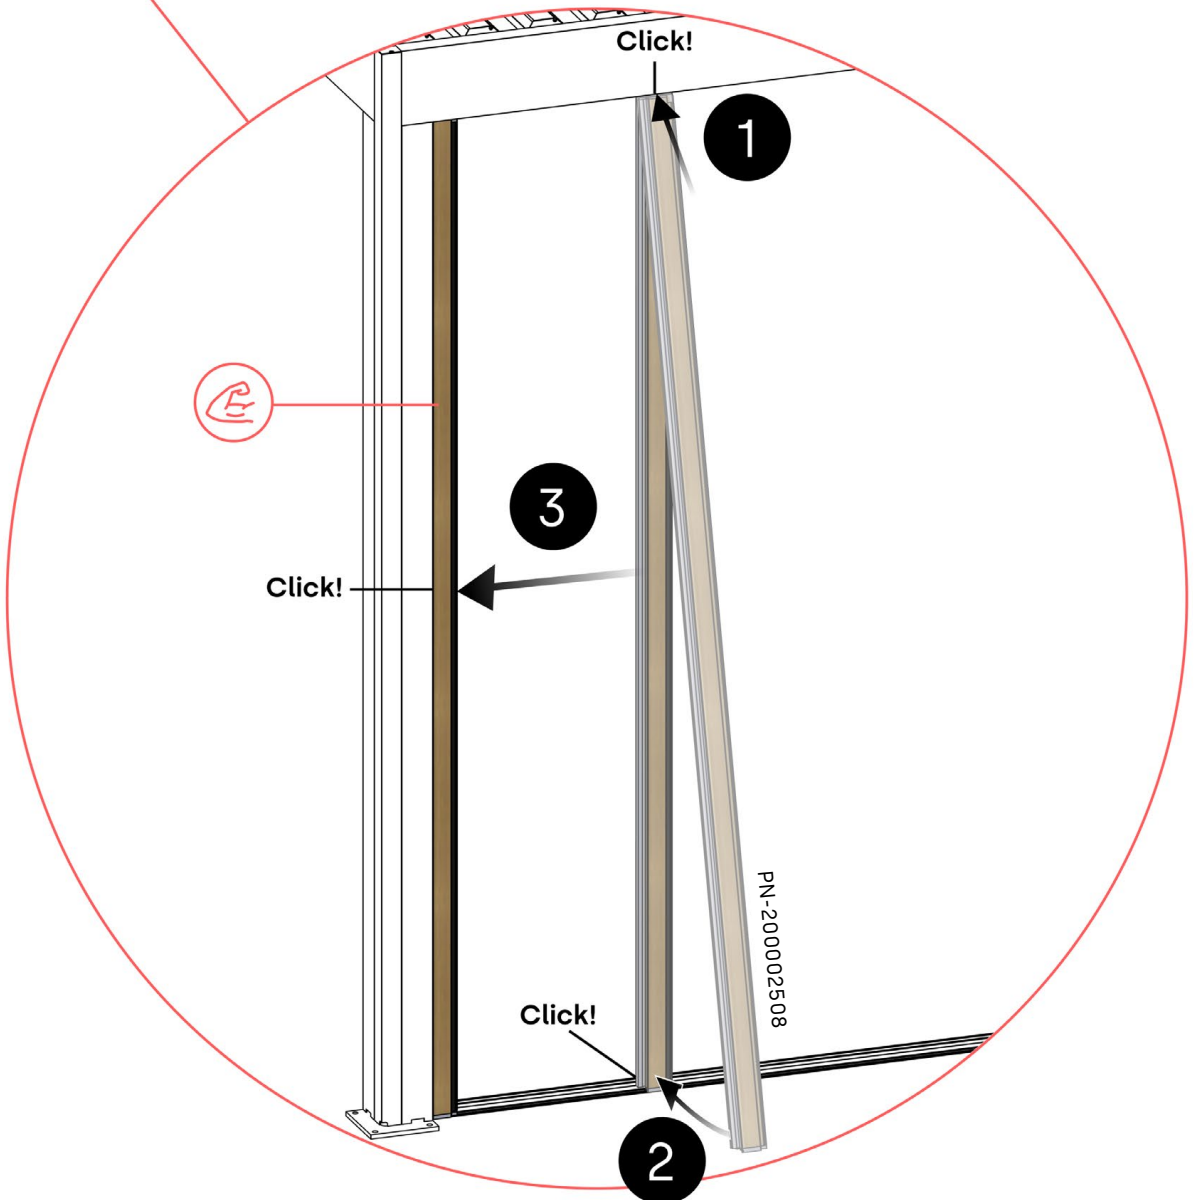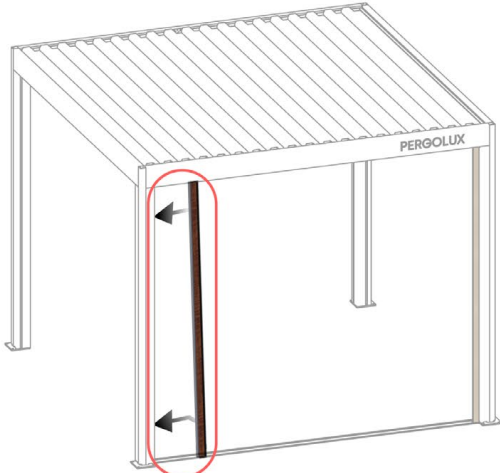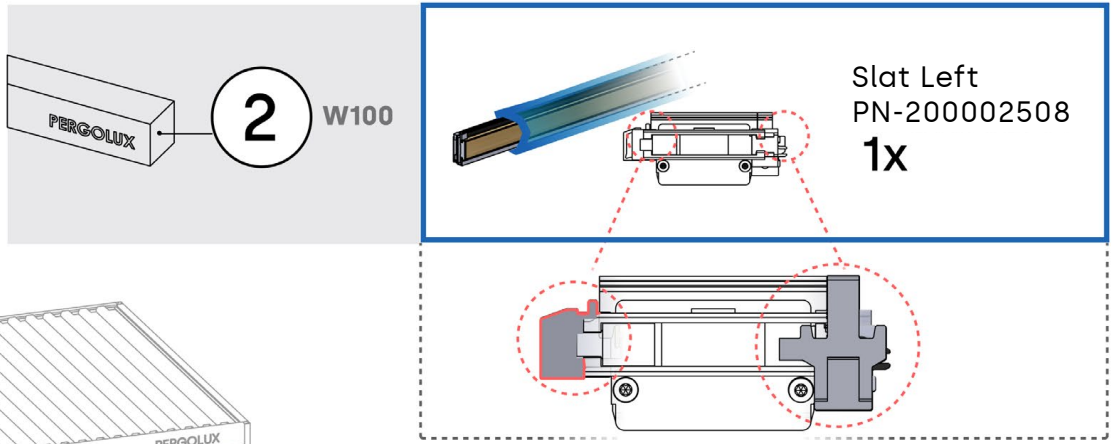



9

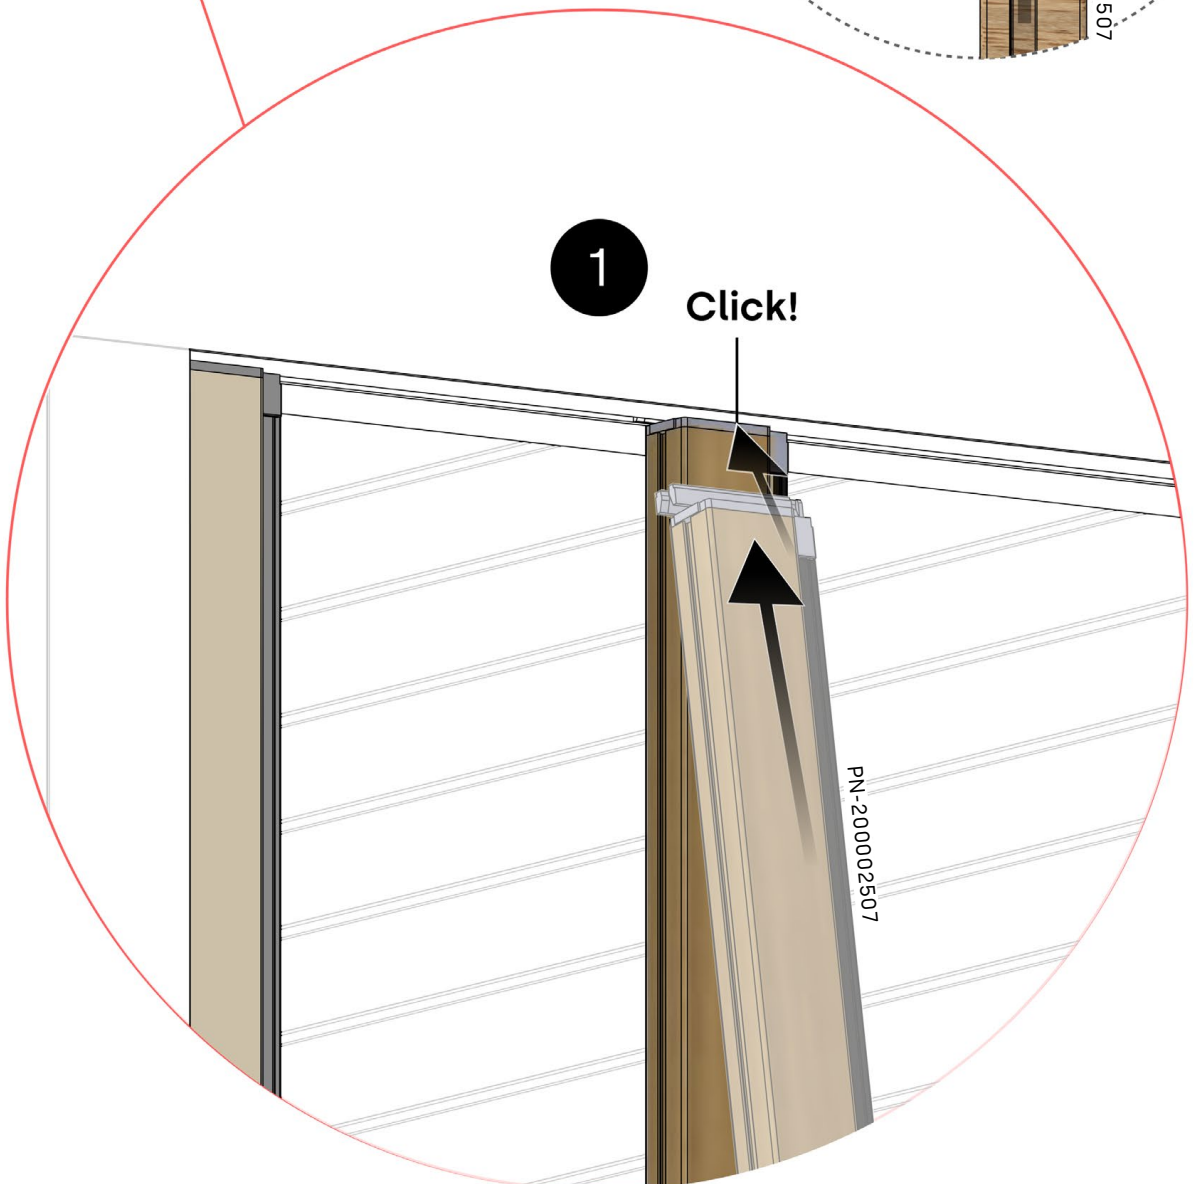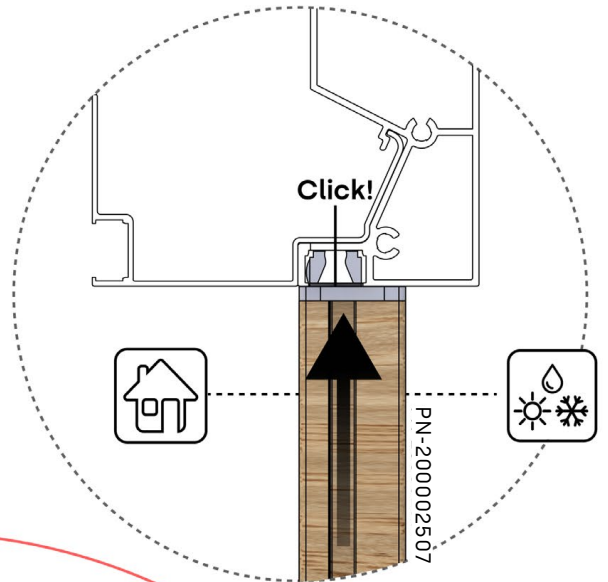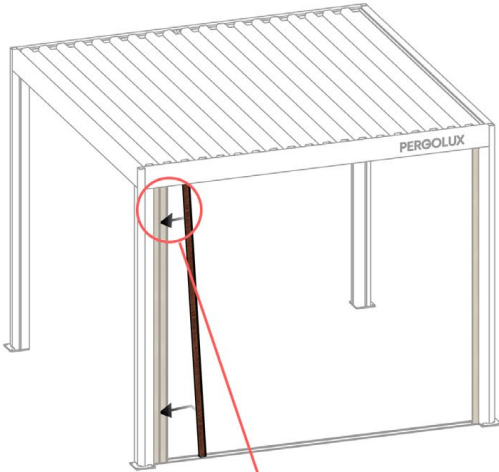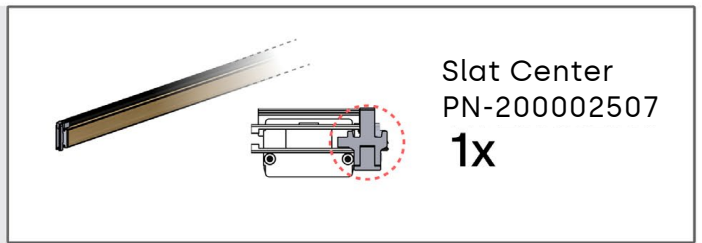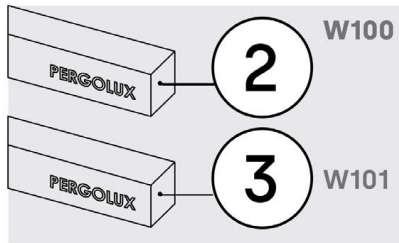




10

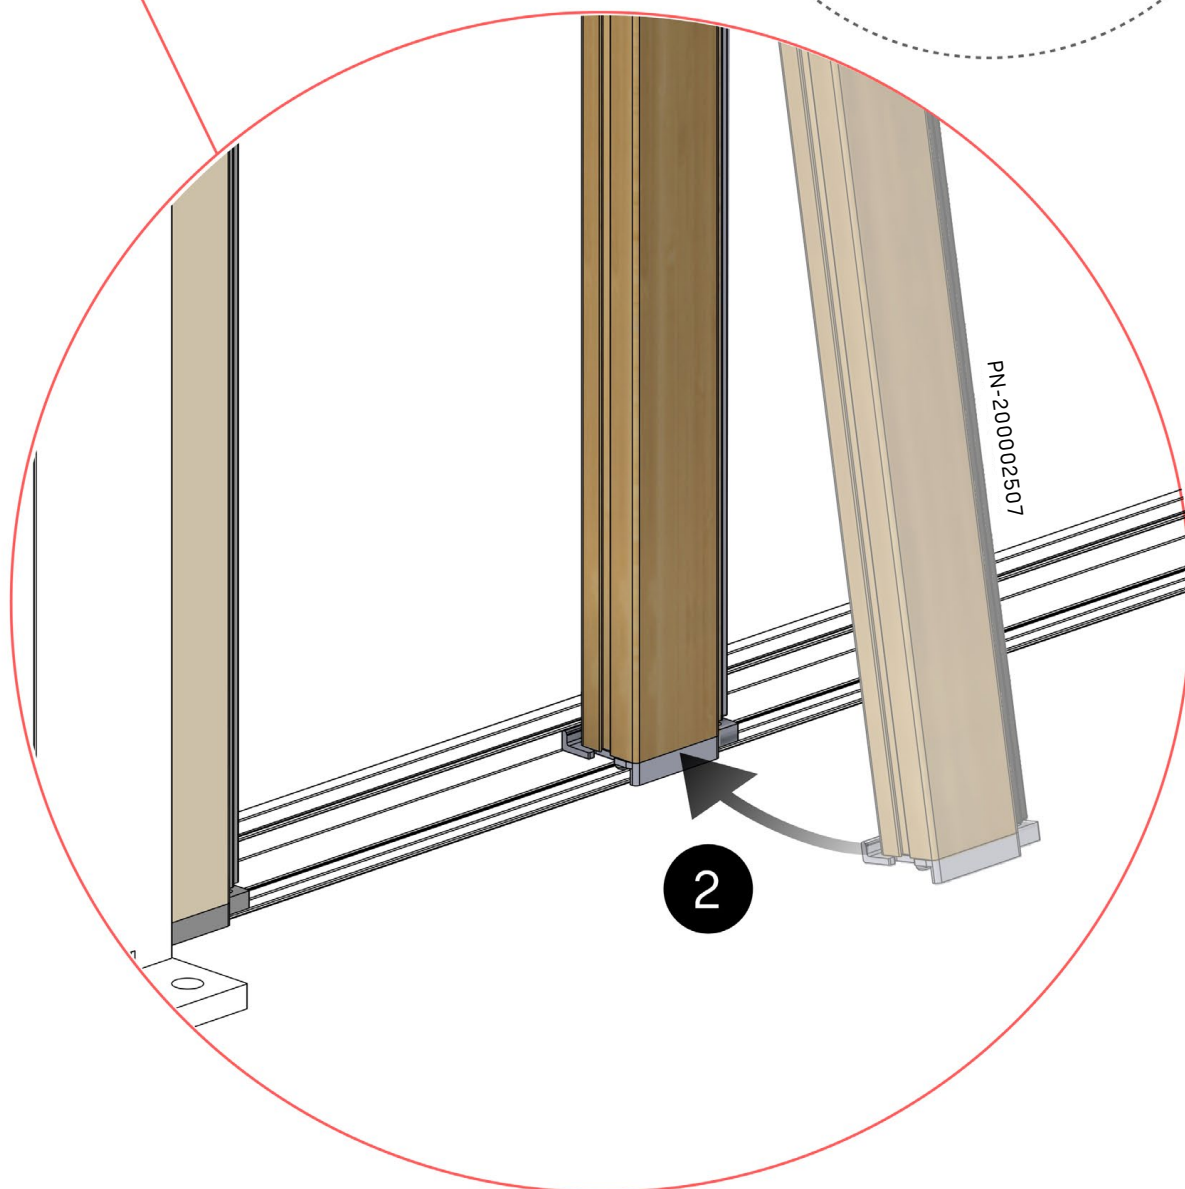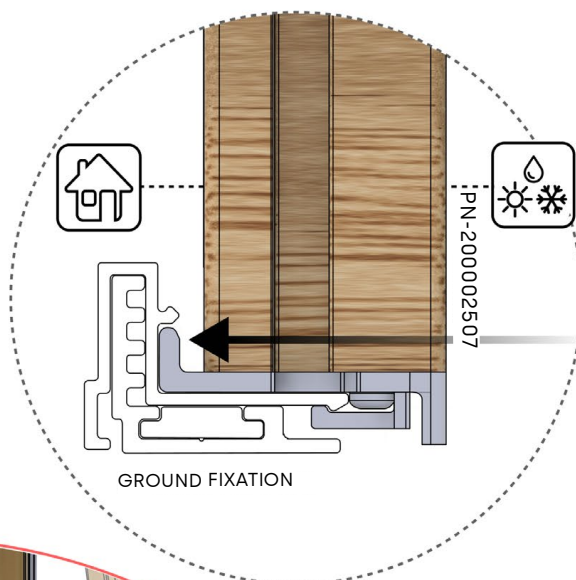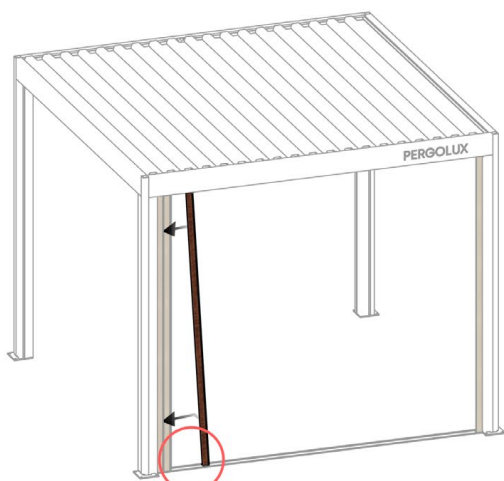


11

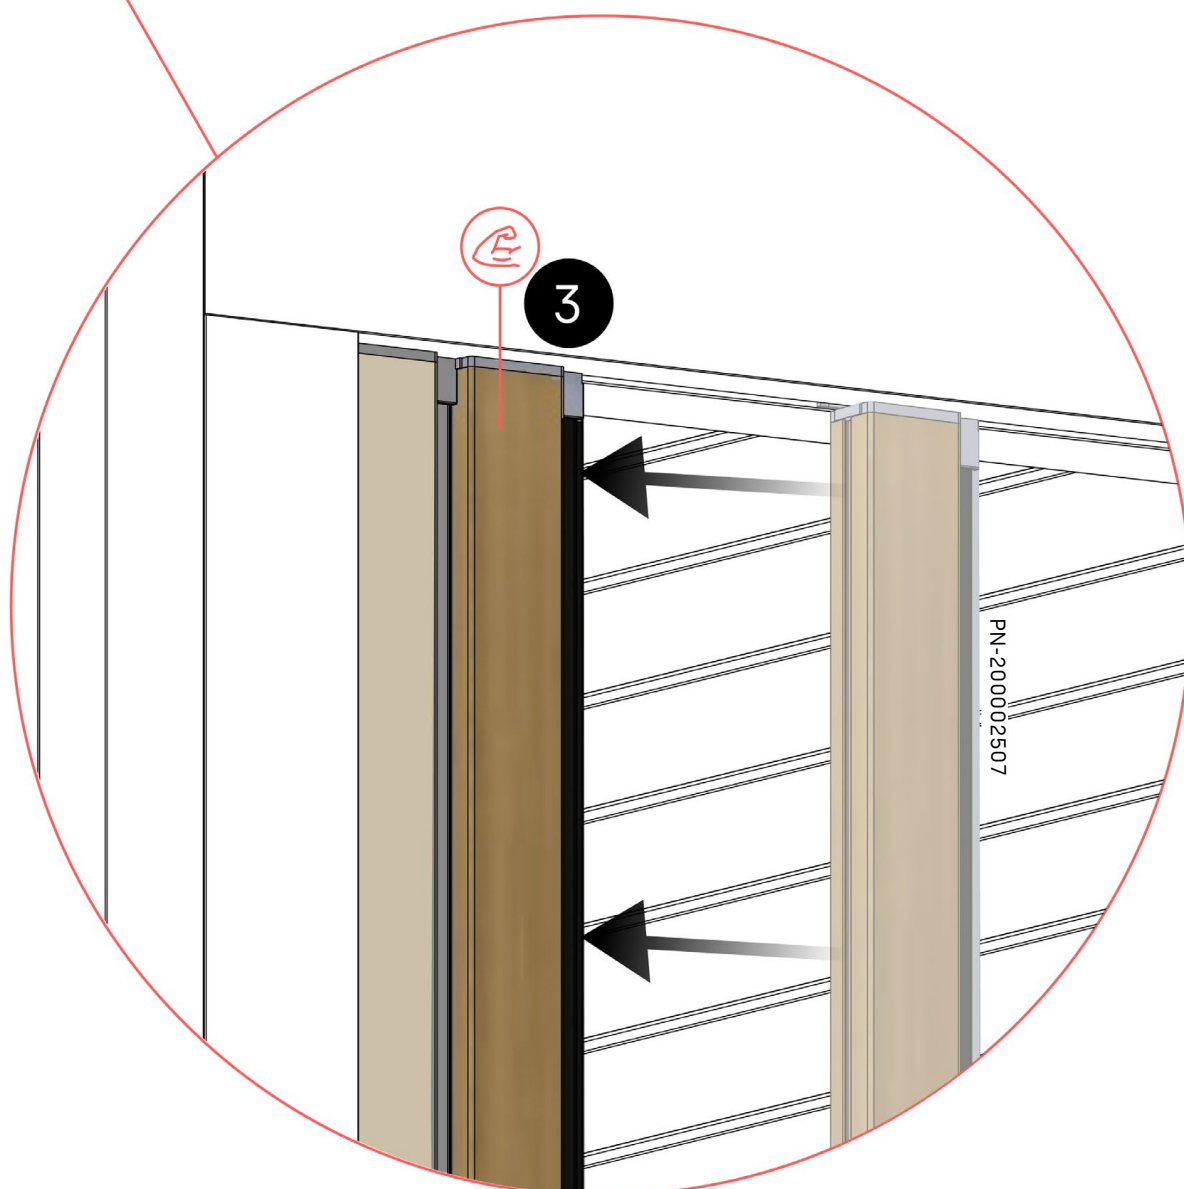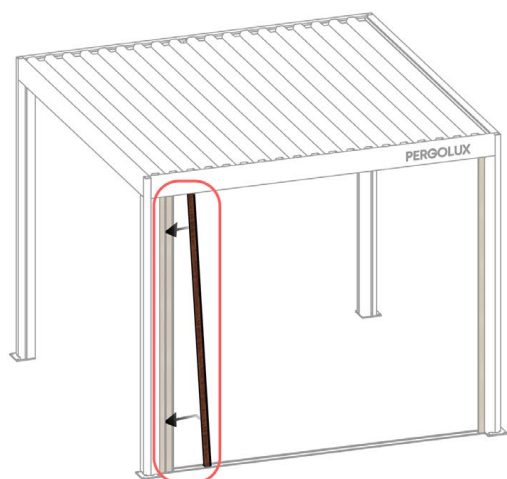







12

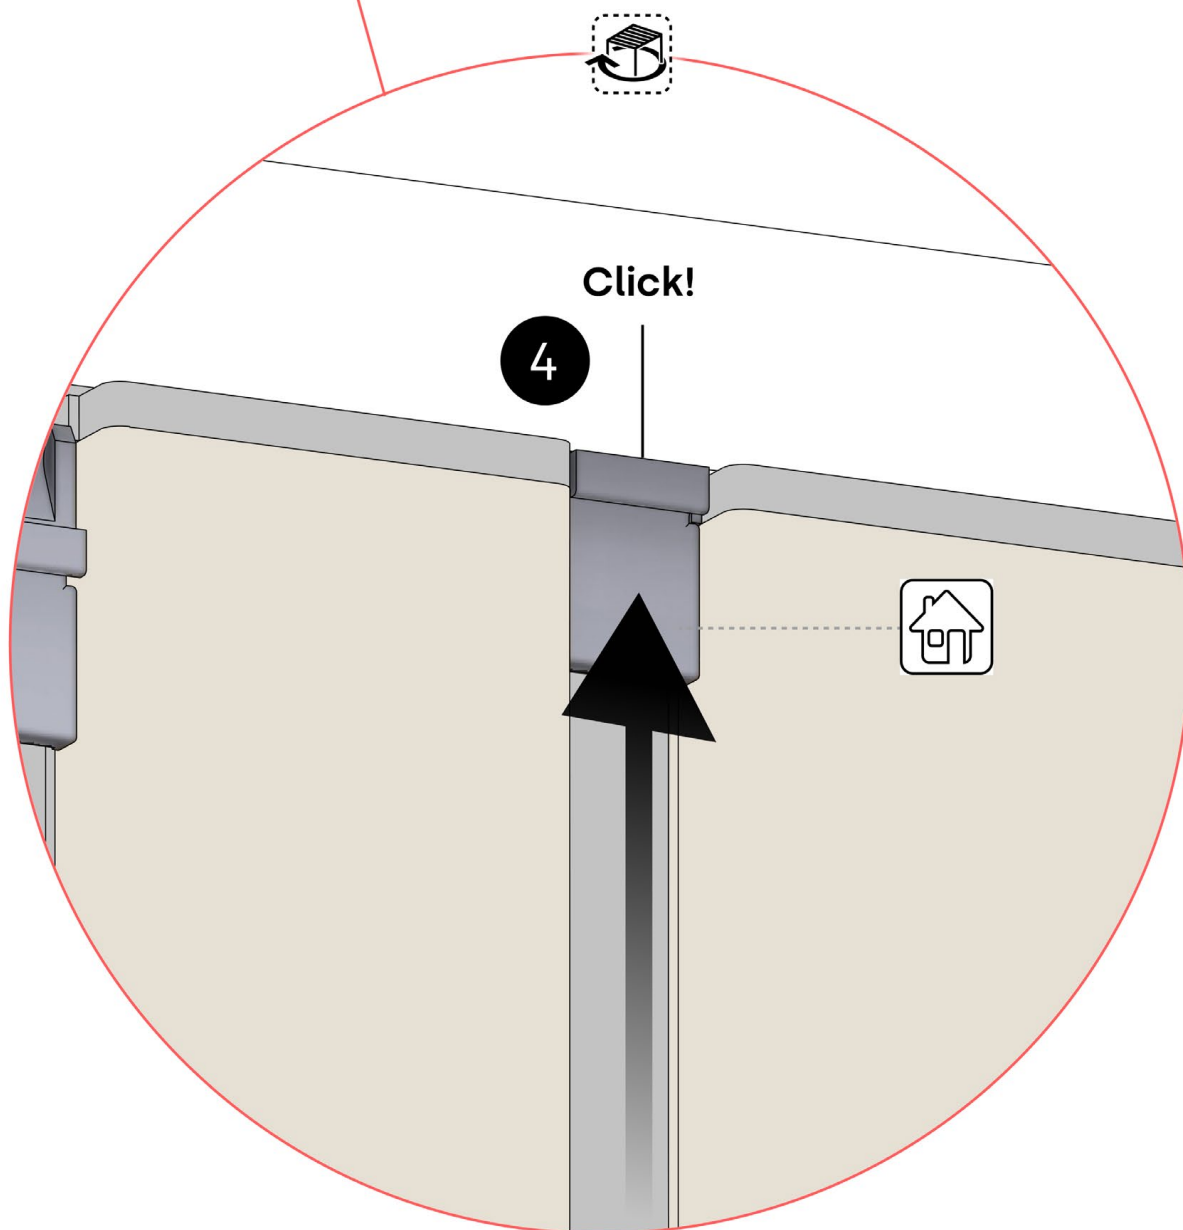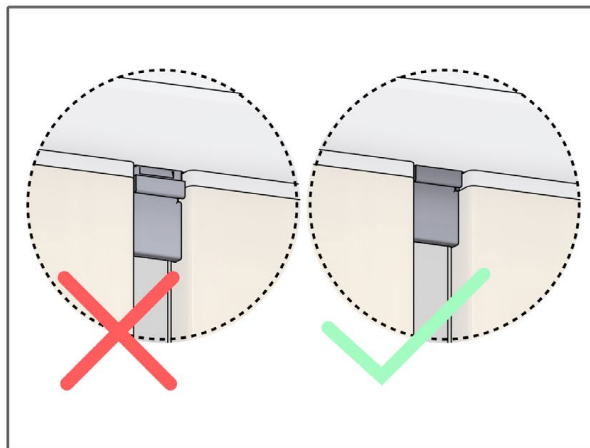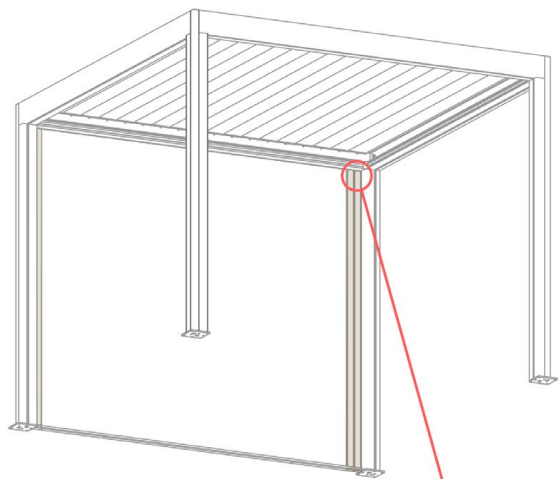


13

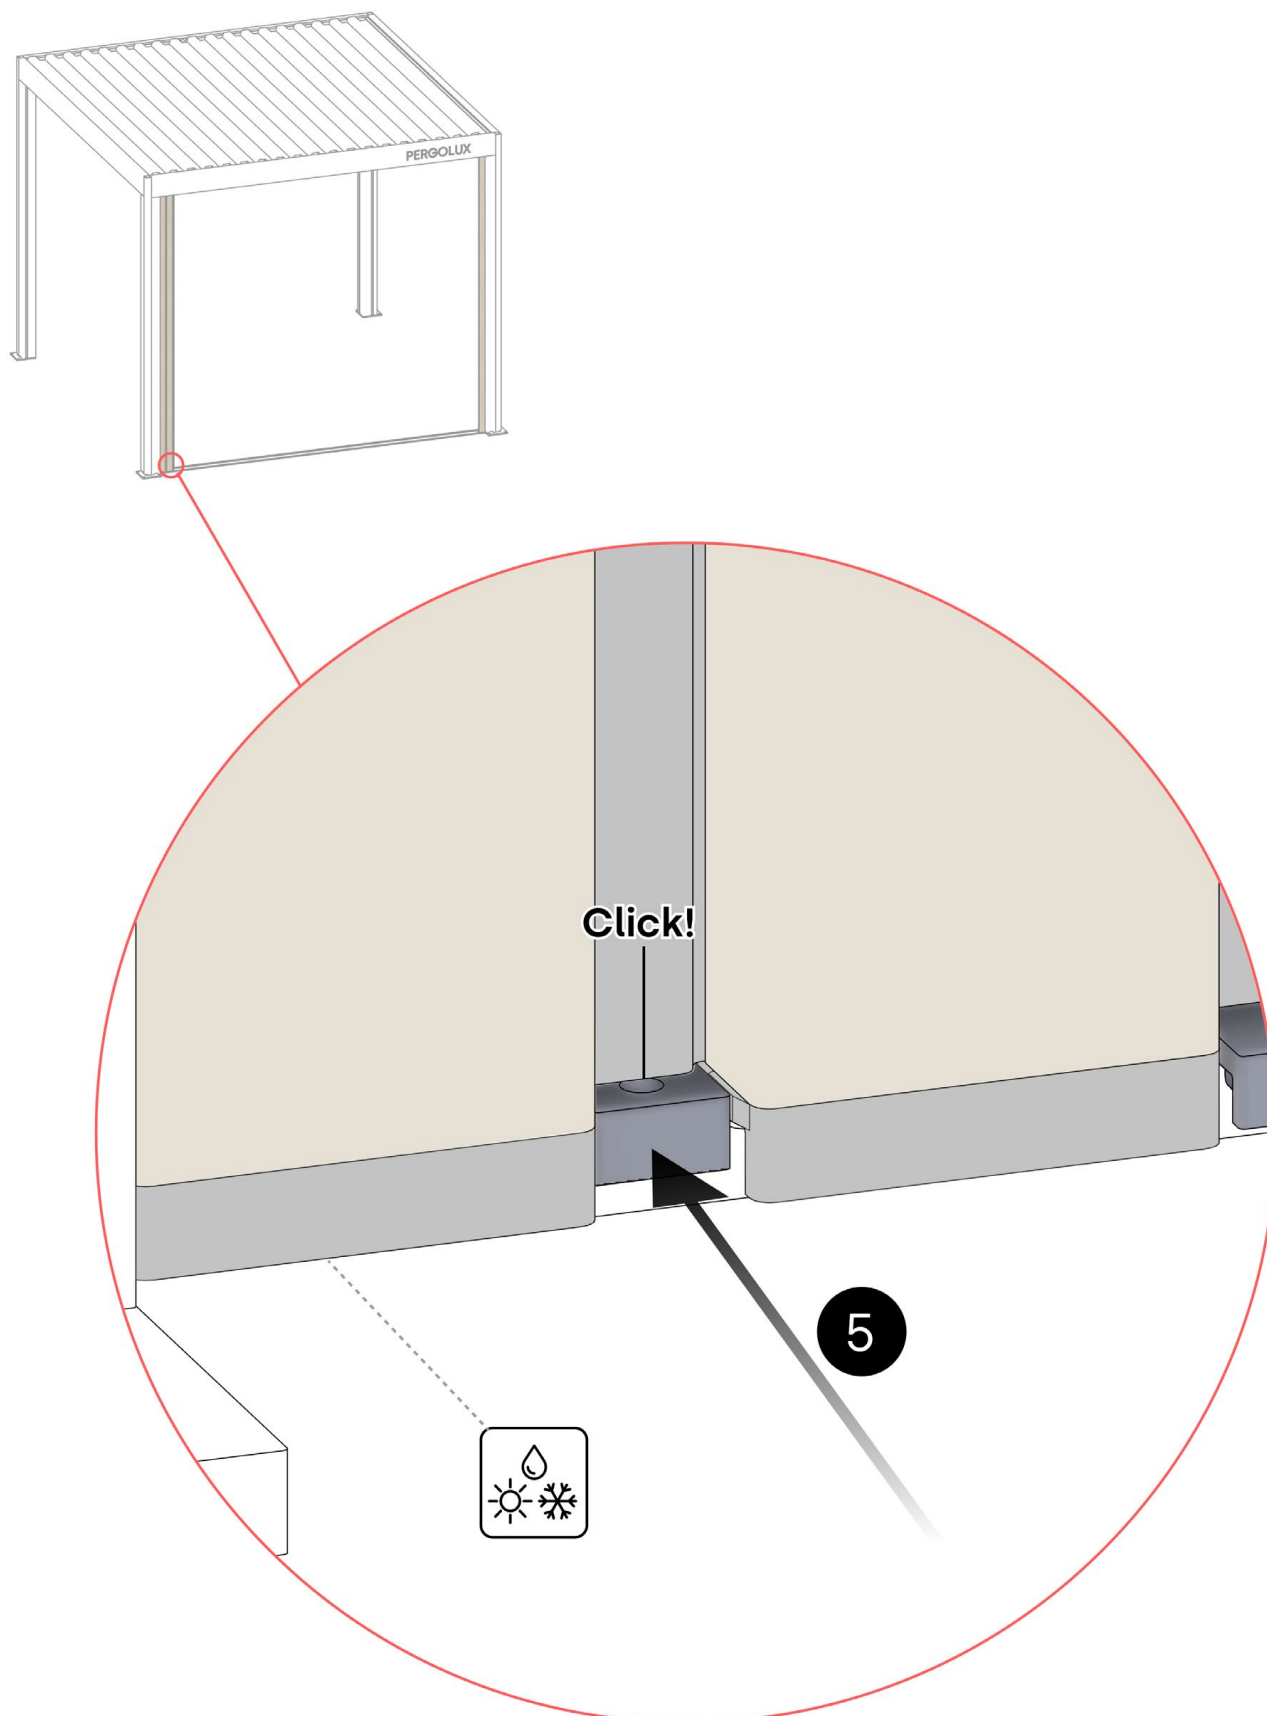


14

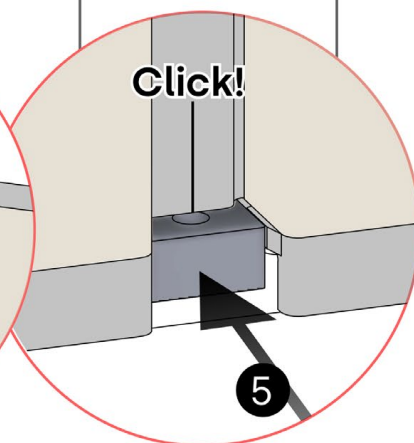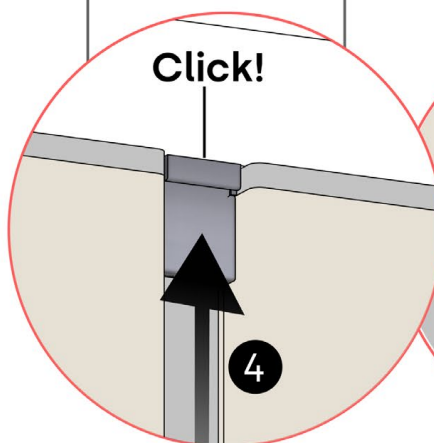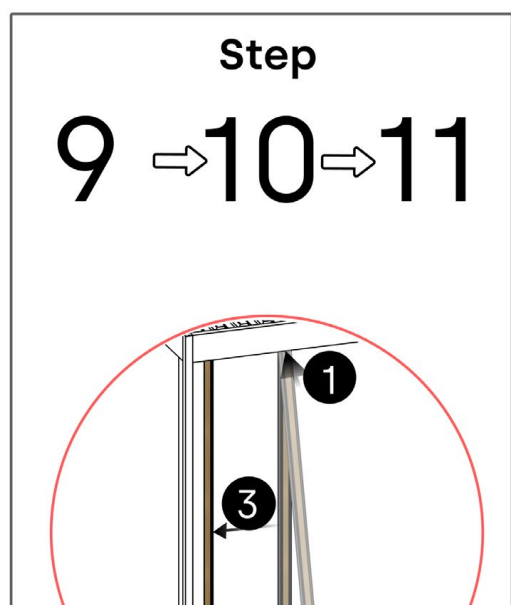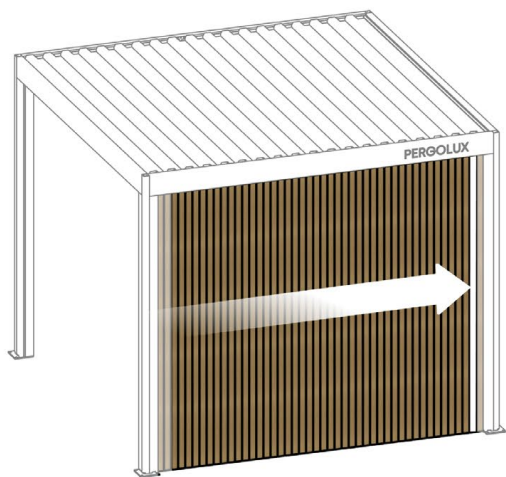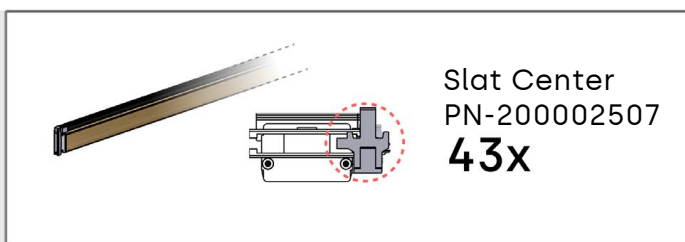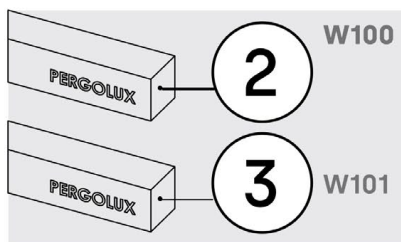




15

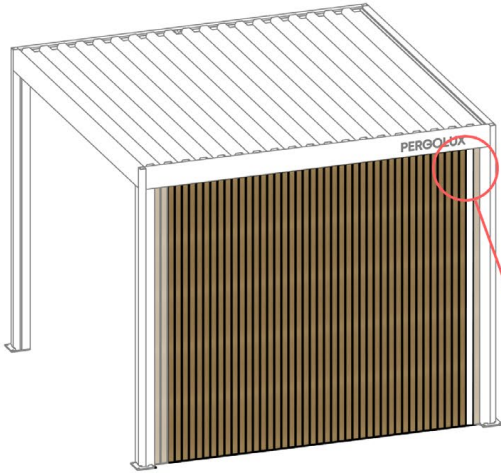

The last step can be a bit tricky, we recommend to press all profiles closely together to avoid leaving any gaps, which could prevent the last profile from fitting in place.

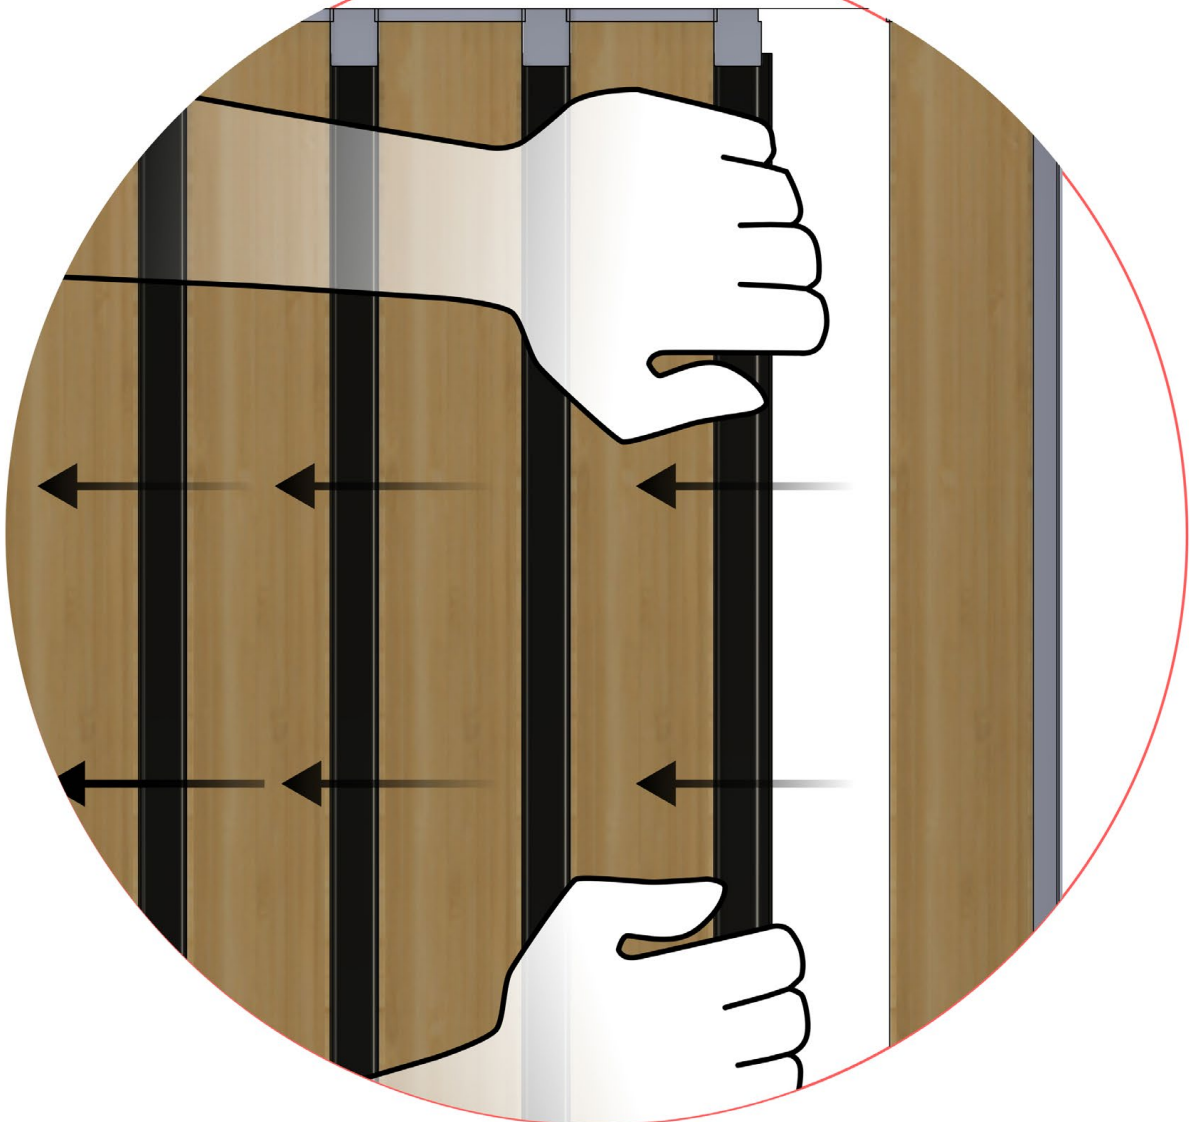




16

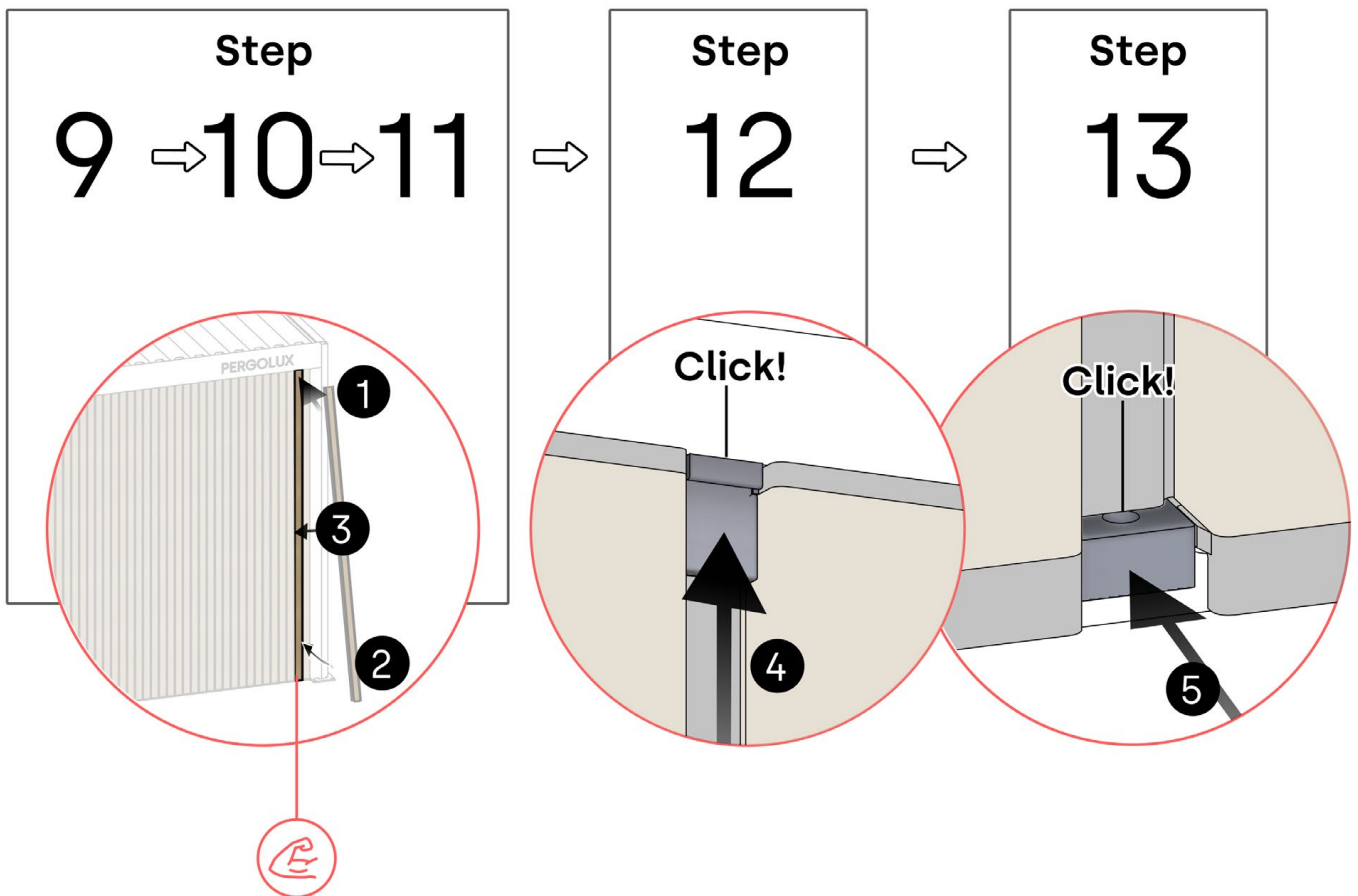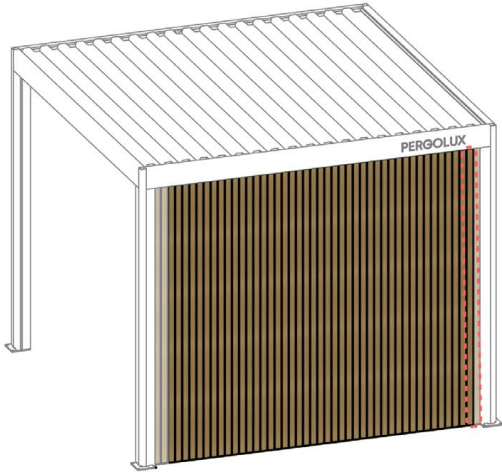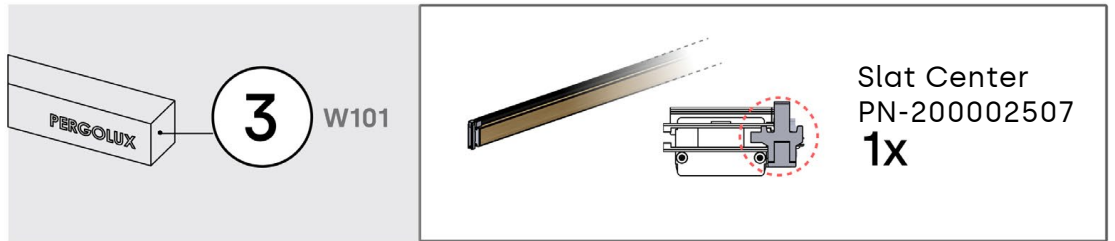






17



Carefully adjust the slats by hand to ensure the gap at the end is even, if necessary.

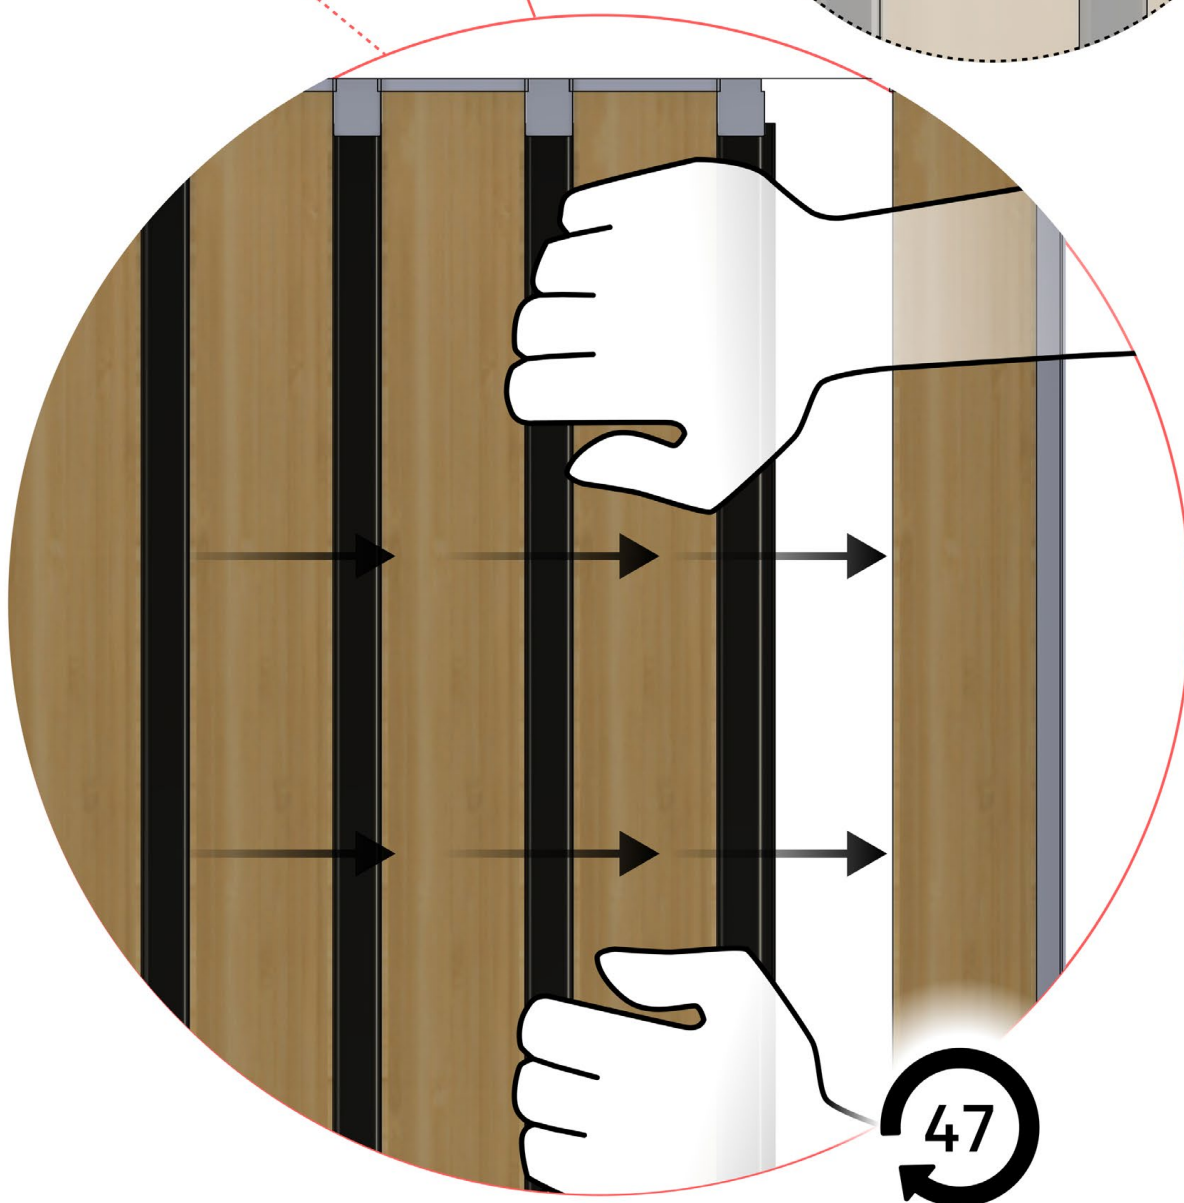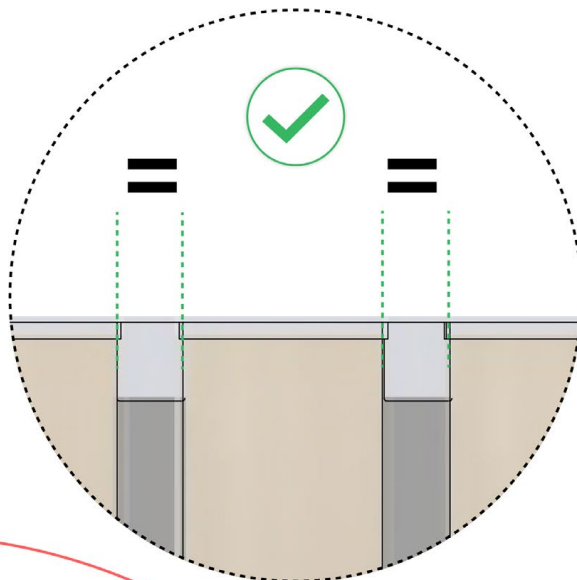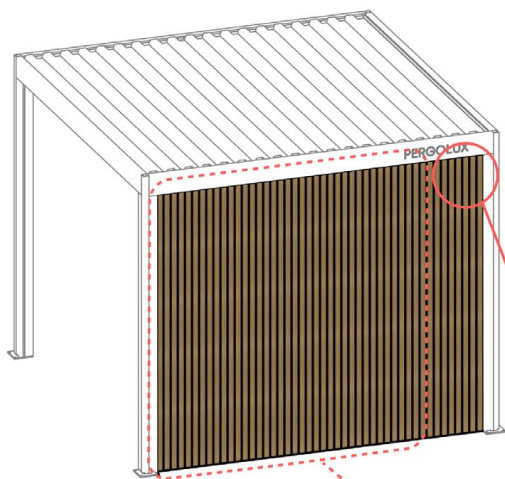


18

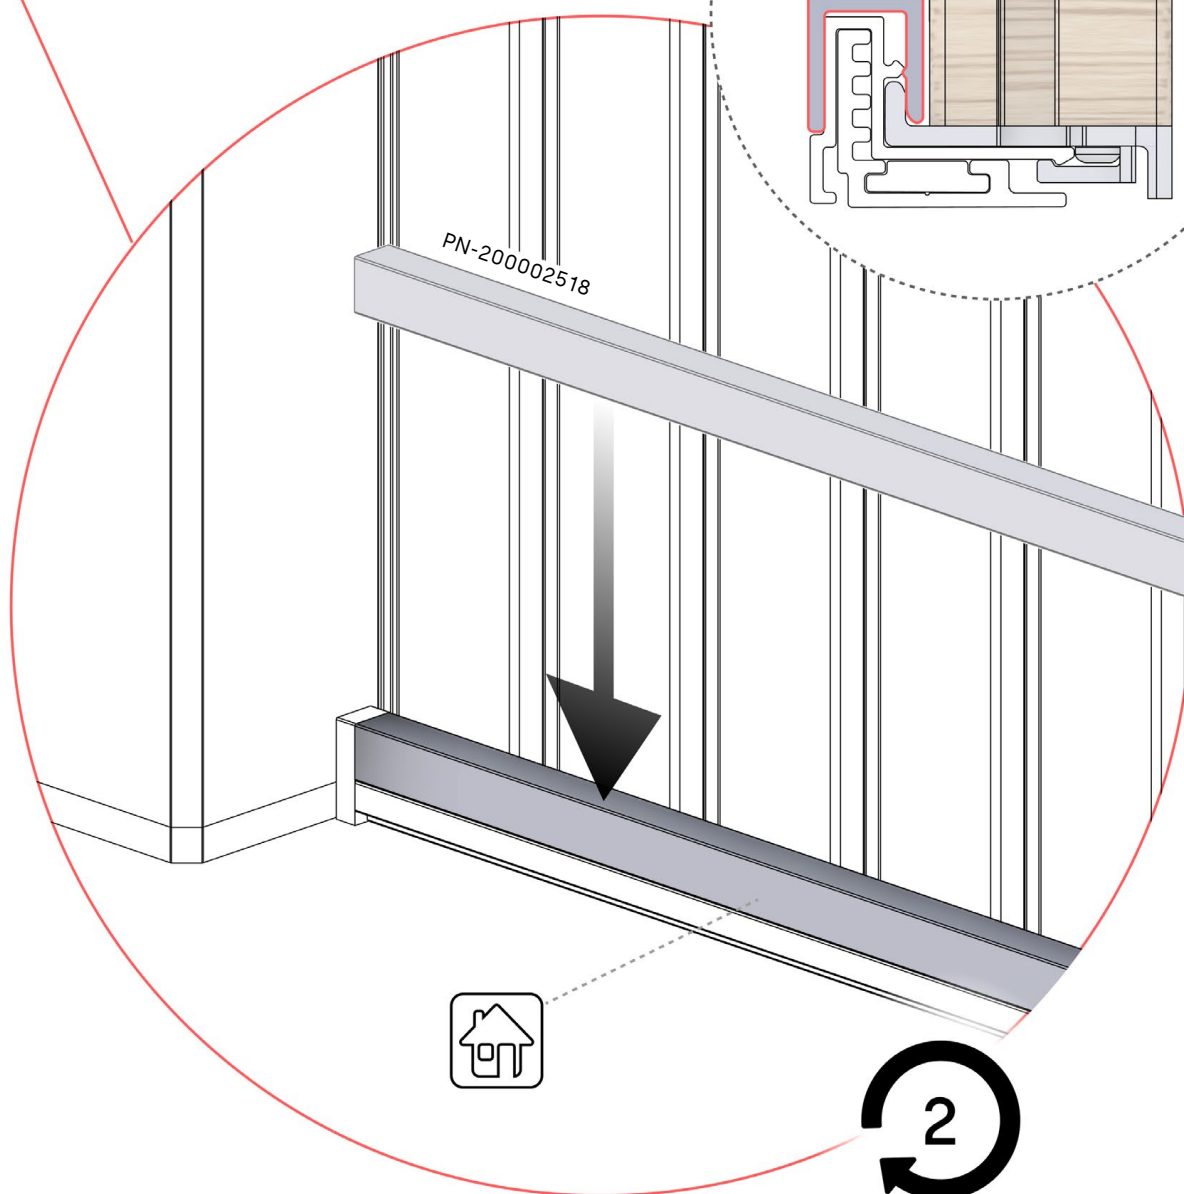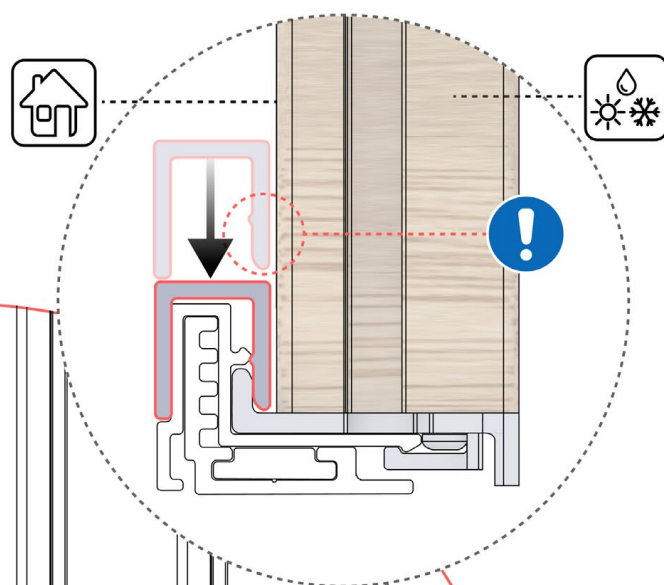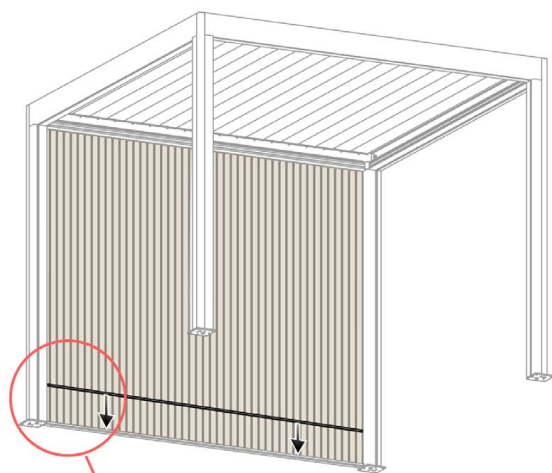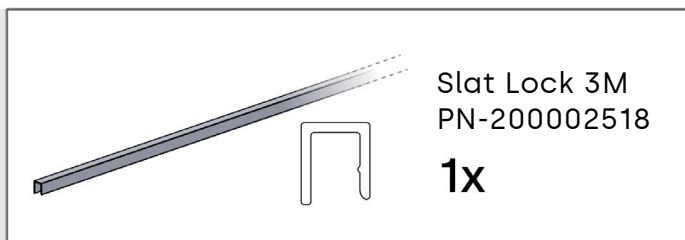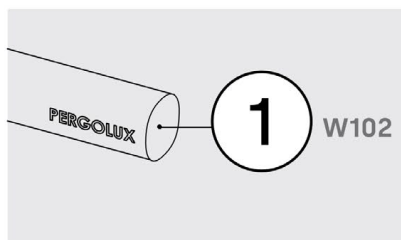

PERGOLUX | SLAT WALL

3 M / 10'

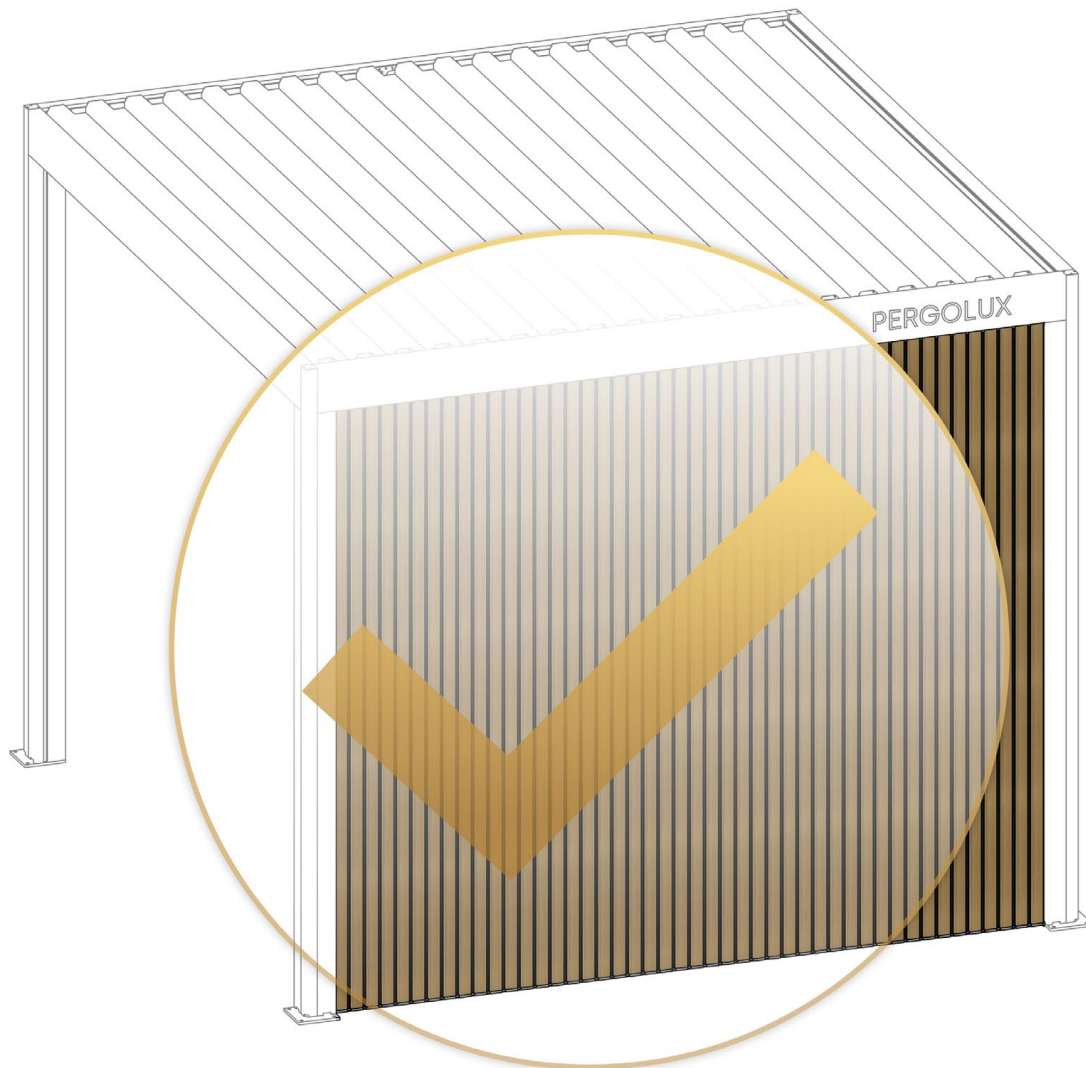

PERGOLUX