


WOODLINE

SLAT WALL

3 M / 10'

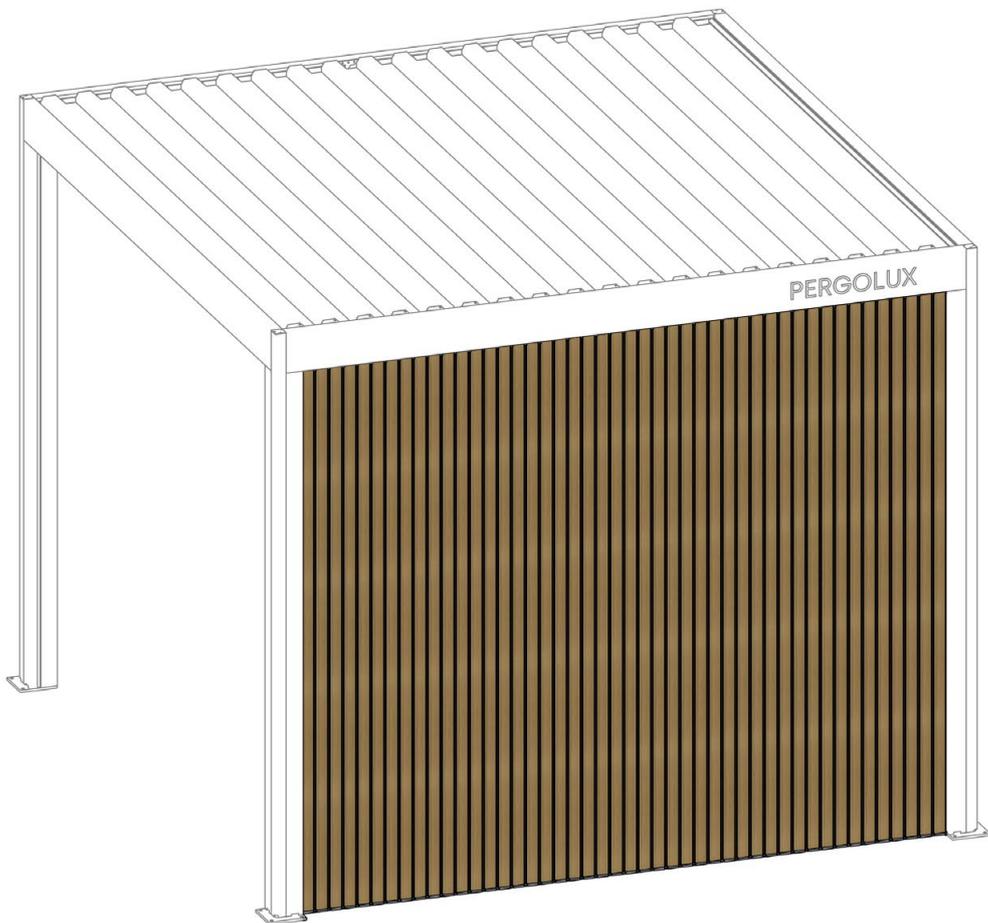

PERGOLUX

PERGOLUX

INFORMATION

Congratulations and thank you for choosing a PERGOLUX Product!

To enjoy this product for a long time as well as for your own and others' safety, please follow the installation instructions. Before you start assembling and using the pergola, ensure that all the parts listed in the manual are delivered and intact. If you need help with the installation, you can contact us by chat, phone, e-mail or via our website.

We wish you good luck with the assembling process!

Contact:



pergolux.de



pergolux.co.uk



pergoluxshop.com



pergolux.dk



pergolux.se



pergolux.no



Australia



pergolux.fr



pergolux.ch



pergolux.it



pergolux.nl



at.pergolux.de



pergolux.cl



pergolux.com.br

INFORMATION

Having some issues and need to submit a claim?

If you are faced to an issue with your PERGOLUX products and needs to submit a claim please read this article:



Complaints and Technical Issues



Reklamation einreichen. Schritt für Schritt Anleitung

Submit the claim here:



Anfrage einreichen



Submit a request



Anfrage einreichen



Send oss en henvendelse



Een aanvraag indienen



Skicka oss en förfrågan



Submit a request



Send os en forespørgsel



Submit a request



Envoyer une demande



Enviar una solicitud





Invia una richiesta



Enviar una solicitud

INFORMATION

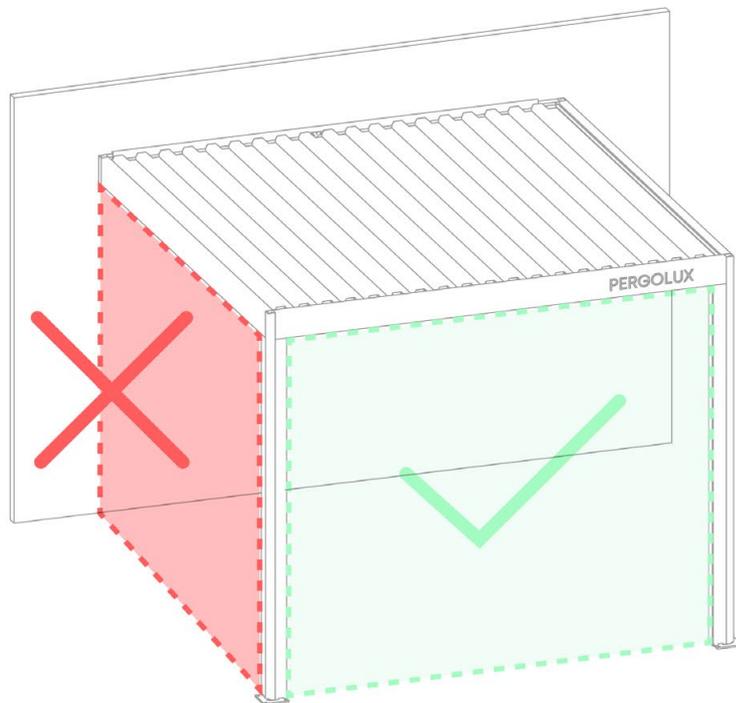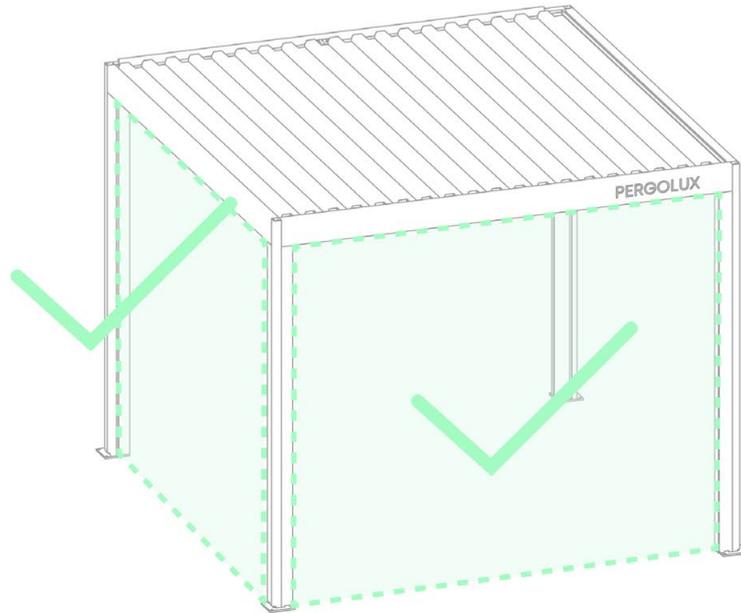

This slat wall cannot be installed on the wall mounted side and Skydance model (S1/S2/S3)

SYMBOL EXPLANATION



Indicates the outside of the pergola structure.



This item must be purchased separately.



Indicates the inside of the pergola structure.



Do not use a regular hammer, as it may cause damage.



Required tools for assembly.




Repeat this step as many times as the number indicates





Turn around







INFORMATION

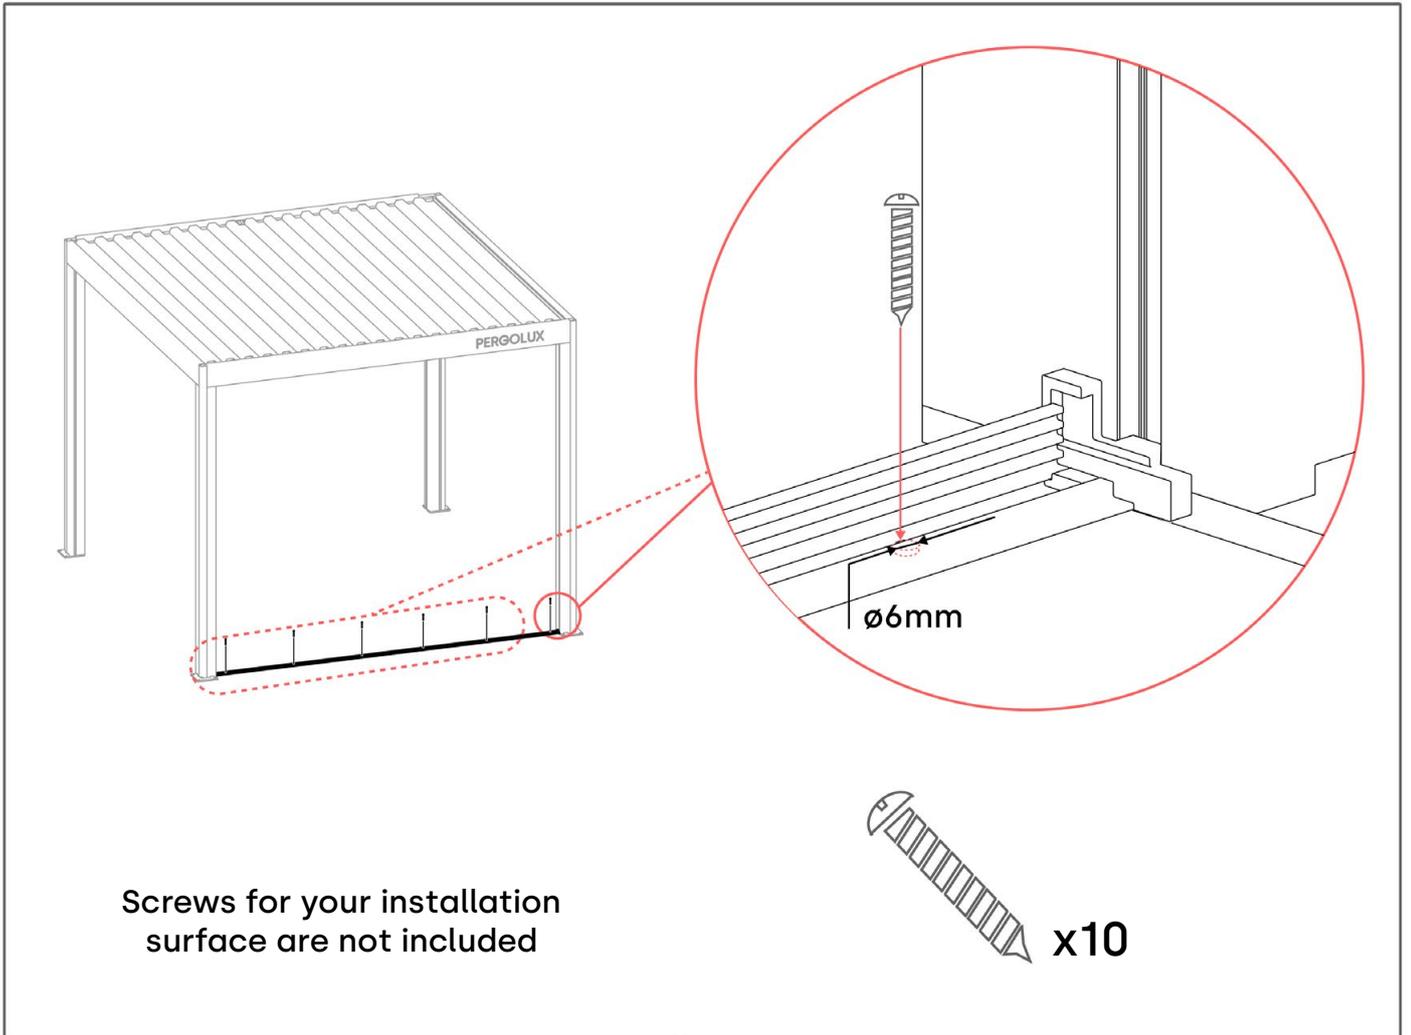


Screws for your installation surface are not included

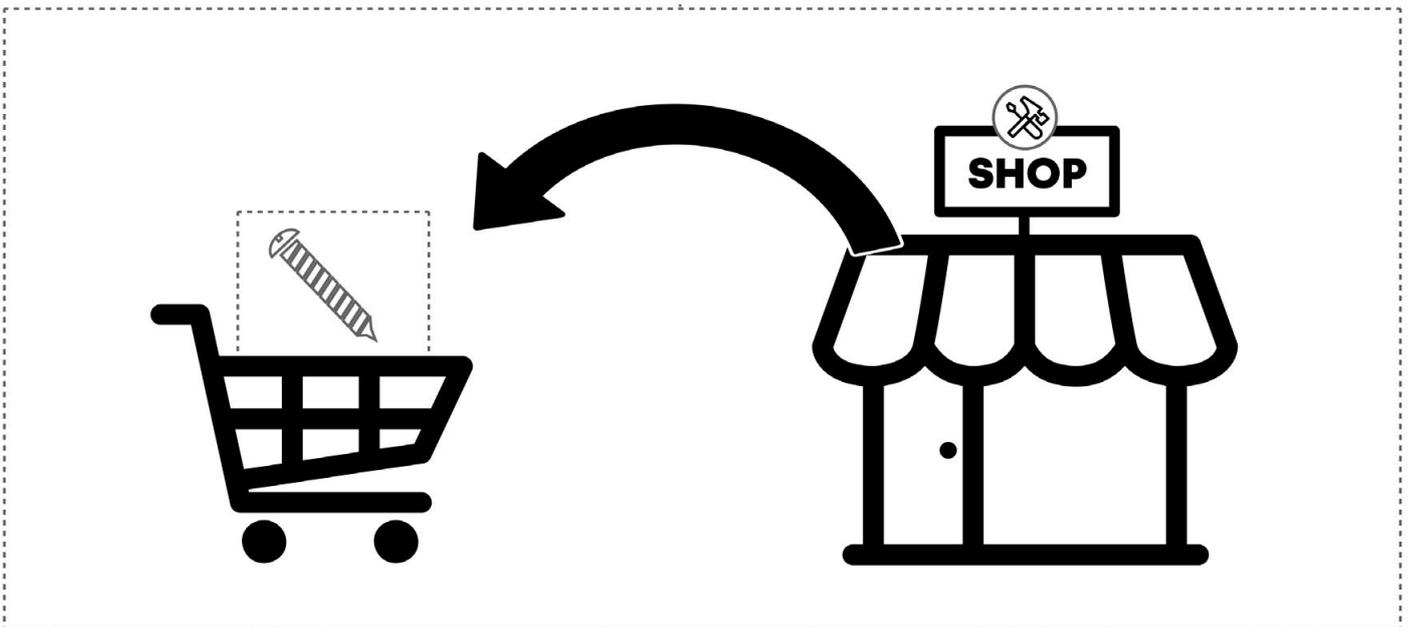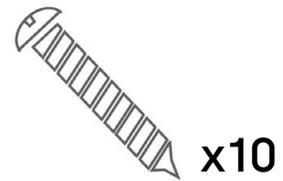

TOOLS




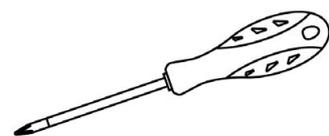
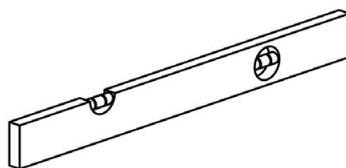
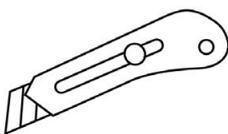
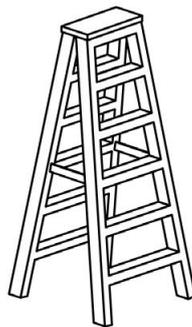
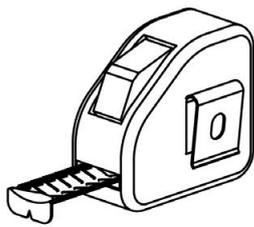
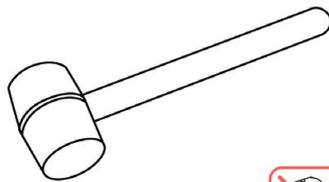


PACKAGE OVERVIEW

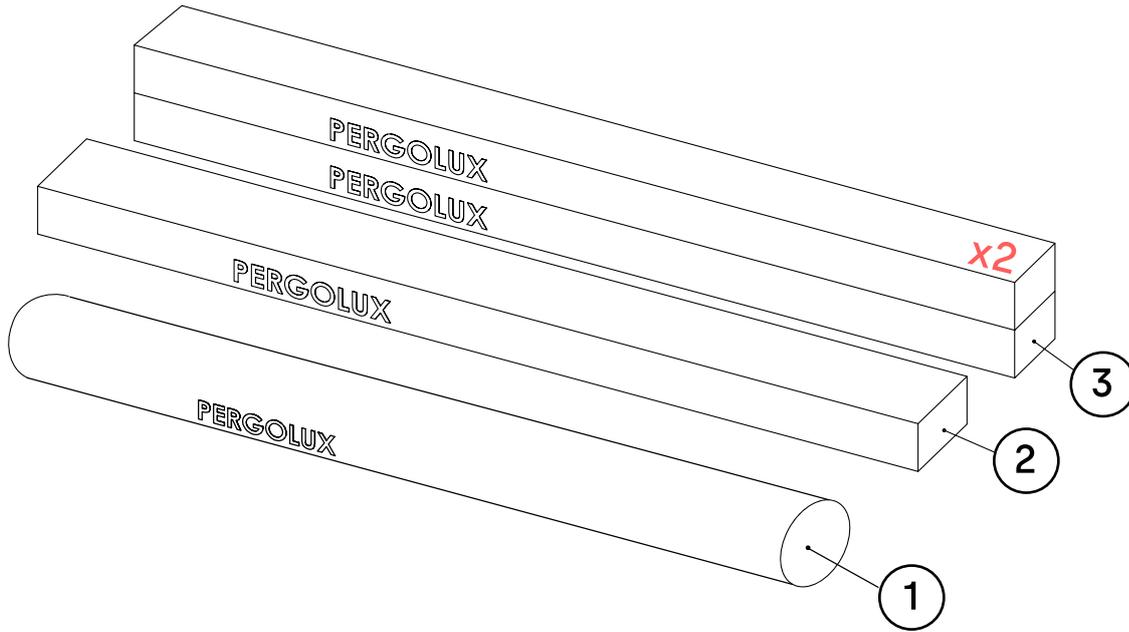


①	W102 FRAME 3M PACKAGE
②	W100 SLAT PACKAGE 16
③	W101 SLAT PACKAGE 15 x2

ITEMS IN BOX

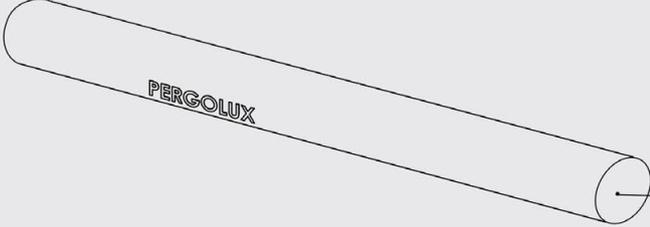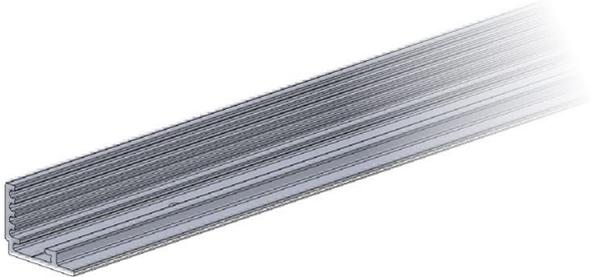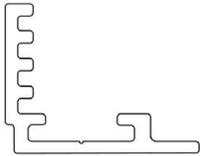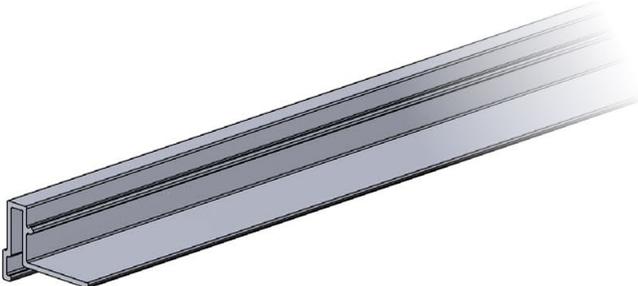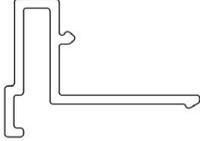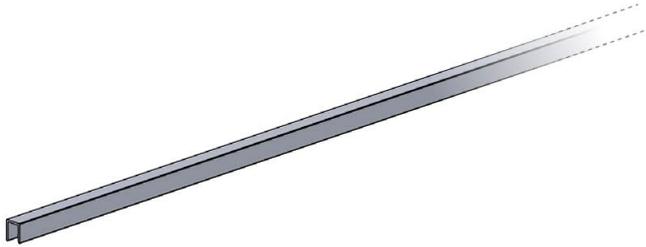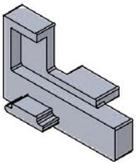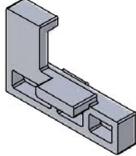
	W102 FRAME 3M PACKAGE	1	
		Ground Fixation 3M PN-200002516 1x	
		Slat Fixation 3M PN-200002520 1x	
		Slat Lock 3M PN-200002518 1x	
	End Cover Left PN-200002510 1x		End Cover Right PN-200002513 1x

ITEMS IN BOX

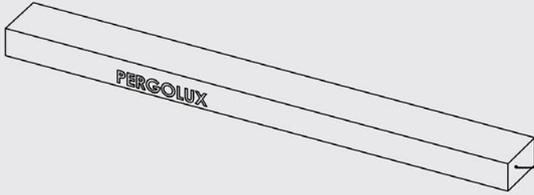


W100 SLAT PACKAGE 16


2

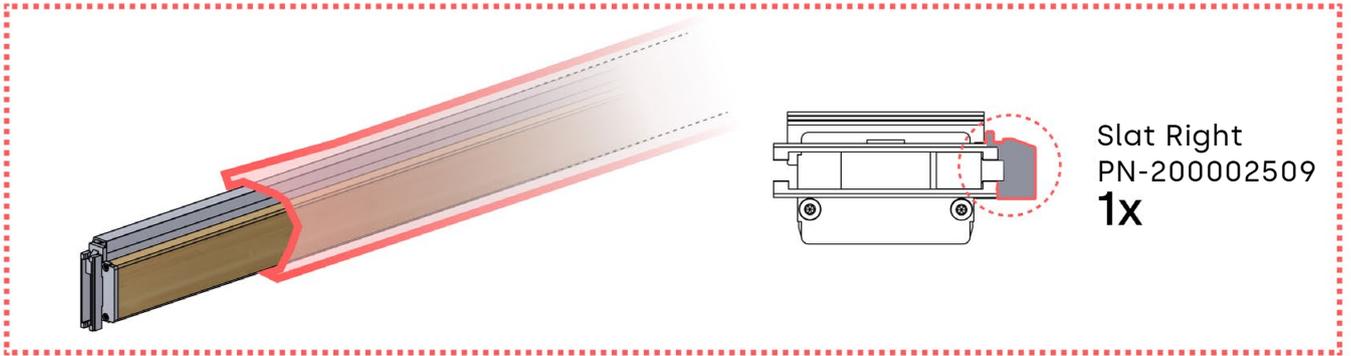

Slat Right
PN-200002509
1x

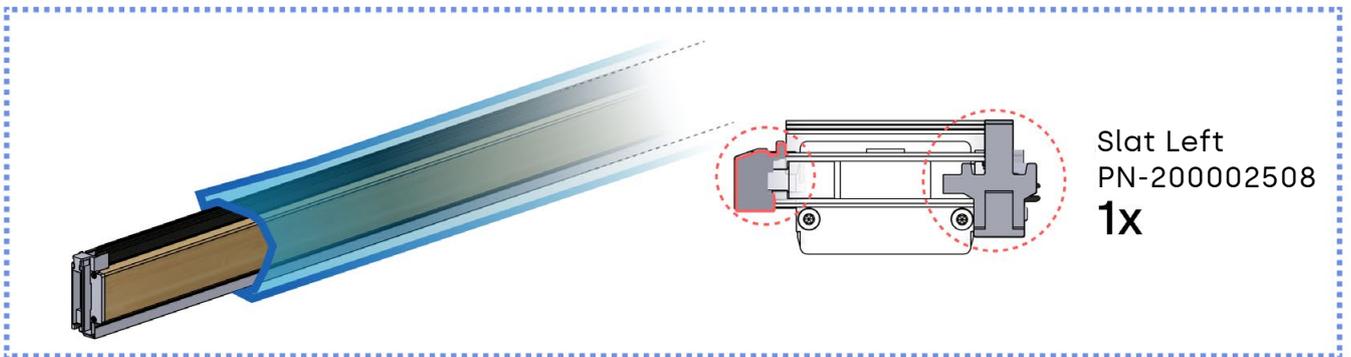


Slat Left
PN-200002508
1x

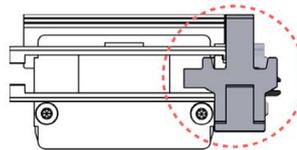


Slat Center
PN-200002507
14x

IN BOX

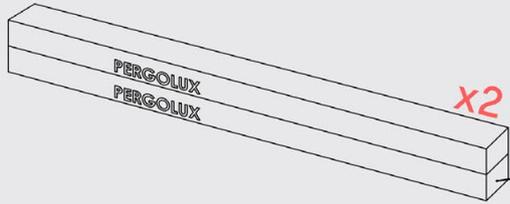


W101 SLAT PACKAGE 15

3

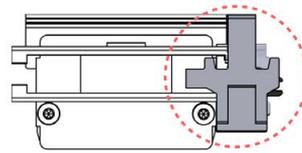

Slat Center
PN-200002507
30x



OVERVIEW 3M / 10'

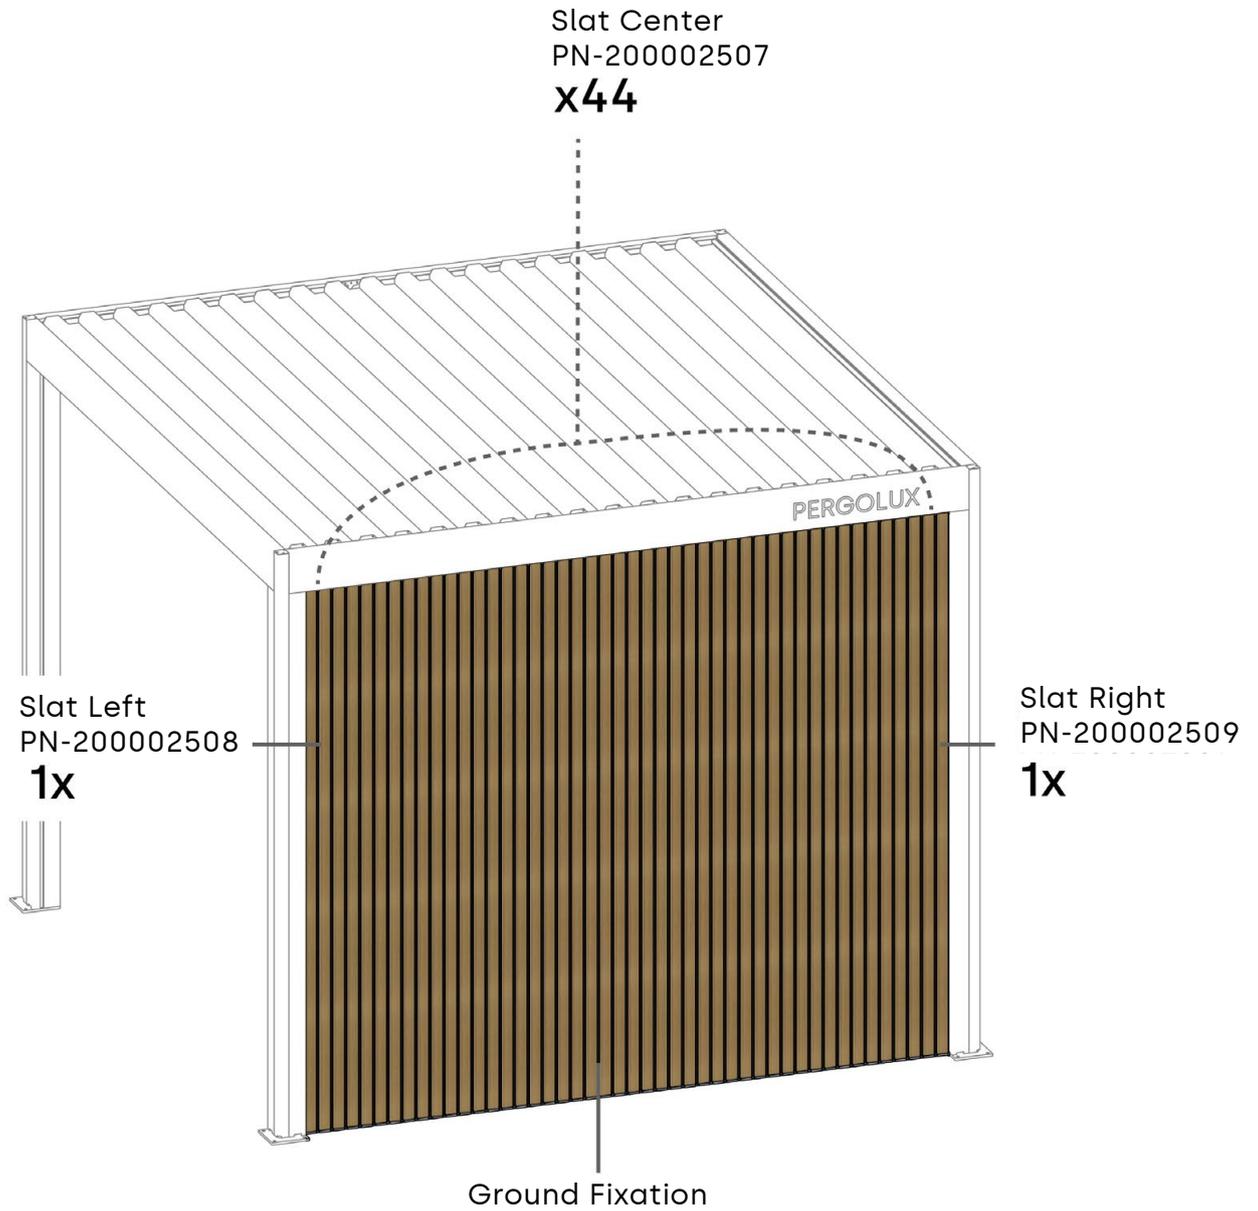

CLOSED / OPEN

OPTION 1 (Closed):



-  **NOT** see through
-  Water protection
-  Wind protection

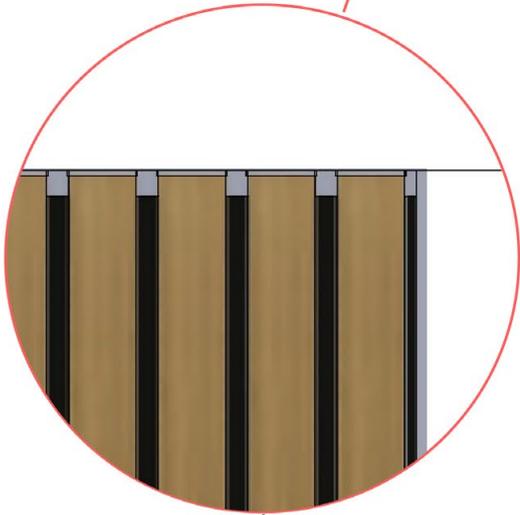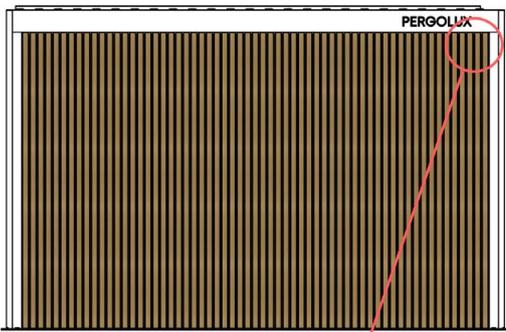

Continue assembling from **Step 1**

OPTION 2 (Open):

-  See through
-  **NO** Water protection
-  **NO** Wind protection

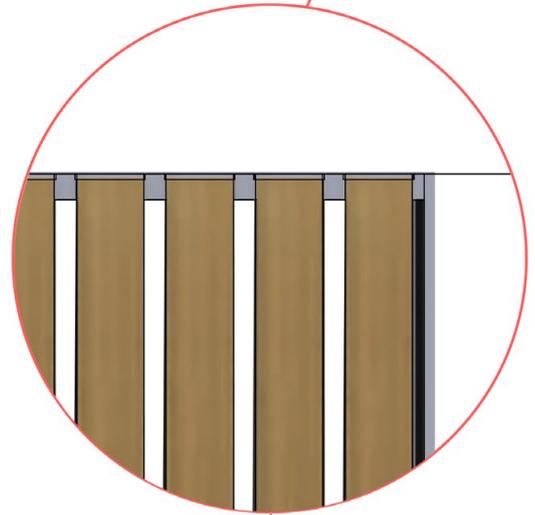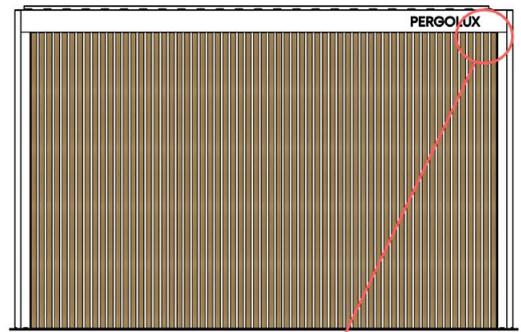


 See next page



OPTION 2 (OPEN)

! ** Only for option 2

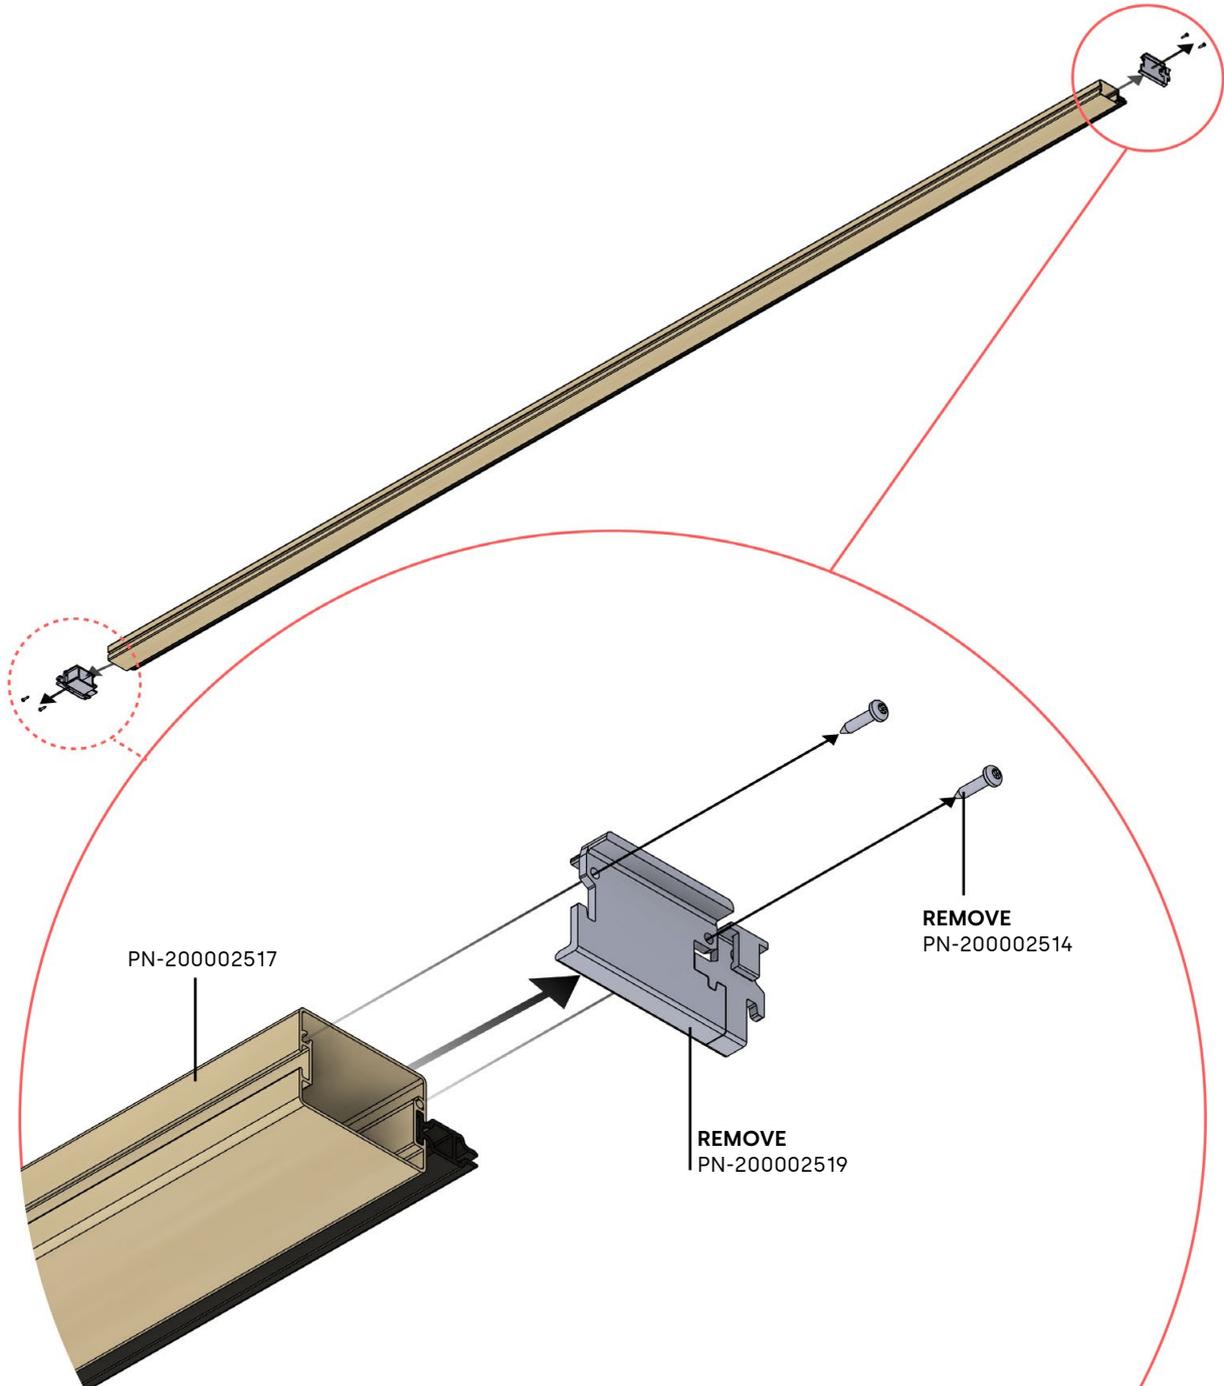

PLEASE NOTE: Do not remove the slat connection profile on the left and right slats, as these will be installed and fixed into the posts.




Slat Right
PN-200002509
1X

Slat Left
PN-200002508
1X

OPTION 2 (OPEN)

! ** Only for option 2

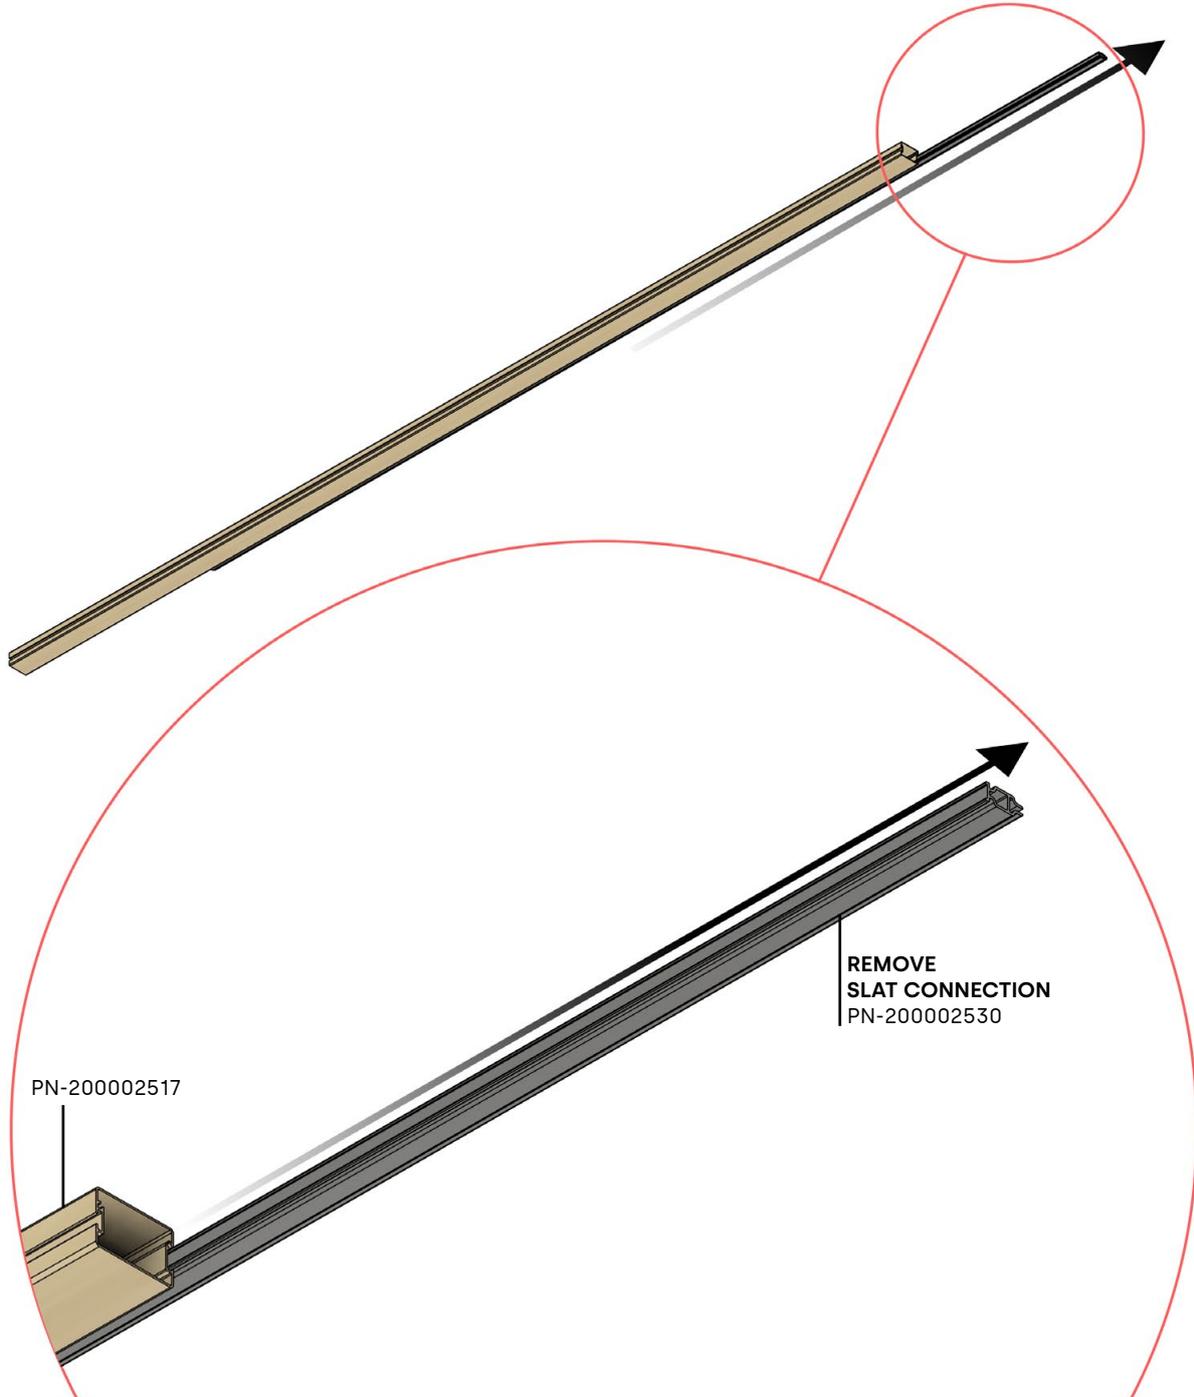

PLEASE NOTE: Do not remove the slat connection profile on the left and right slats, as these will be installed and fixed into the posts.




Slat Right
PN-200002509
1x

Slat Left
PN-200002508
1x

OPTION 2 (OPEN)

! ** Only for option 2

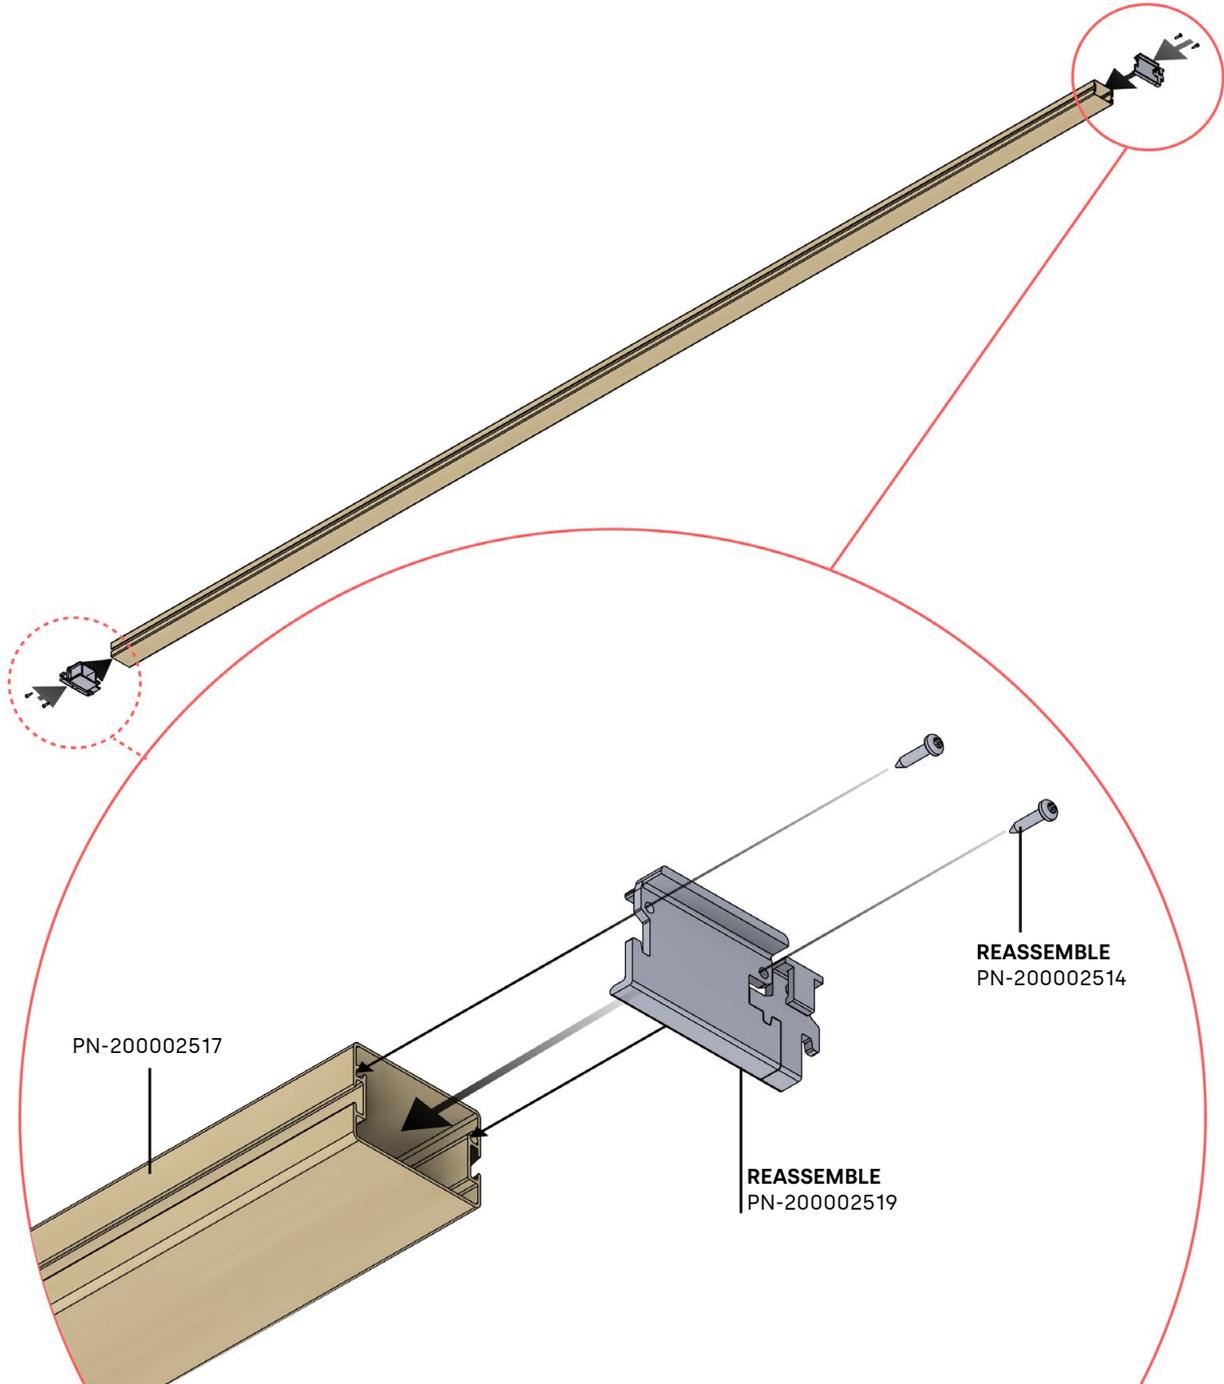

PLEASE NOTE: Do not remove the slat connection profile on the left and right slats, as these will be installed and fixed into the posts.




Slat Right
PN-200002509
1x

Slat Left
PN-200002508
1x

REMOVE COVER AND CLIPS

Remove the cover and clips entirely from the beams and posts on the side where you plan to install the slat wall.

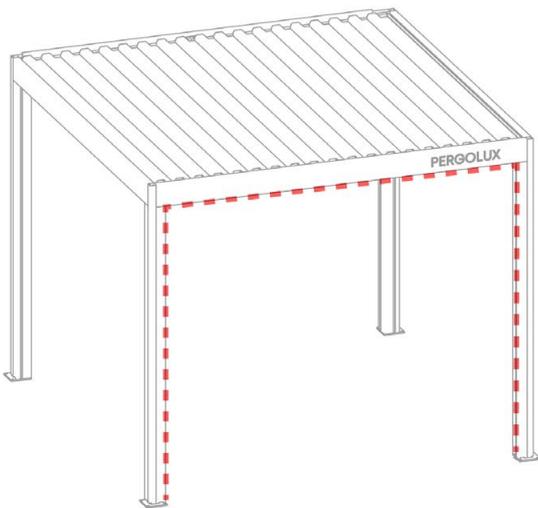

Cover and clip




PN-200000512
STRIP COVER CLIP



SnapFIT Cover


Beams PERGOLA

Remove cover and clips from **beams**.




Beams SUNDREAM

Remove cover and clips from the underside of the **beams**.


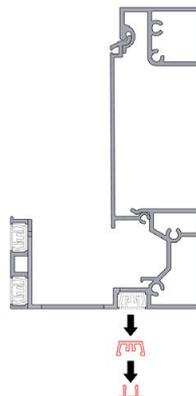







Posts


Remove cover and clips from **posts**.

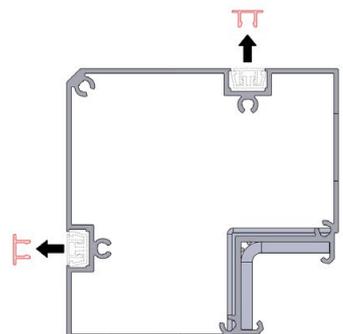


1

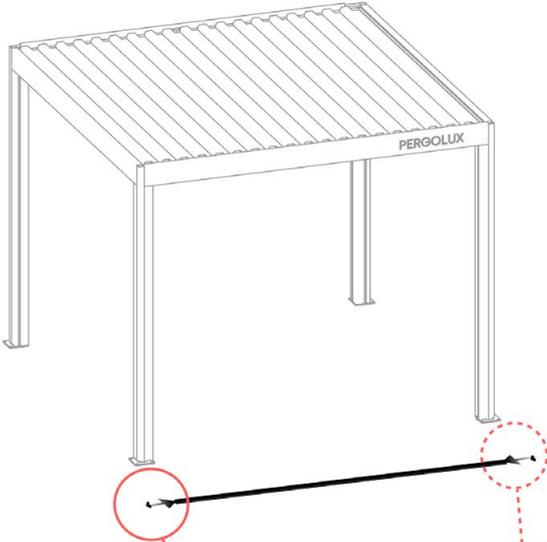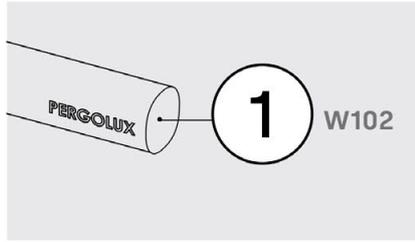

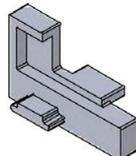

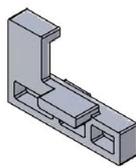

		Ground Fixation 3M PN-200002516 1x
		End Cover Left PN-200002510 x1
		End Cover Right PN-200002513 x1

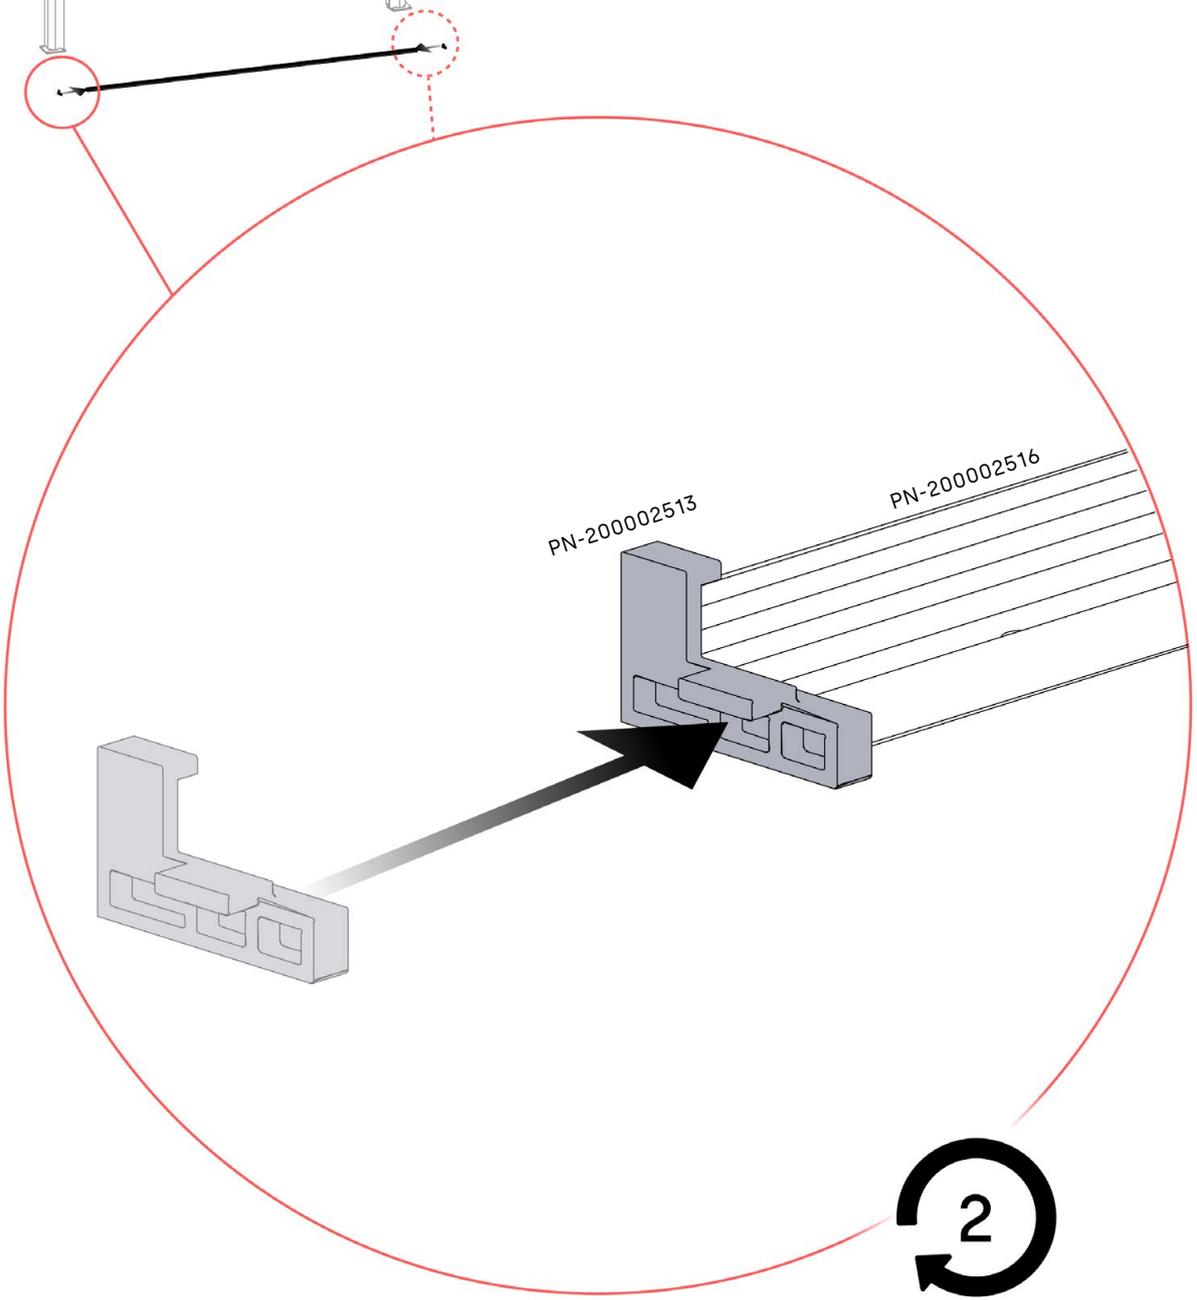


2

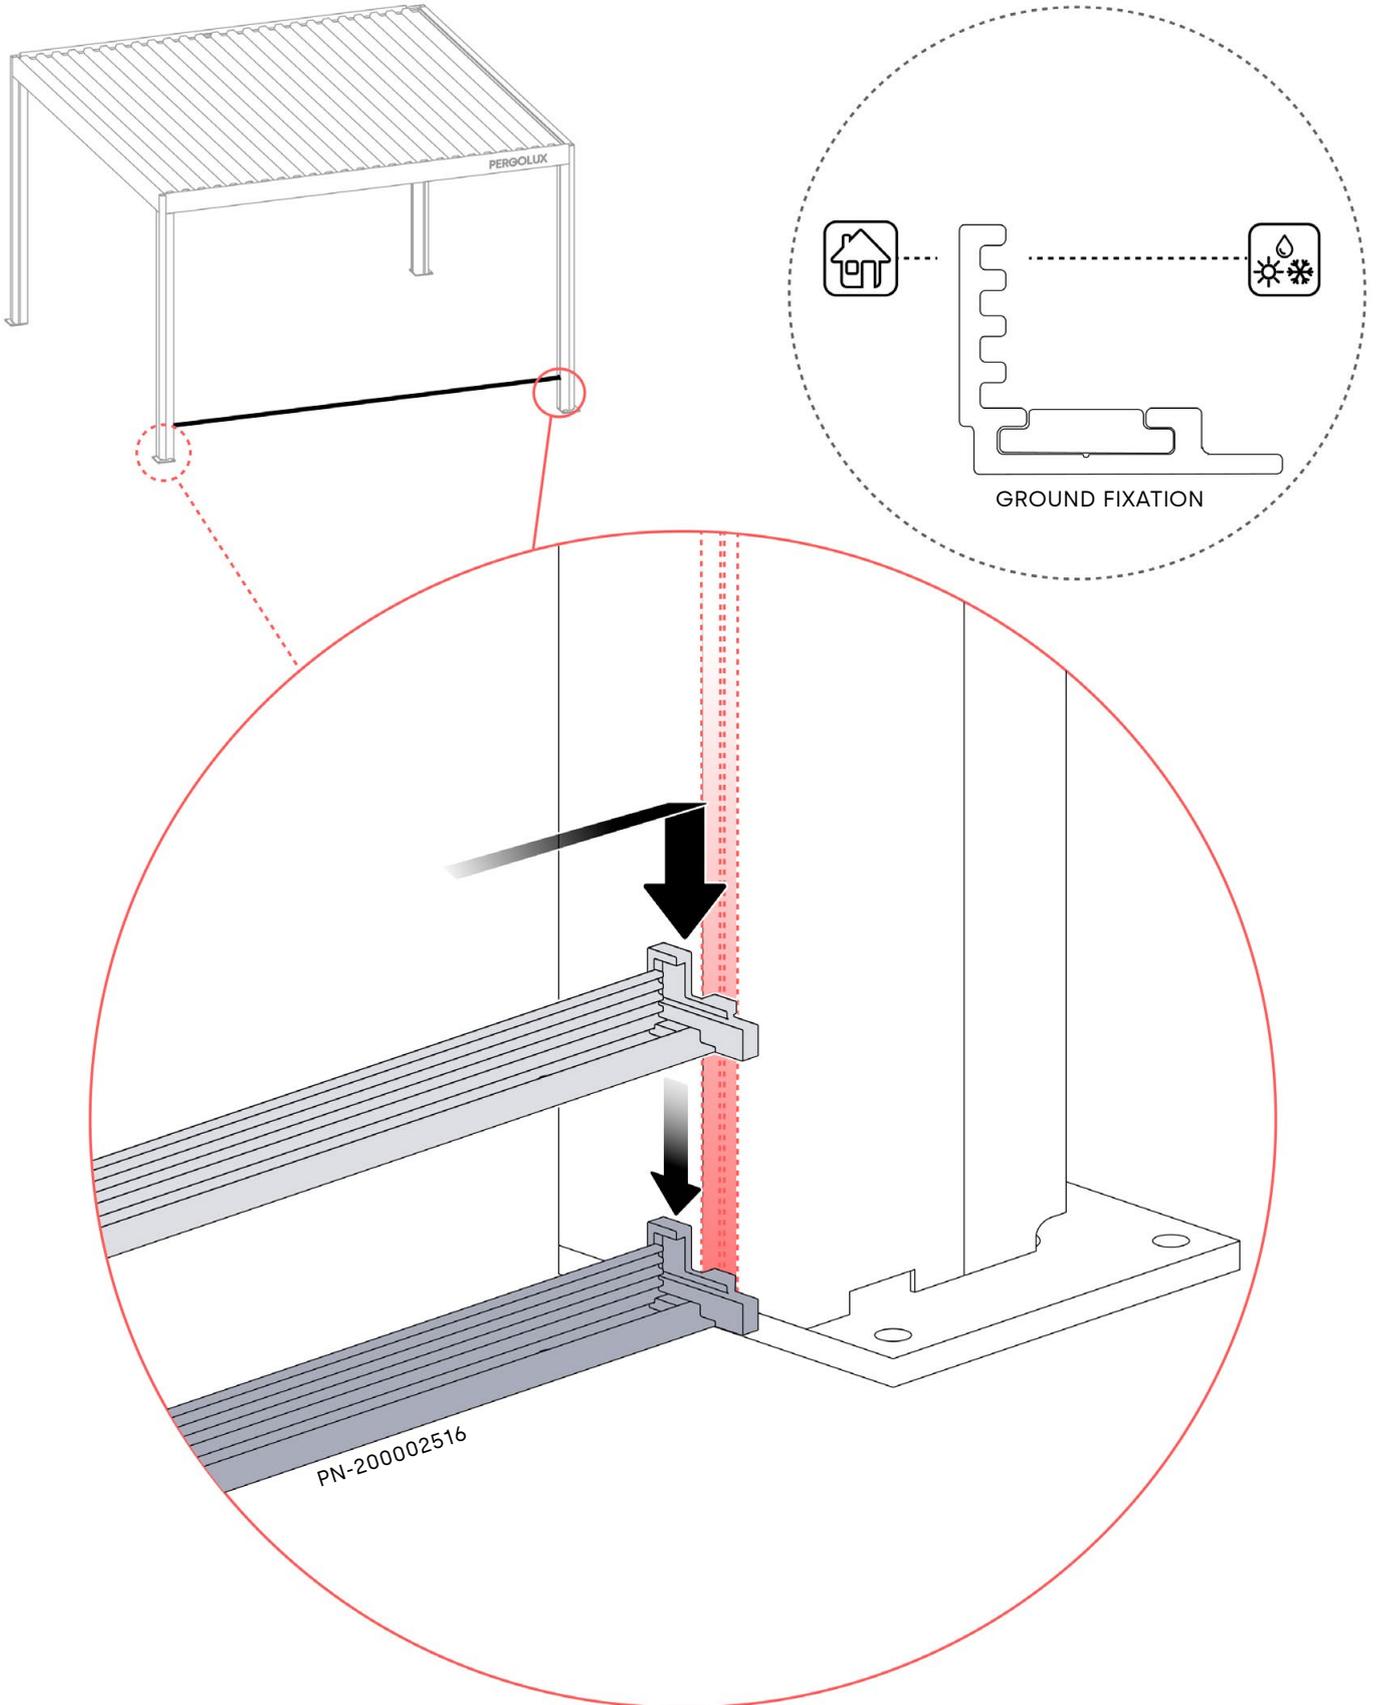

3

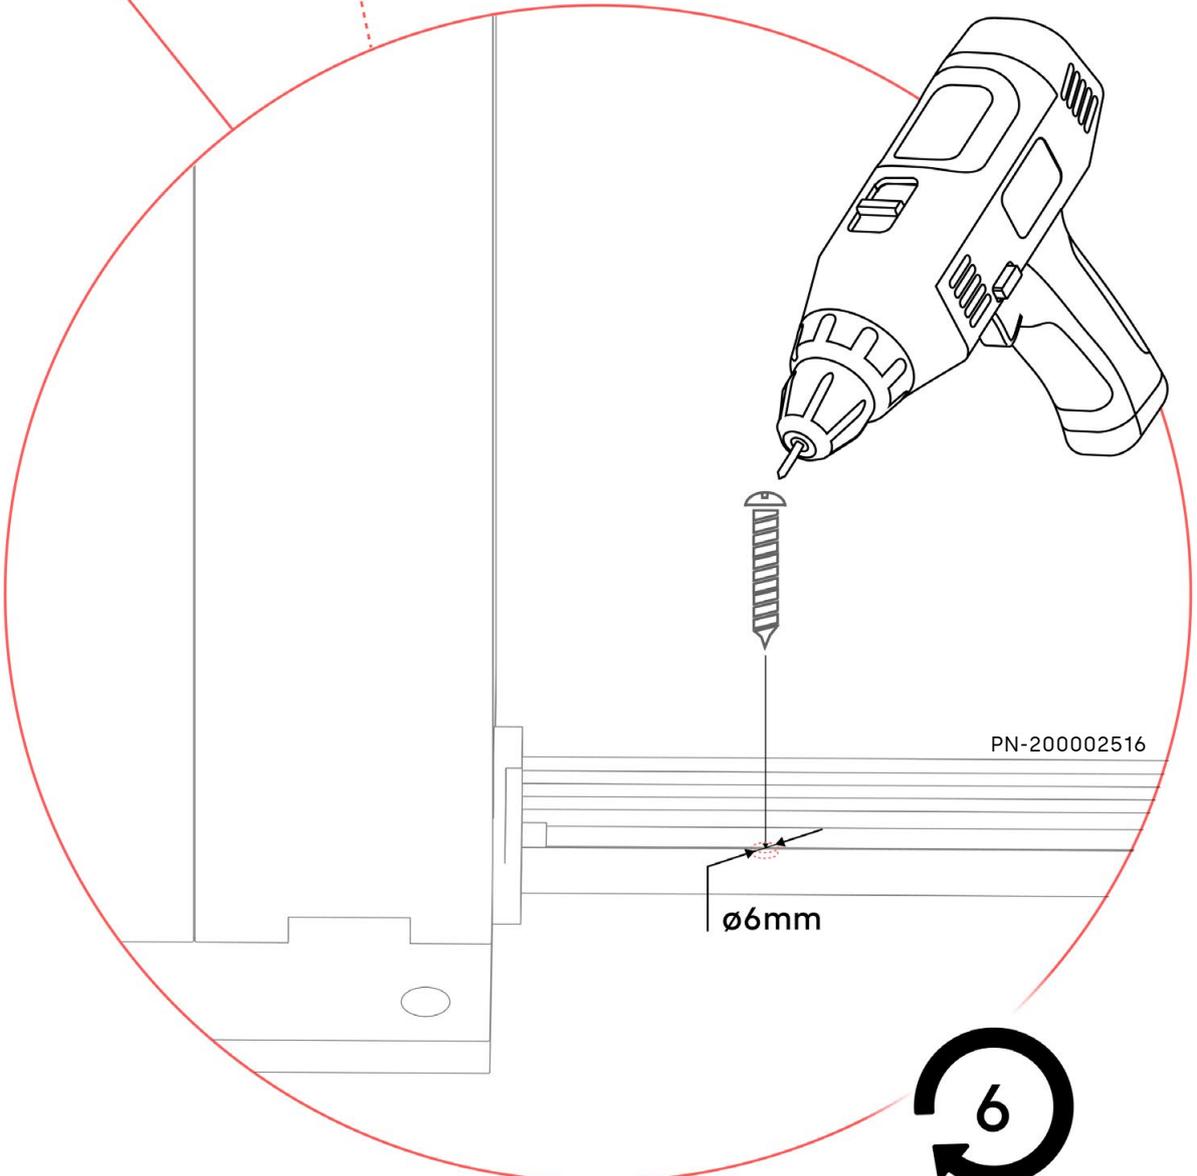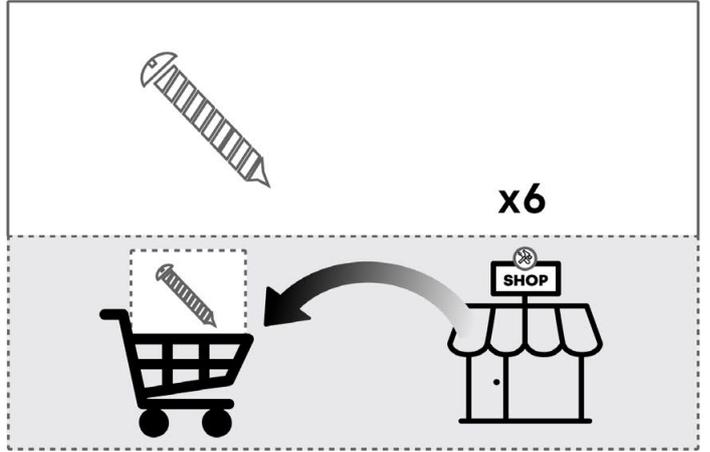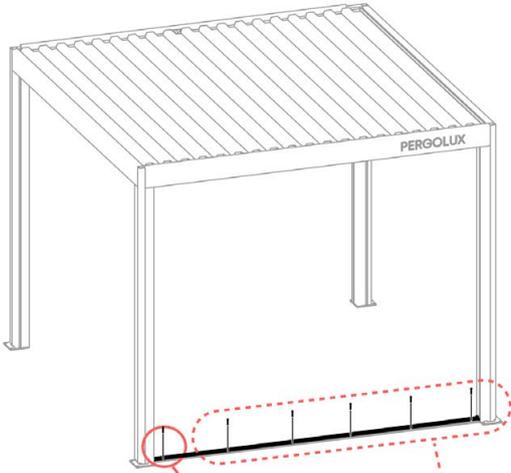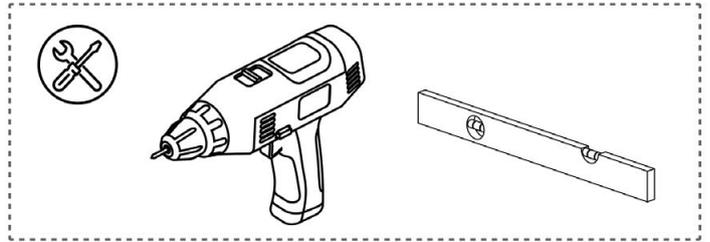

4



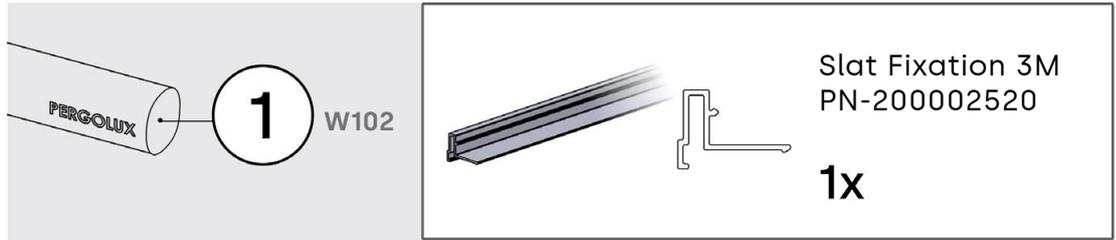


PERGOLUX

1 W102


Slat Fixation 3M
PN-200002520

1x

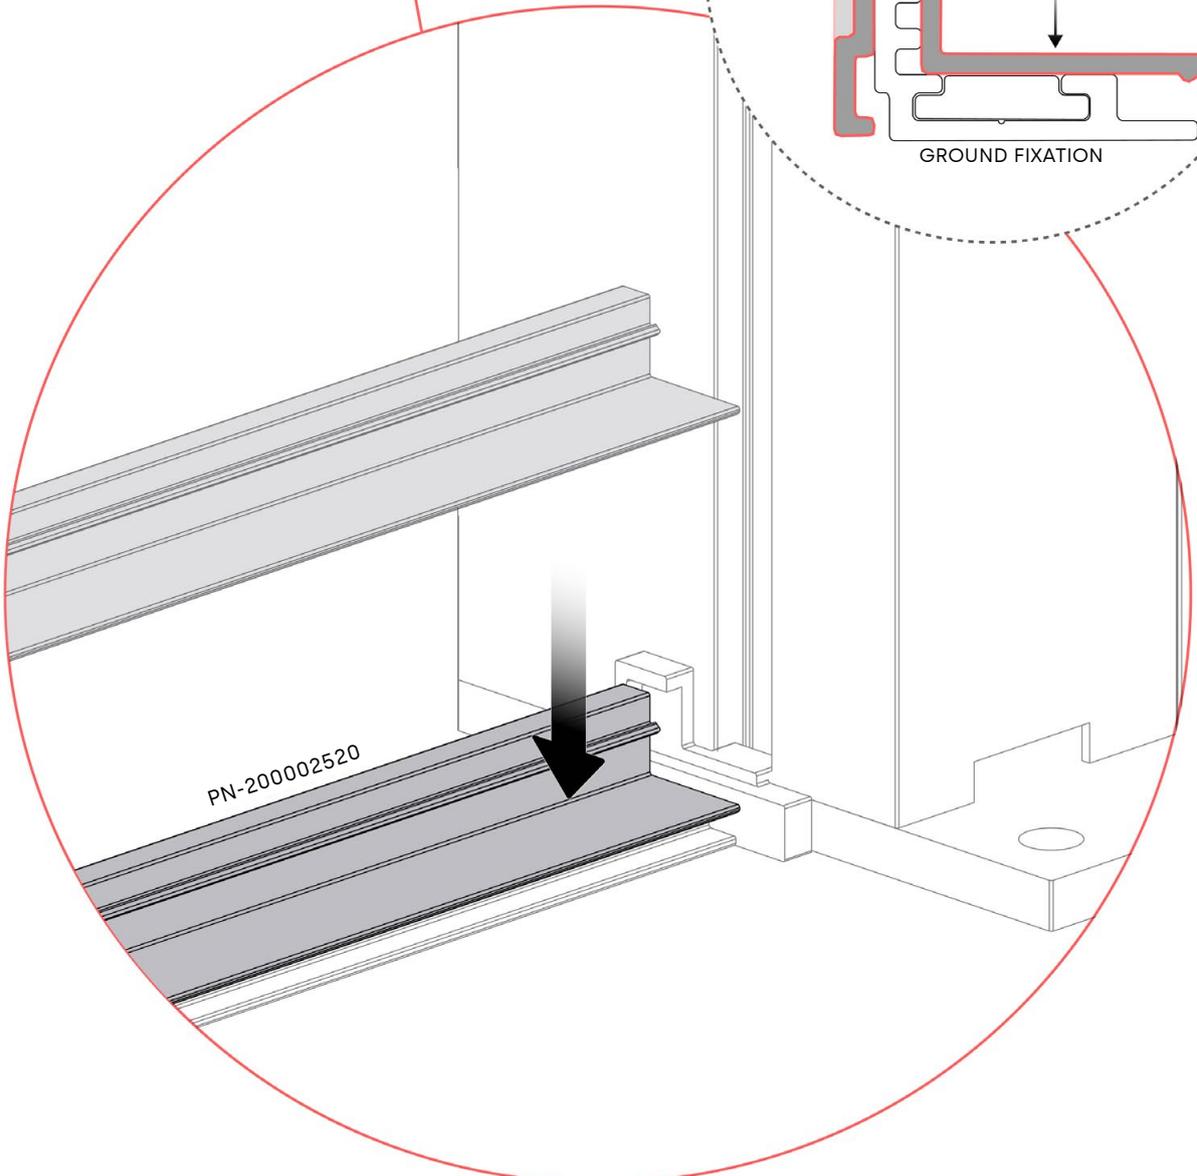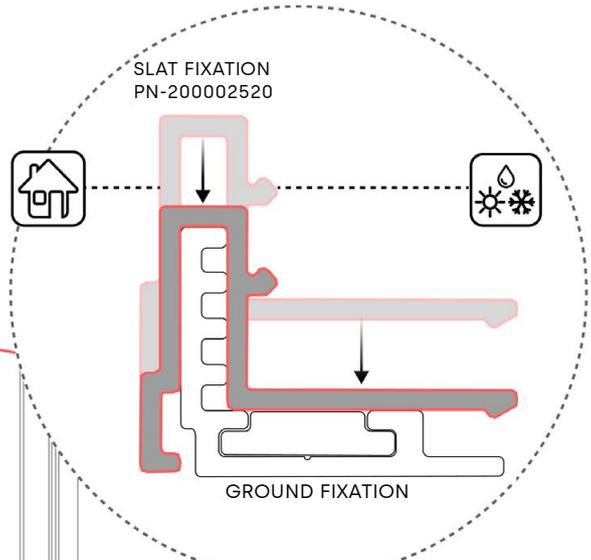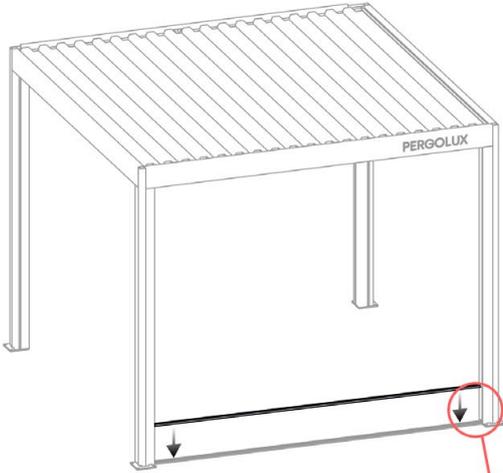


SLAT OVERVIEW


Slat Right
PN-200002509
1x

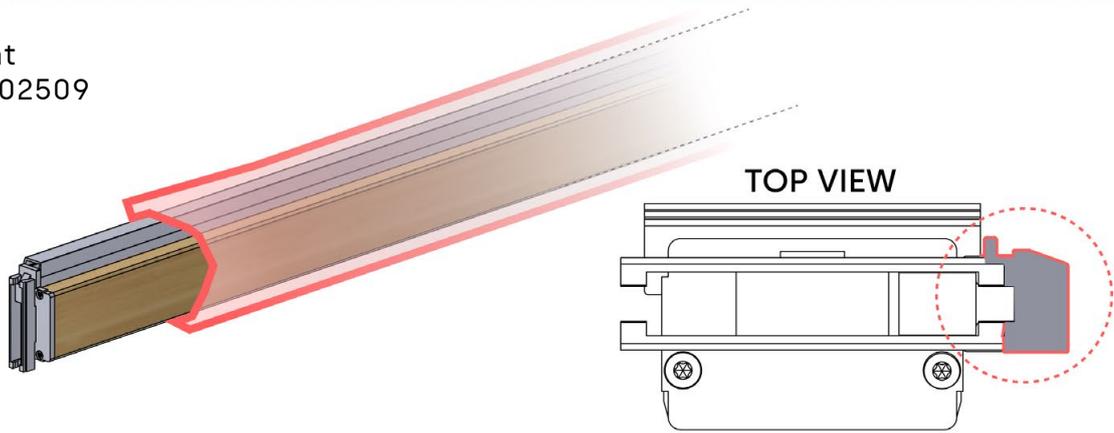






Slat Left
PN-200002508
1x

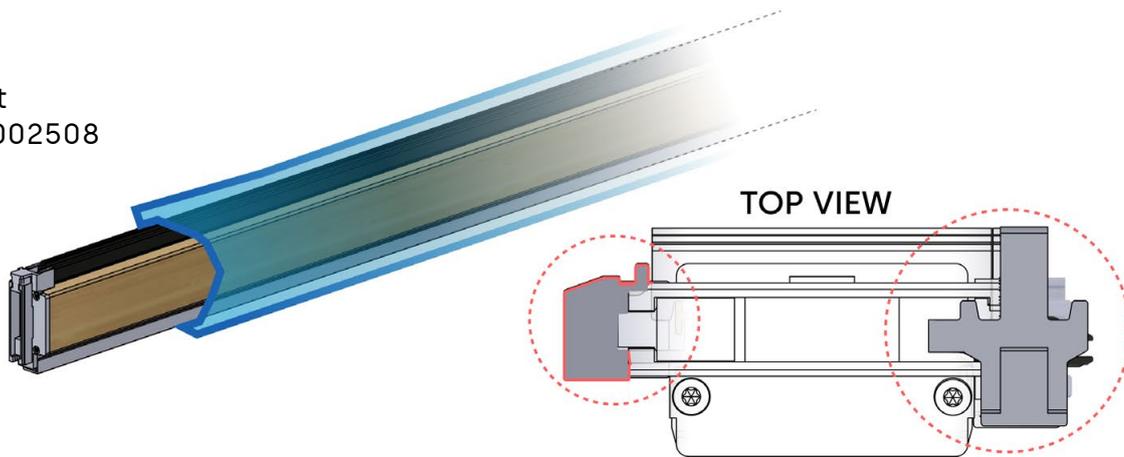




Slat Center
PN-200002507
44x

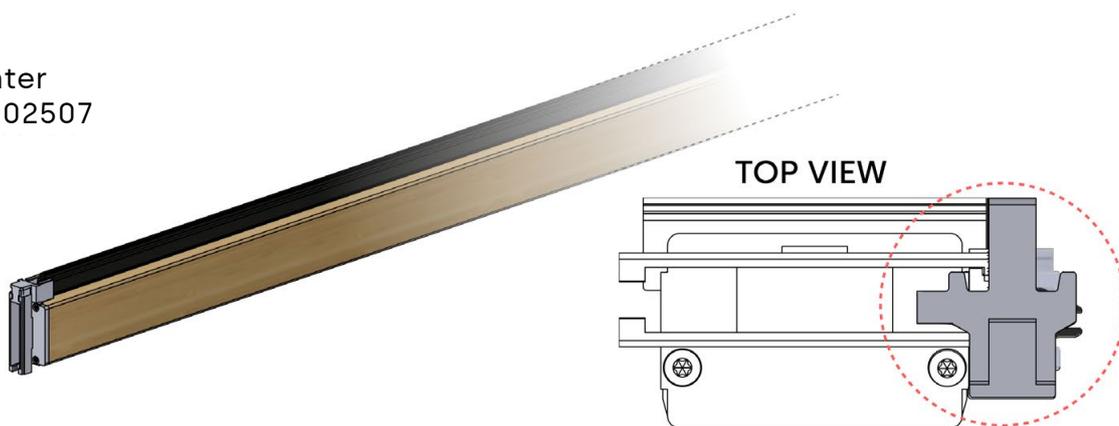



5

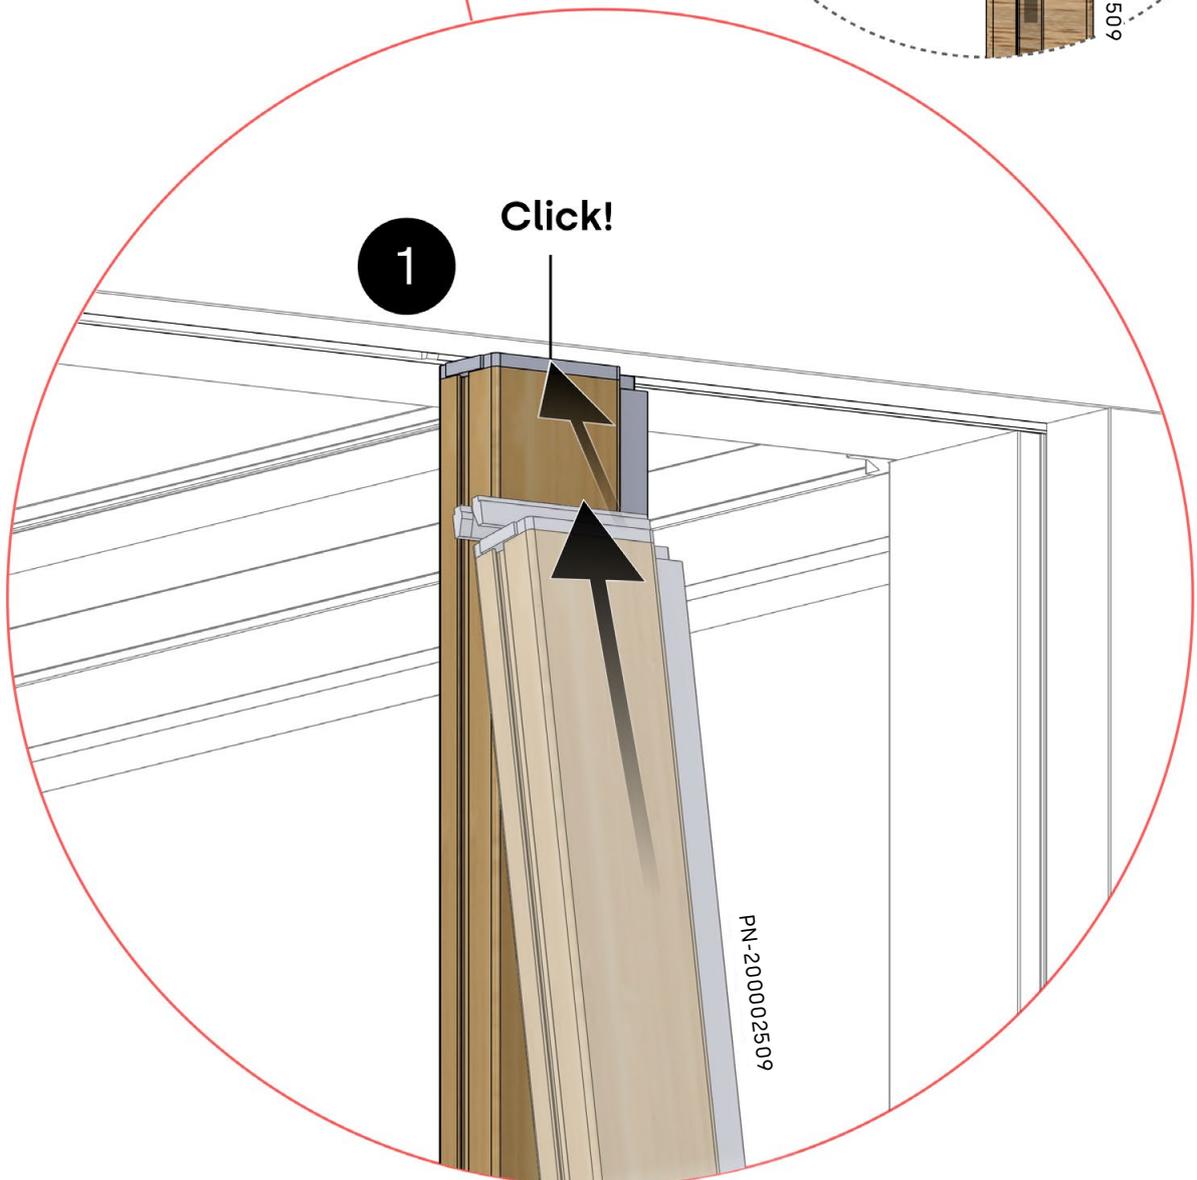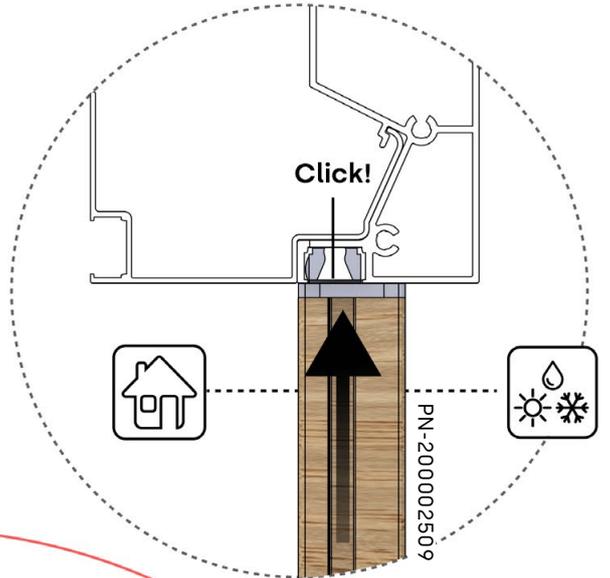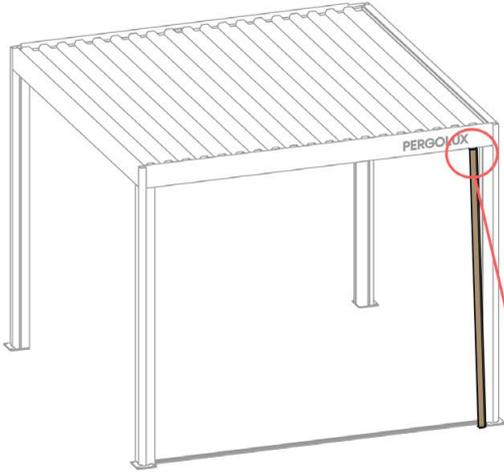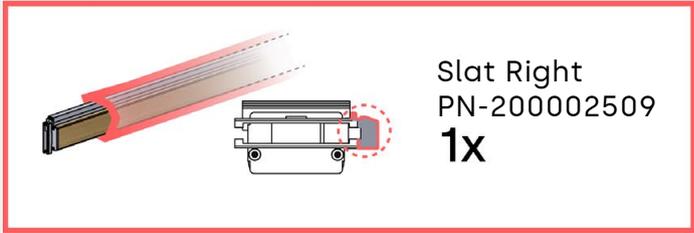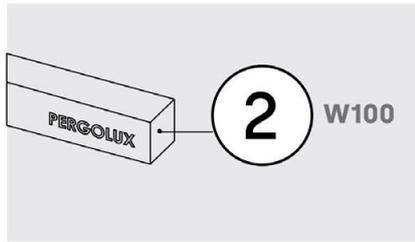






6

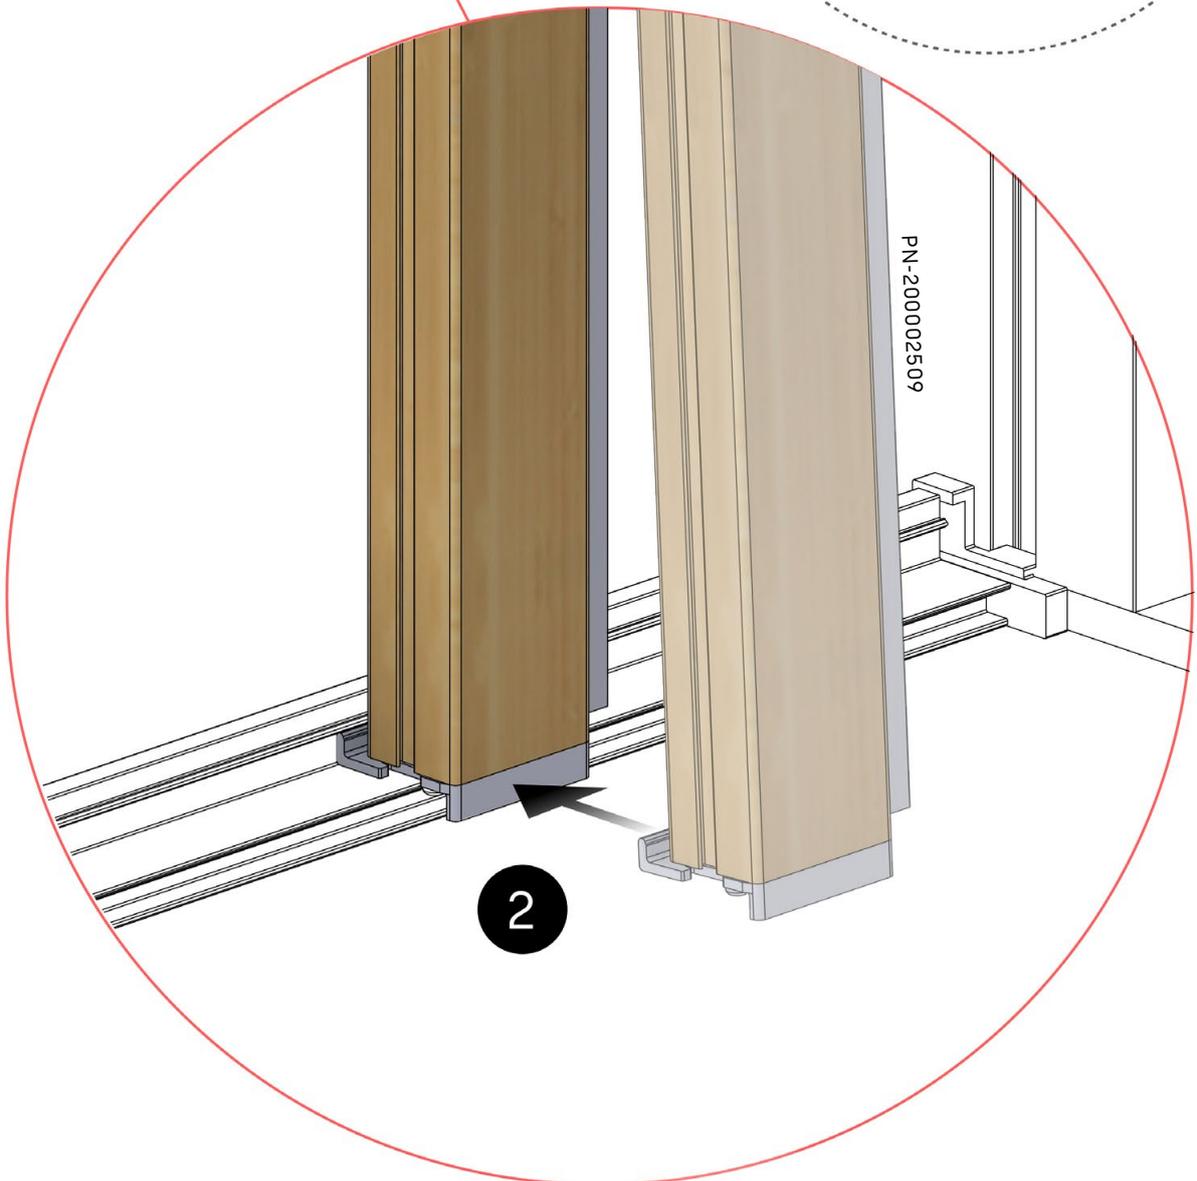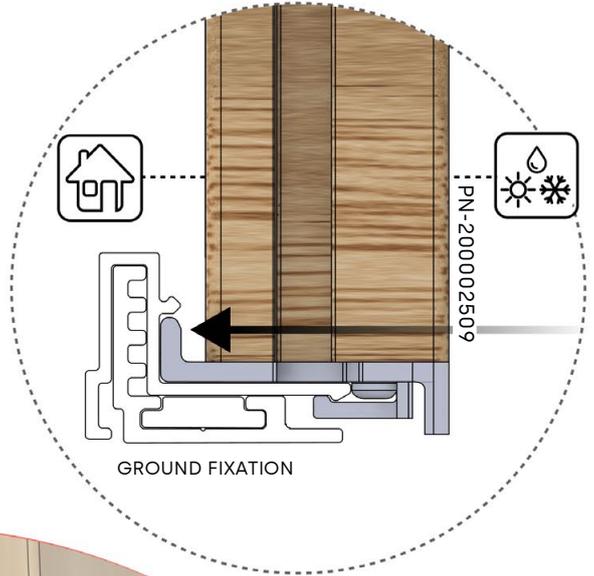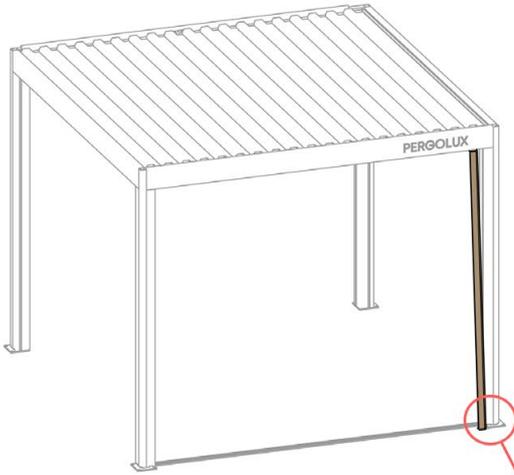






7

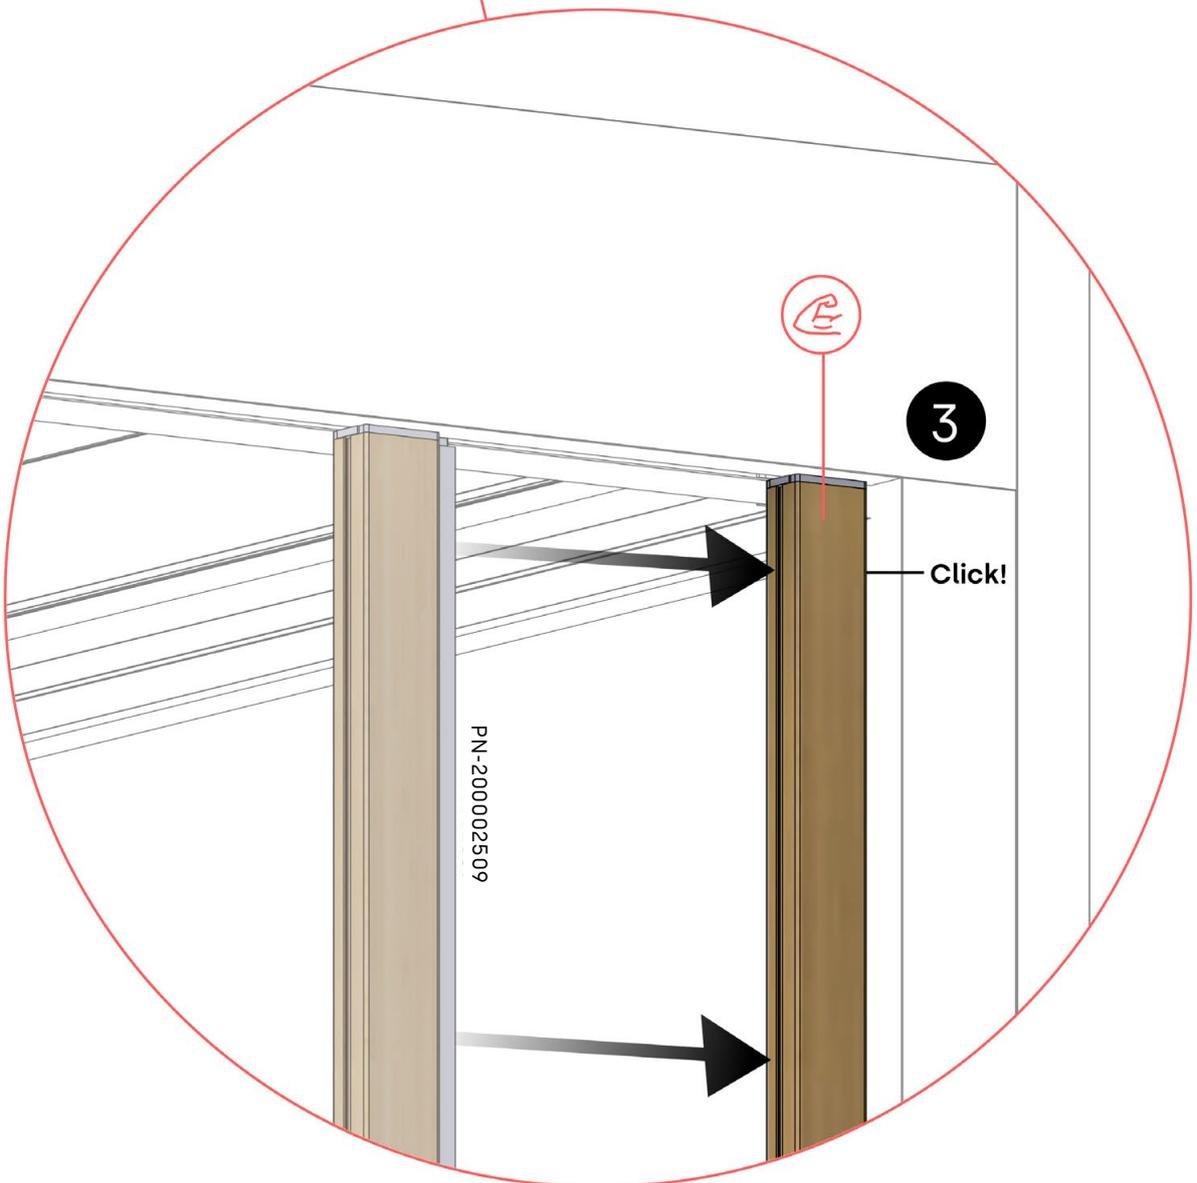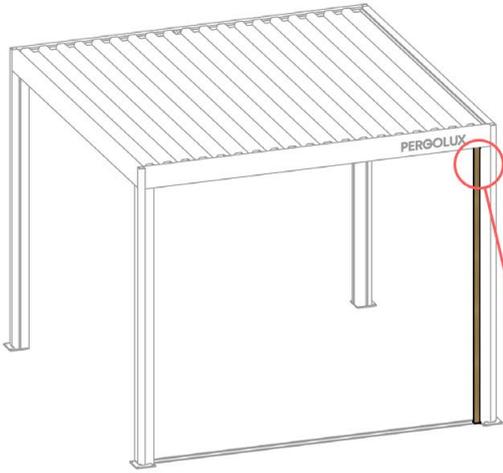




8

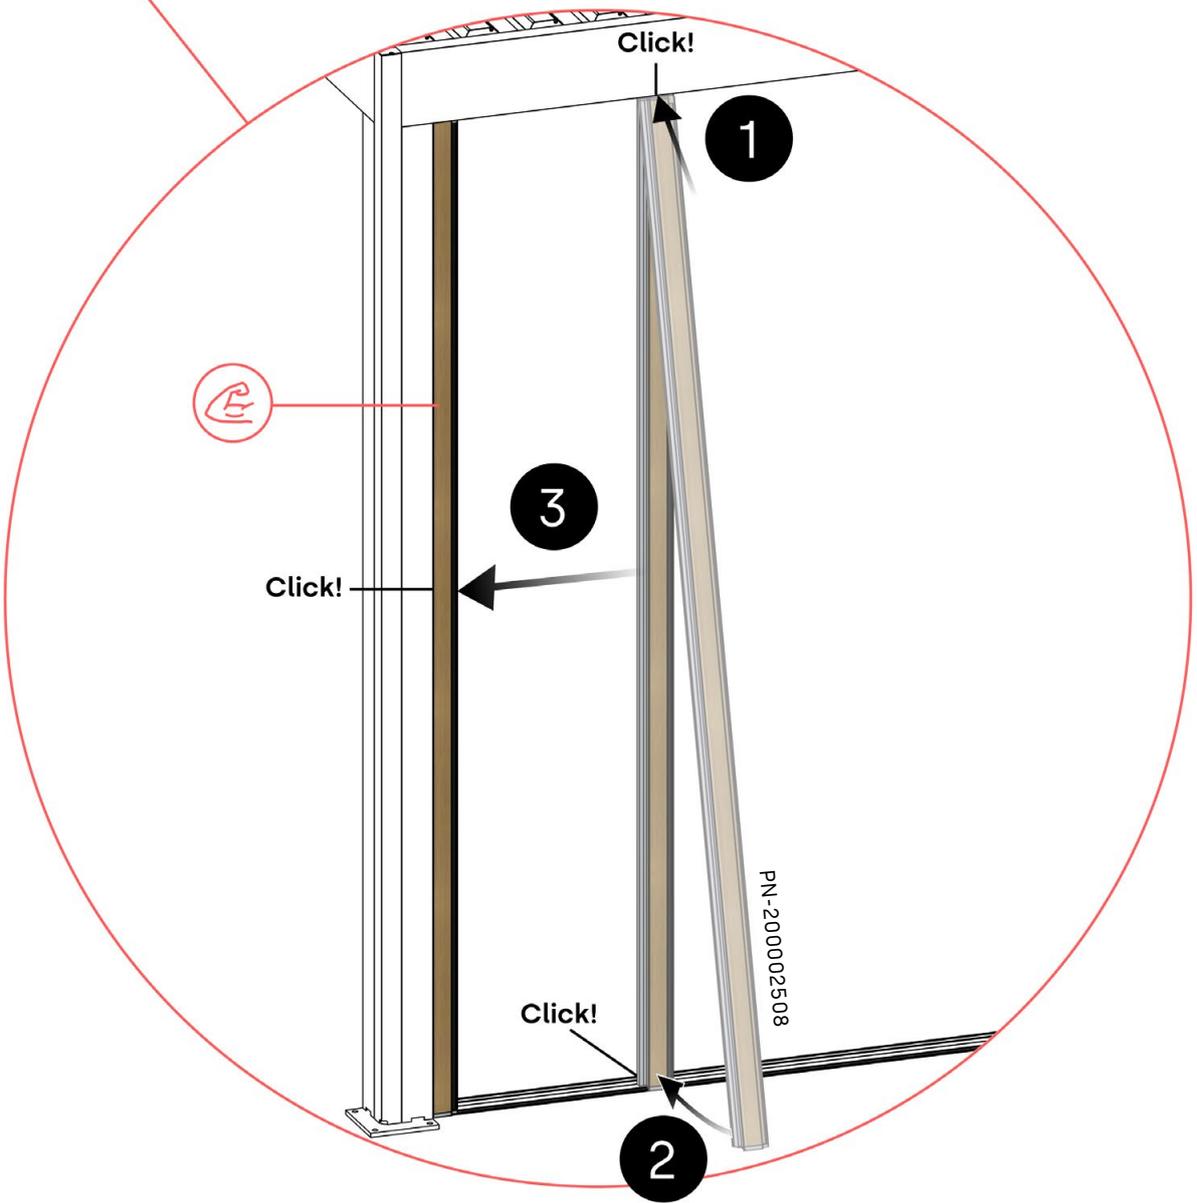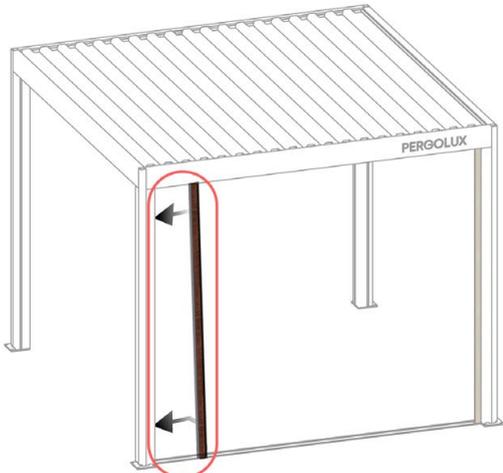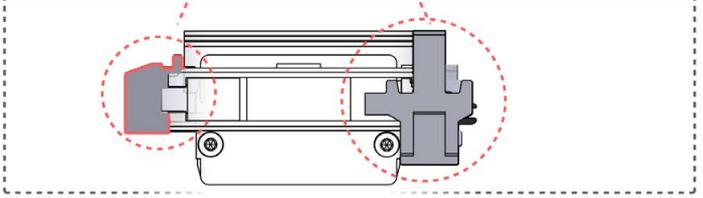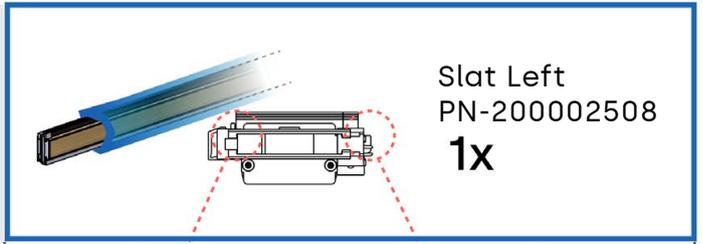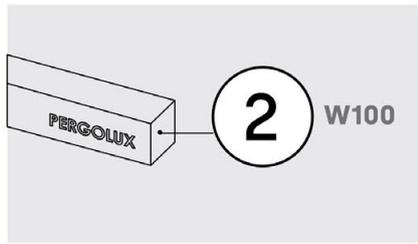



9

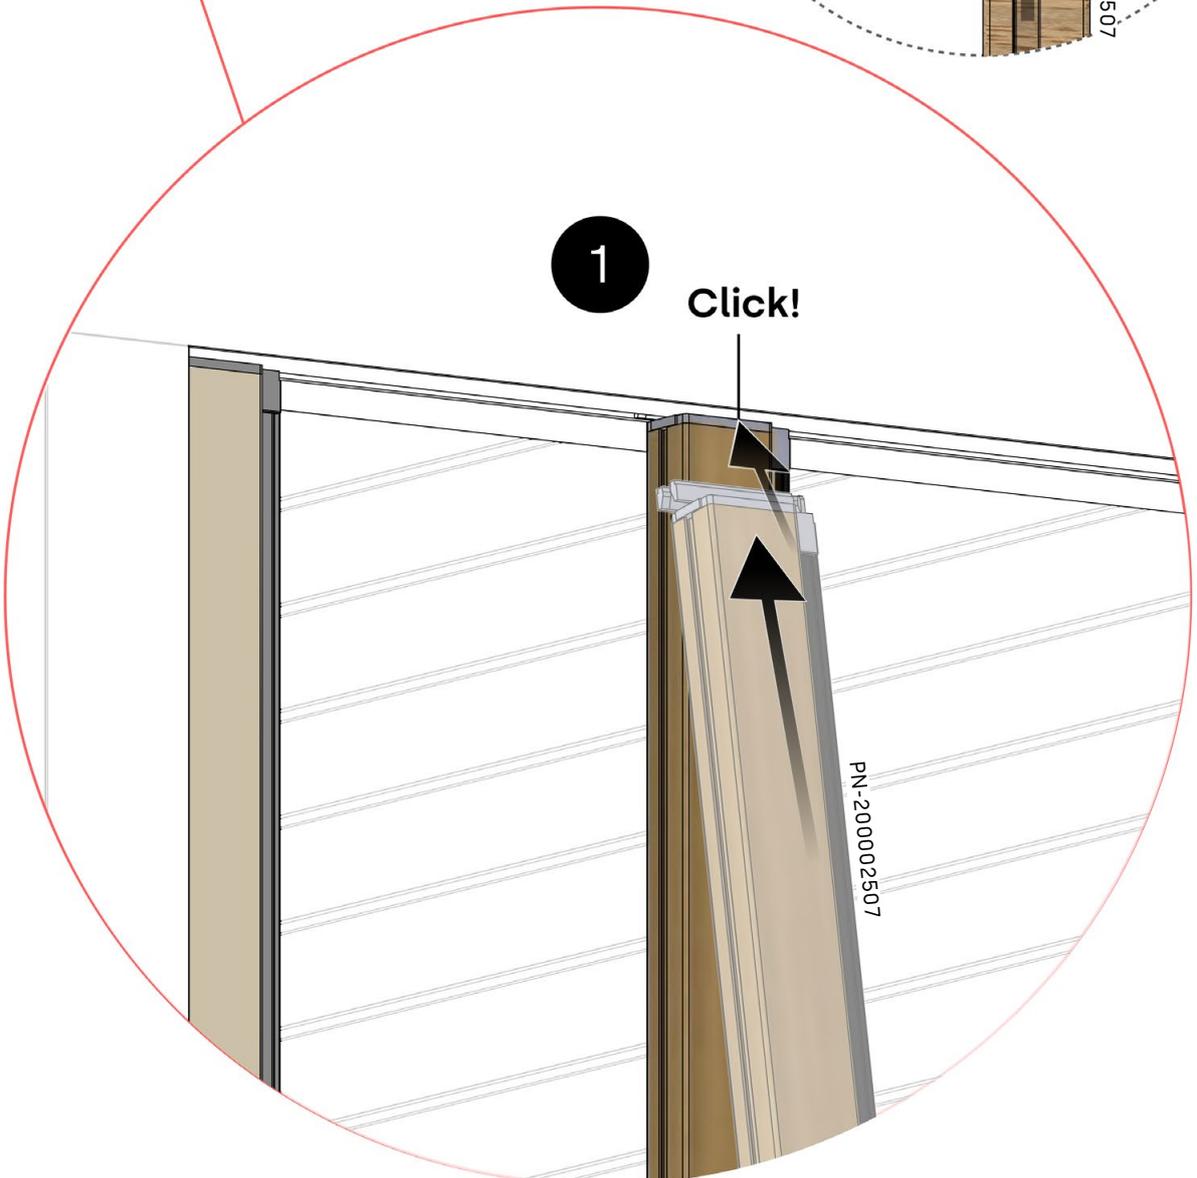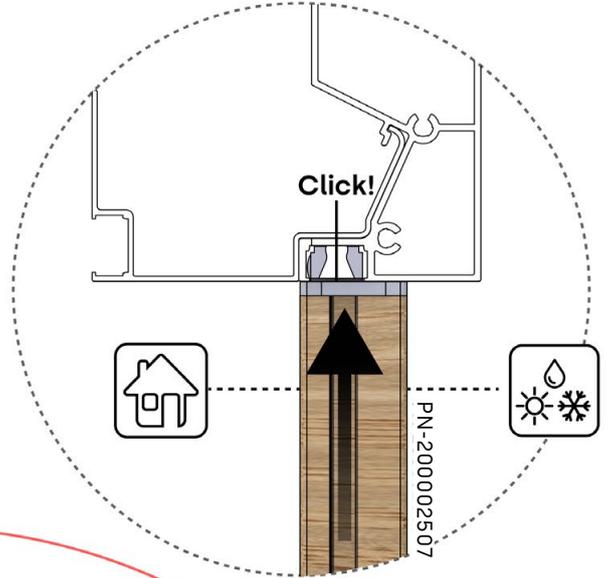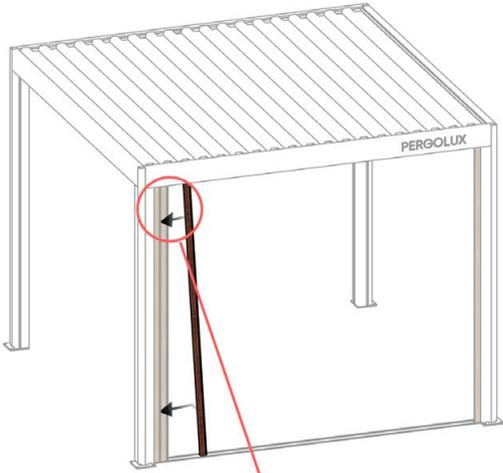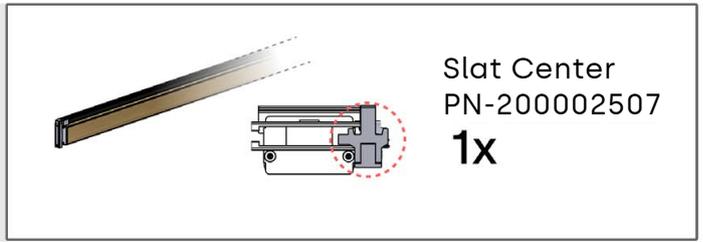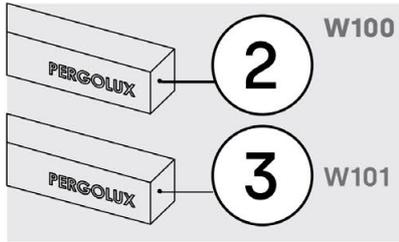




10

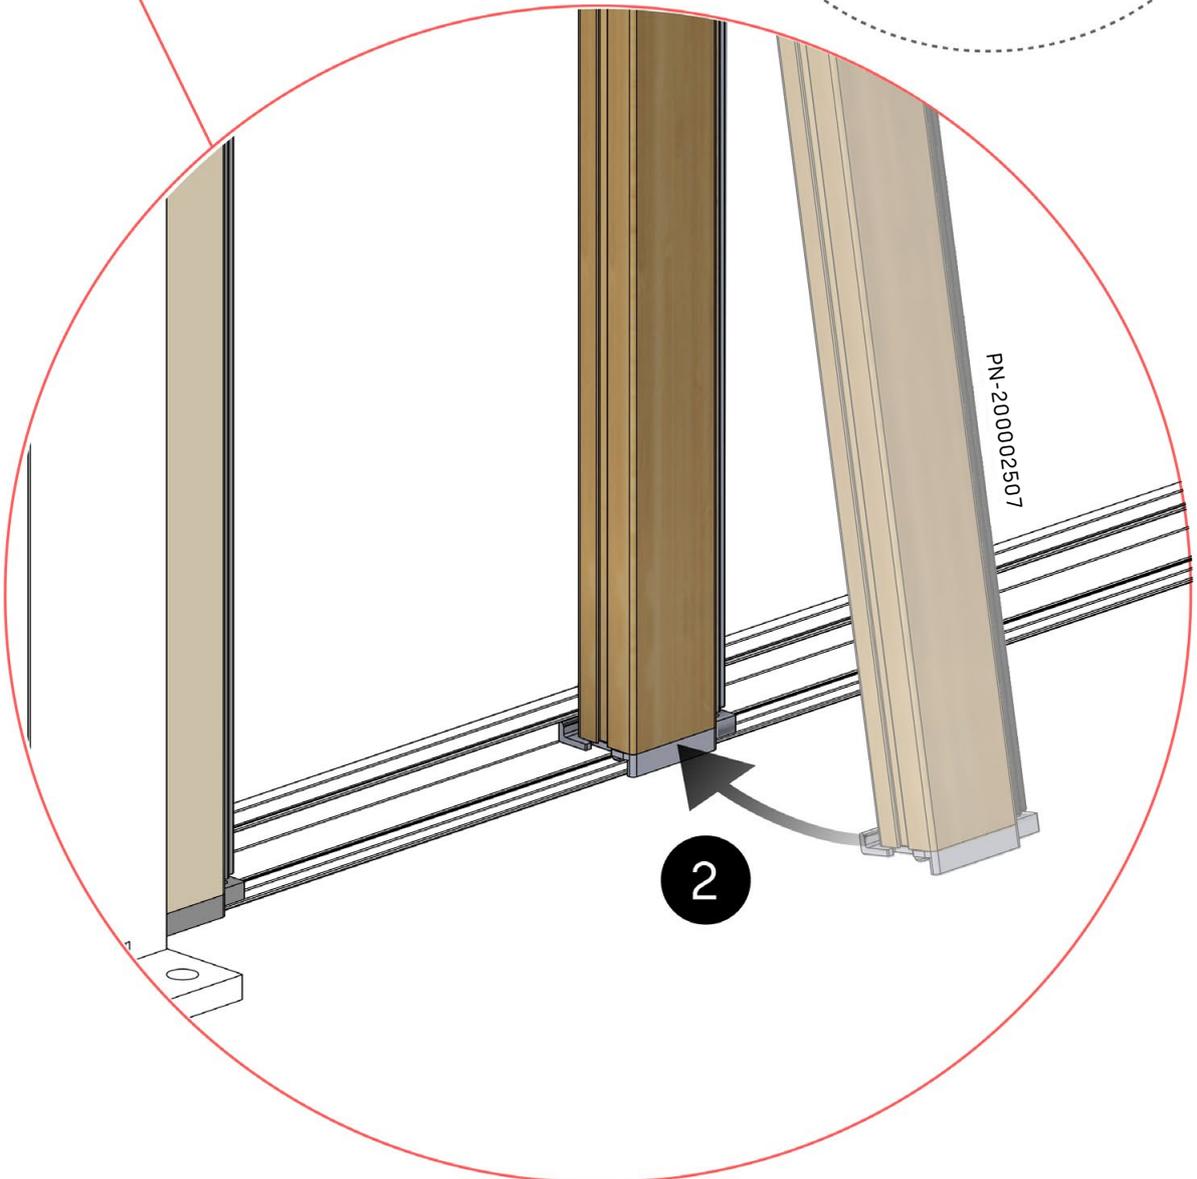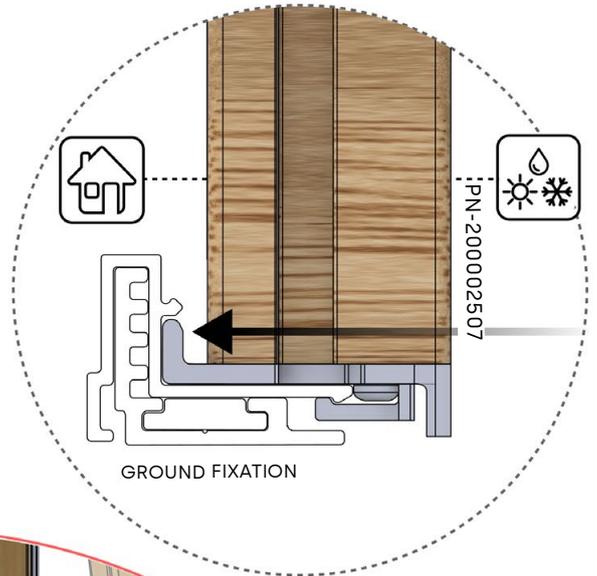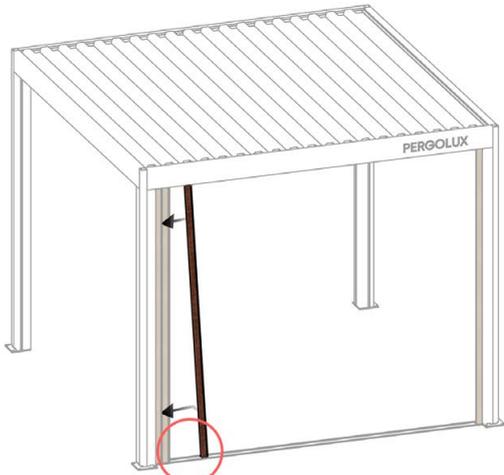




11

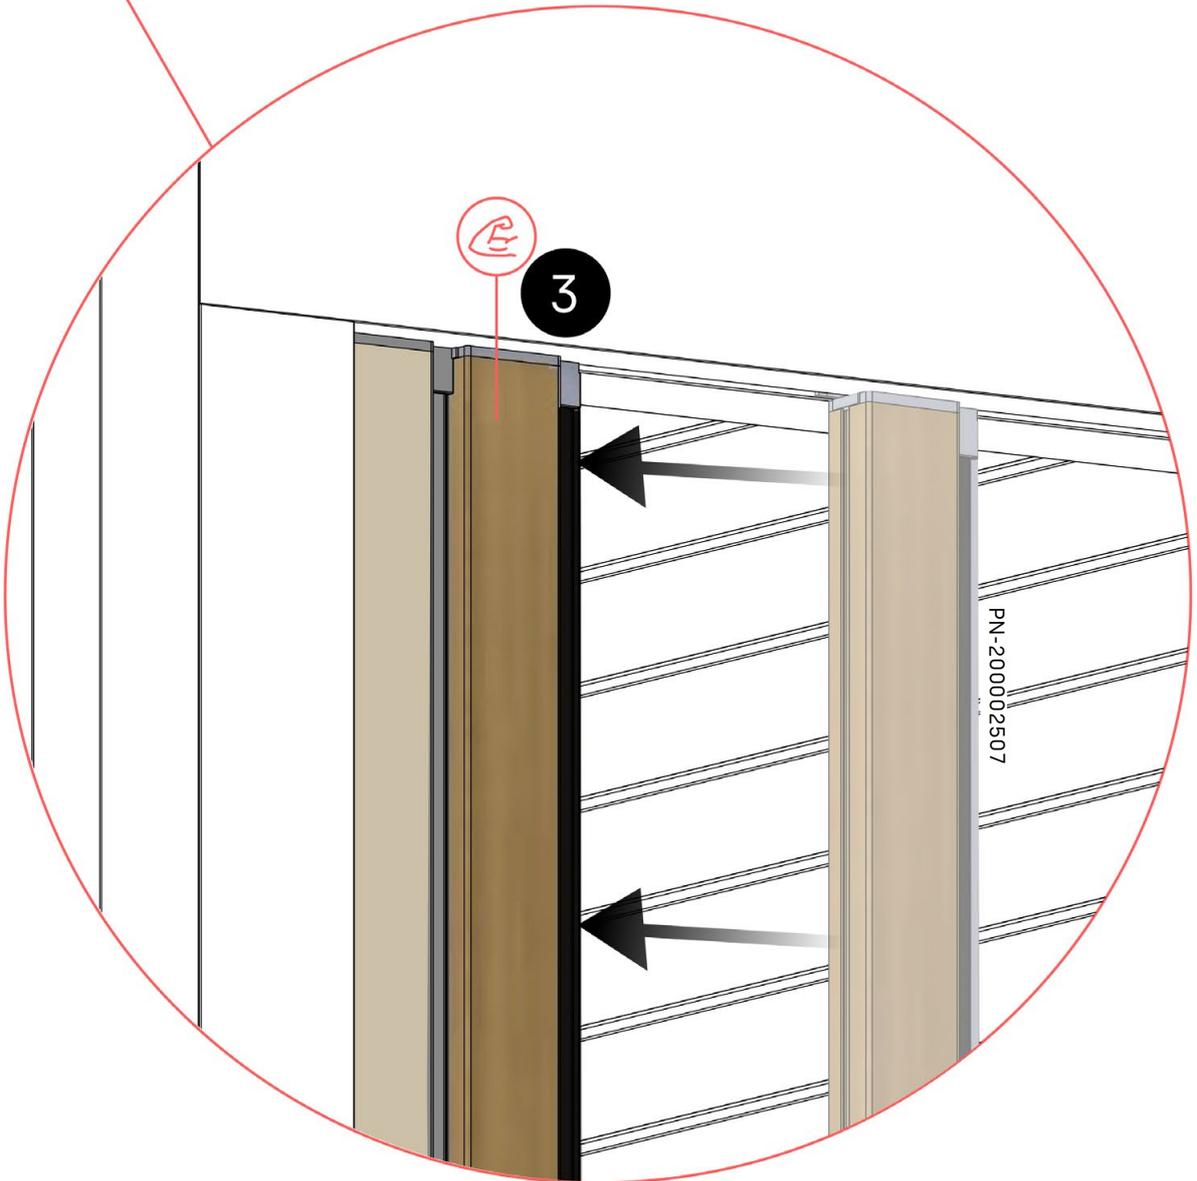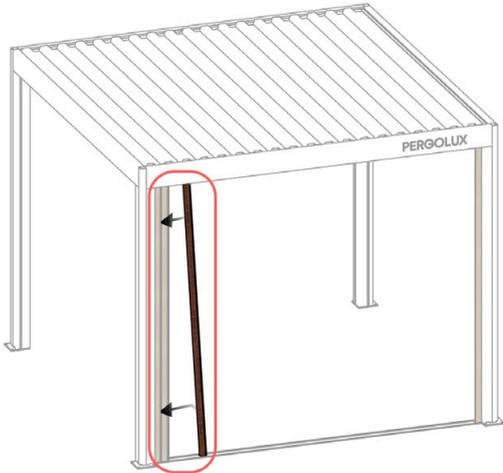







12

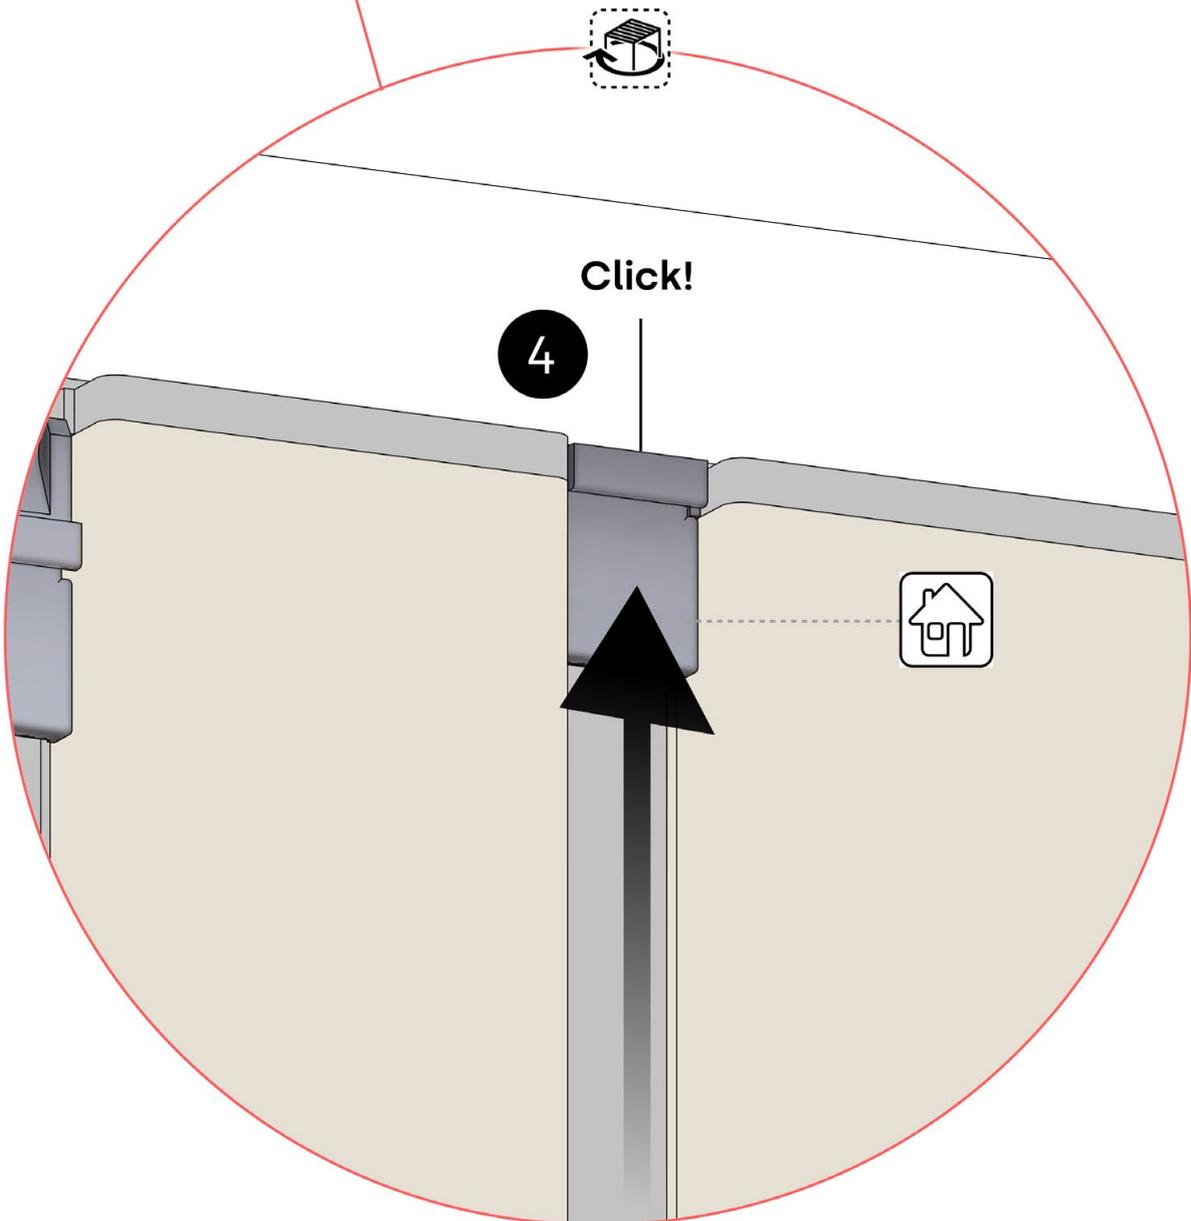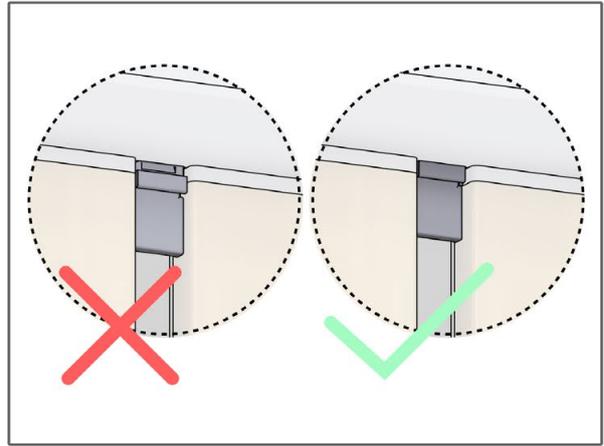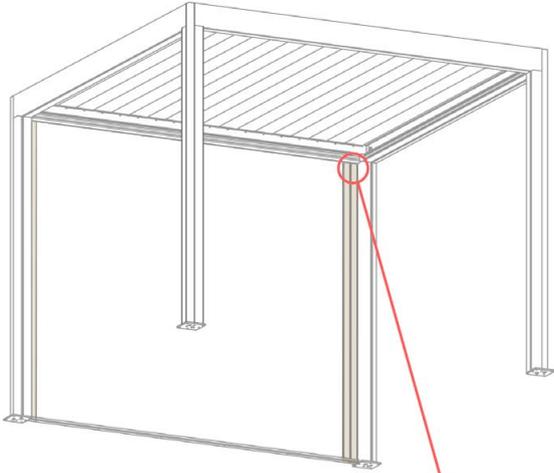


13

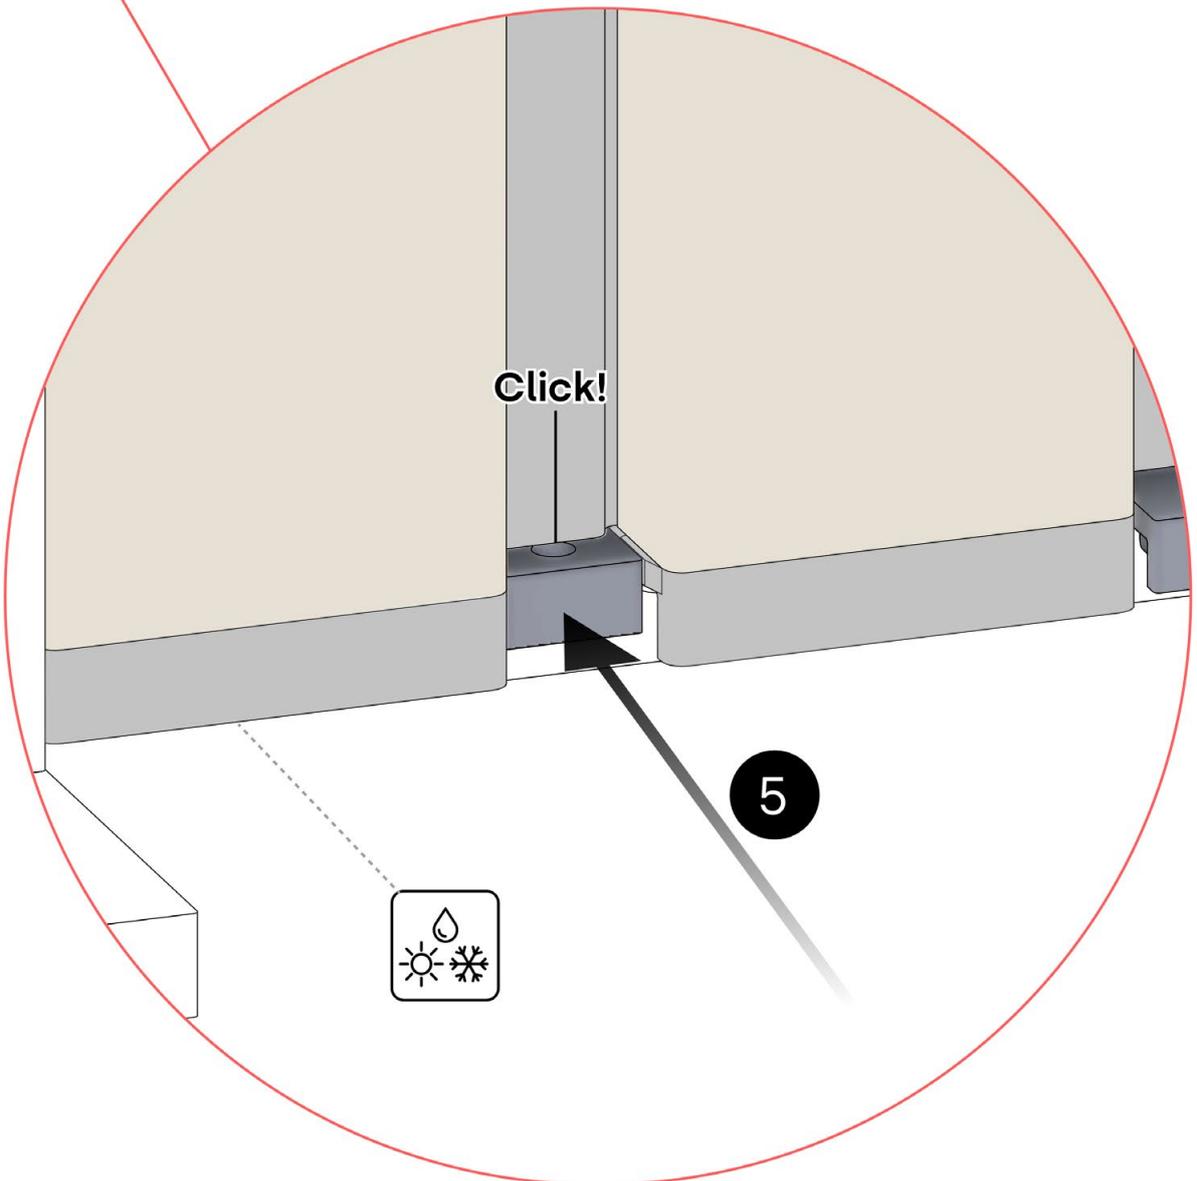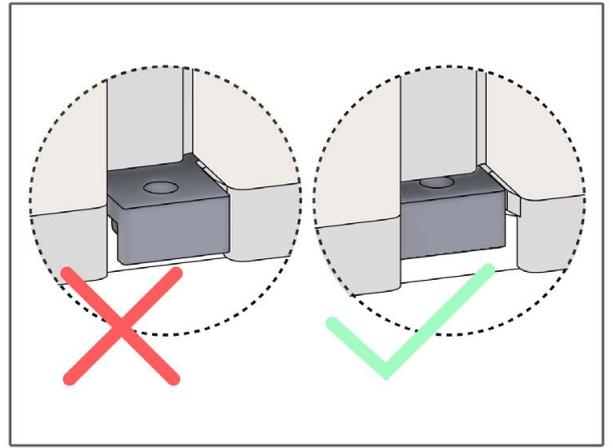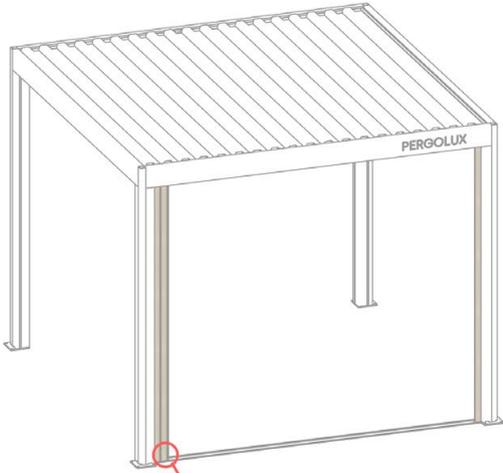


14

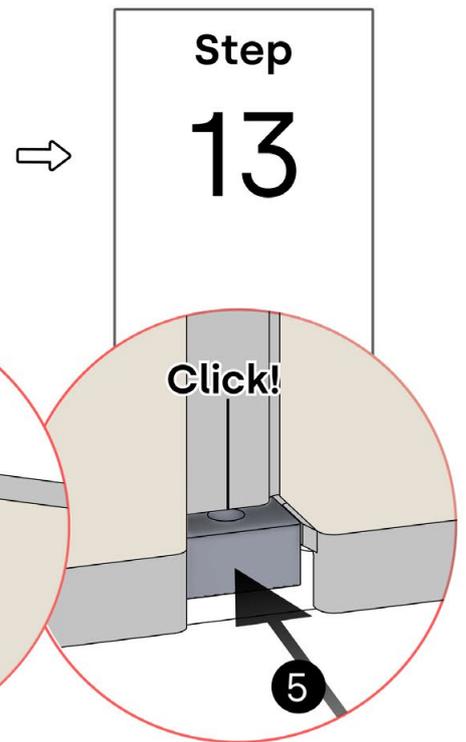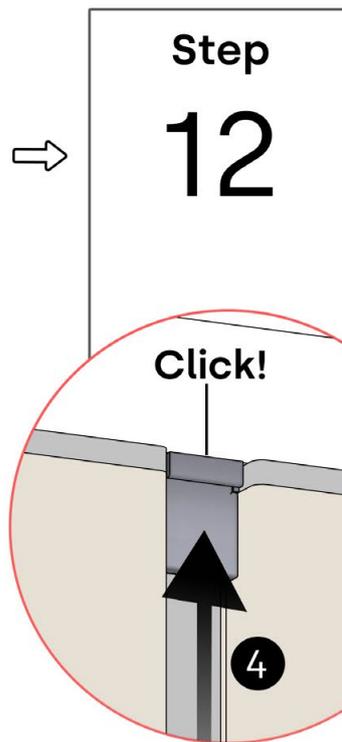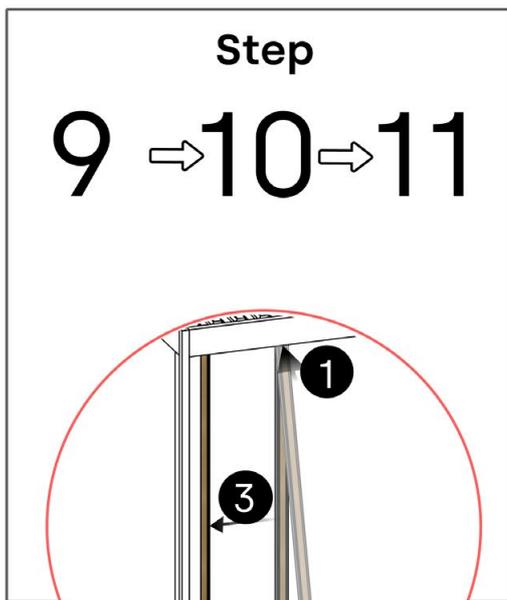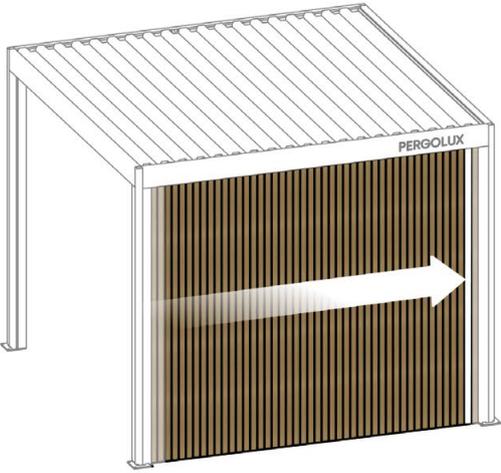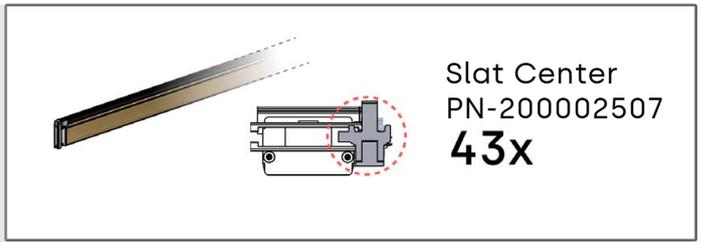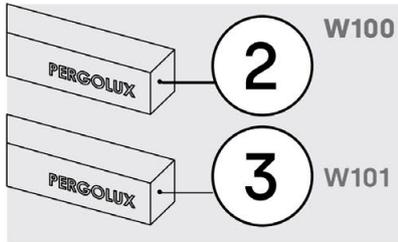






15

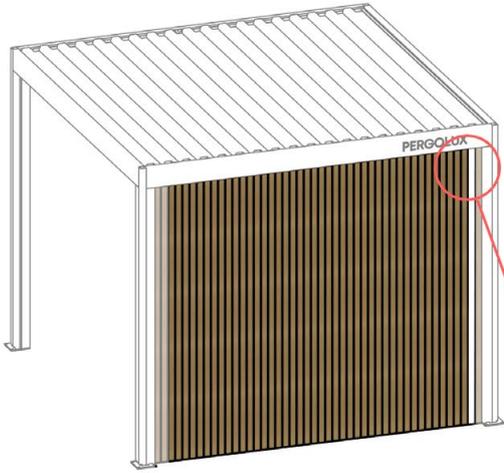

The last step can be a bit tricky, we recommend to press all profiles closely together to avoid leaving any gaps, which could prevent the last profile from fitting in place.

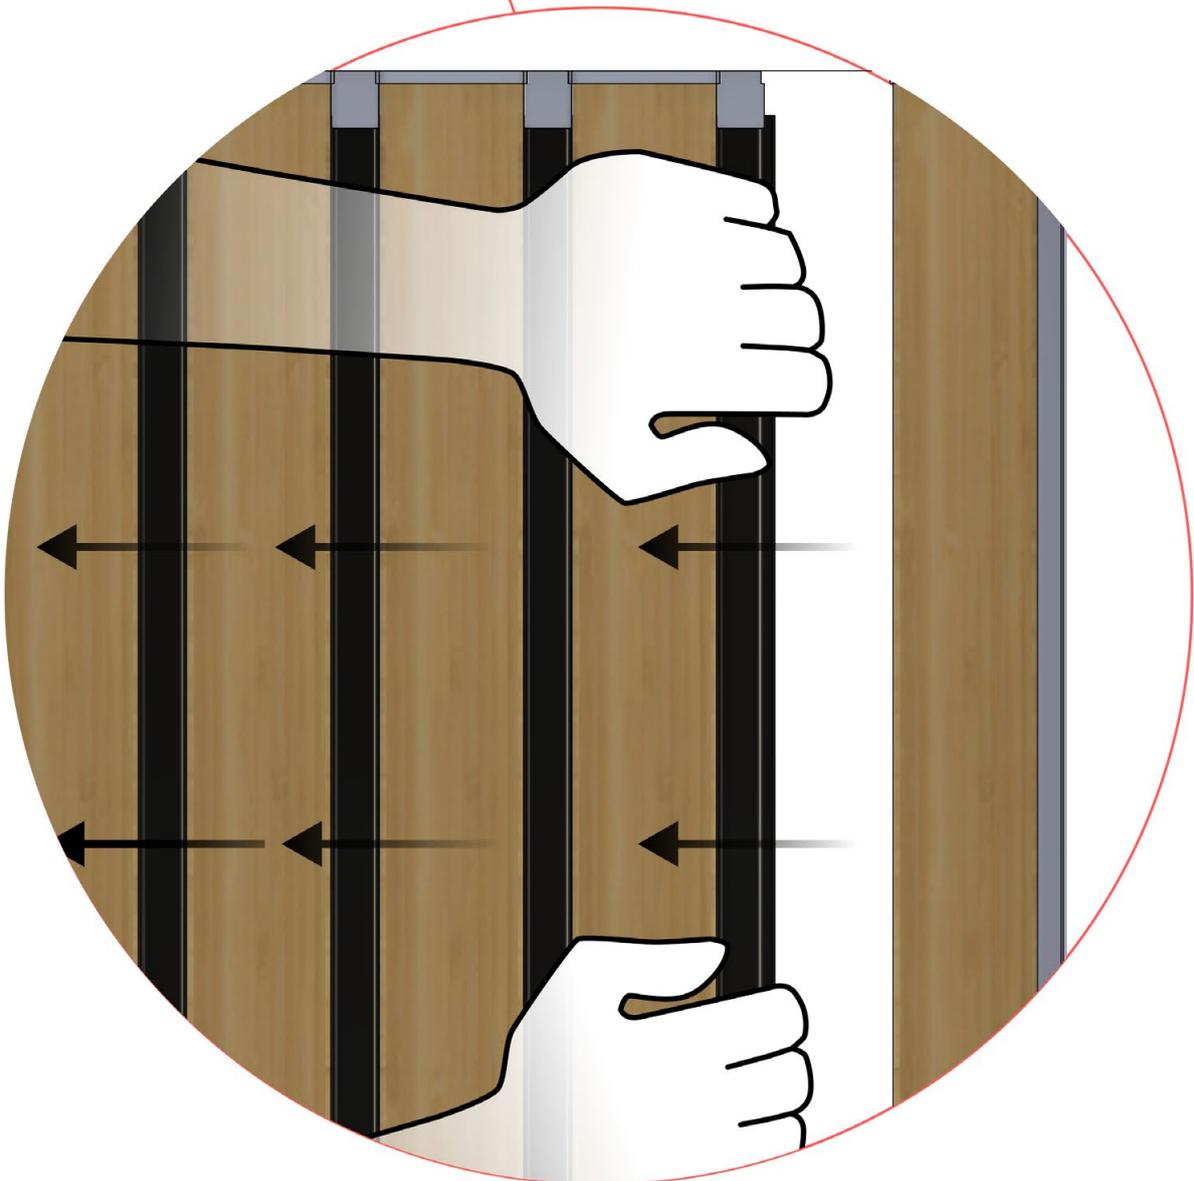




16

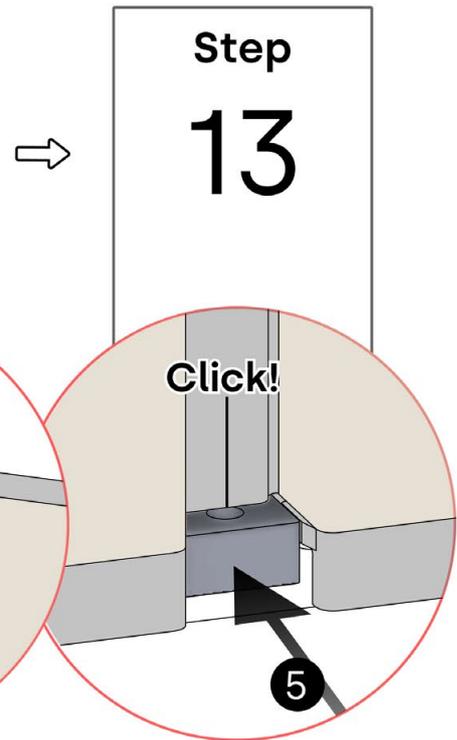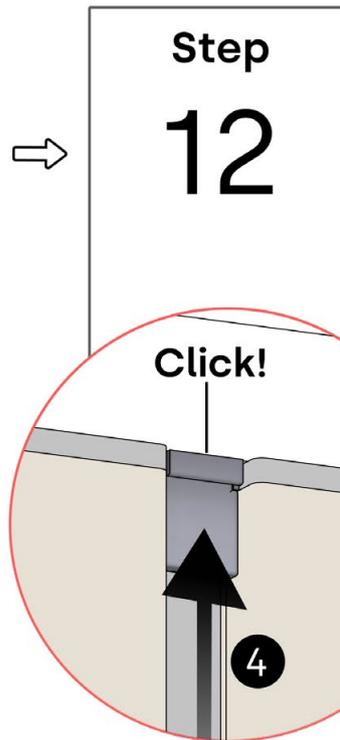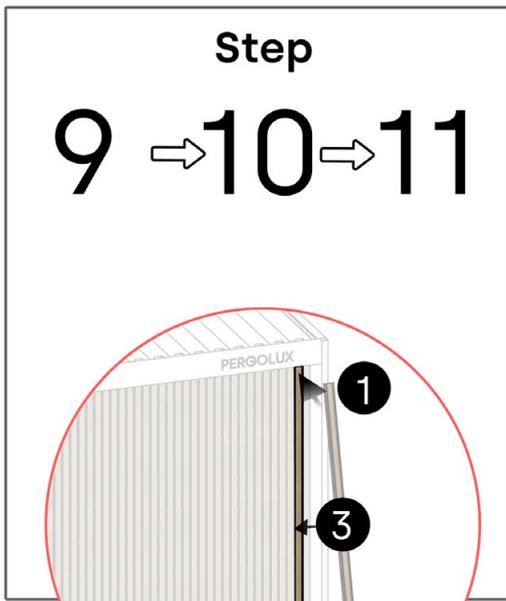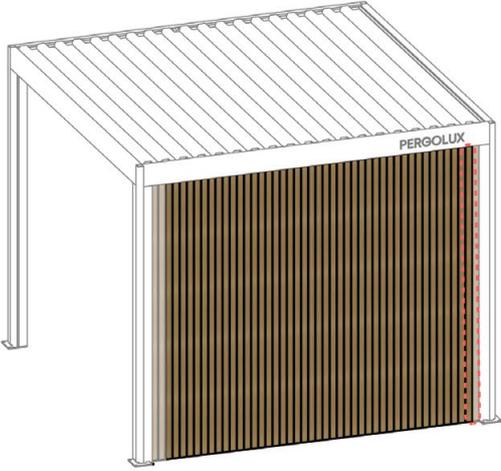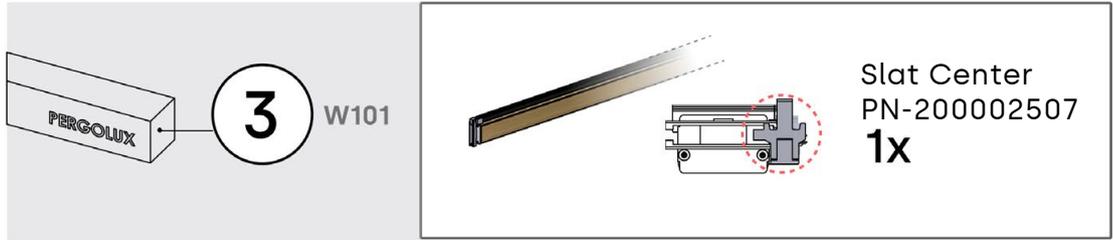






17



Carefully adjust the slats by hand to ensure the gap at the end is even, if necessary.

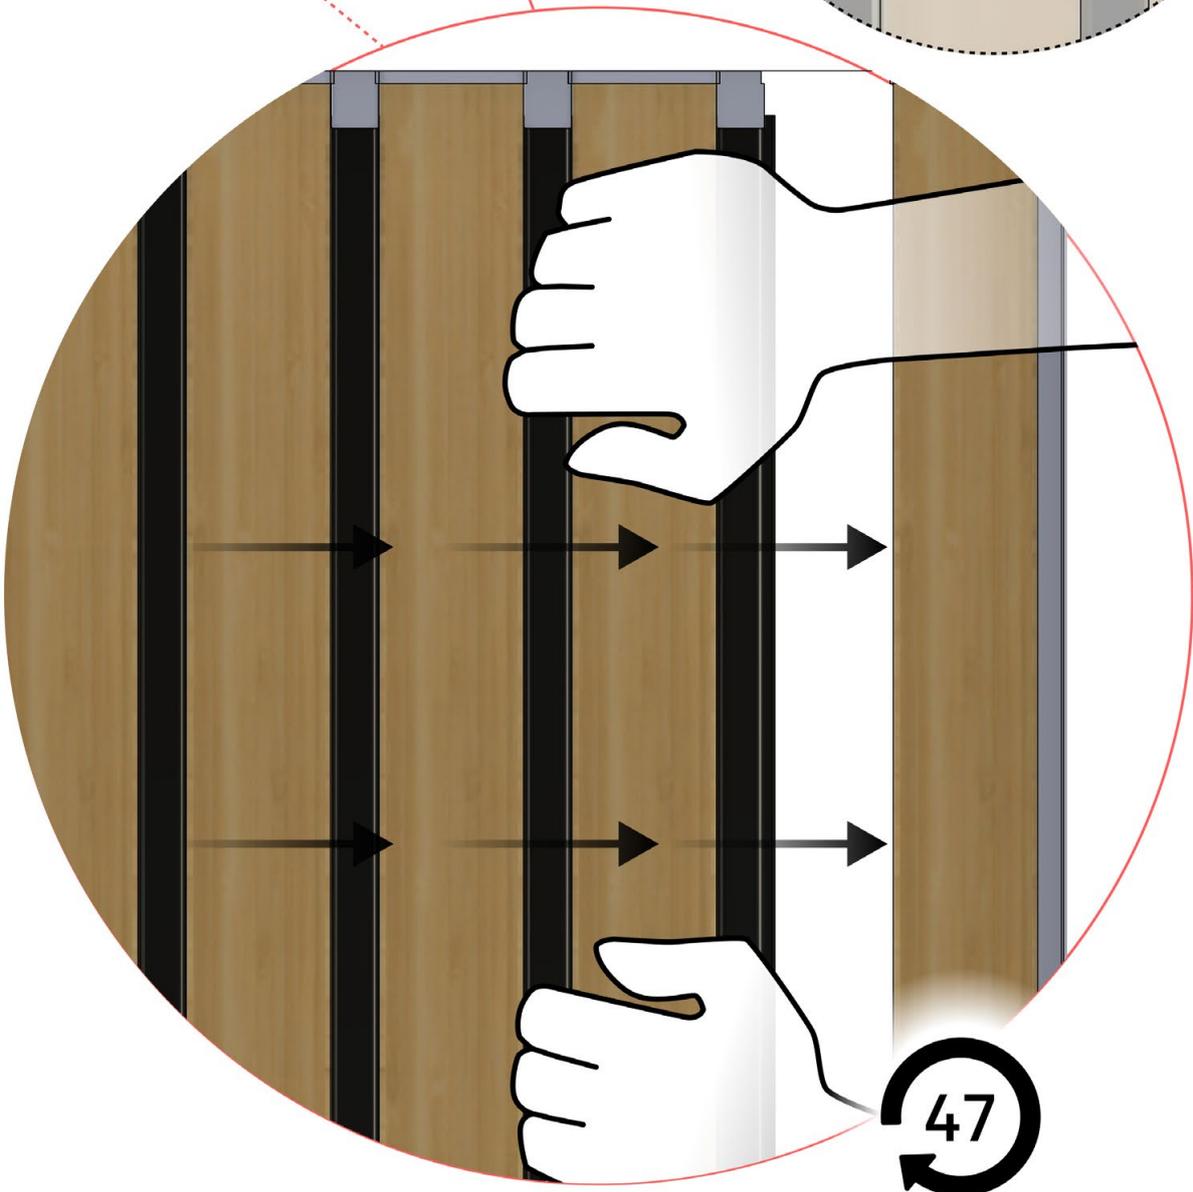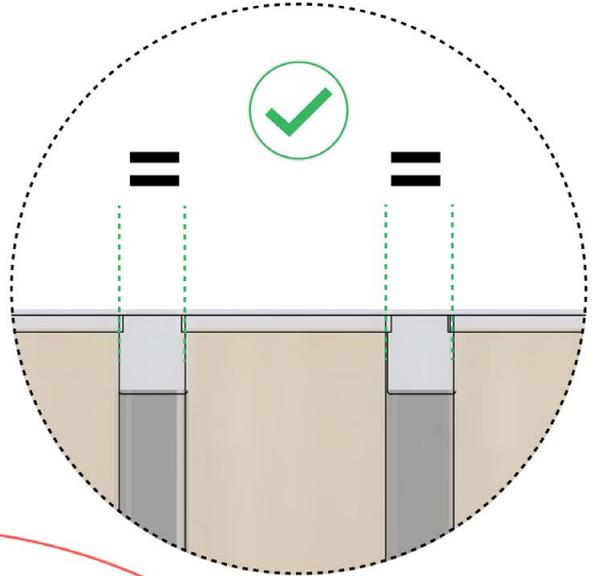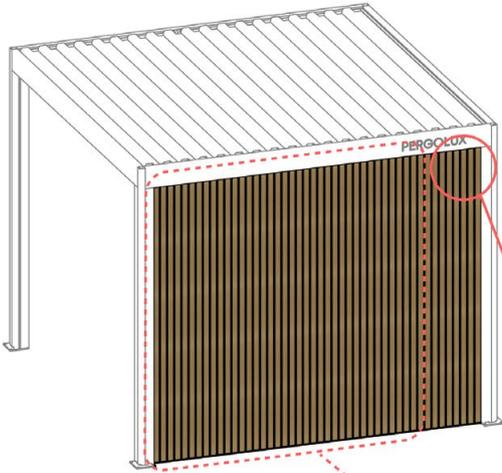


18

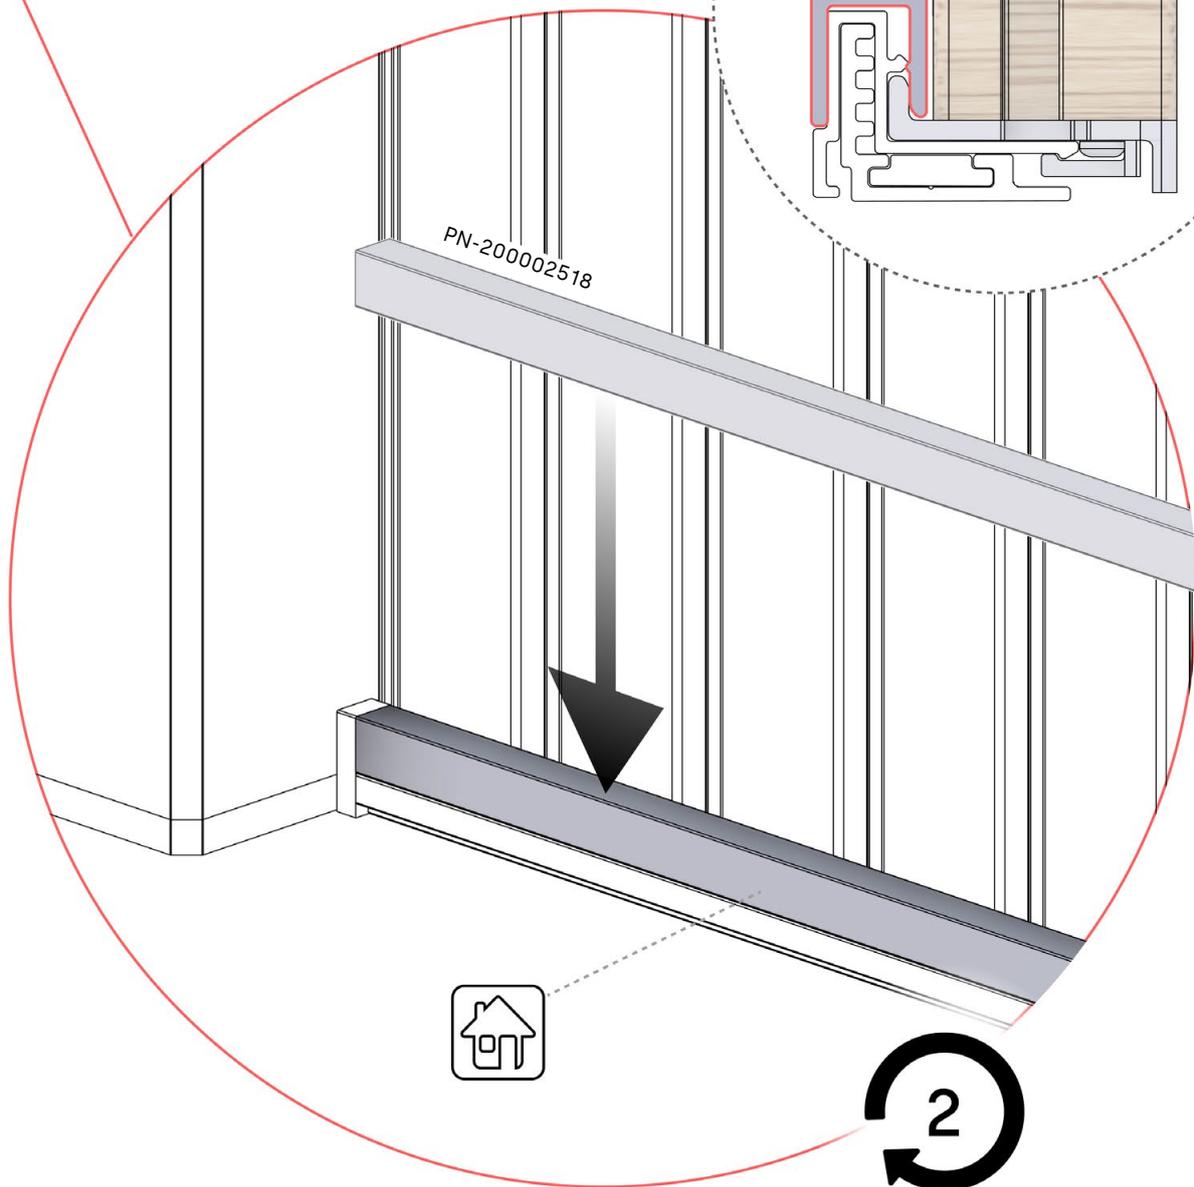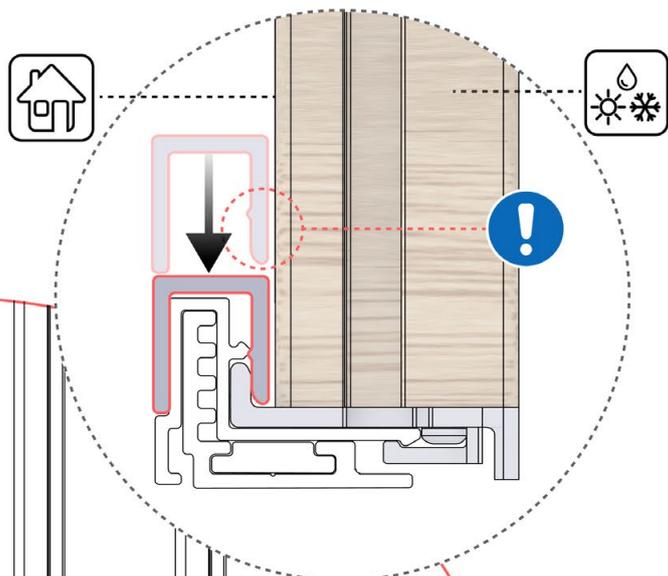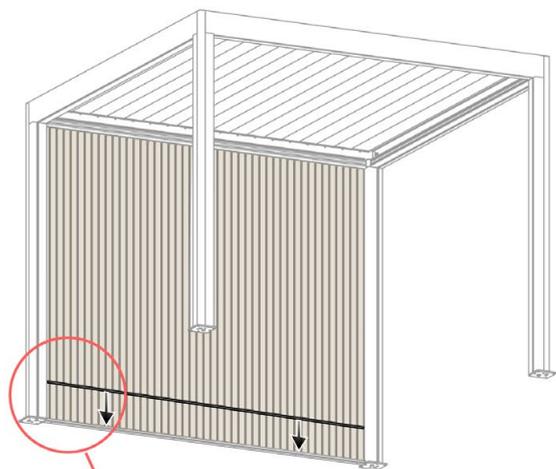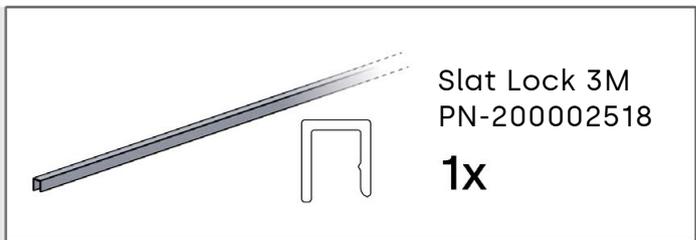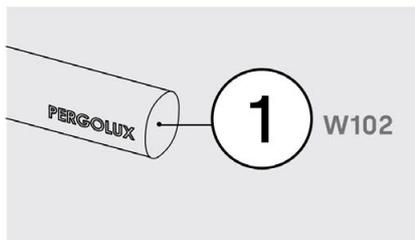

PERGOLUX | SLAT WALL

3 M / 10'

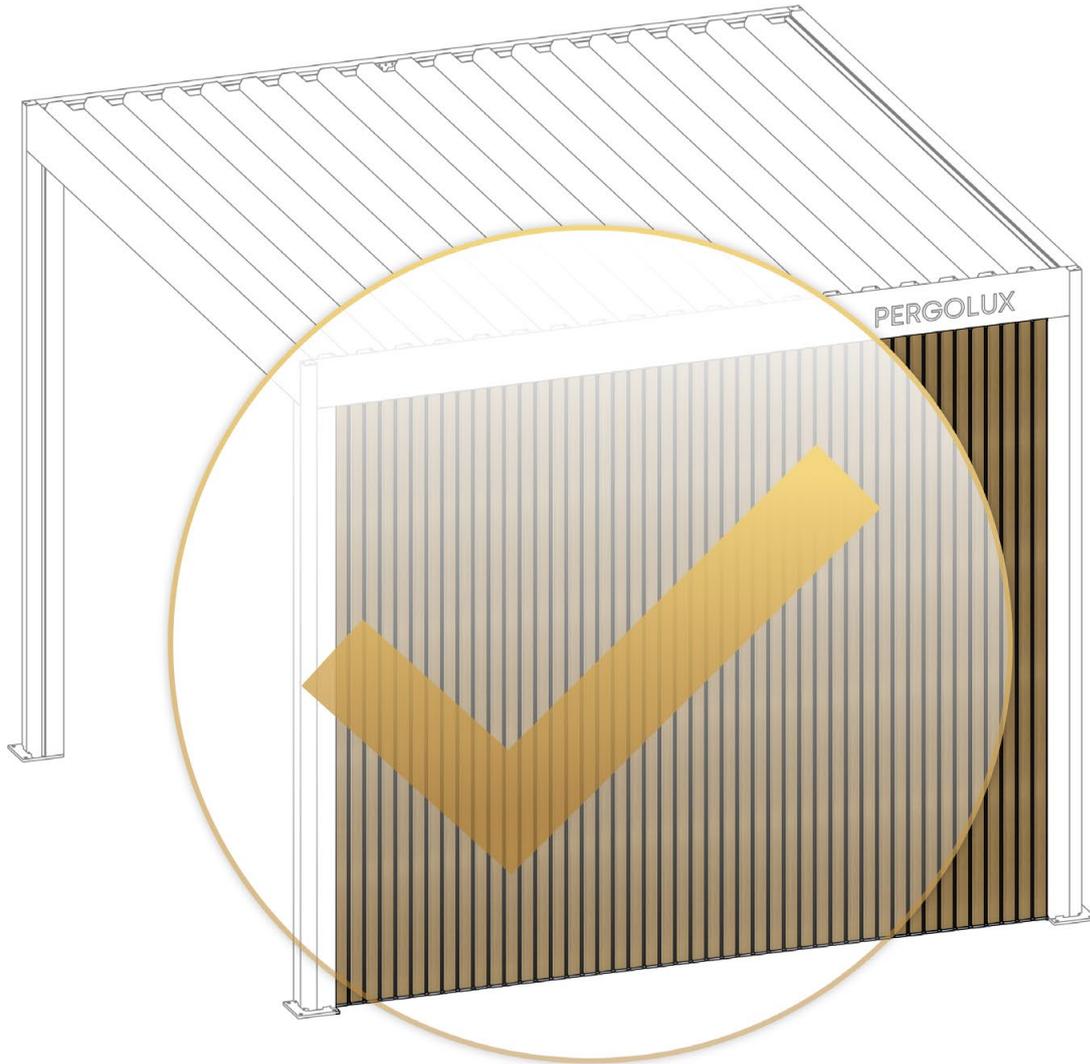

PERGOLUX
