
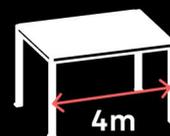


# PERGOLUX

SCREEN S2 3m and 4m Skydance

Use this instructions if you have a:

PERGOLUX Skydance S2 3m/4m

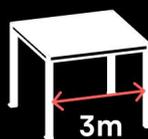

# PERGOLUX

---

**Congratulations and thank you for choosing a PERGOLUX Product!**

To enjoy this product for a long time as well as for your own and others' safety, please follow the installation instructions. Before you start assembling and using the pergola, ensure that all the parts listed in the manual are delivered and intact. If you need help with the installation, you can contact us by chat, phone, e-mail or at our website.

*We wish you good luck with the assembling process!*

## Contact:



Germany



United Kingdom



United States



Denmark



Sweden



Norway



Australia



France



Switzerland



Italy



Netherlands



Austria



Chile  
[contacto@pergolux.cl](mailto:contacto@pergolux.cl)



Brazil  
[contato@pergolux.com.br](mailto:contato@pergolux.com.br)

# PERGOLUX

---

## Having some issues or submit a claim?

If you are faced to an issue with your PERGOLUX products and needs to submit a claim please read this article:



[Complaints and Technical Issues](#)



[Reklamation einreichen. Schritt für Schritt Anleitung](#)

Submit the claim here:



[Submit a request](#)



[Anfrage einreichen](#)



[Een aanvraag indienen](#)



[Enviar una solicitud](#)



[Envoyer une demande](#)



[Send oss en henvendelse](#)



[Skicka oss en förfrågan](#)





[Send os en forespørgsel](#)




# PERGOLUX

## SCREEN S2


---

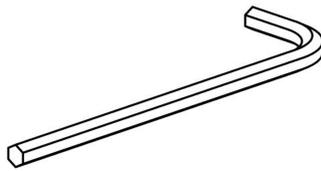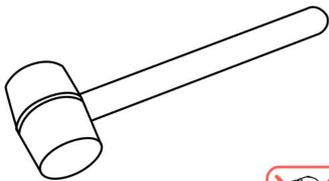

T20 safety torx bit

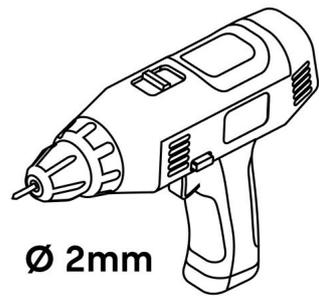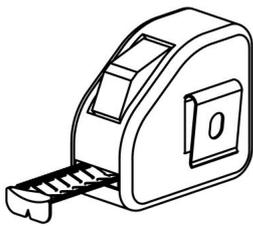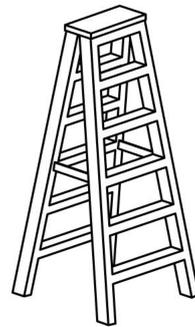


Ø 2mm

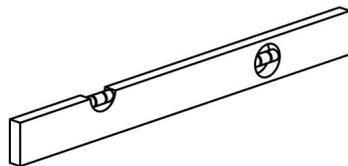

# PERGOLUX




## SCREEN S2 4m PN-200001734

---

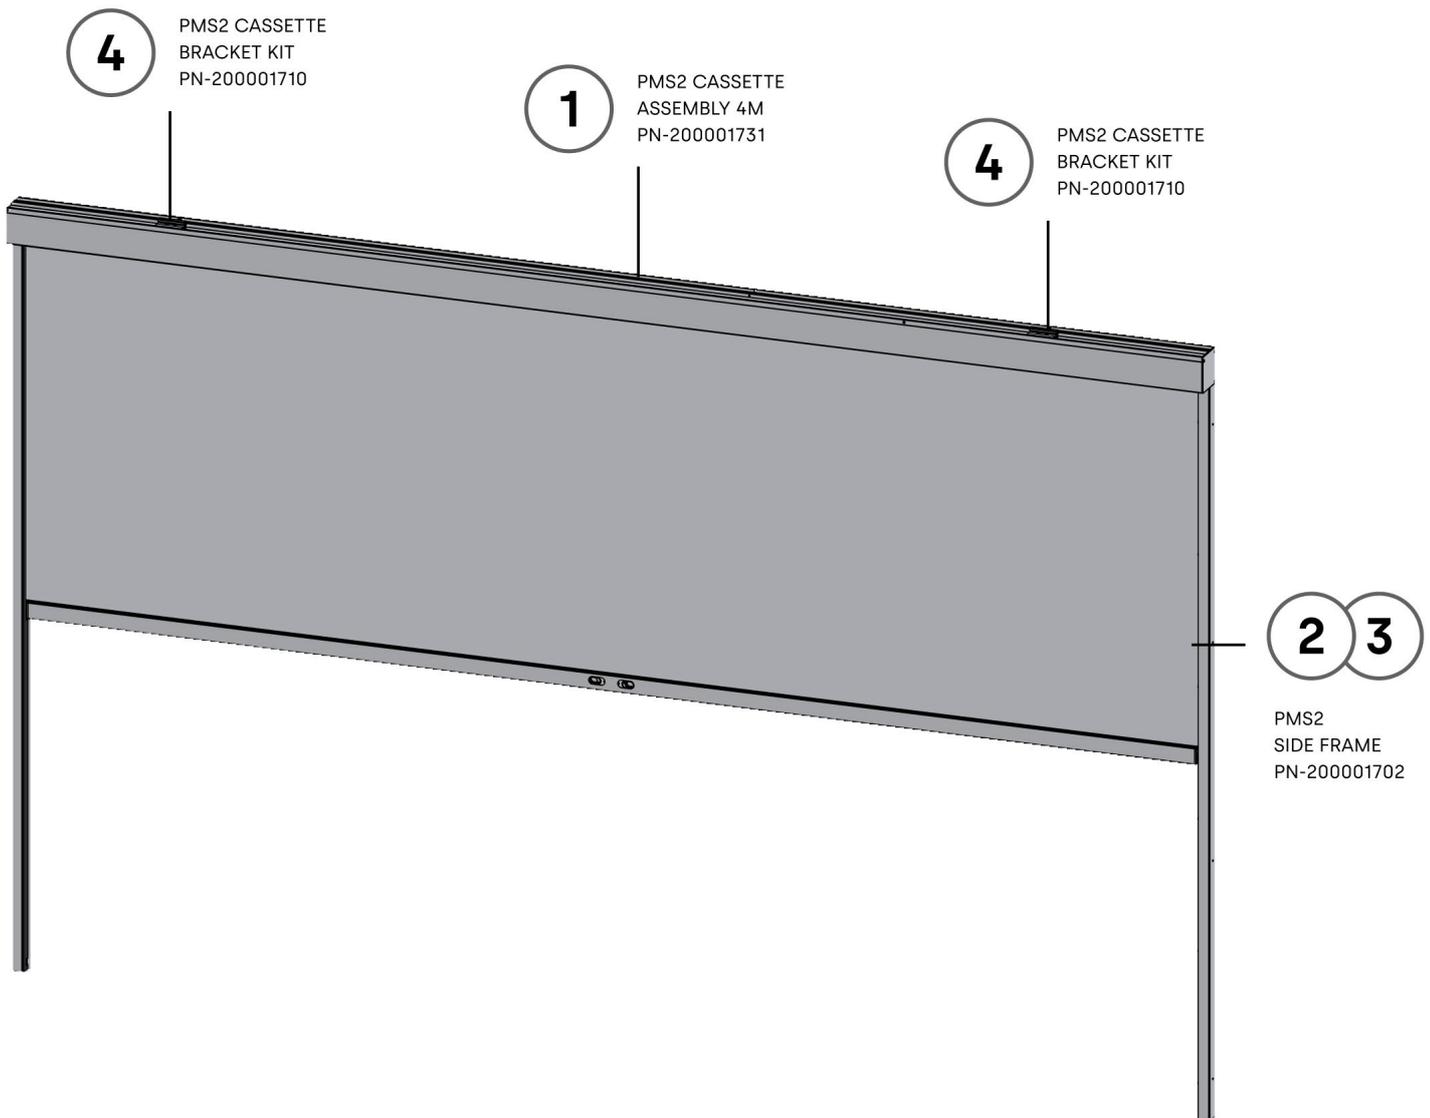


# PERGOLUX


SCREEN S2 4m PN-200001734

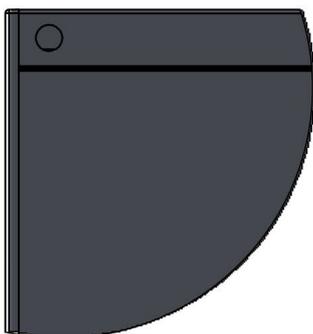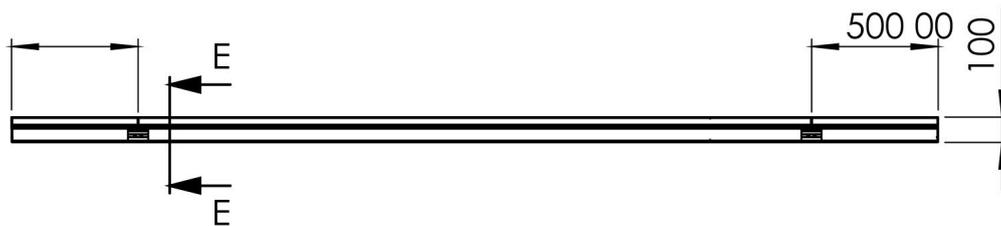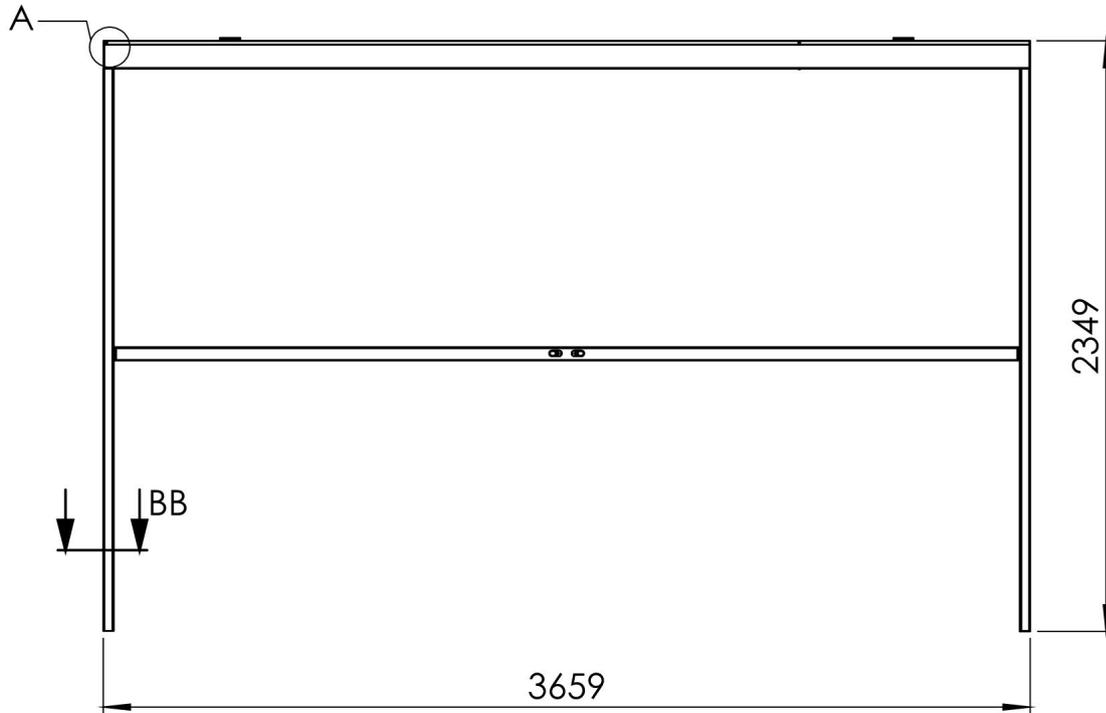

DETAIL A

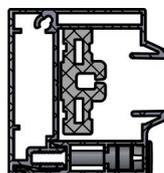

SECTION B-B

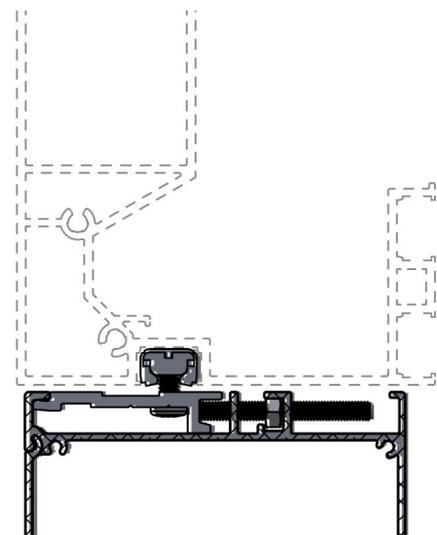

SECTION E-E

# PERGOLUX

## SCREEN S2 3m PN-200001700

---

4


PMS2 CASSETTE  
BRACKET KIT  
PN-200001710

1

PMS2 CASSETTE  
ASSEMBLY 3M  
PN-200001701

4

PMS2 CASSETTE  
BRACKET KIT  
PN-200001710

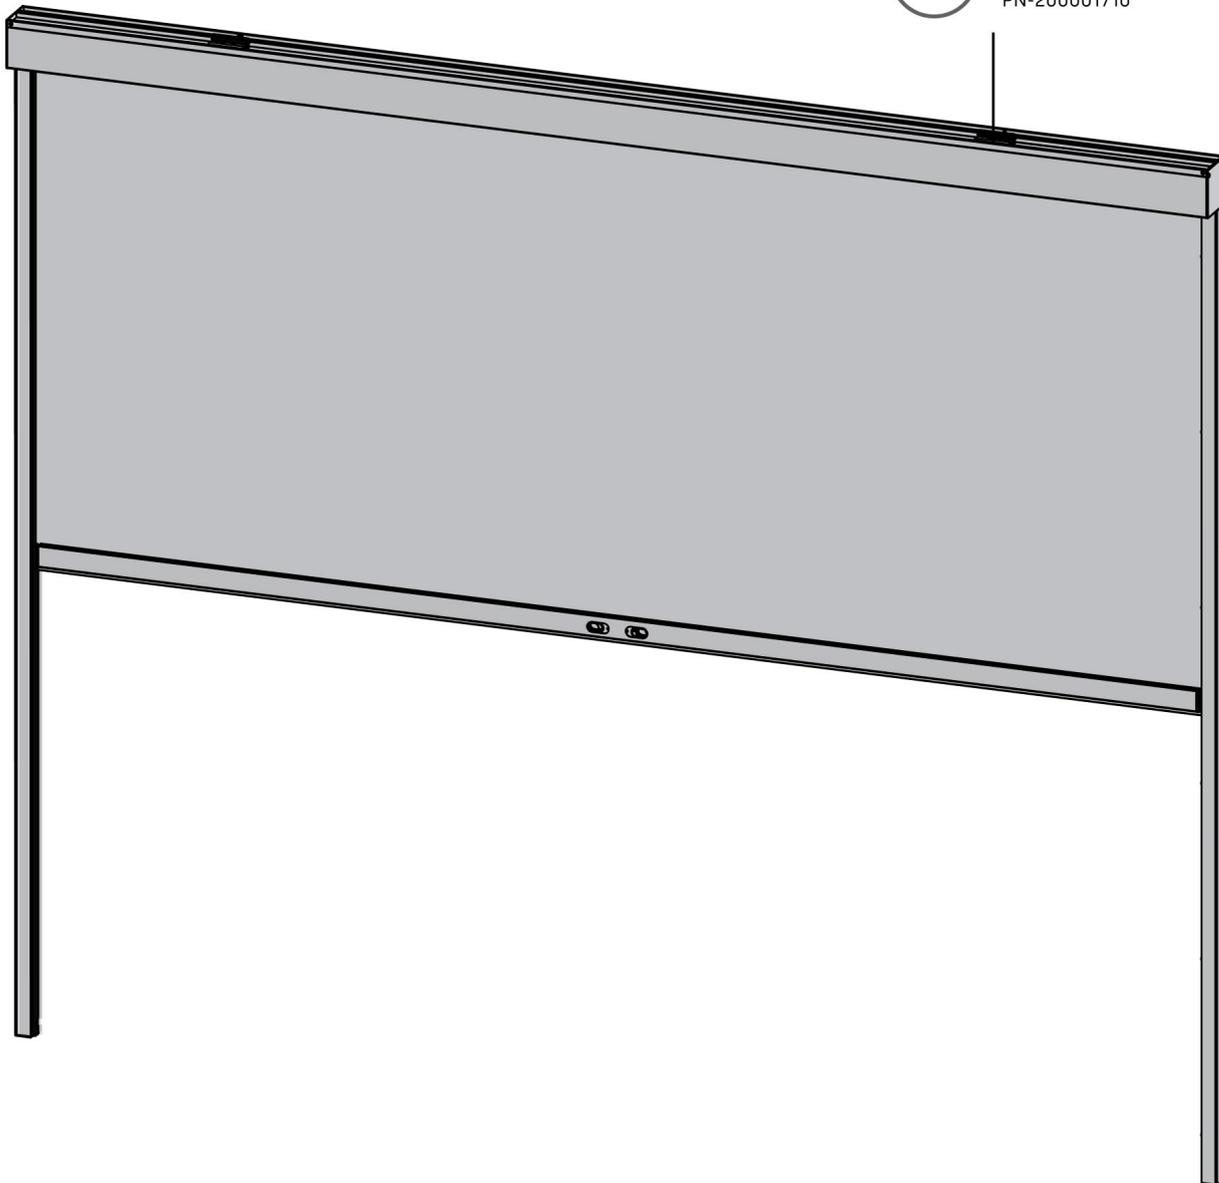



2 3

PMS2  
SIDE FRAME  
PN-200001702


# PERGOLUX

SCREEN S2 3m PN-200001700


---

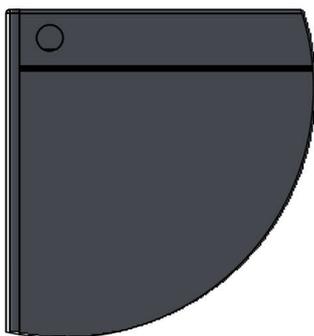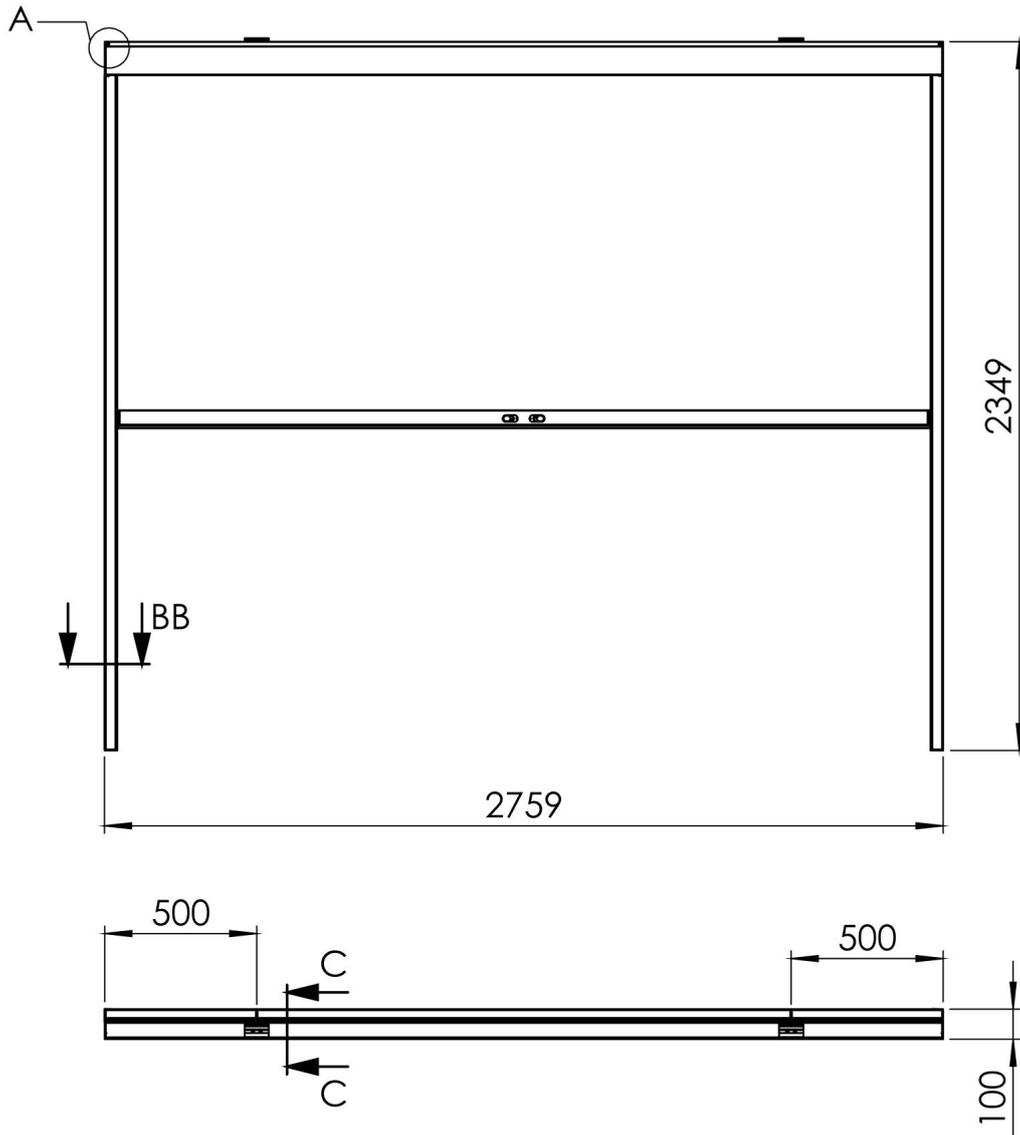

DETAIL A

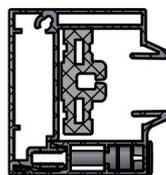

SECTION B-B

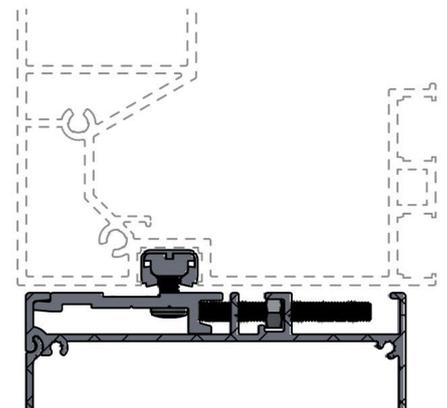

SECTION C-C

# PERGOLUX

SCREEN S2 3m and 4m



①

1x



⑨

2x




②

2x




⑩

12x

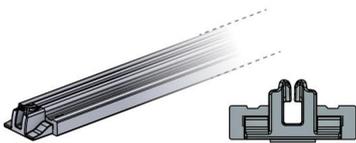

③

2x

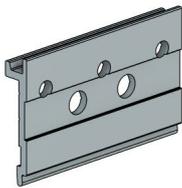

PN-200001695

2x Pre-assembled part



8x20


⑥

4x




⑦

8x




⑧

2x

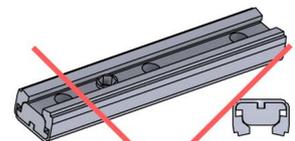





2x




6x

These screws are in the package but should not be used, they are not needed on this model

# 1

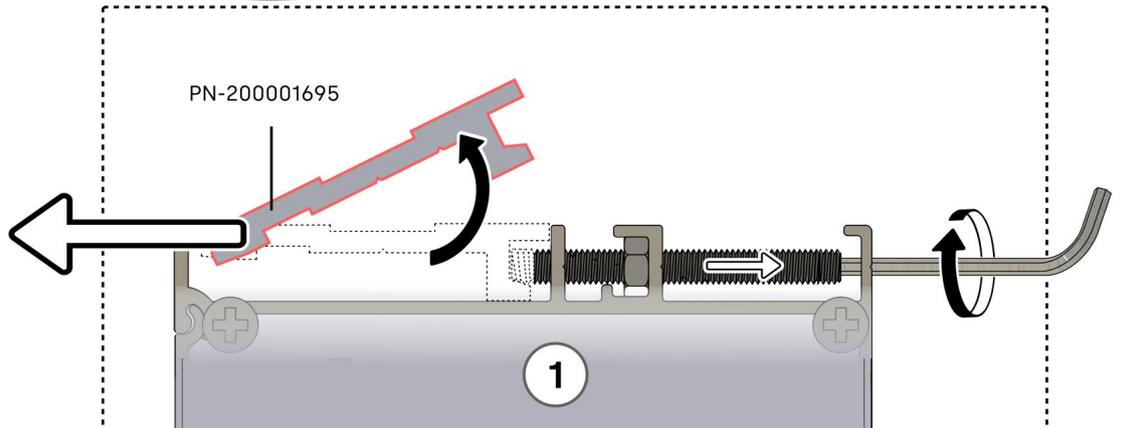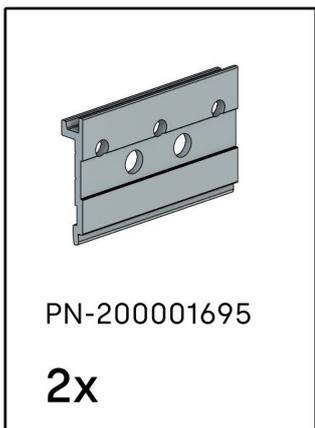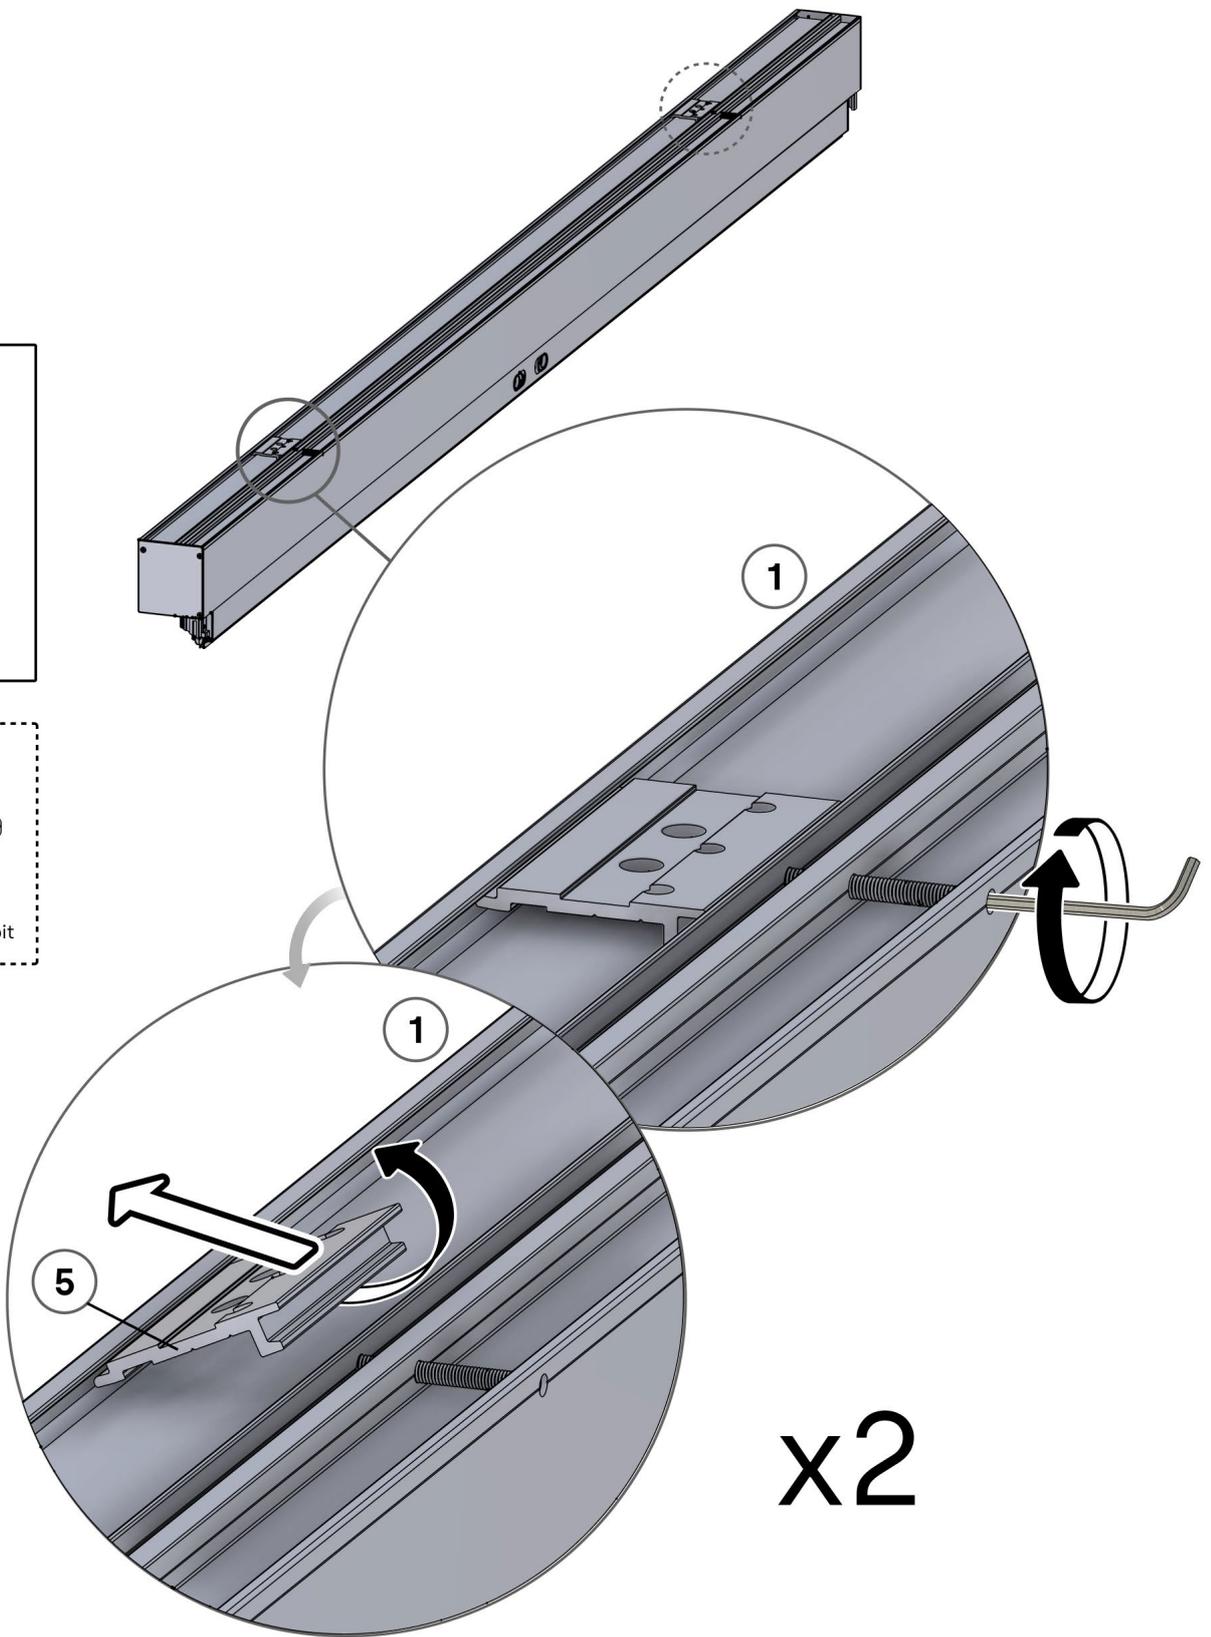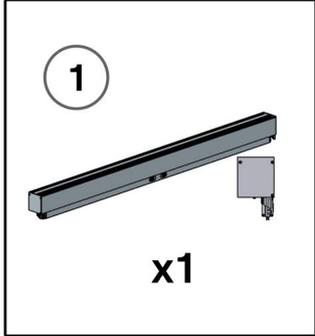


# 2

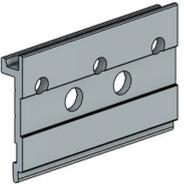

PN-200001695



**2x**

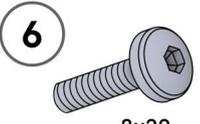






**6**

8x20


**x4**

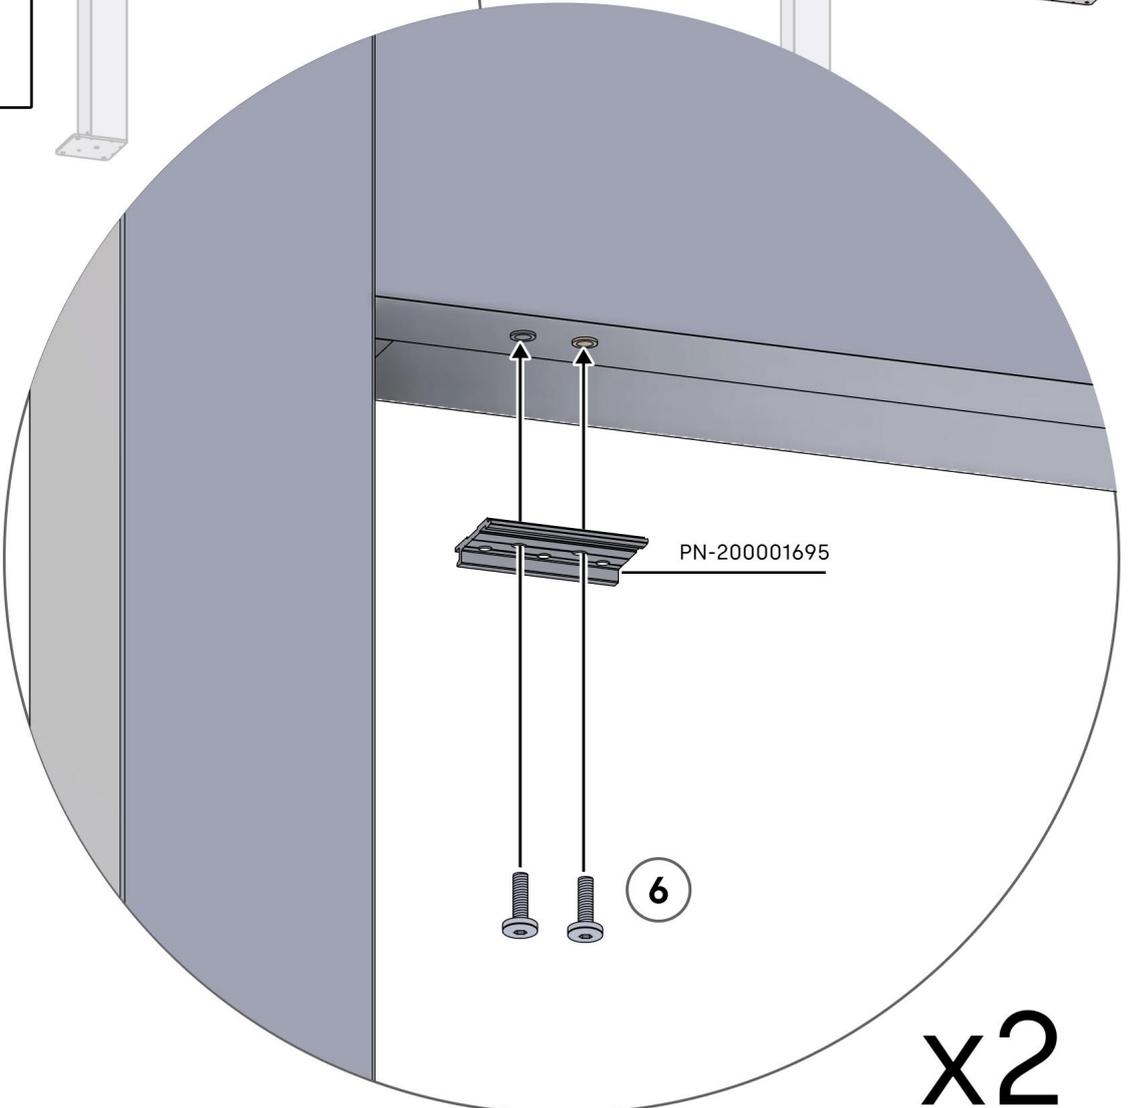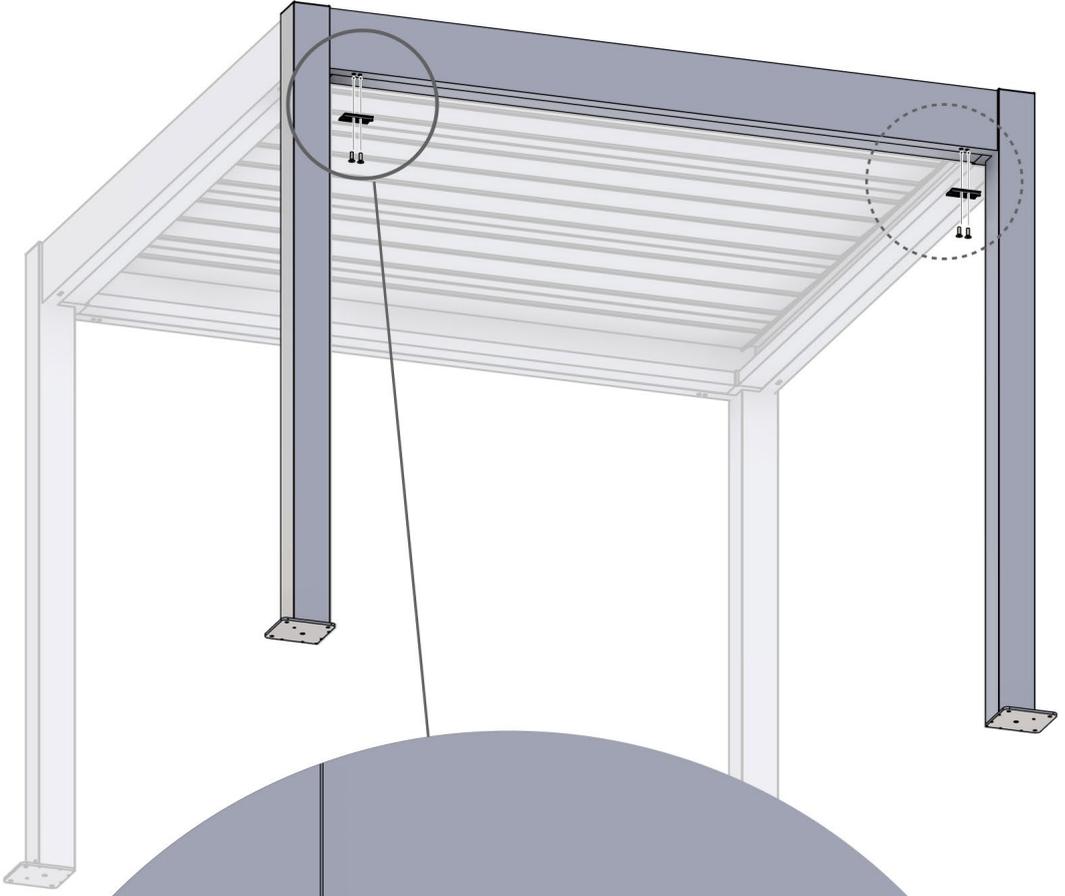



# 3

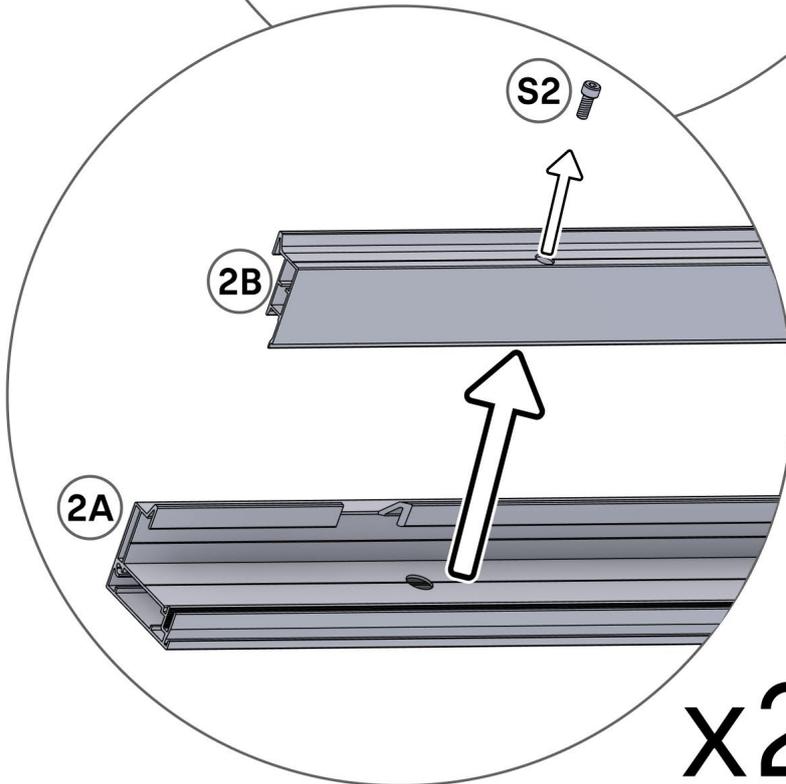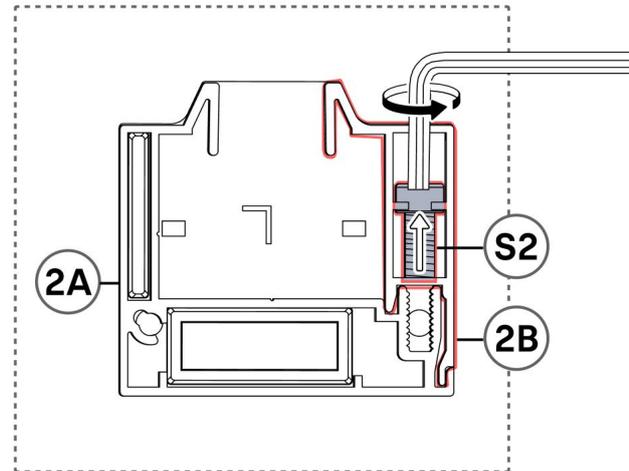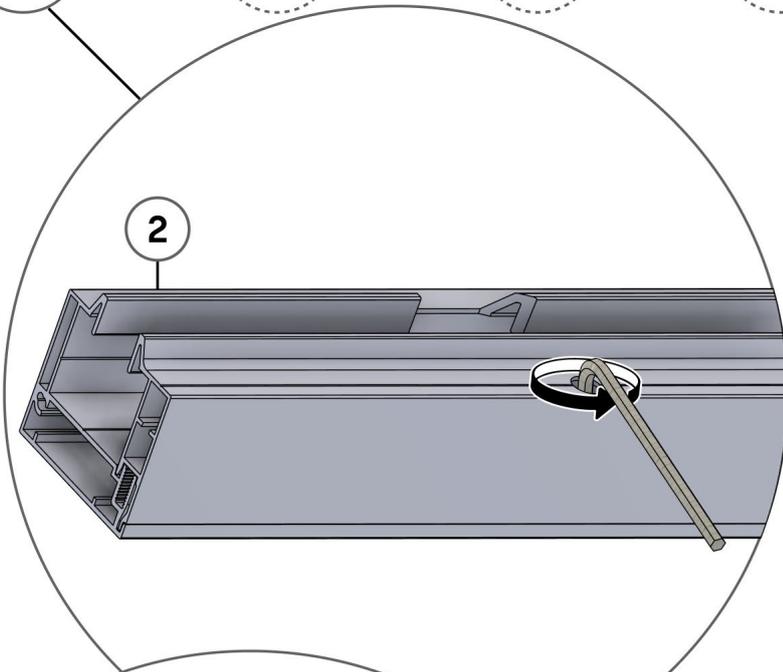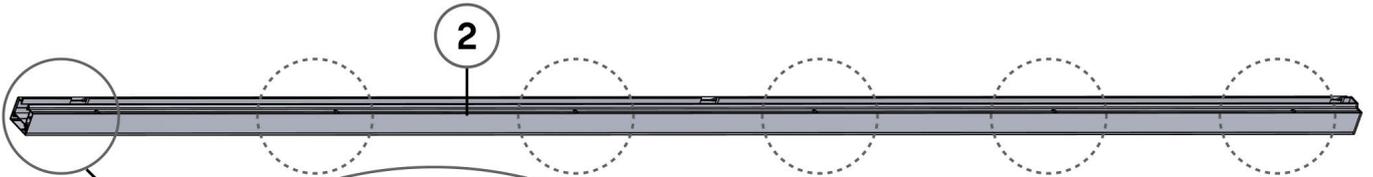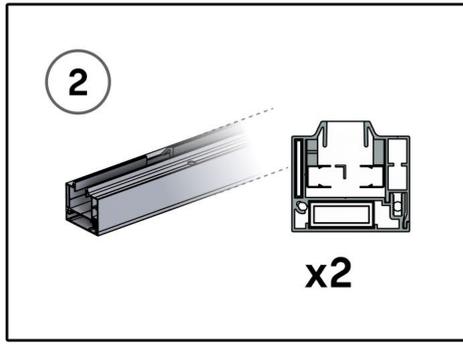








# x2

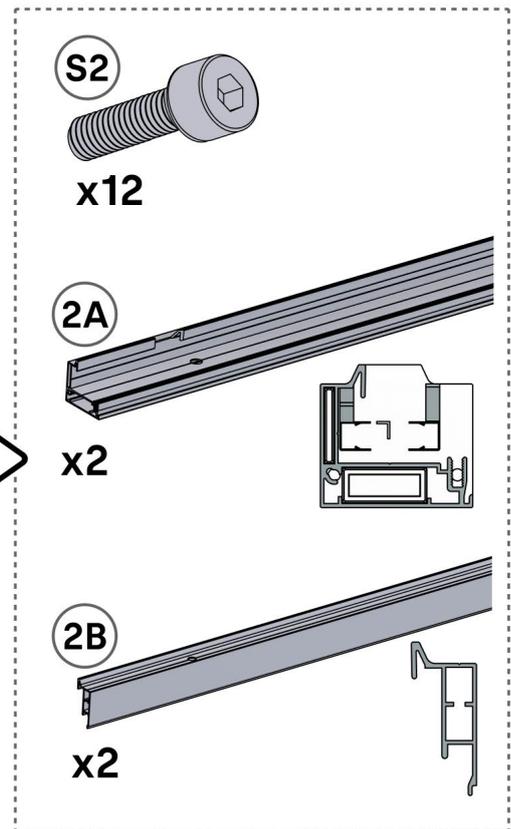


4

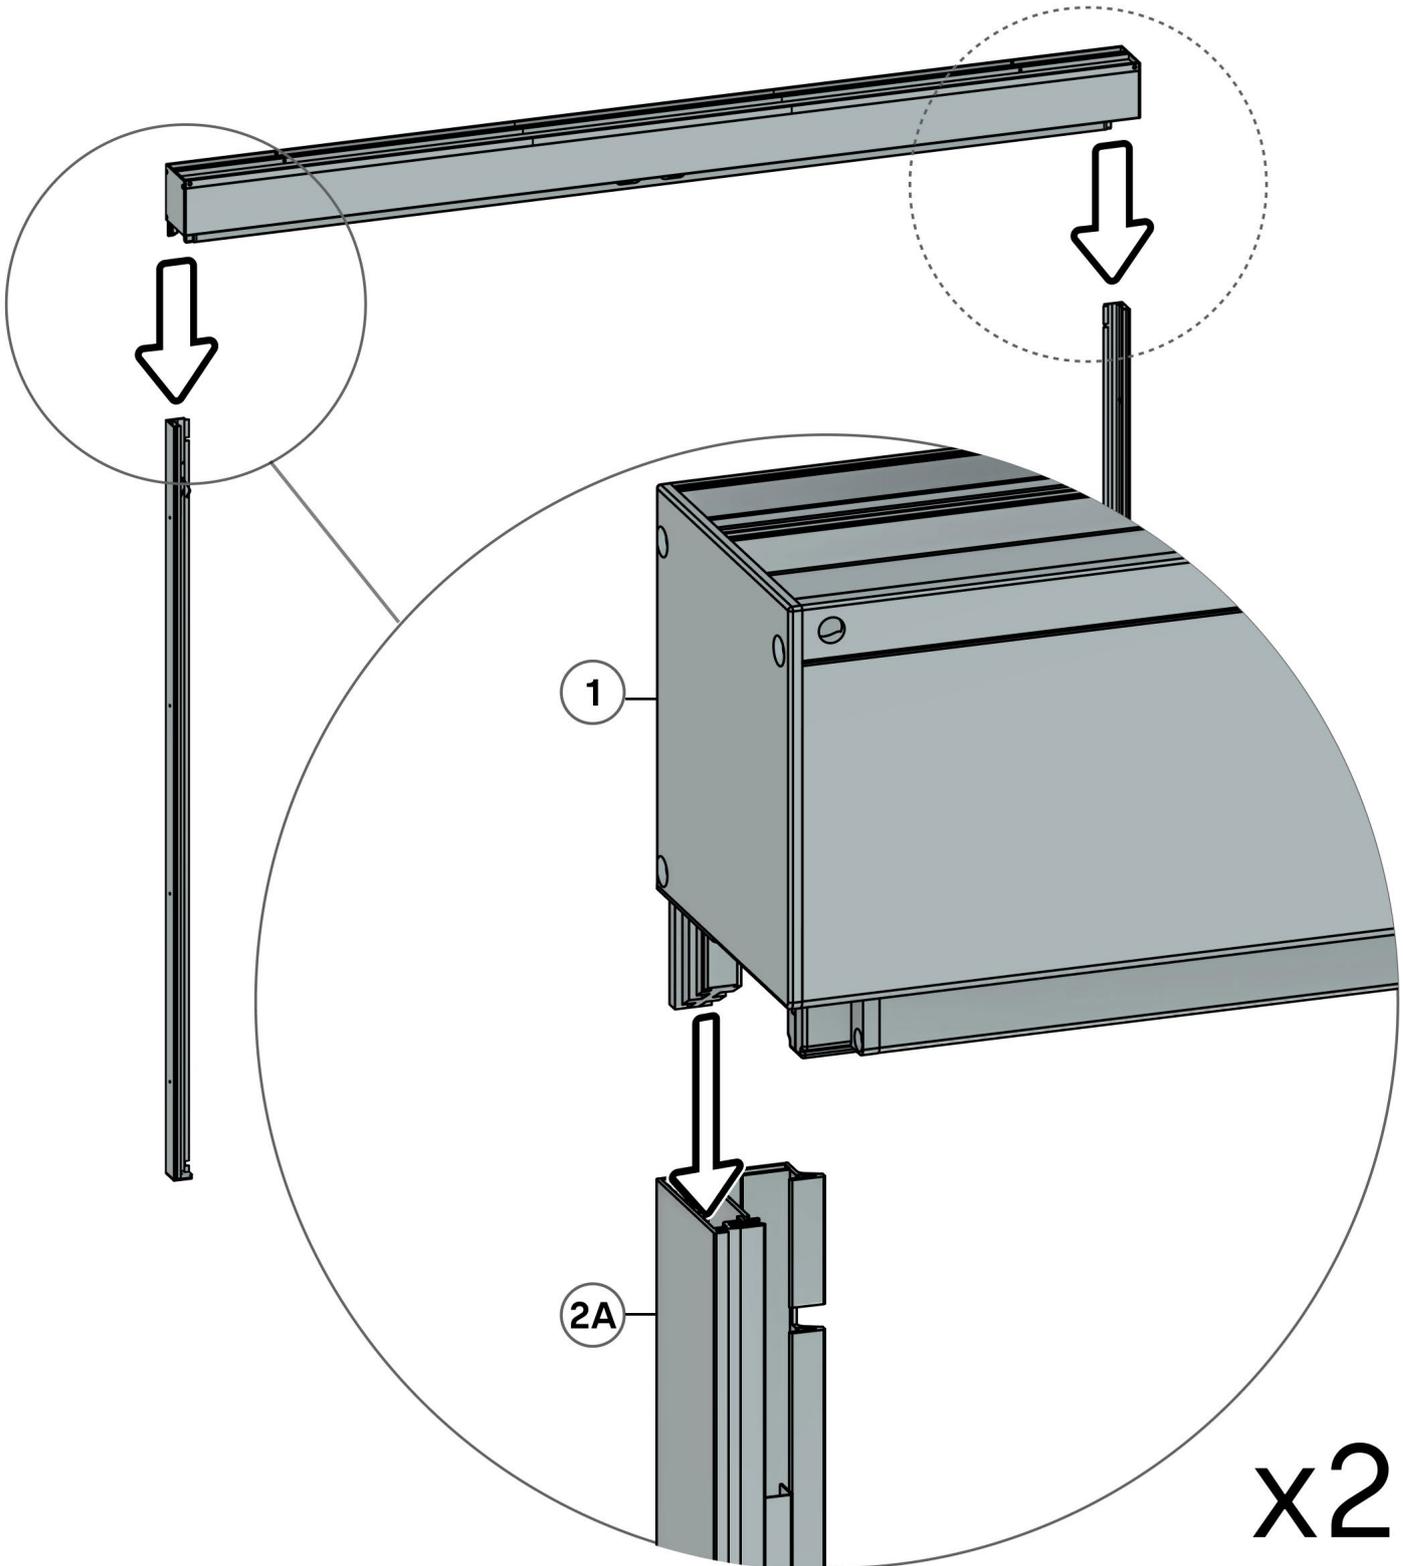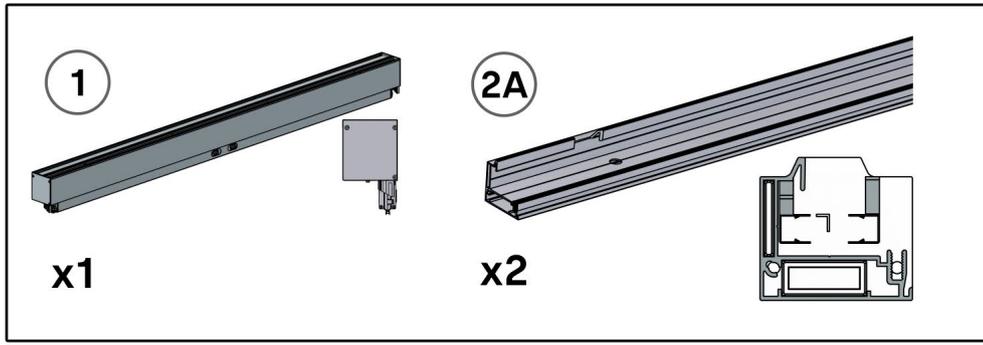



# 5

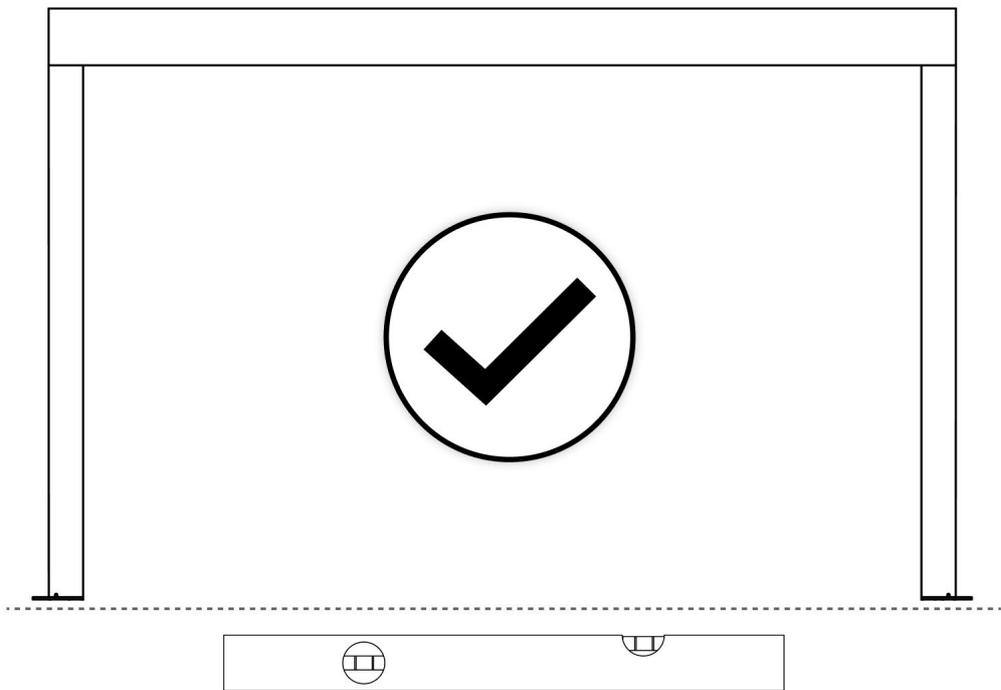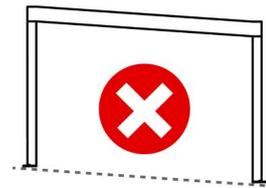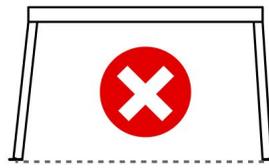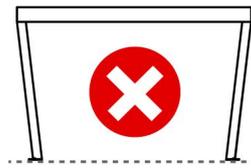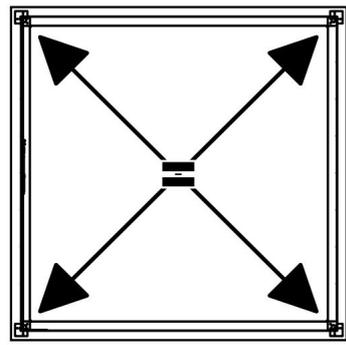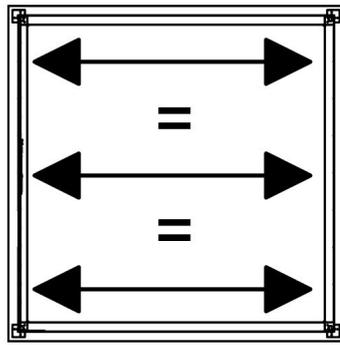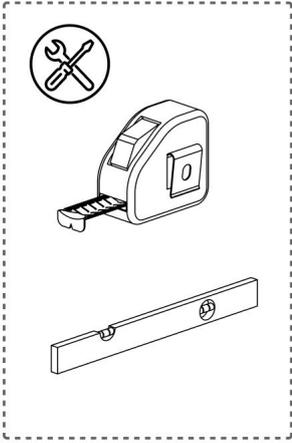


6

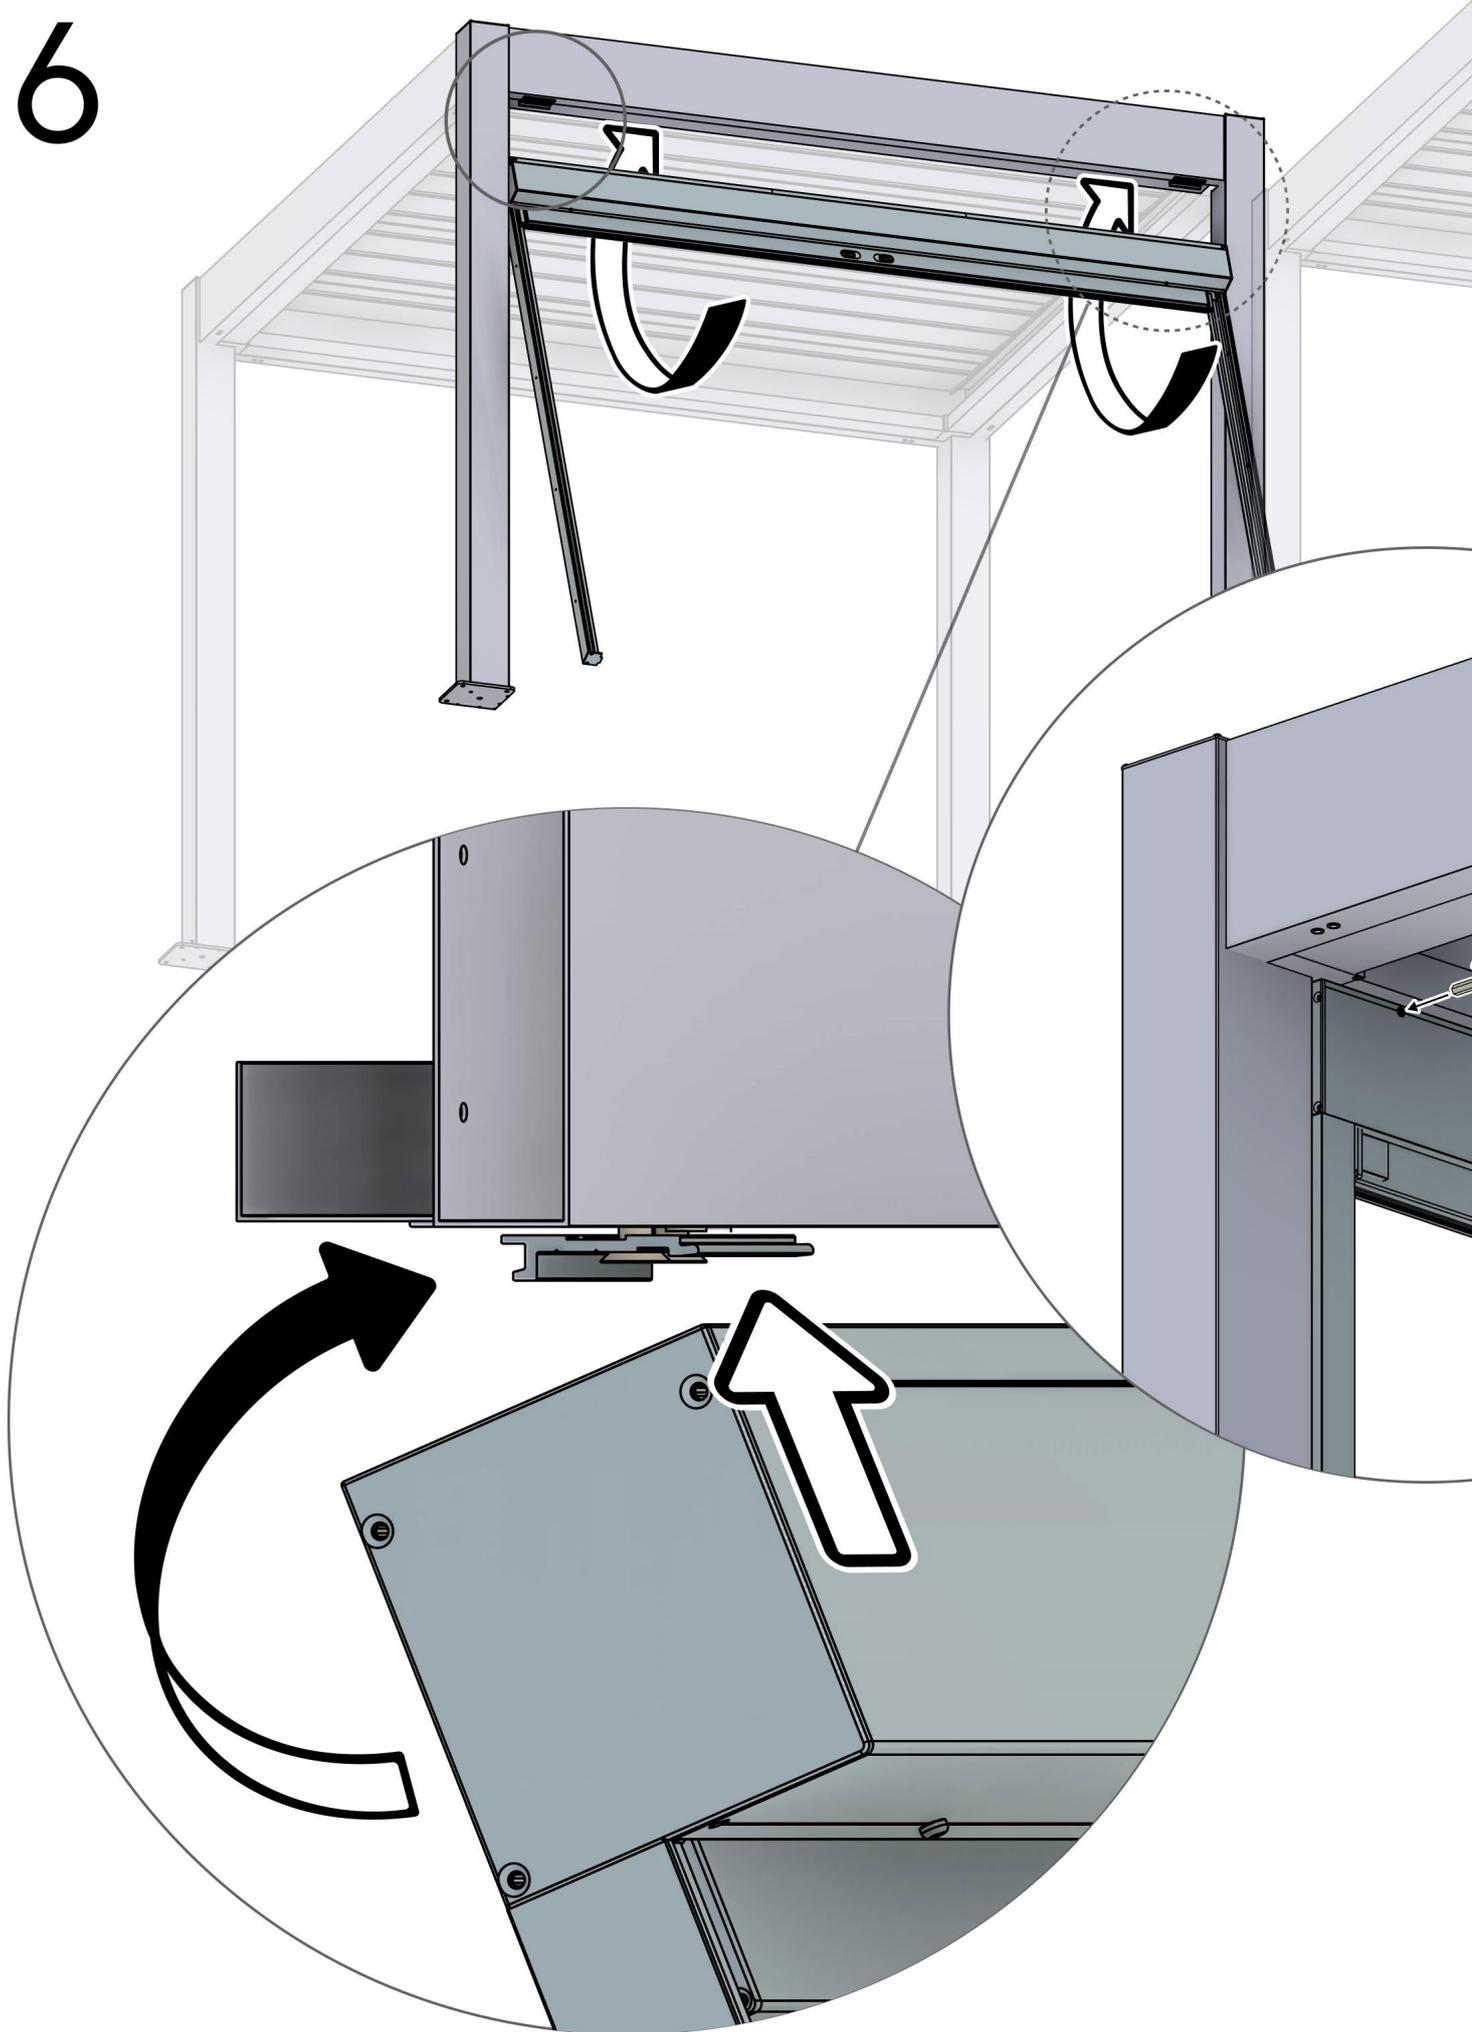



7

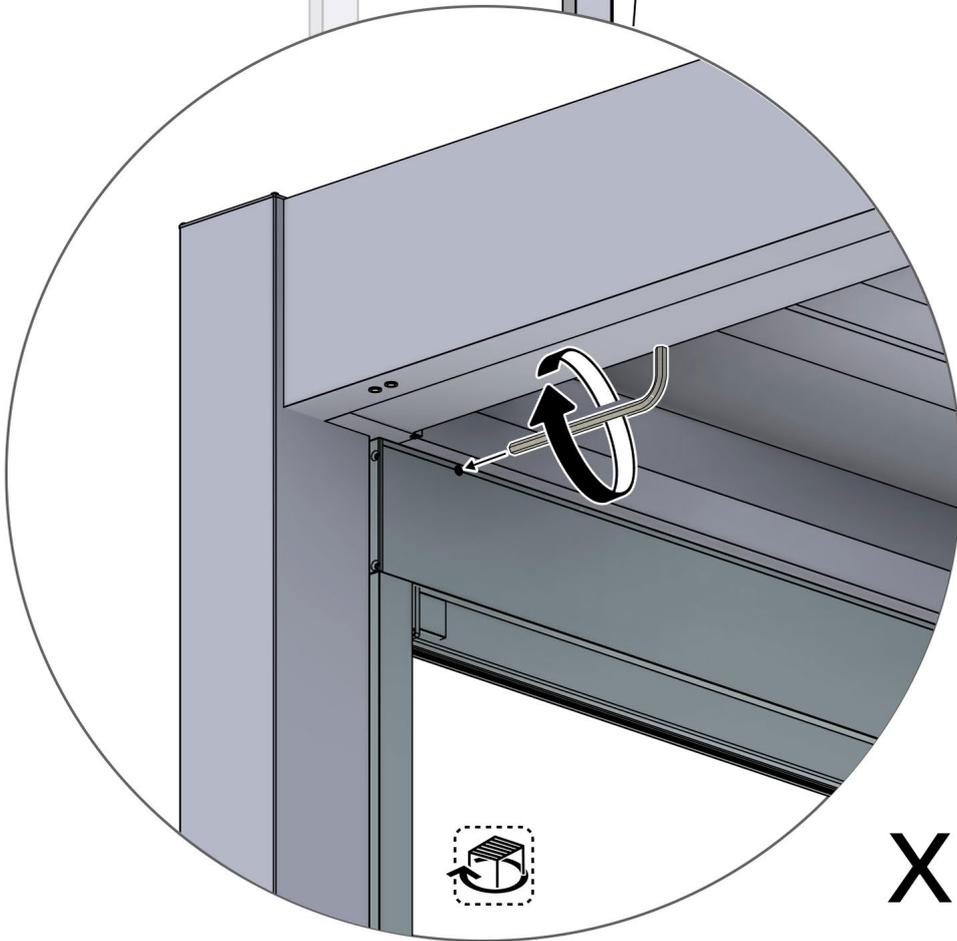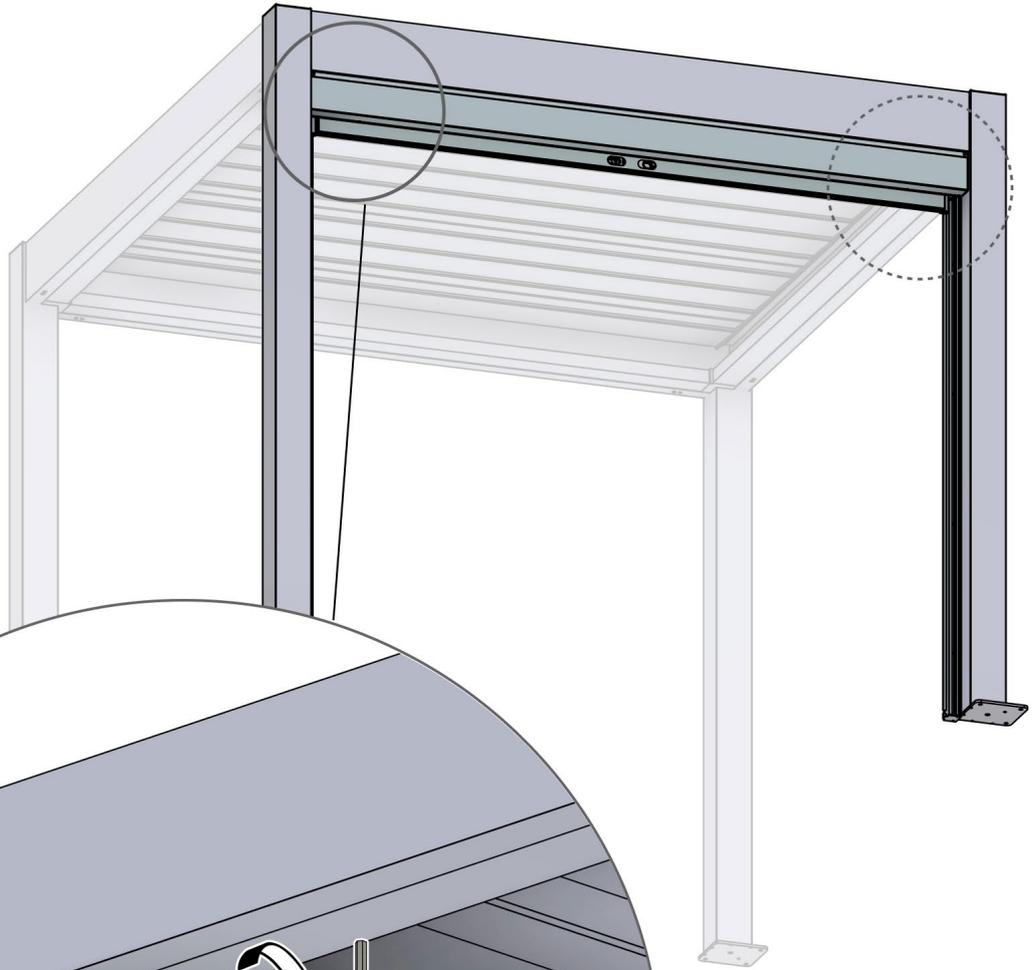


x2

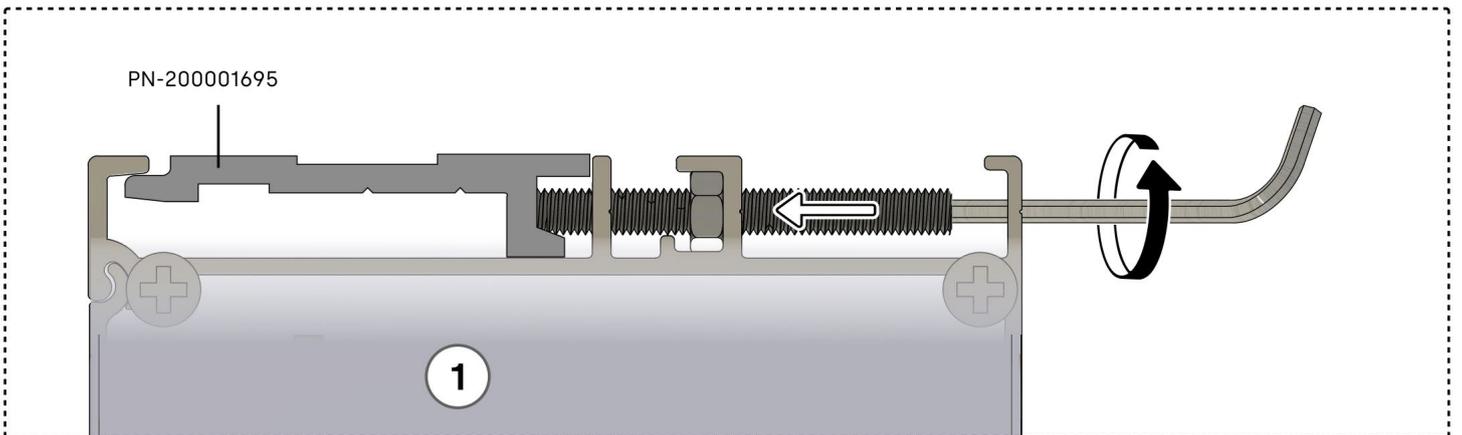




8

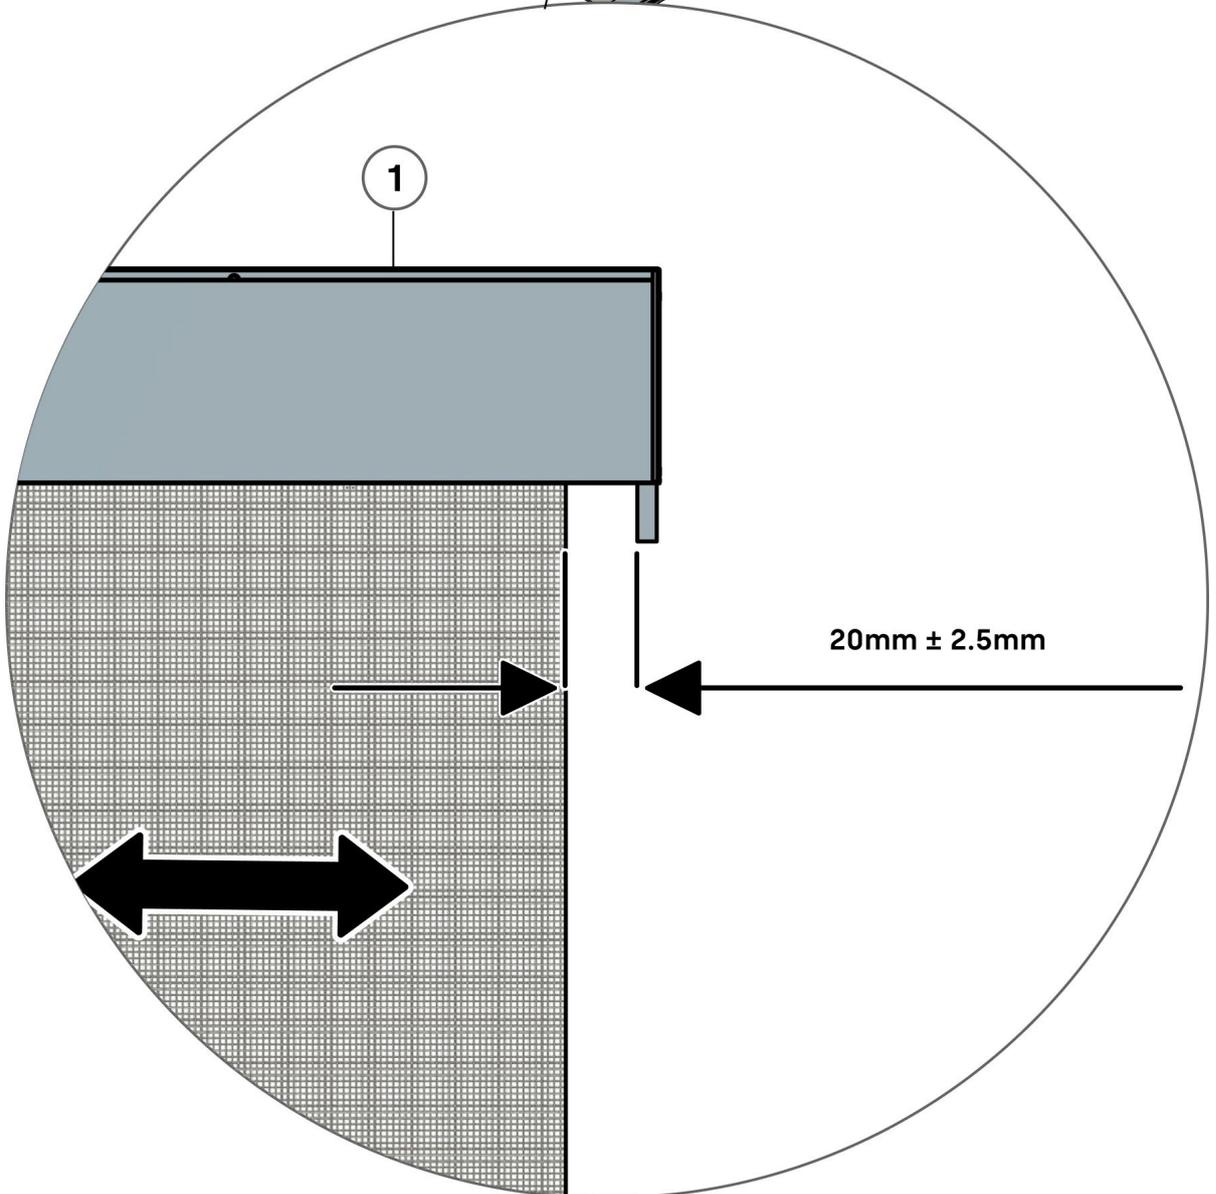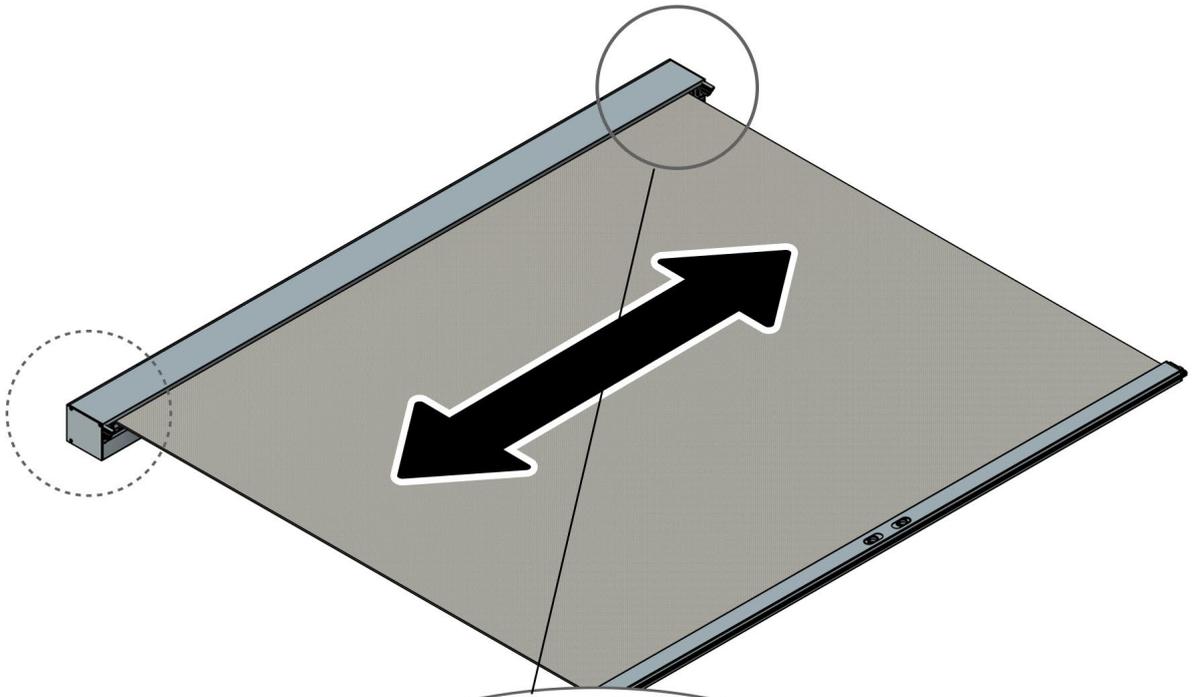





# 9

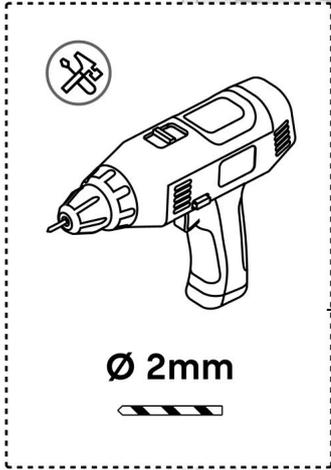



# 10

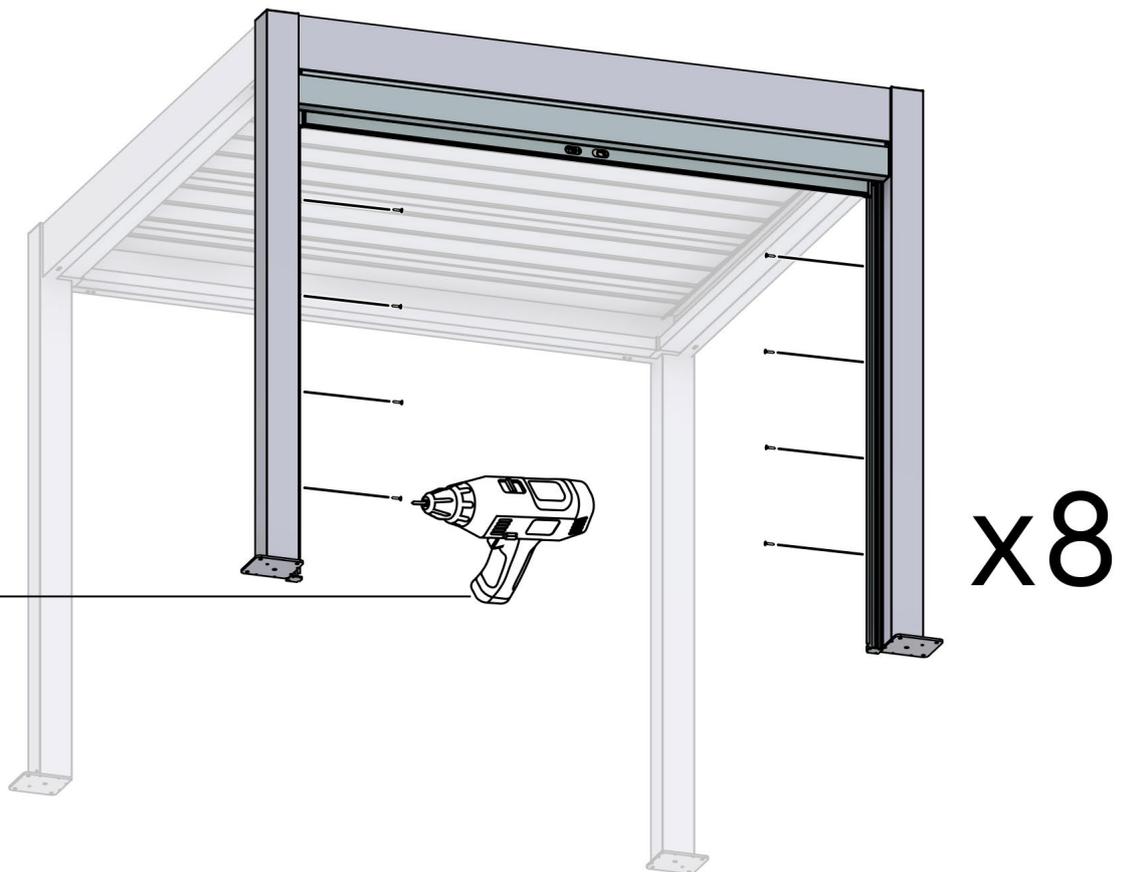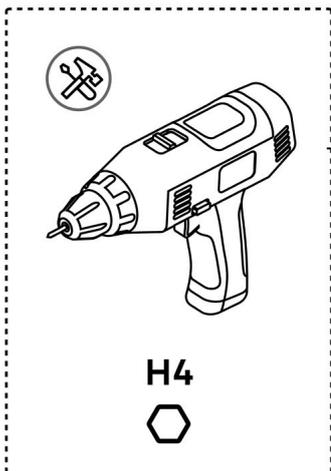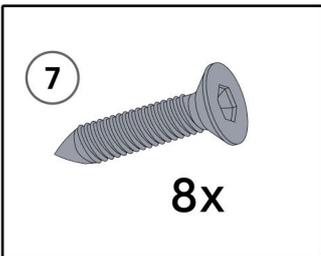


# 11

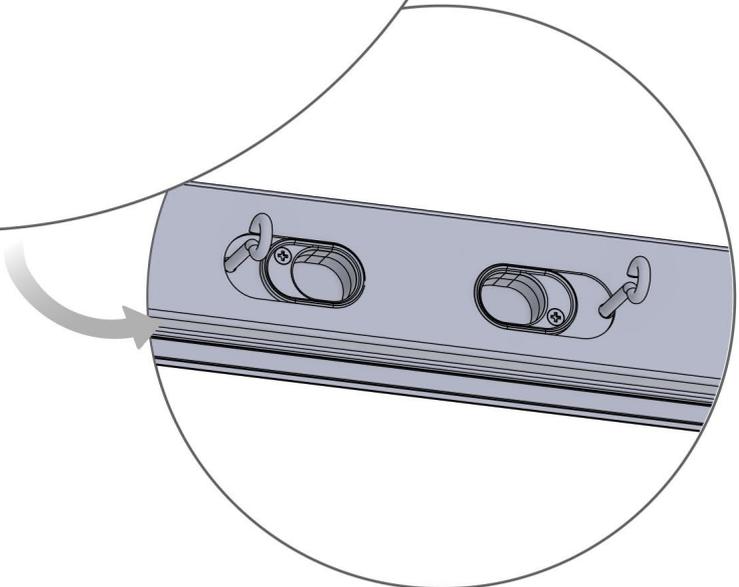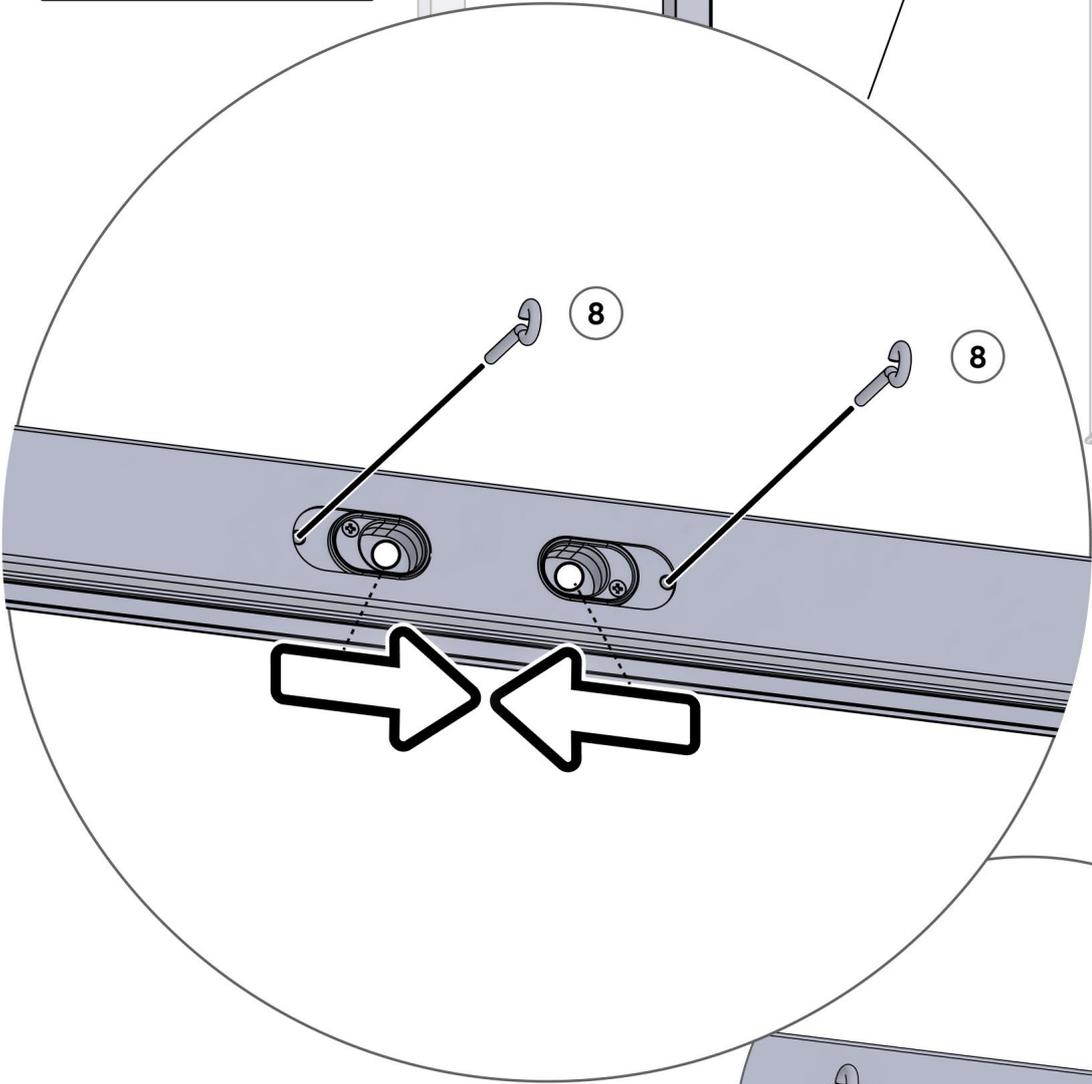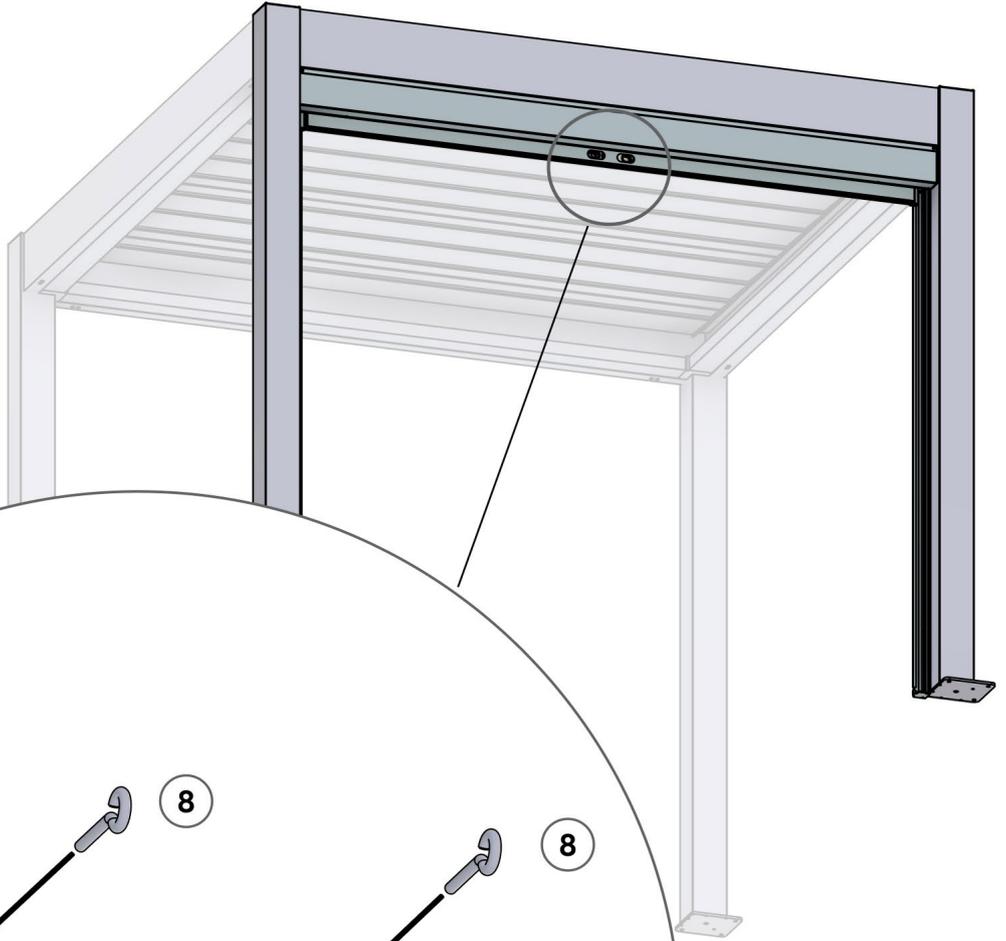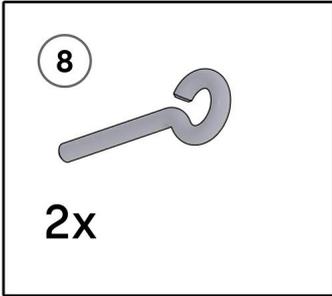




# 12

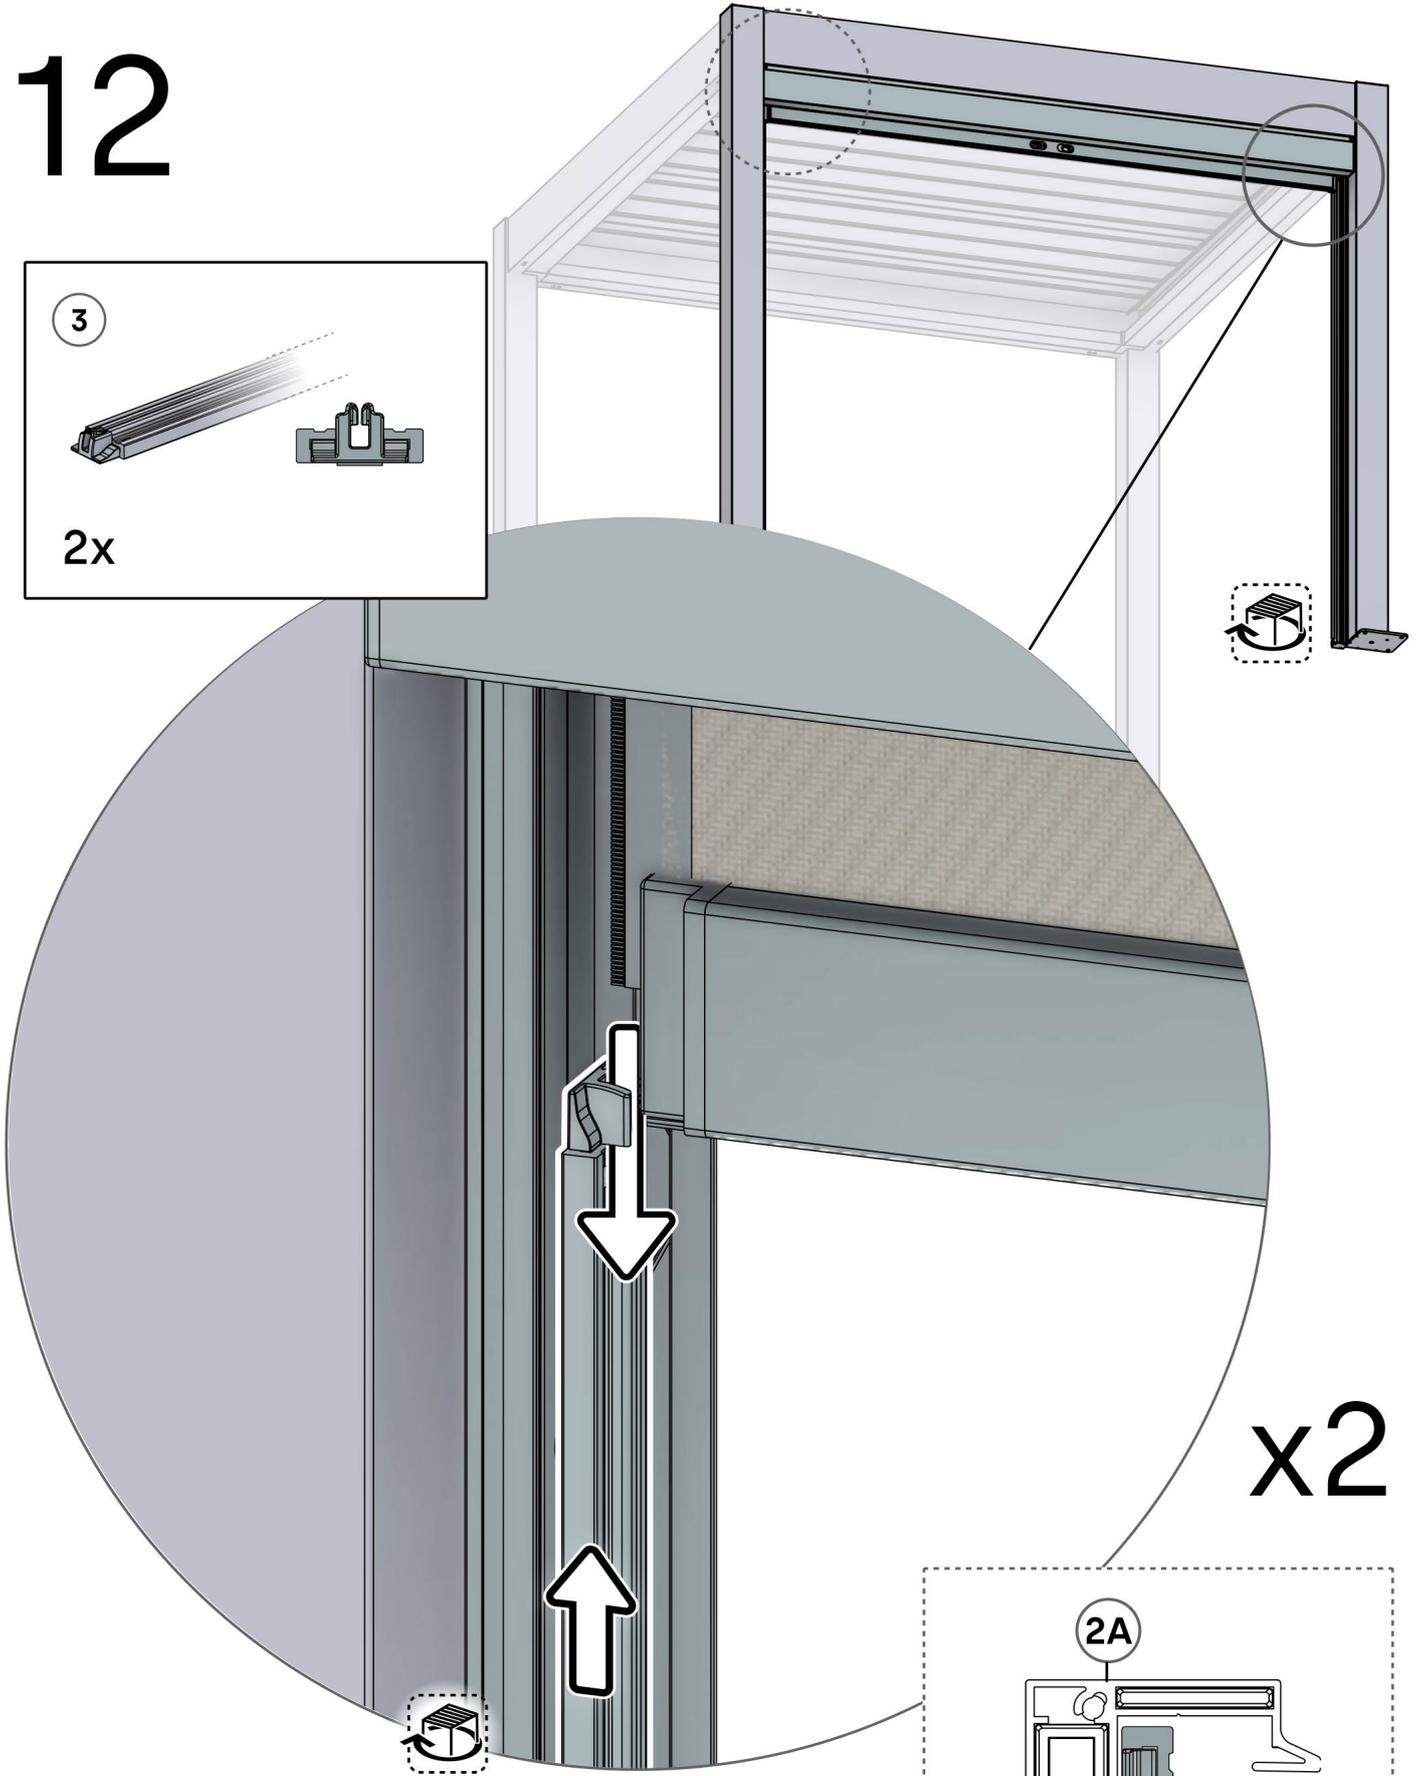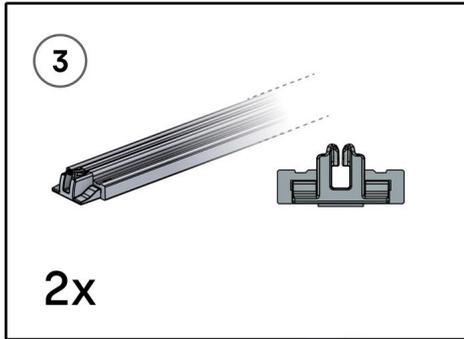


# x2

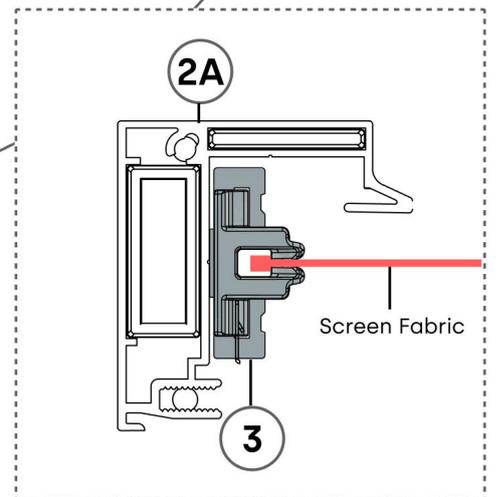




# 13

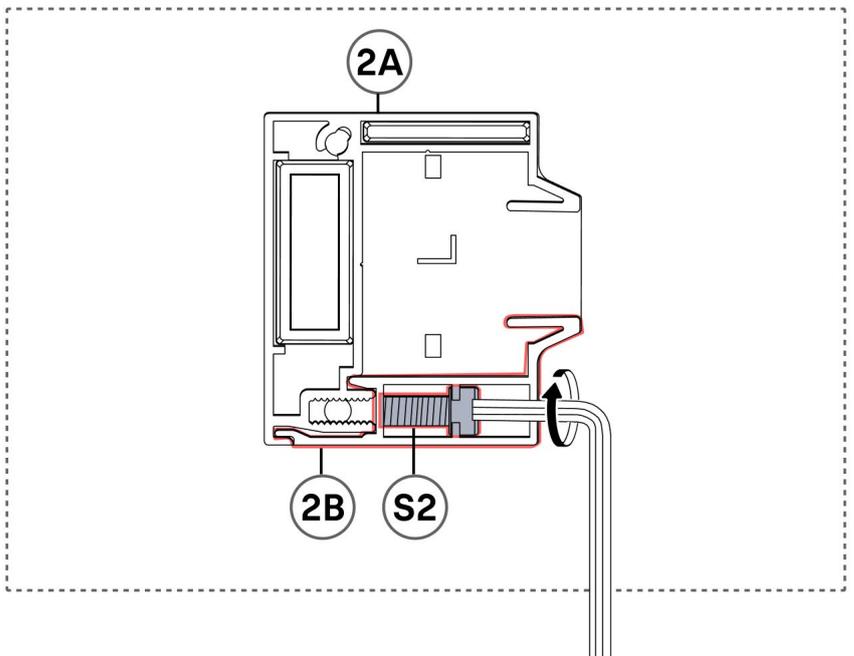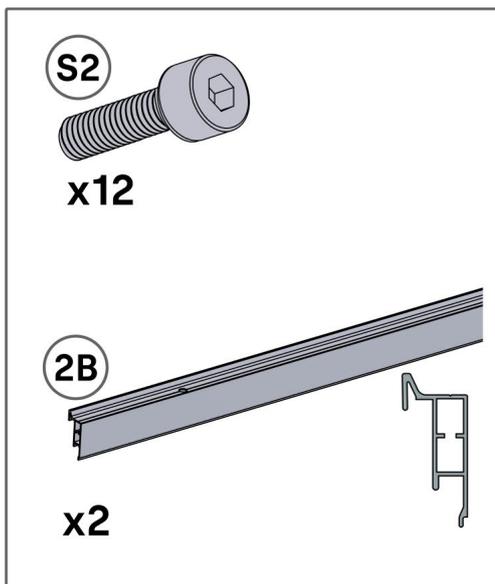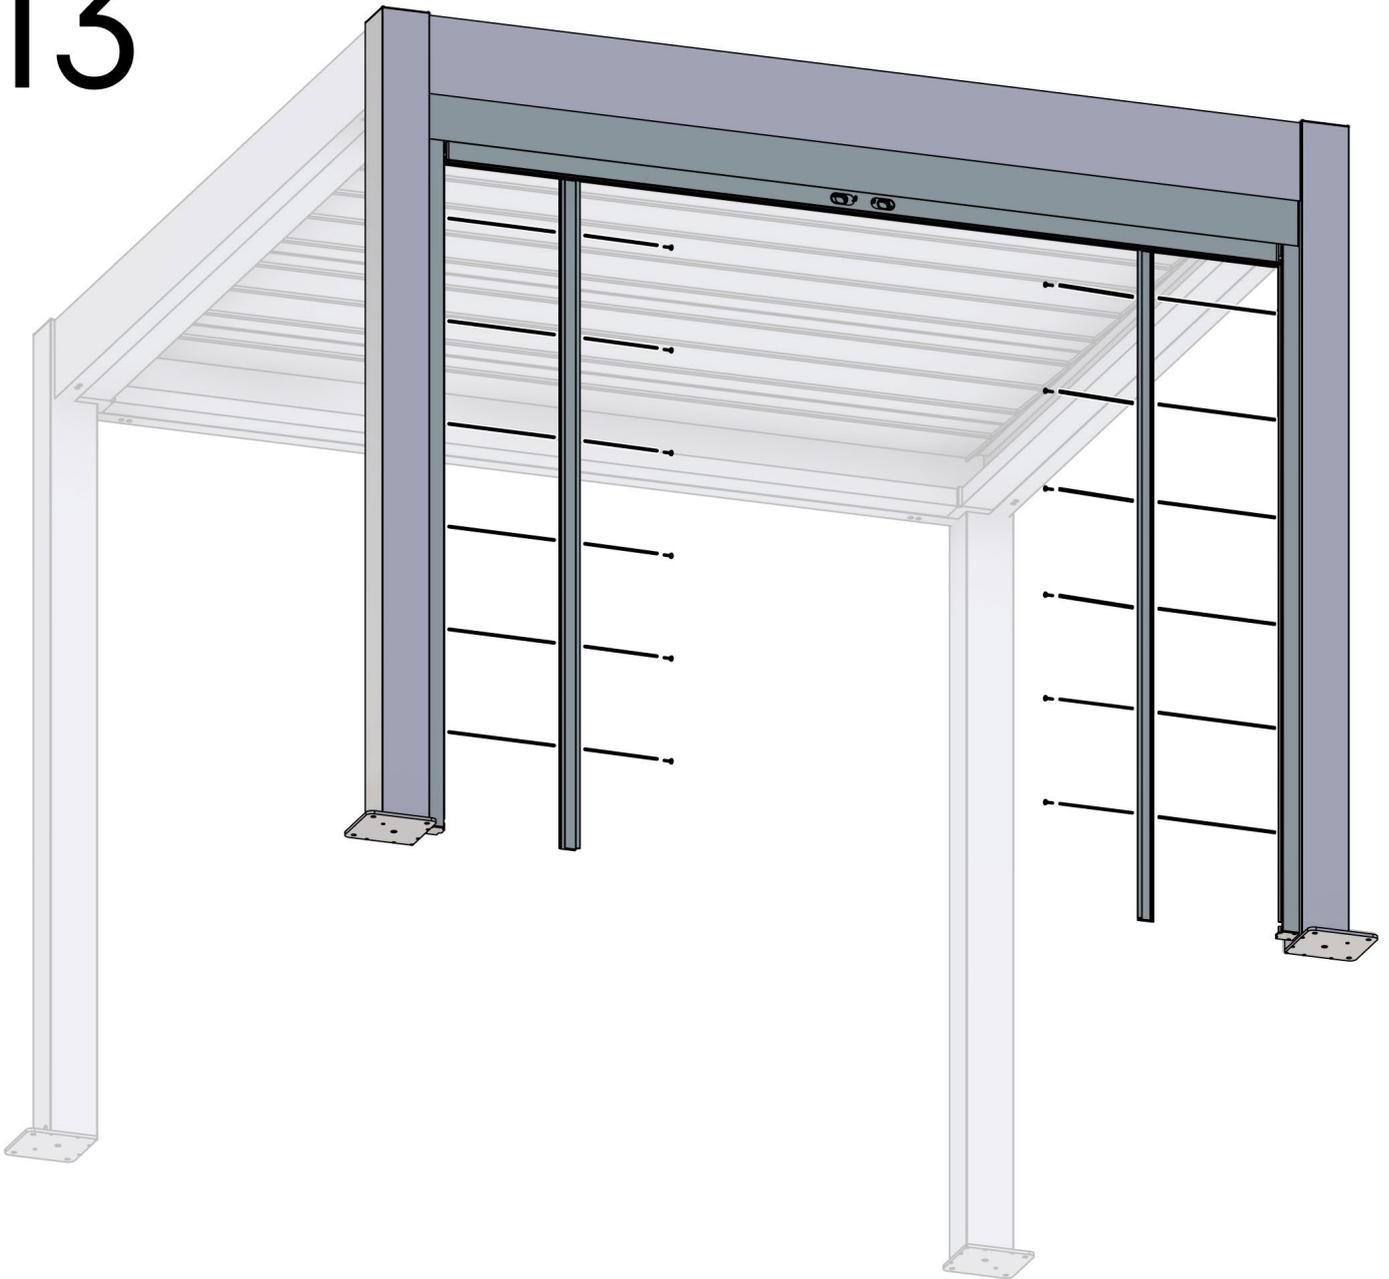

14

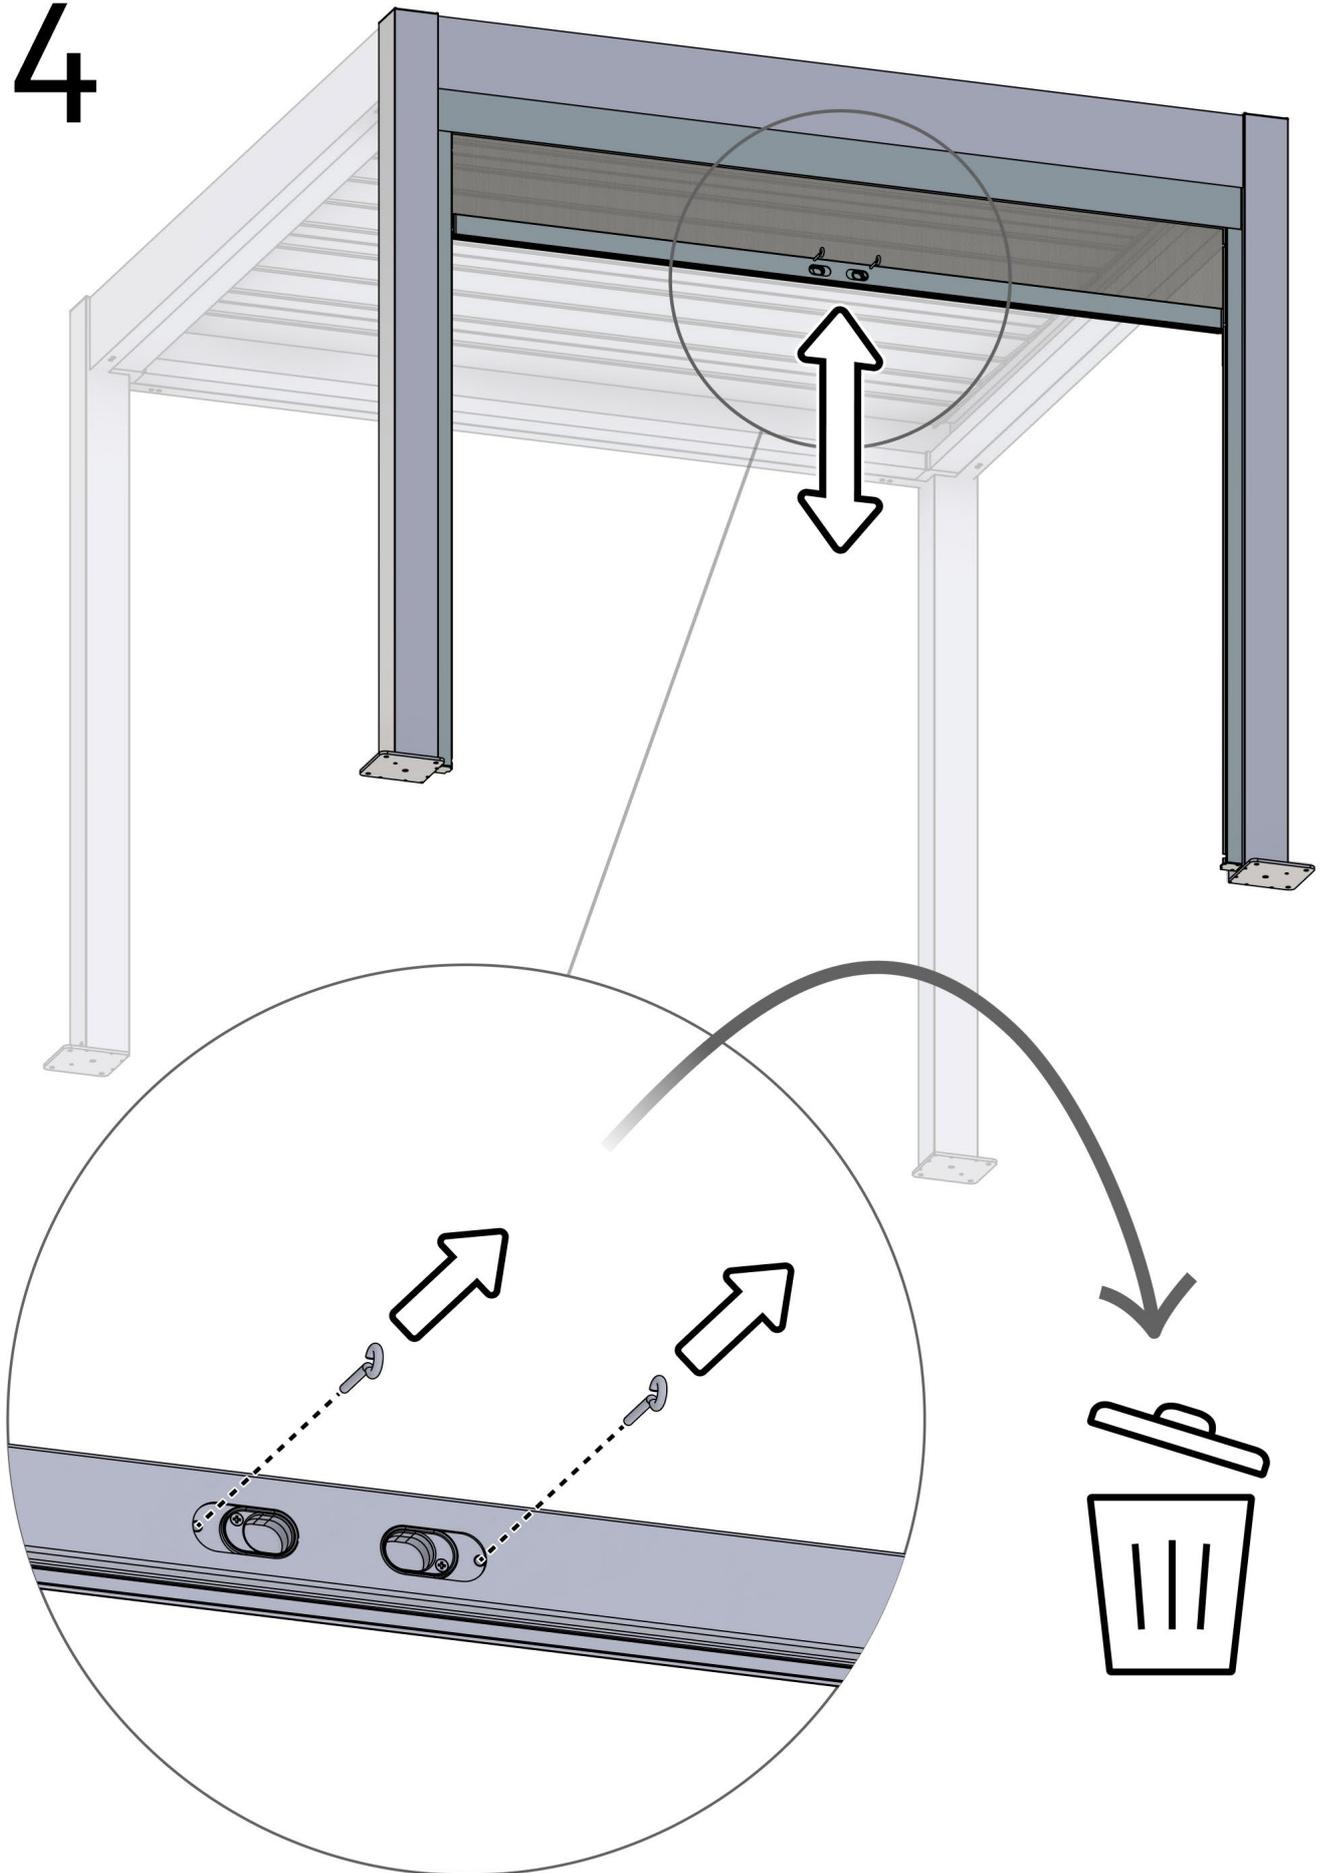

# 15

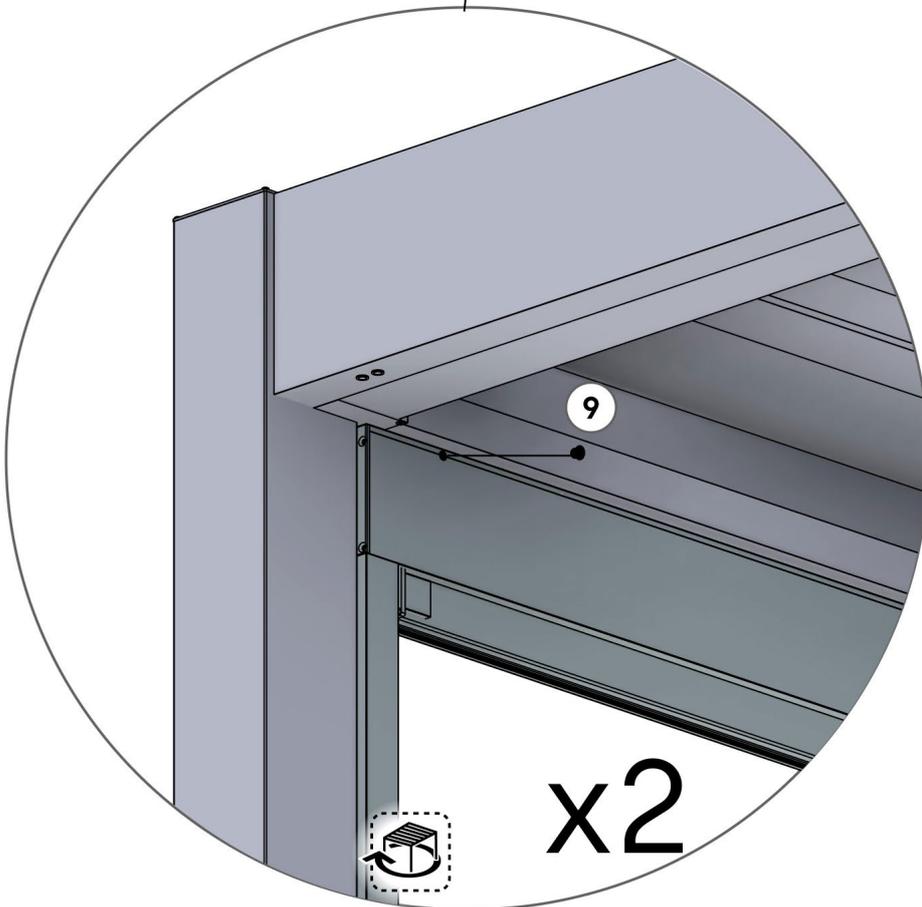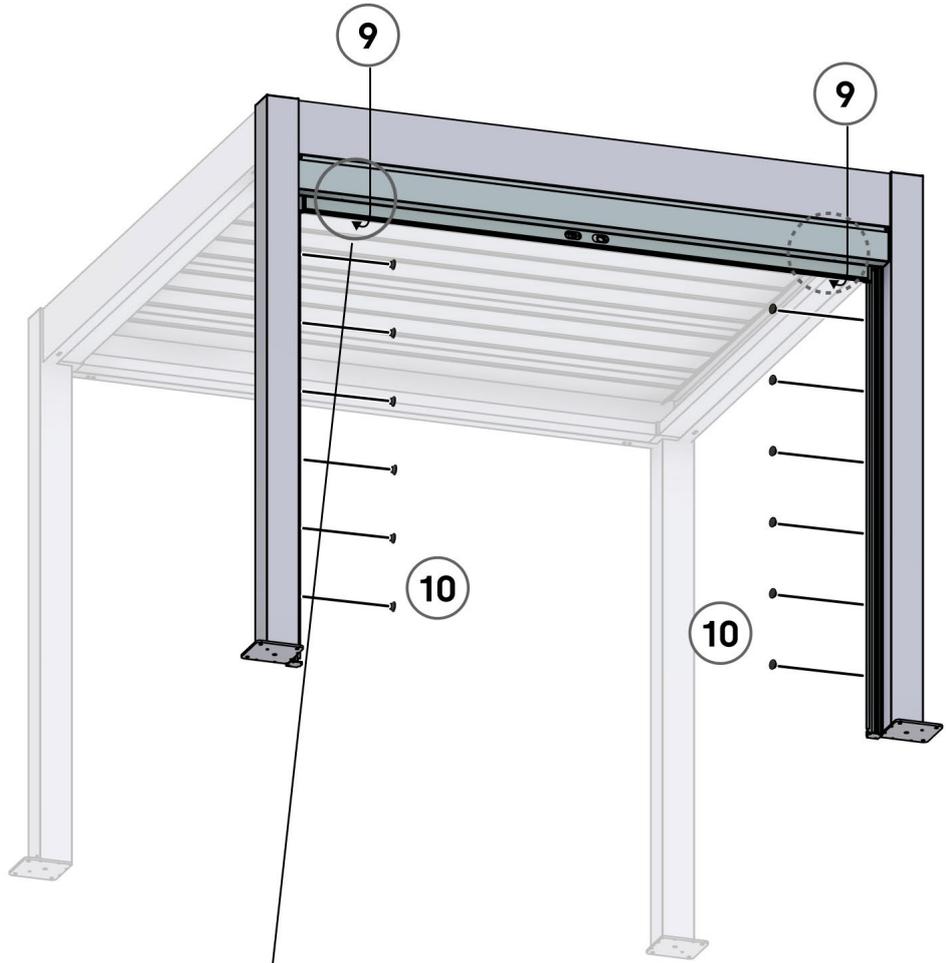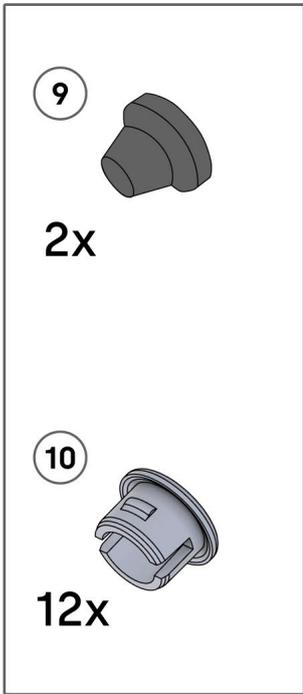

# PERGOLUX

SCREEN S2

