


WOODLINE

SLAT WALL



3 M / 10'

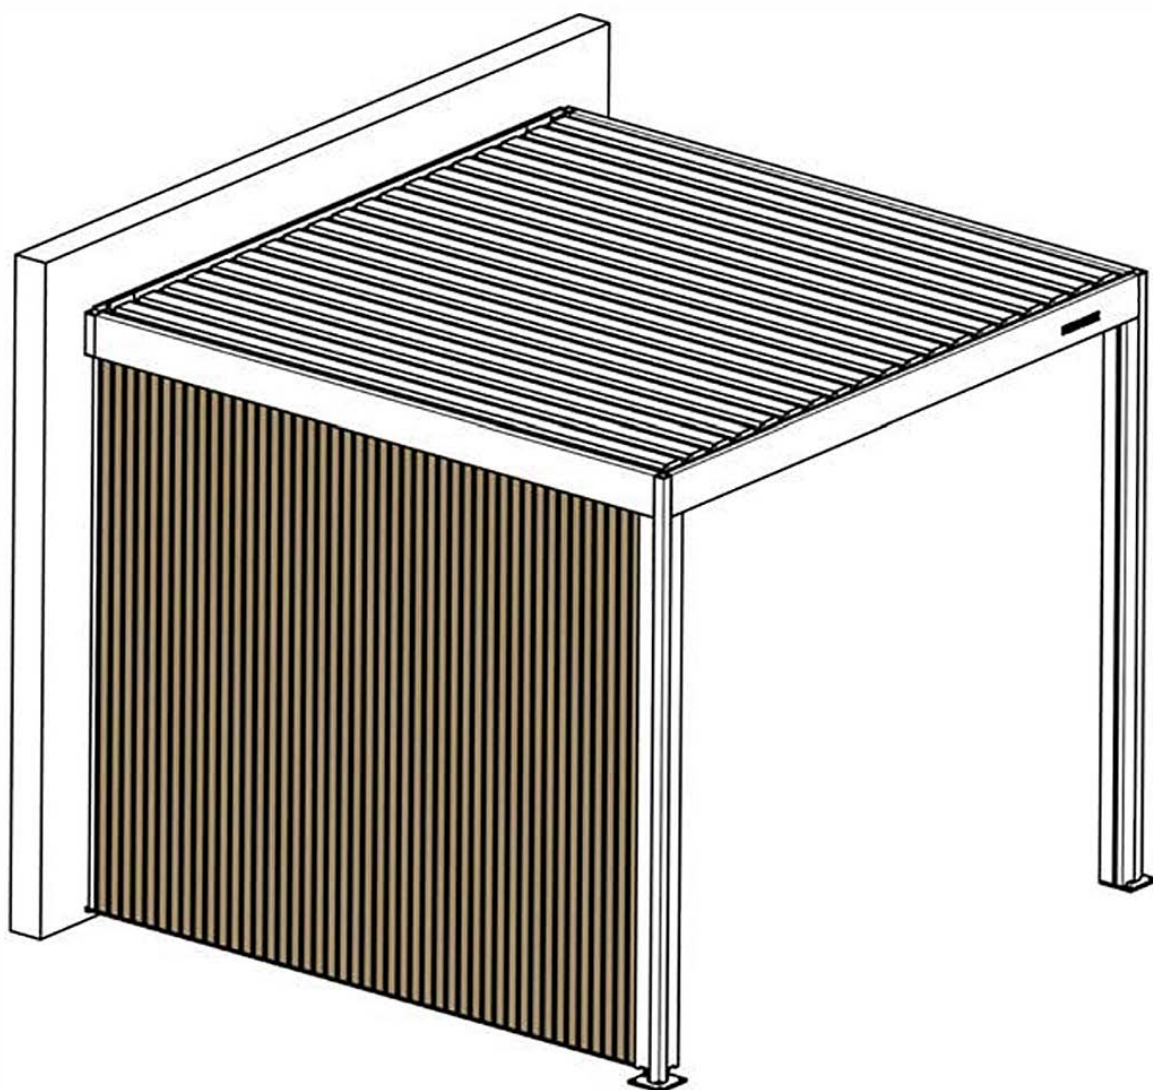

PERGOLUX


PERGOLUX | SLAT WALL

INFORMATION

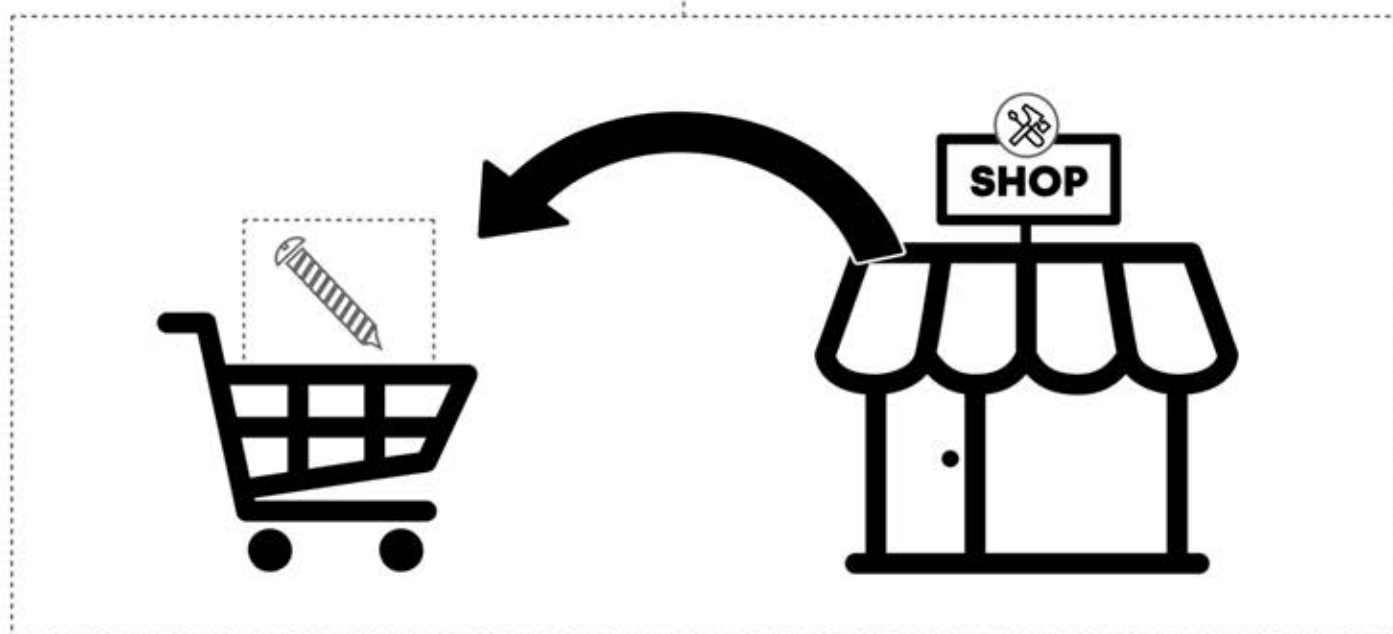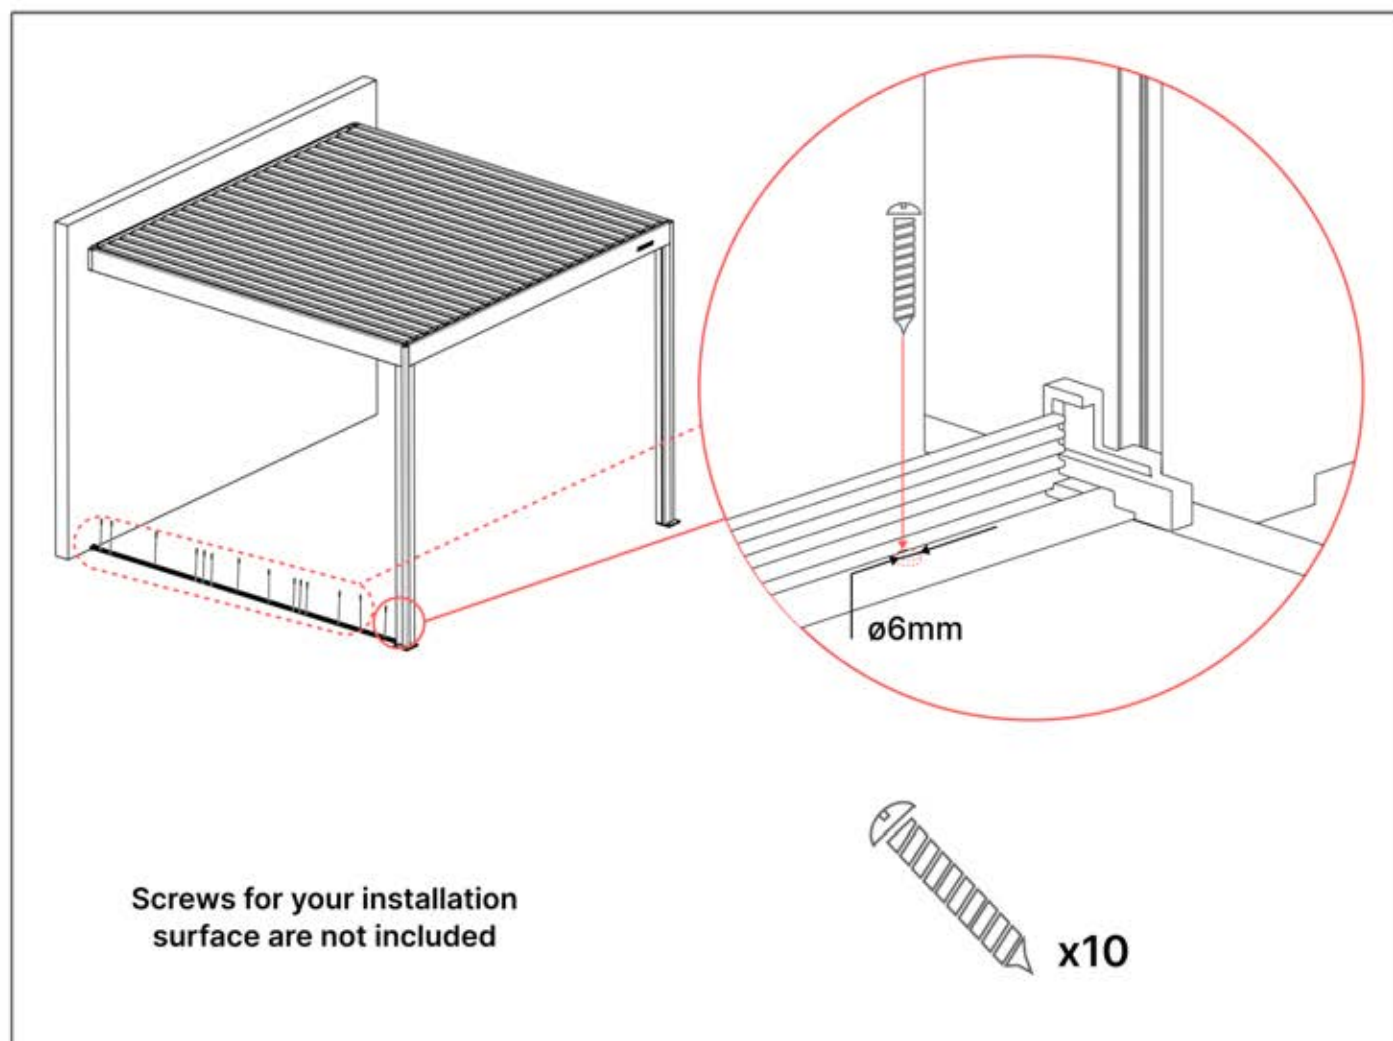






PERGOLUX | SLAT WALL

INFORMATION

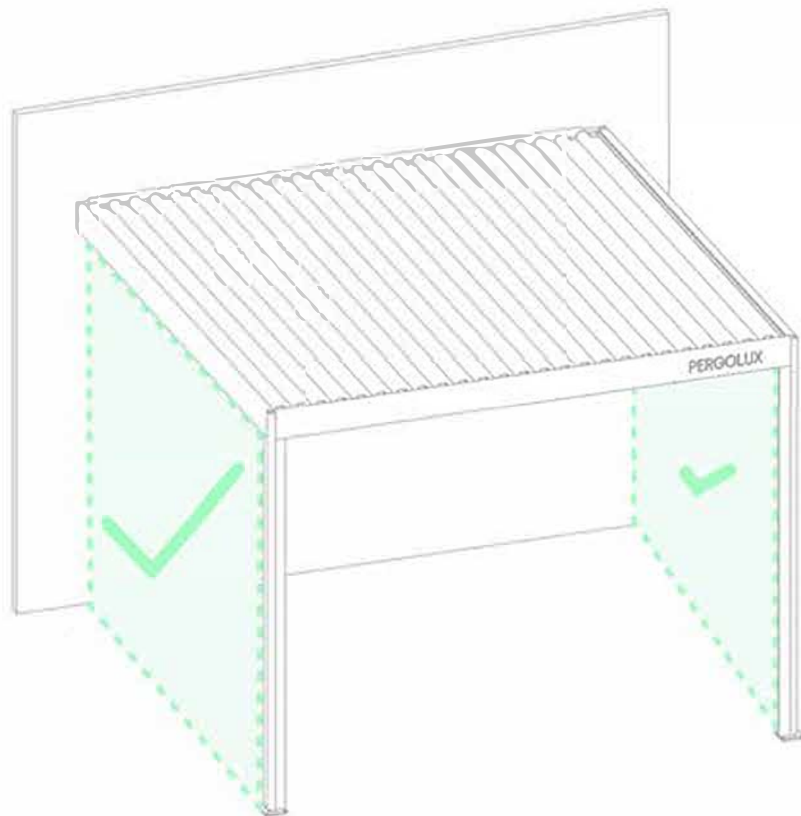


This slat wall cannot be installed on
the Skydance model (S1/S2/S3)

TOOLS

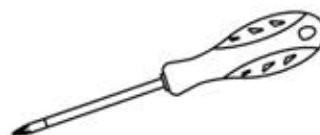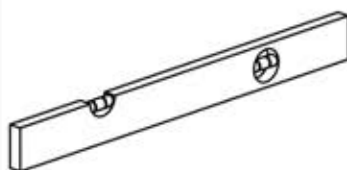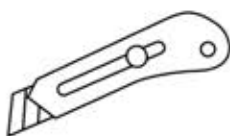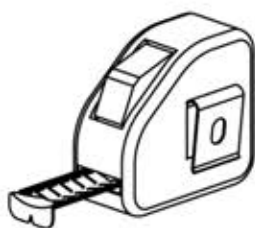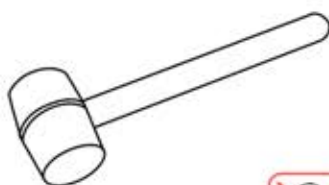

PACKAGE OVERVIEW

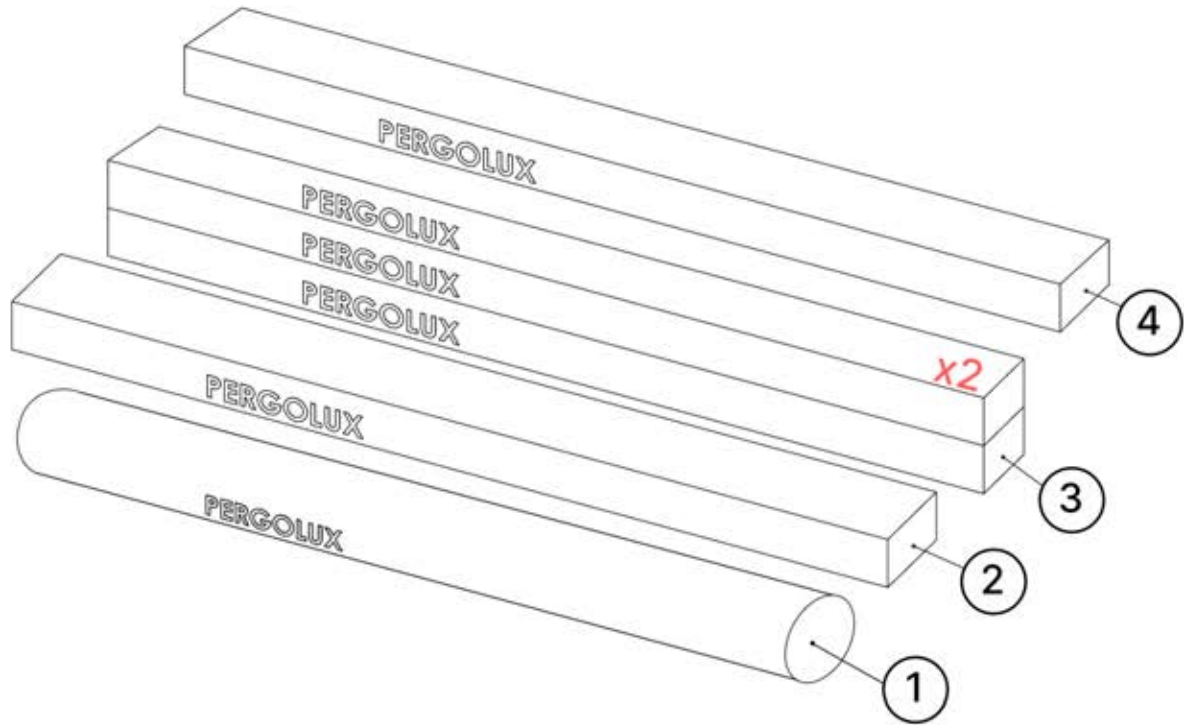

①	W102 FRAME 3M PACKAGE
②	W100 SLAT PACKAGE 16
③	W101 SLAT PACKAGE 15 x2
④	W101 WALL MOUNTED KIT

PERGOLUX | SLAT WALL

ITEMS IN BOX



W102 FRAME 3M PACKAGE

1



922.5 mm
36 19/64"



1845 mm
72 41/64"



1845 mm
72 41/64"

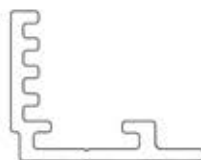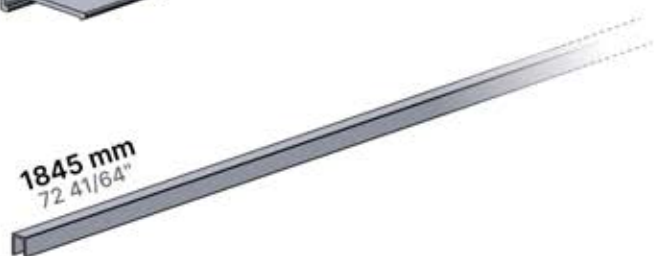

Ground Fixation 3M
PN-200002516

1x




Slat Fixation 3M
PN-200002520

1x




Slat Lock 3M
PN-200002518

1x

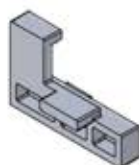

End Cover Right
PN-200002513

1x

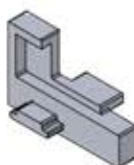

End Cover Left
PN-200002510

1x


PERGOLUX | SLAT WALL

ITEMS IN BOX





W100 SLAT PACKAGE 16


2

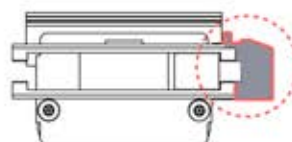

Slat Right
PN-200002509
1x

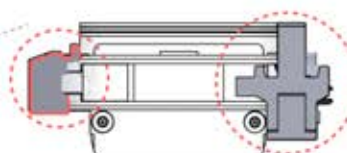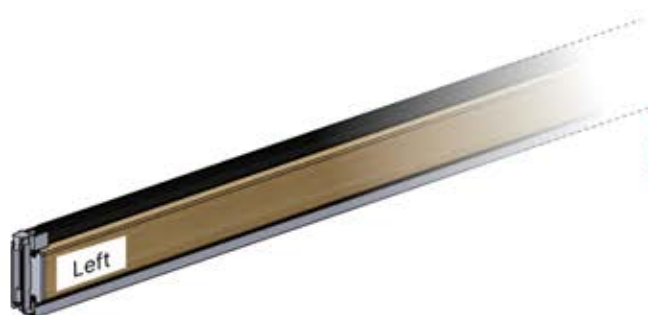

Slat Left
PN-200002508
1x

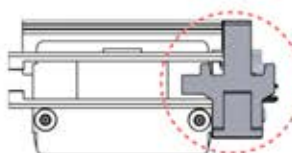

Slat Center
PN-200002507
14x


PERGOLUX | SLAT WALL

ITEMS IN BOX



W101 SLAT PACKAGE 15

3

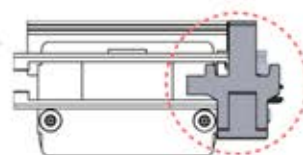

Slat Center
PN-200002507
30x



W100 WALL MOUNTED KIT

4



WF FIXATION

1x



WF FIXATION
END COVER R
1x




WF FIXATION
END COVER L
1x



WF SLAT
FLANGE TOP
x1

PERGOLUX | SLAT WALL

OVERVIEW 3M/10'

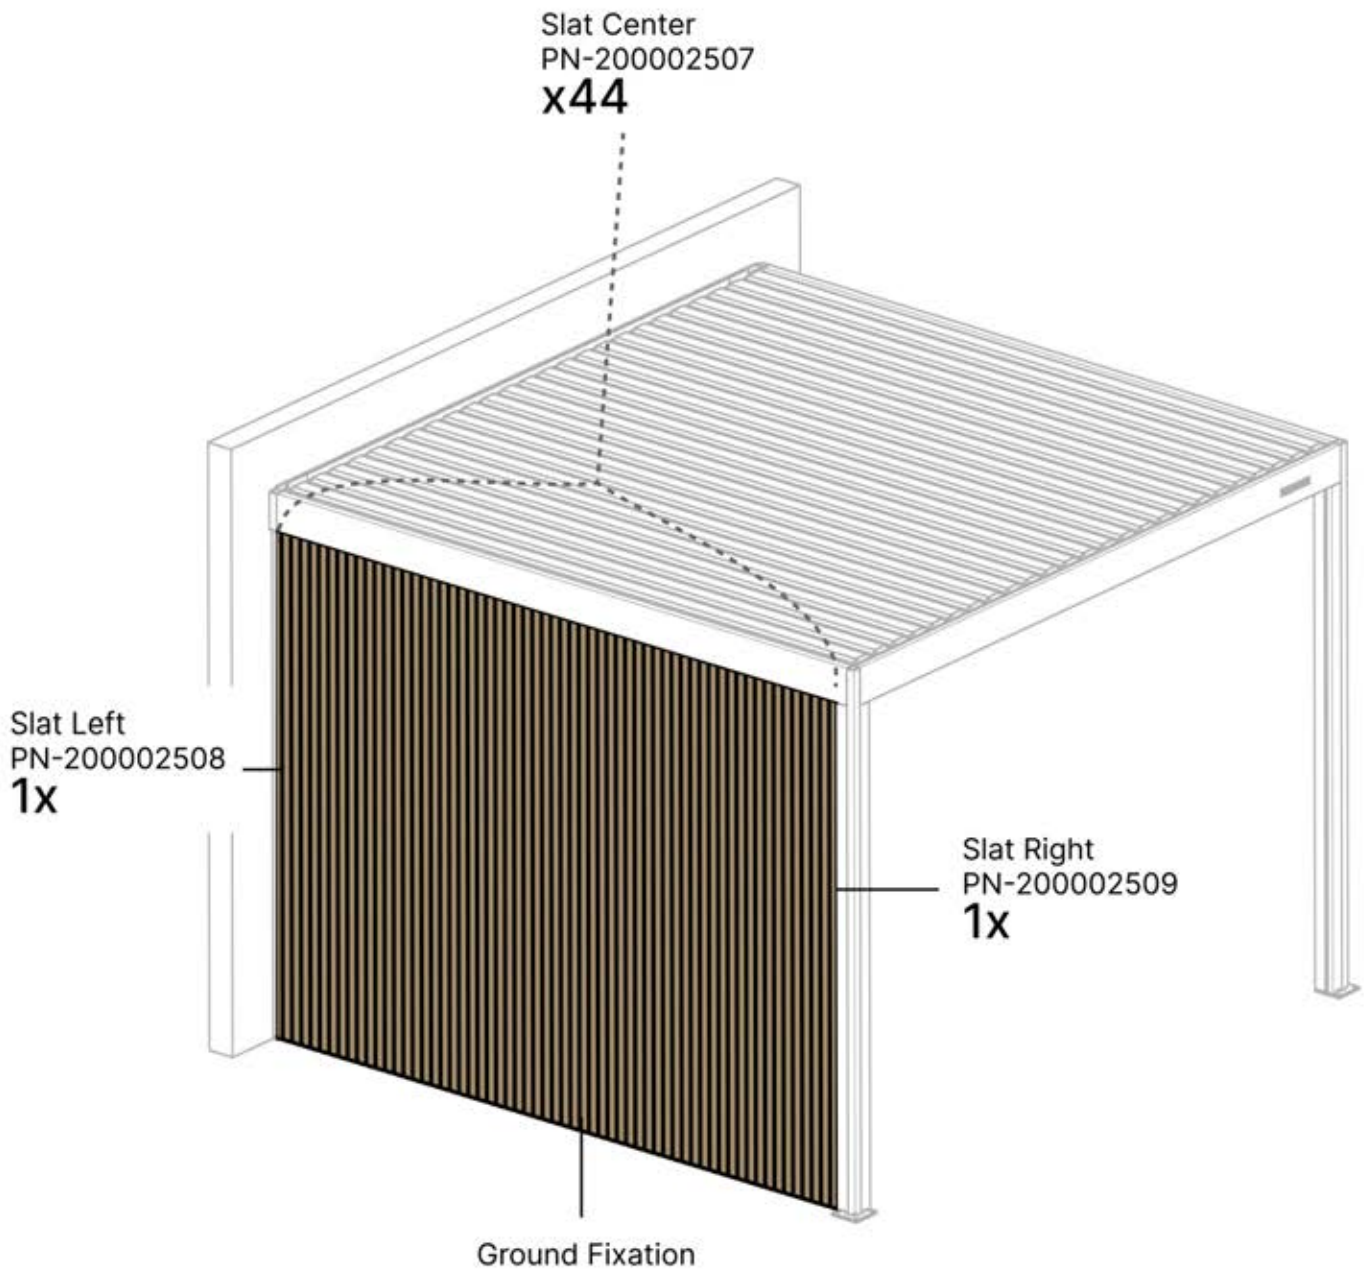

PERGOLUX | SLAT WALL



CLOSED/OPEN

OPTION 1 (Closed):

 **NOT** see through

 Water protection

 Wind protection

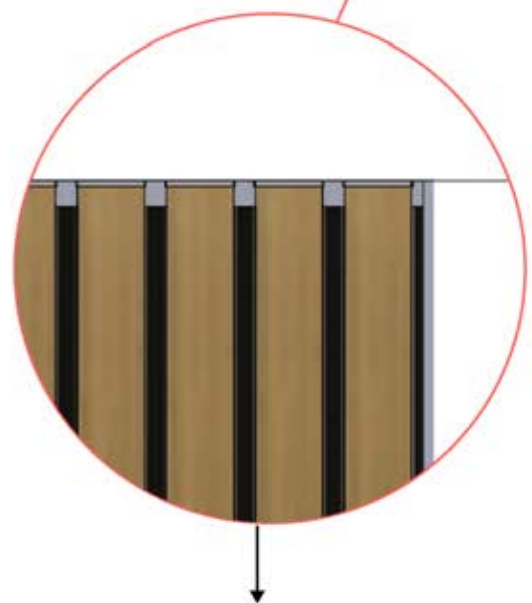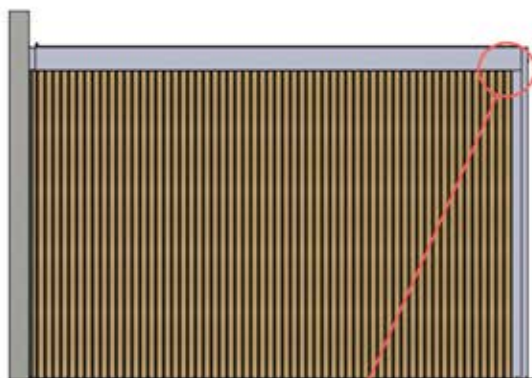



Continue assembling
from **Step 1**

OPTION 2 (Open):

 See through

 **NO** Water protection

 **NO** Wind protection

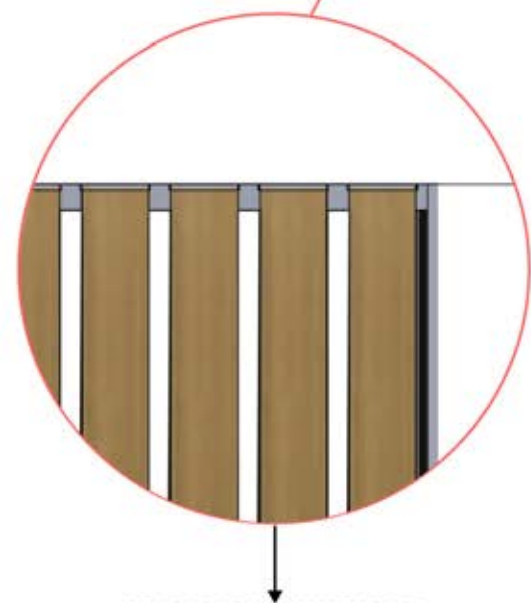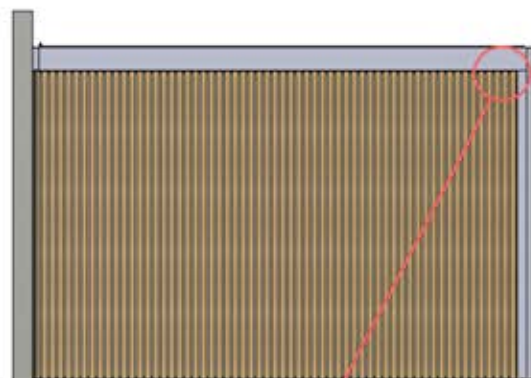


 See next
page




OPTION 2 (OPEN)



** Only for option 2

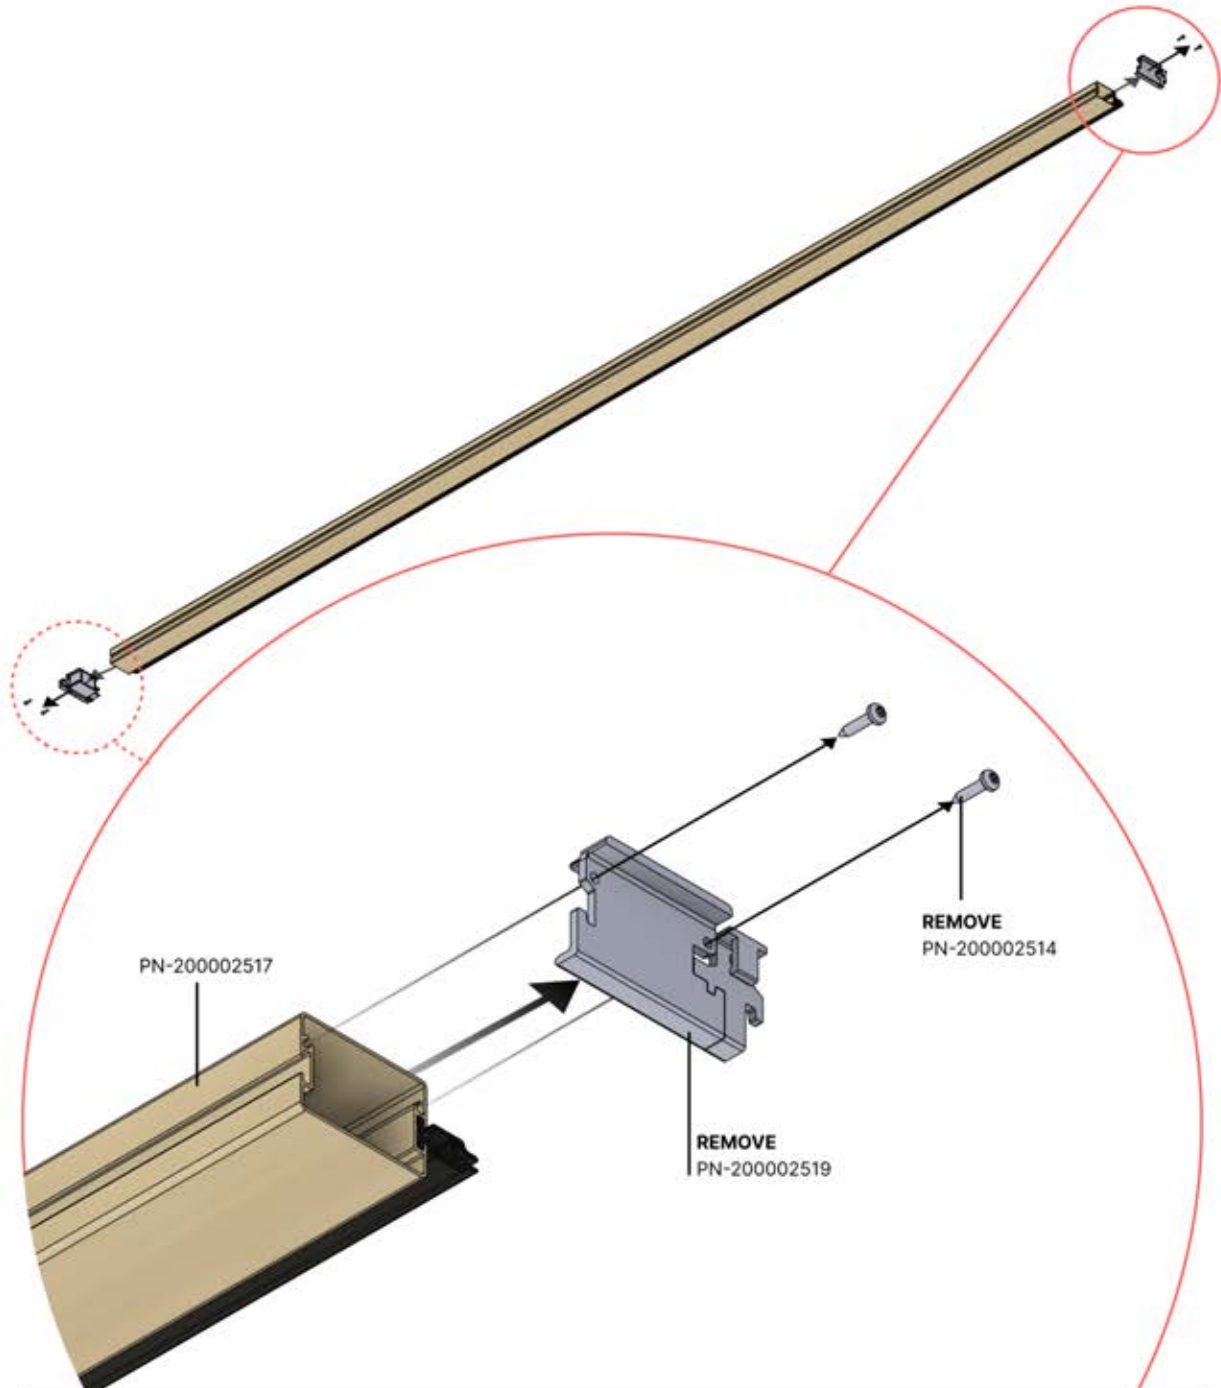

PLEASE NOTE: Do not remove the slat connection profile on the left and right slats, as these will be installed and fixed into the posts.



DO NOT REMOVE




Slat Right
PN-200002509
1x

Slat Left
PN-200002508
1x


OPTION 2 (OPEN)



** Only for option 2

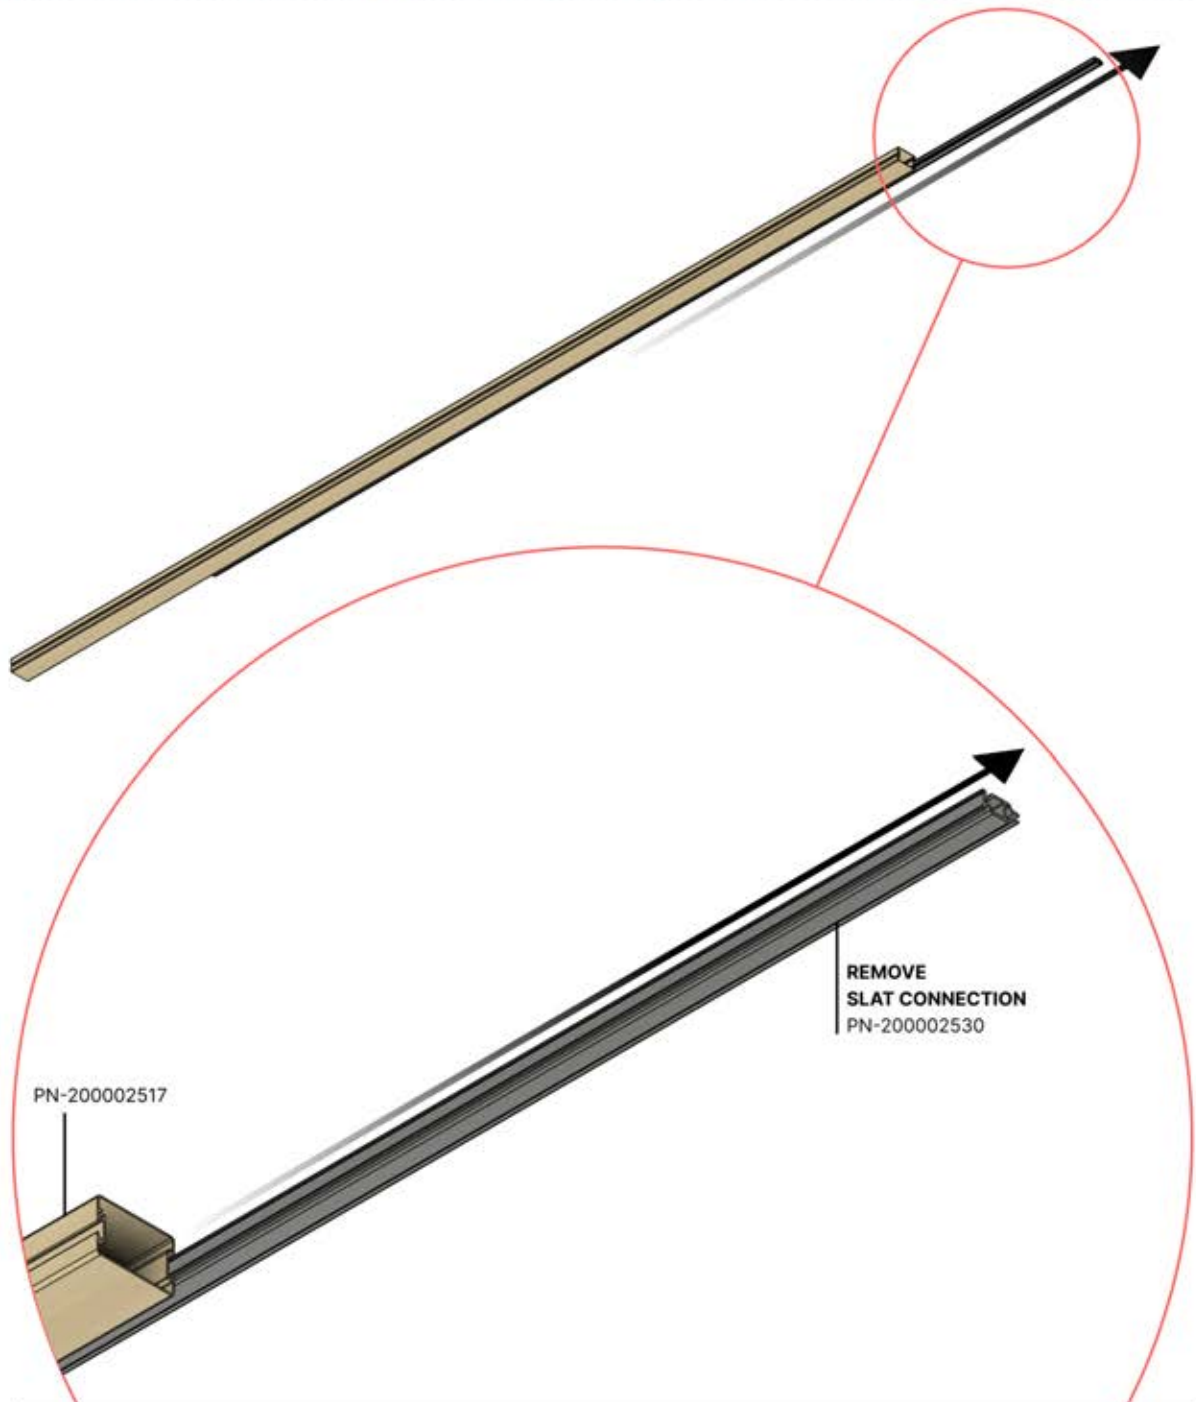

PLEASE NOTE: Do not remove the slat connection profile on the left and right slats, as these will be installed and fixed into the posts.



DO NOT REMOVE




Slat Right
PN-200002509
1x

Slat Left
PN-200002508
1x


OPTION 2 (OPEN)



** Only for option 2

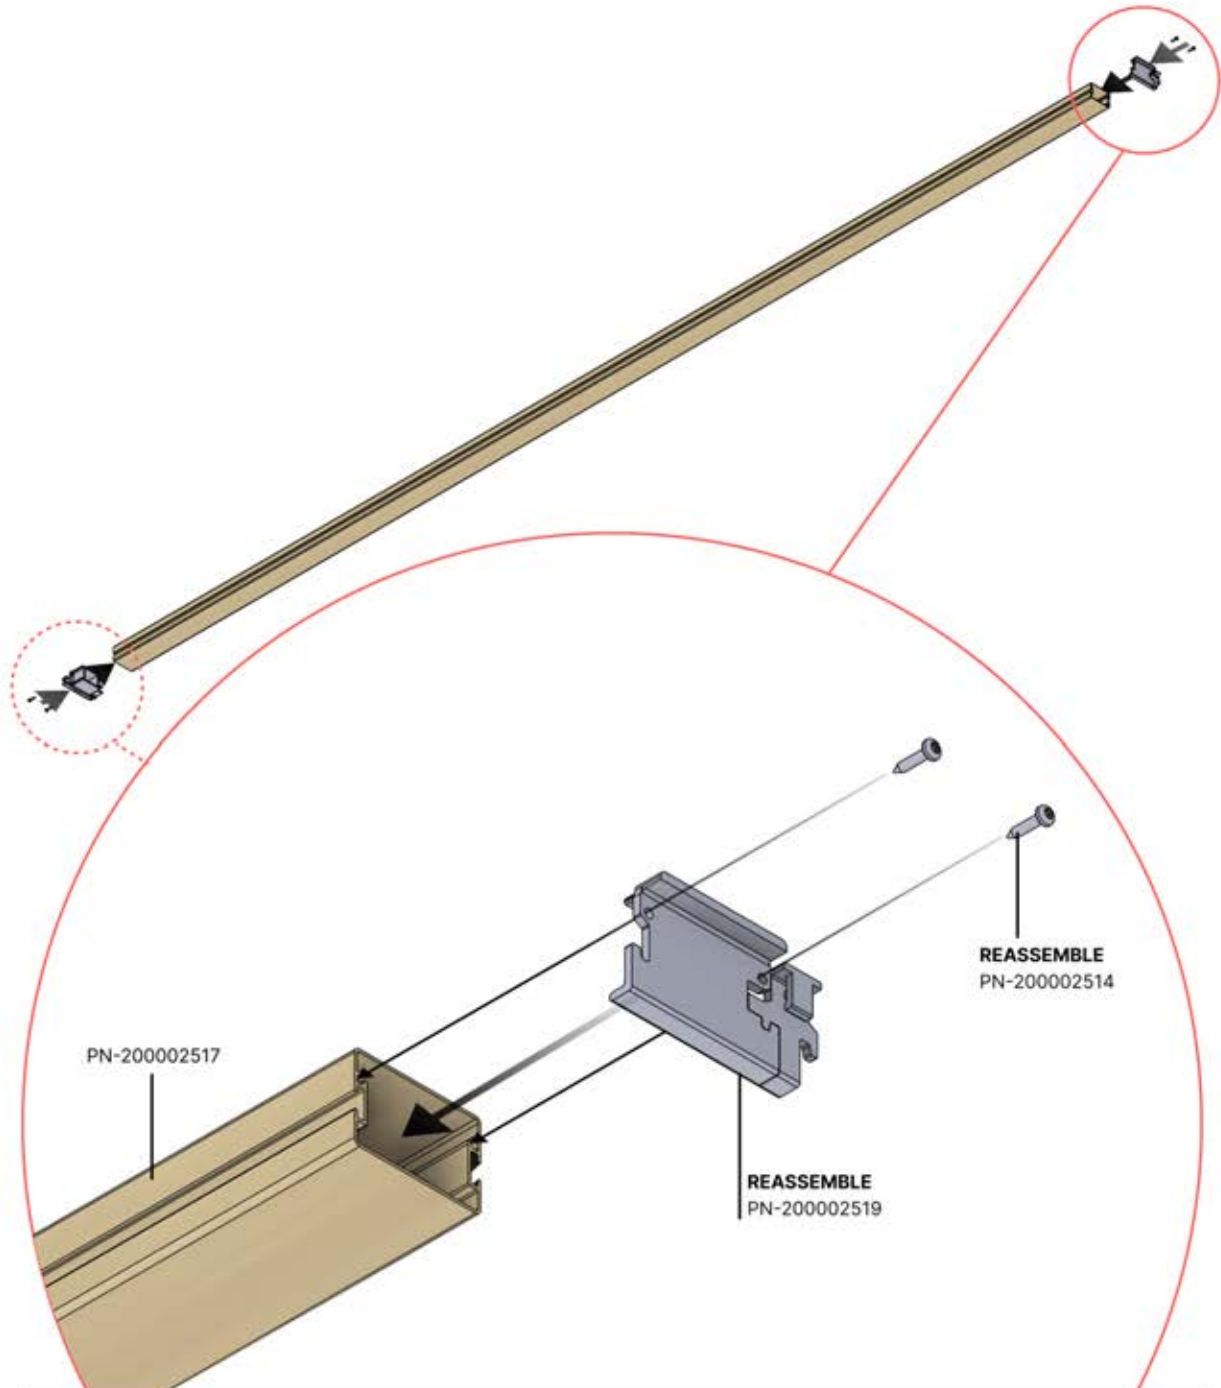

PLEASE NOTE: Do not remove the slat connection profile on the left and right slats, as these will be installed and fixed into the posts.



DO NOT REMOVE




Slat Right
PN-200002509
1x

Slat Left
PN-200002508
1x

WALL MOUNT KIT ASSEMBLY

If you install slat walls to the right of pergola than use this slat


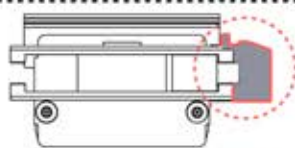


Slat Right
PN-200002509
1x

If you install slat walls to the left of pergola than use this slat




Slat Left
PN-200002508
1x

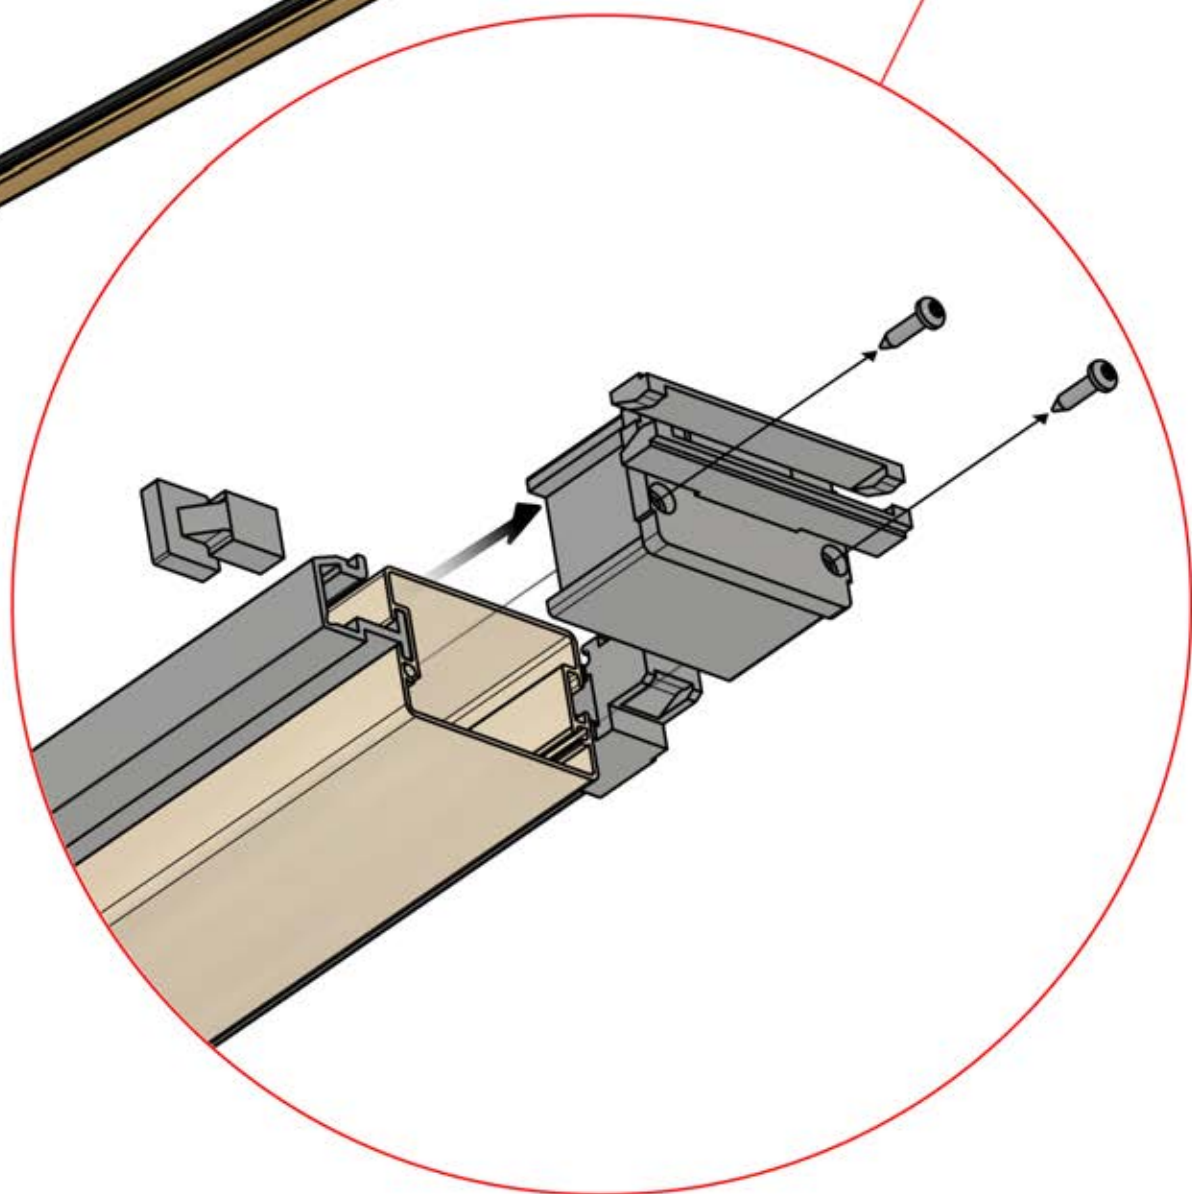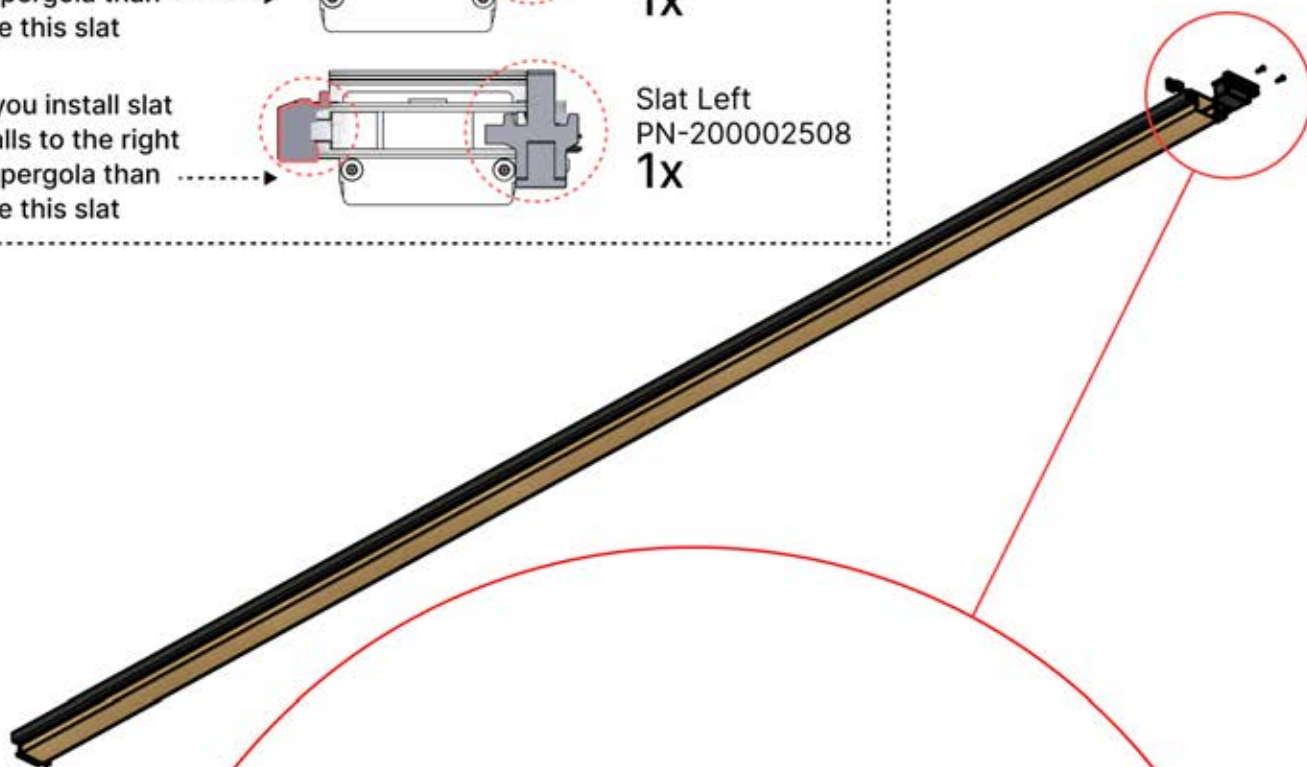

WALL MOUNT KIT ASSEMBLY

If you install slat walls to the right of pergola than use this slat

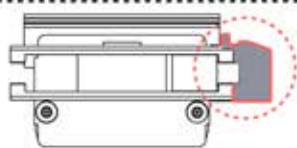


Slat Right
PN-200002509
1x

If you install slat walls to the left of pergola than use this slat




Slat Left
PN-200002508
1x

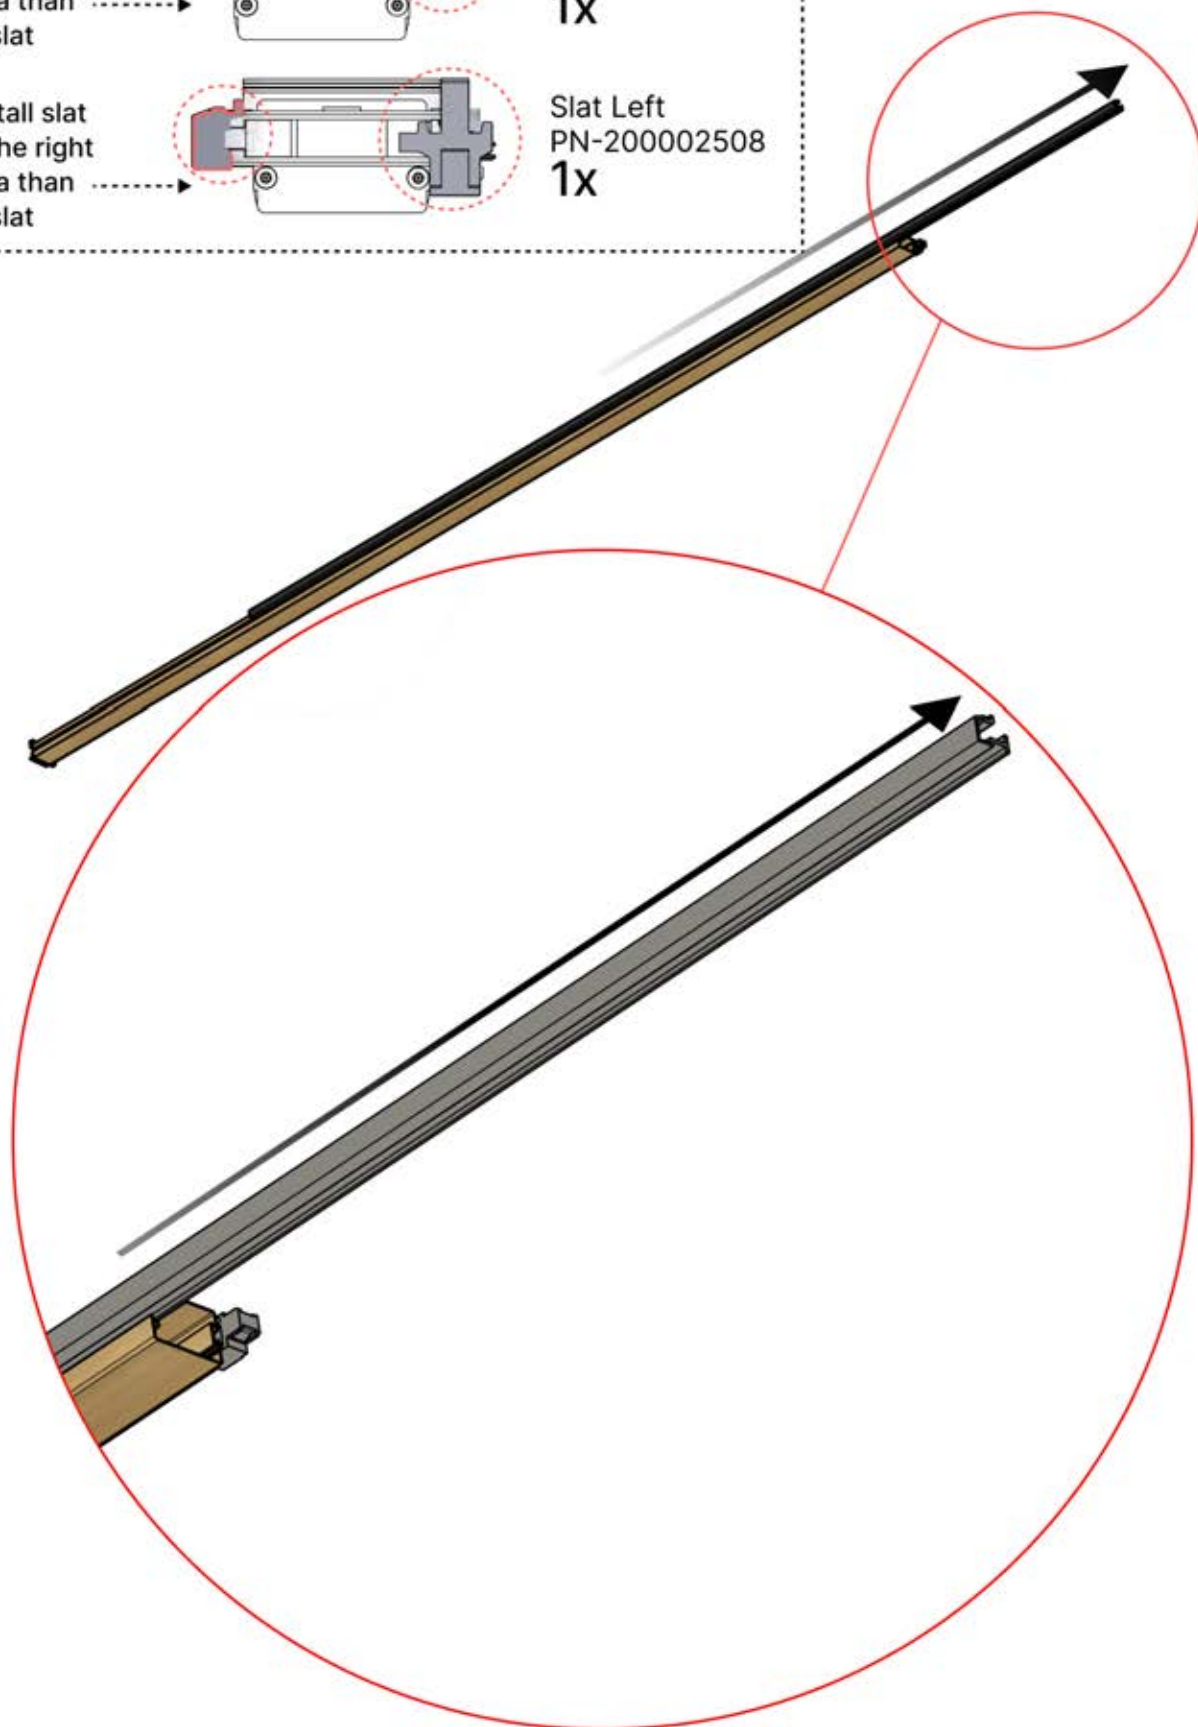


PERGOLUX | SLAT WALL

WALL MOUNT KIT ASSEMBLY

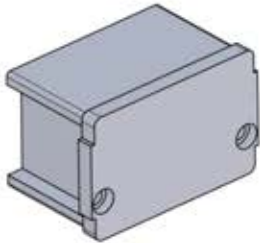


WF SLAT
FLANGE TOP
x1

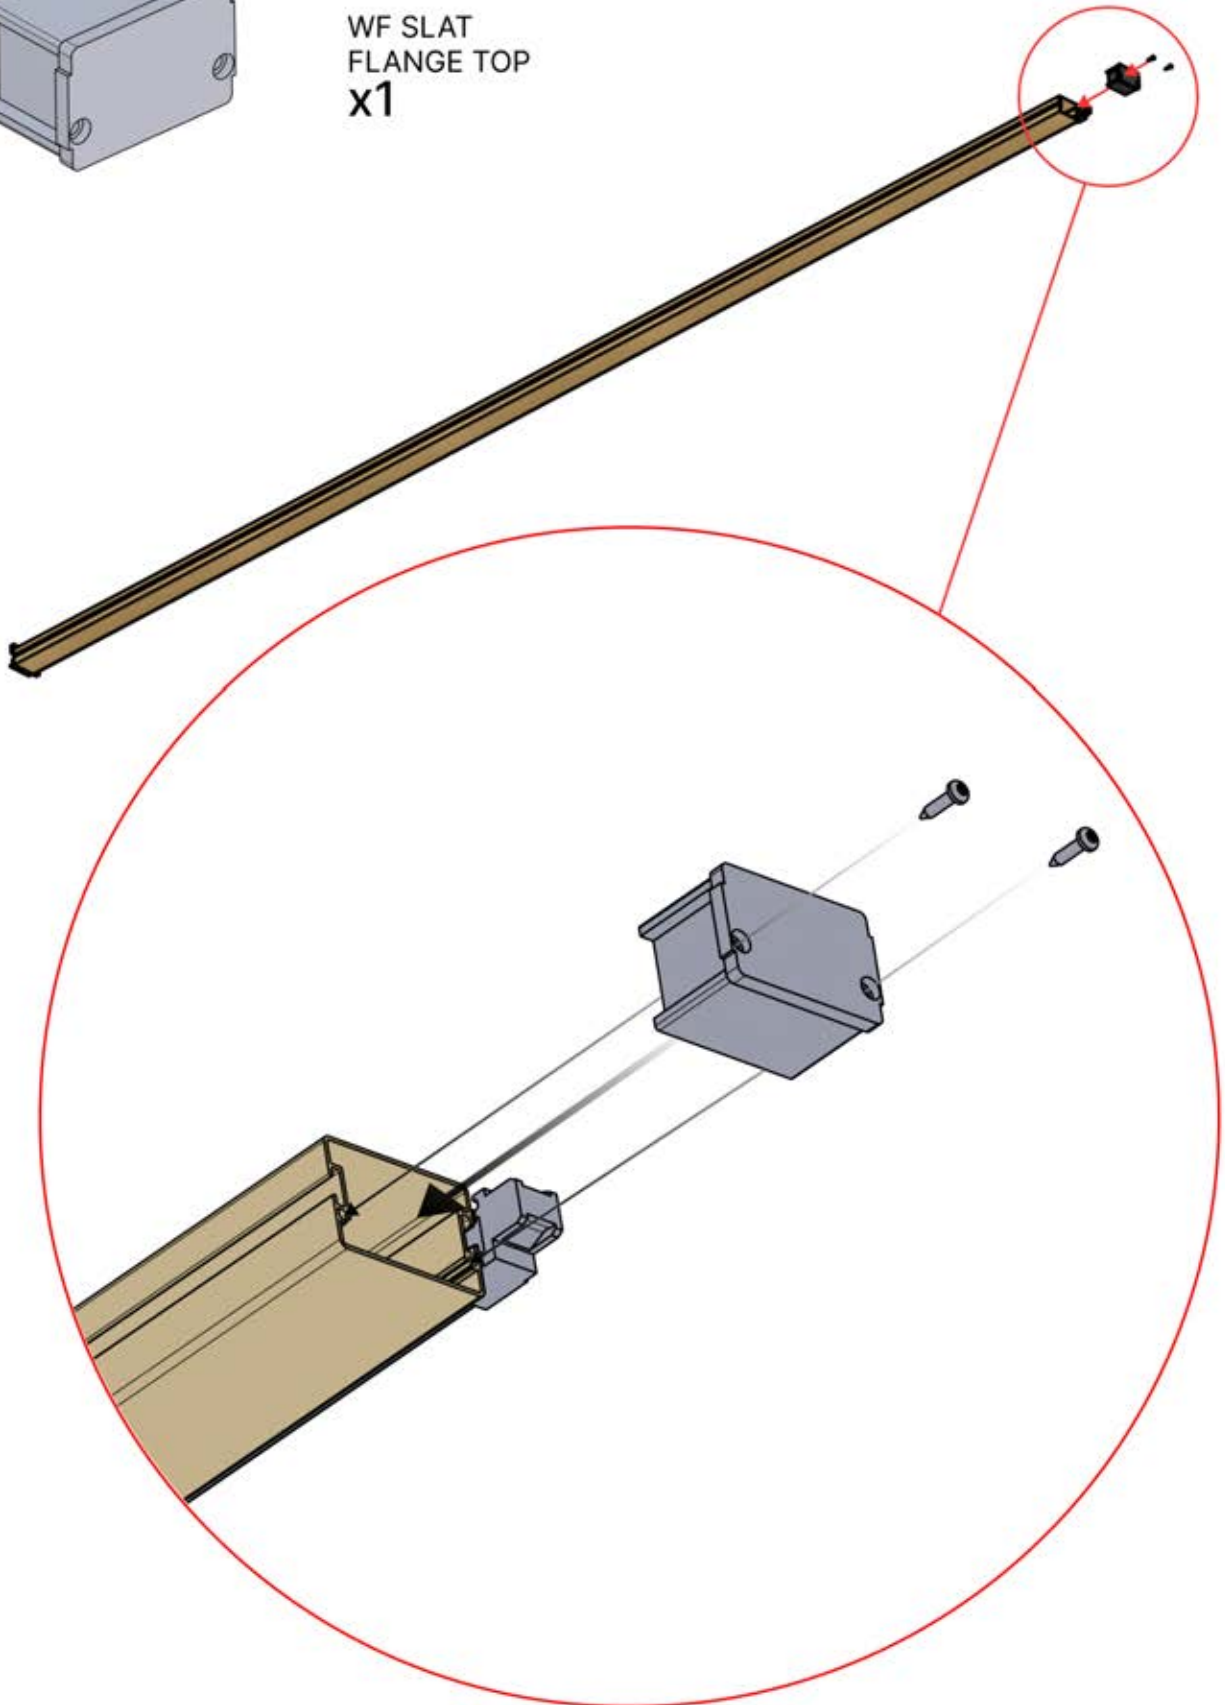

REMOVE COVER AND CLIPS

Remove the cover and clips entirely from the beams and posts on the side where you plan to install the slat wall.

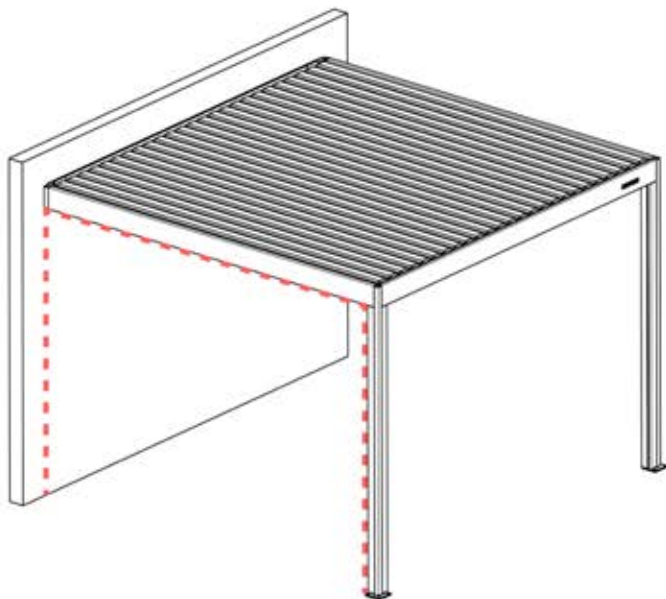

Cover and clip



PN-200000512
STRIP COVER CLIP



SnapFIT Cover


Beams PERGOLA

Remove cover and clips from **beams**.




Beams SUNDREAM

Remove cover and clips from the underside of the **beams**.




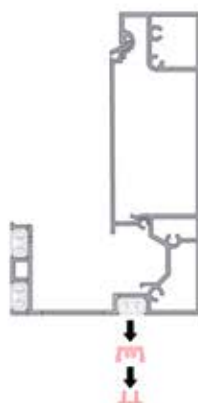


Posts




Remove cover and clips from **posts**.

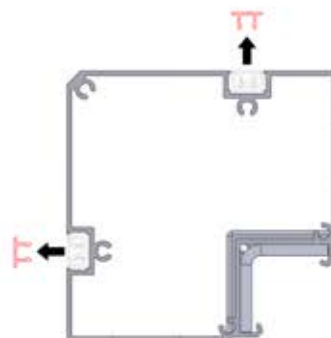

1

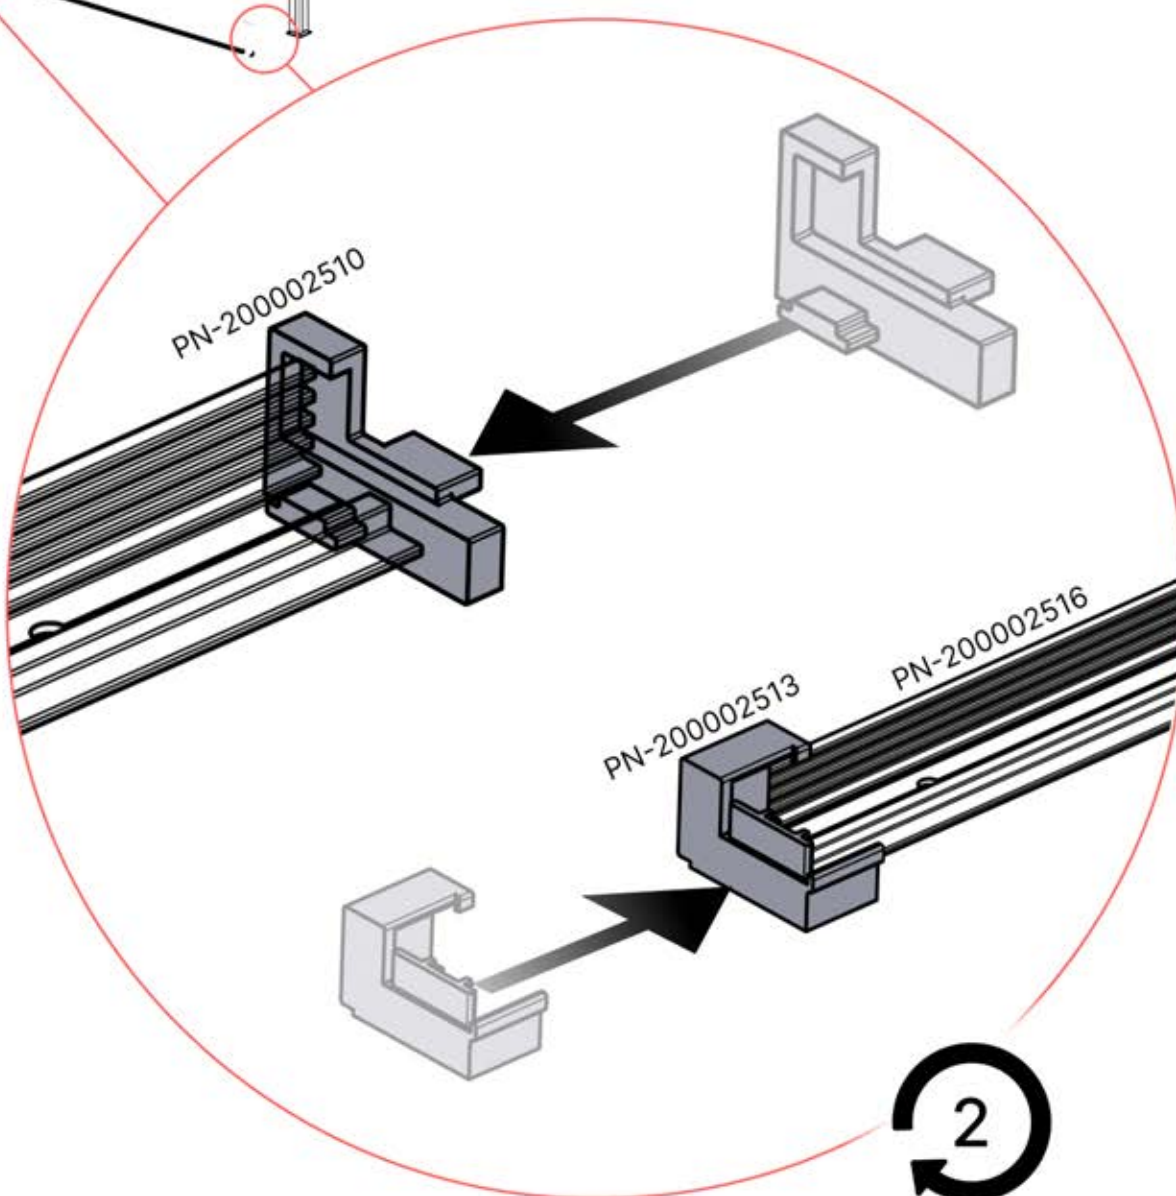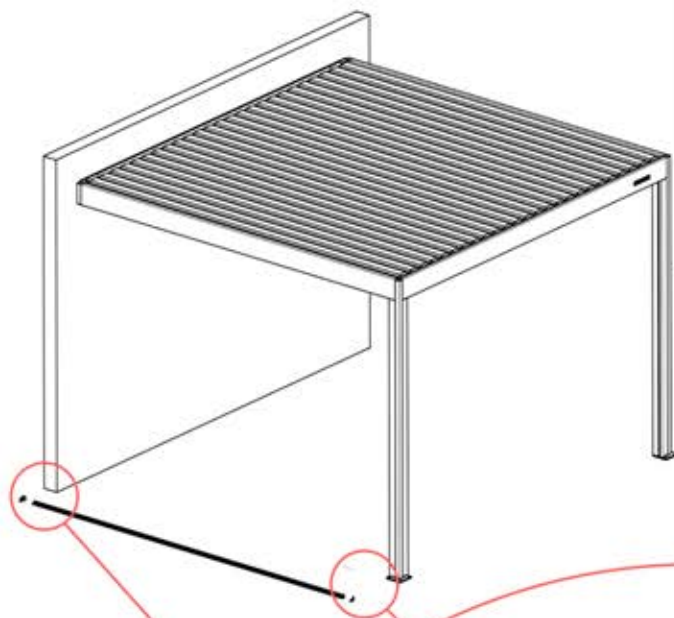
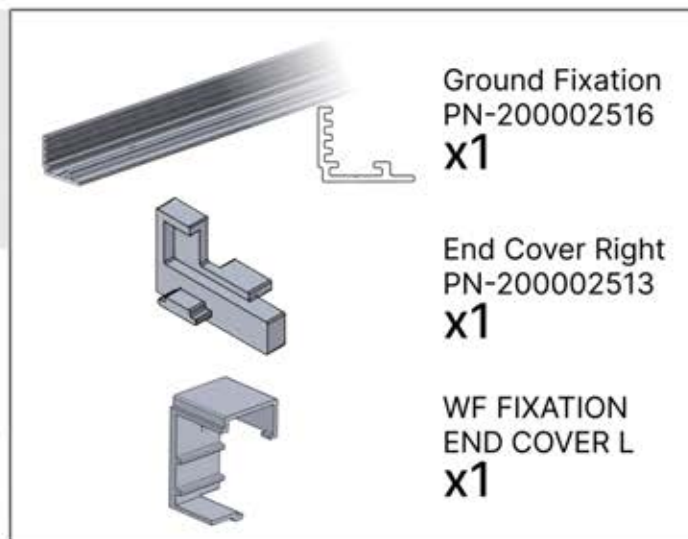
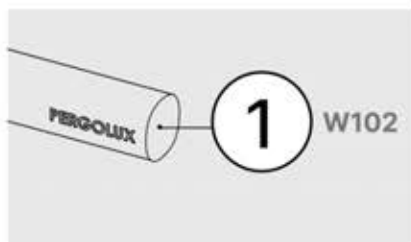


2

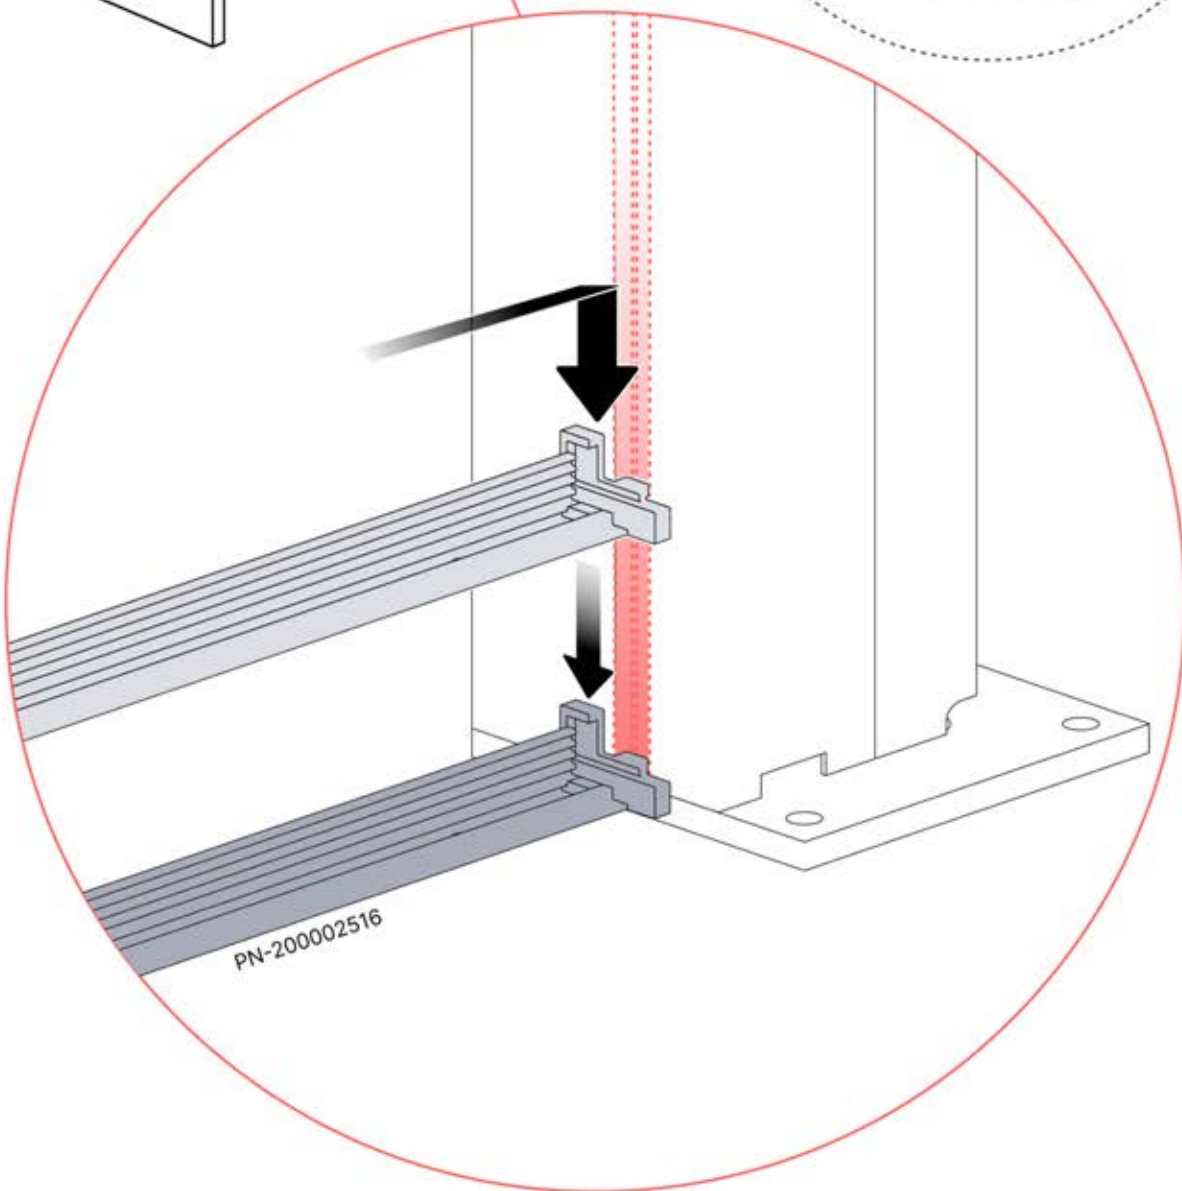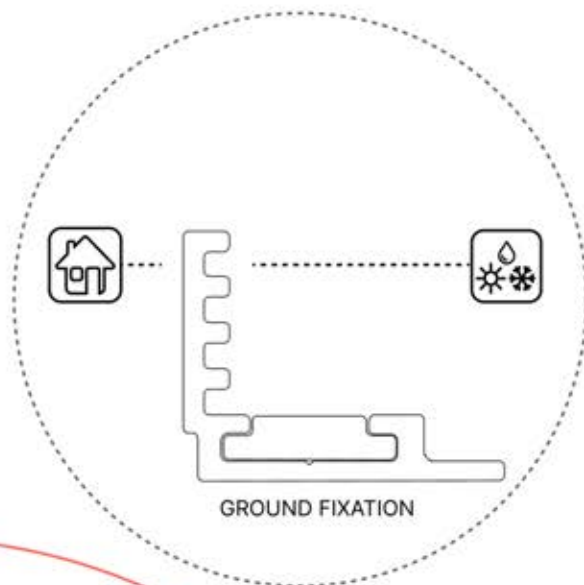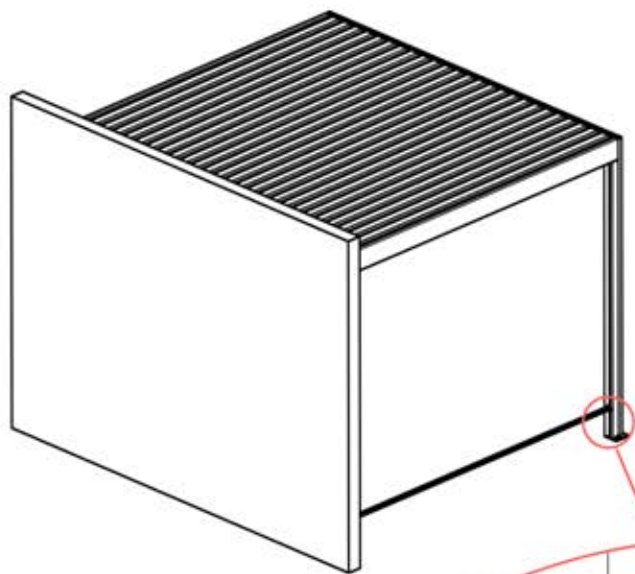





PERGOLUX | SLAT WALL

INFORMATION

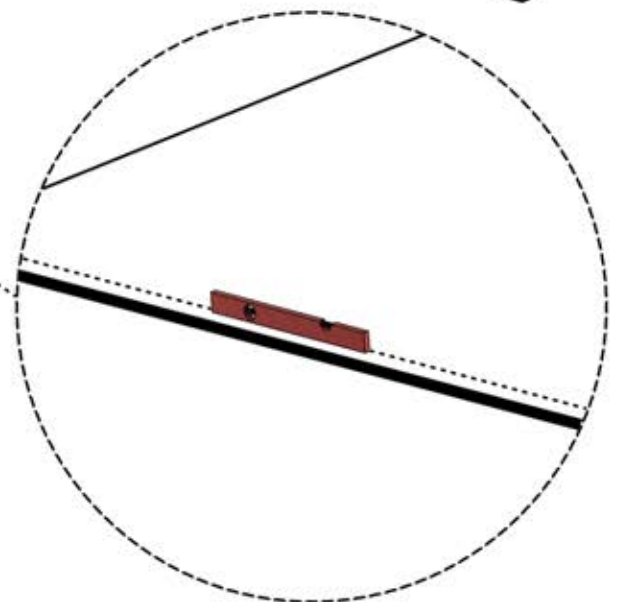
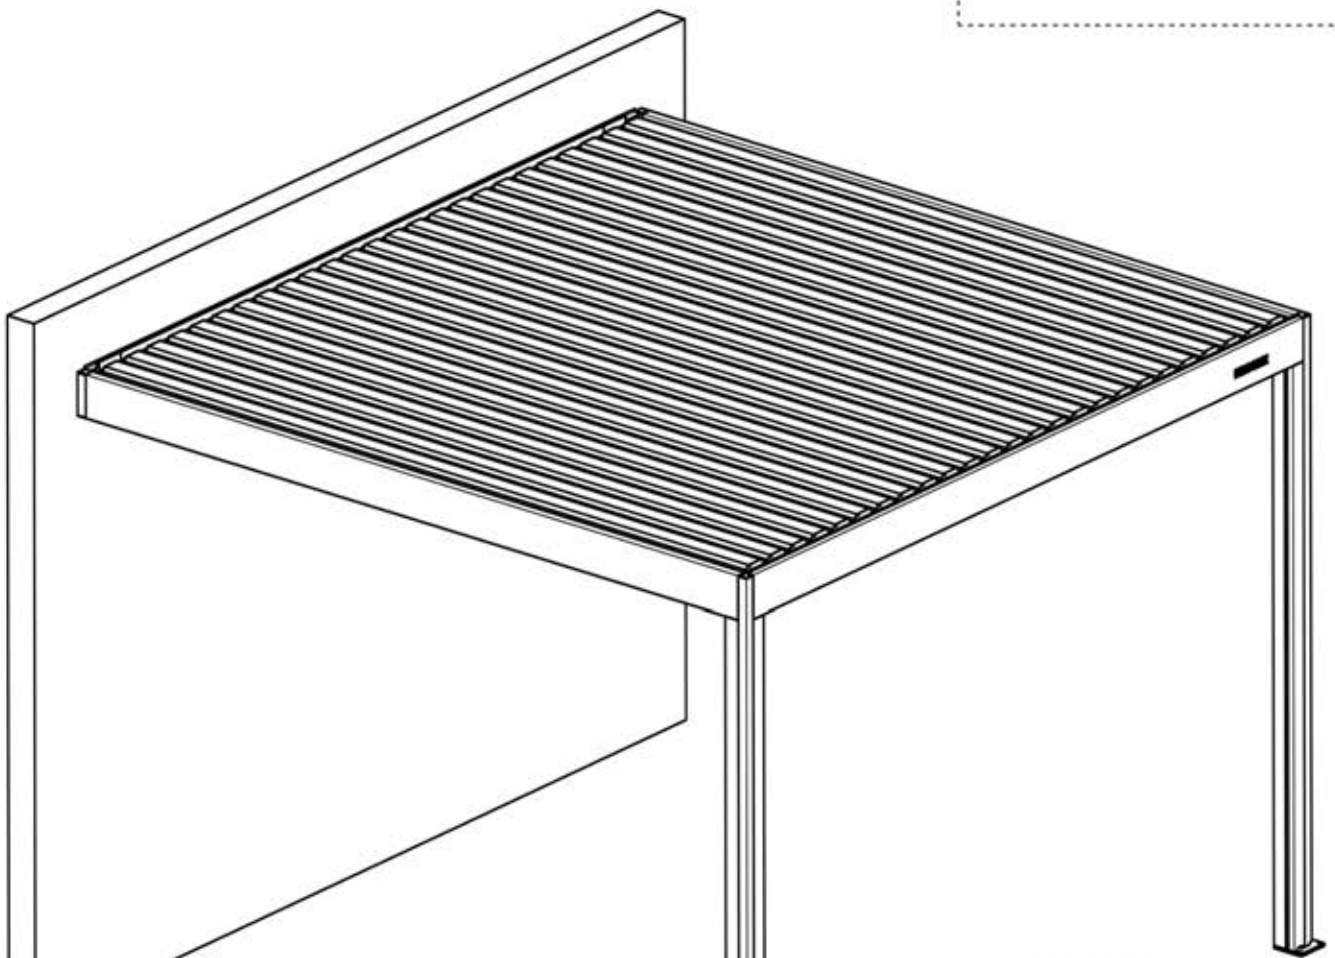
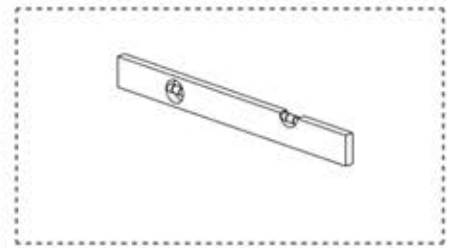


Use a spirit level to align the ground fixation part, ensuring it is exactly parallel to the centerline of the front pole.

3

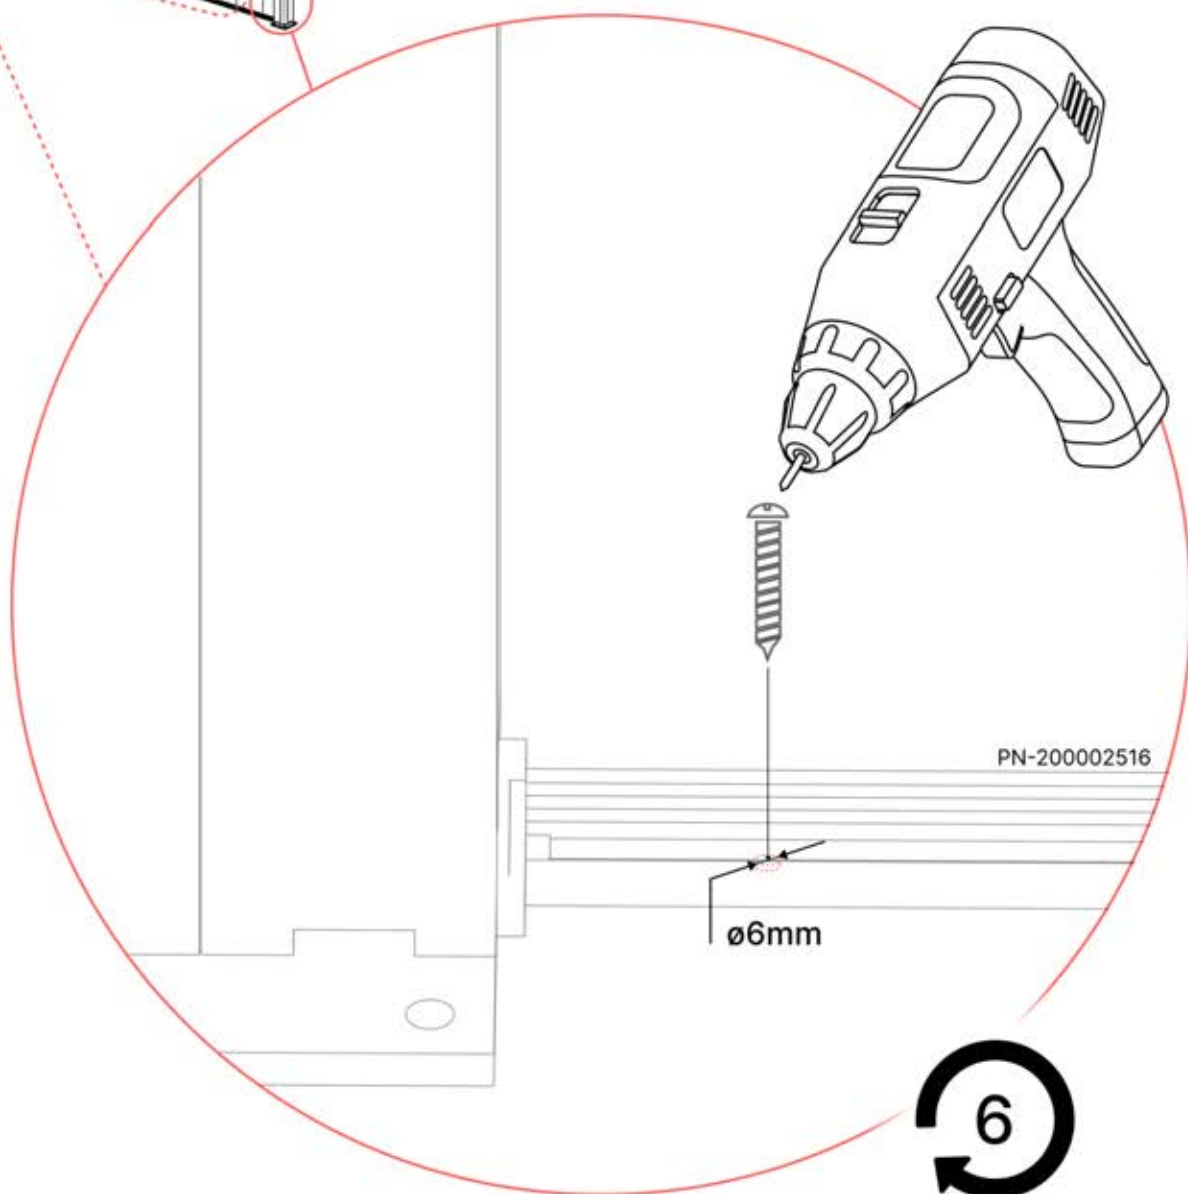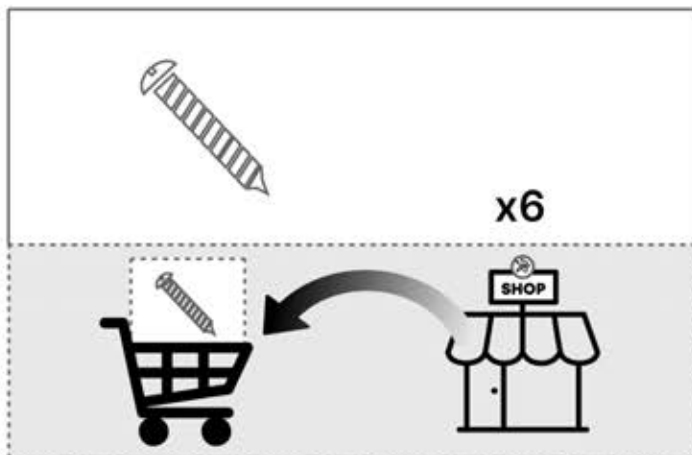
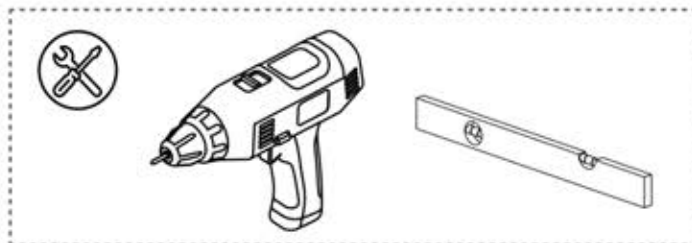
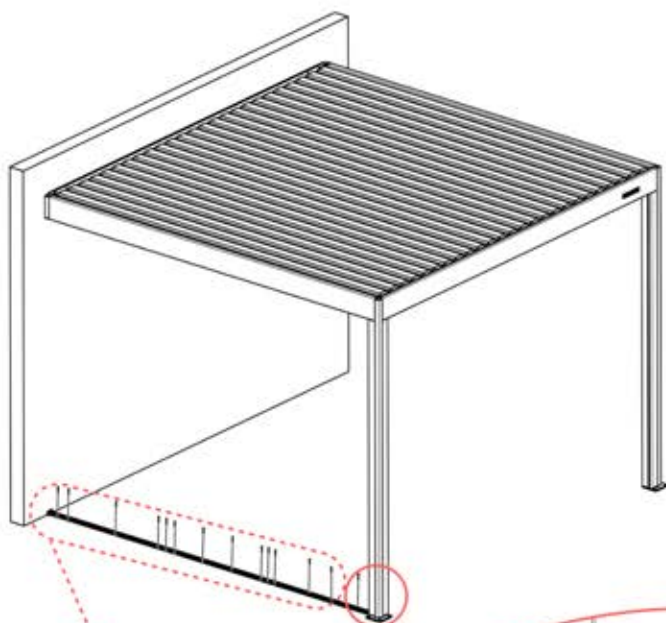


4

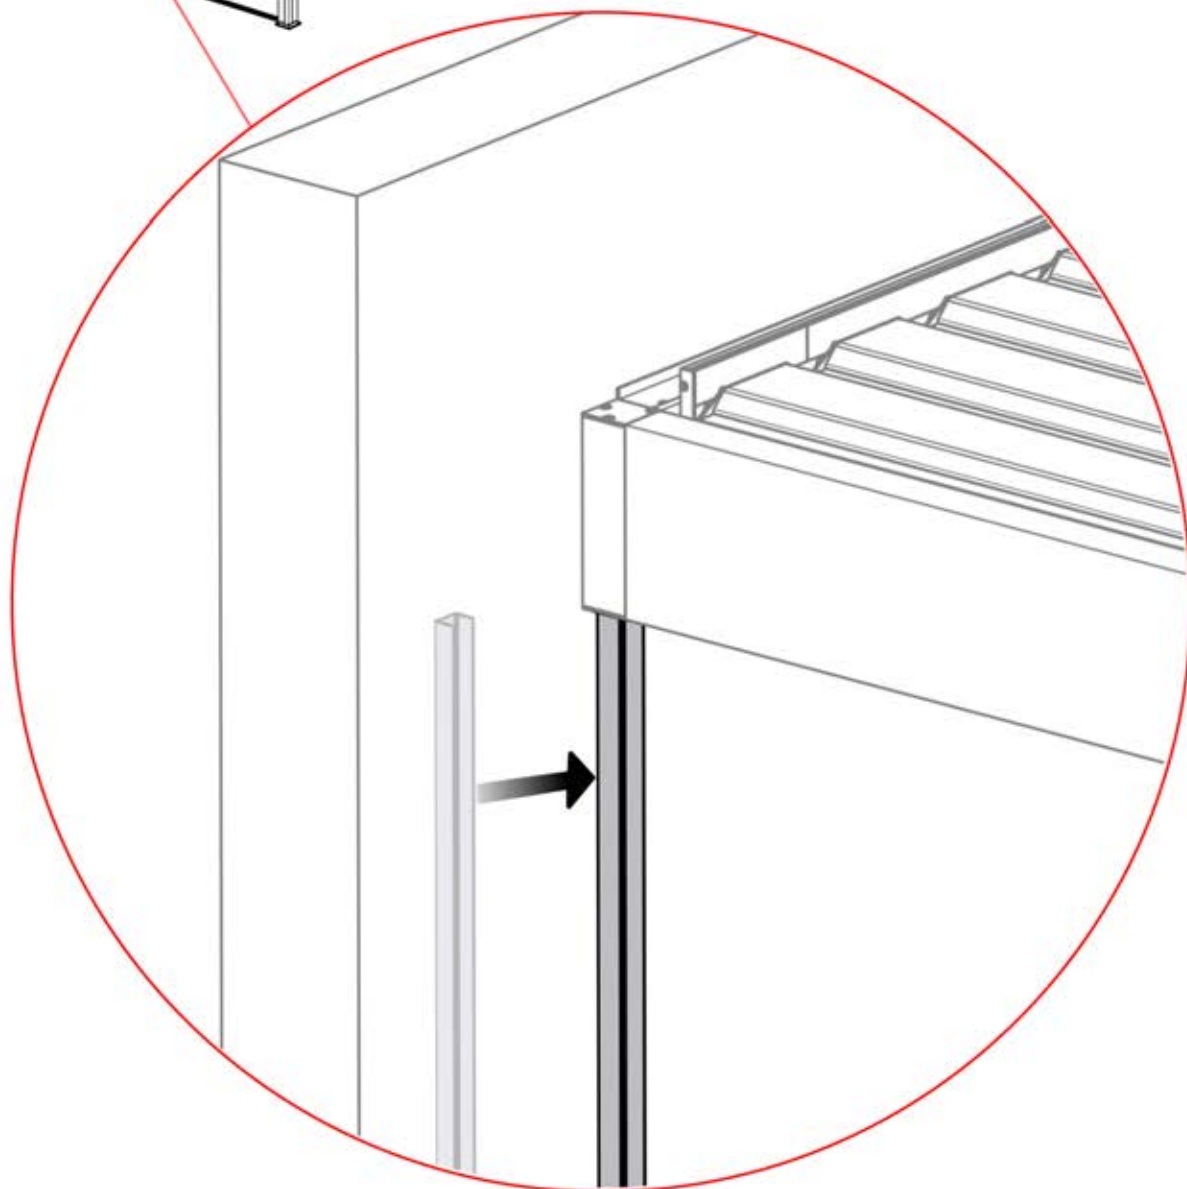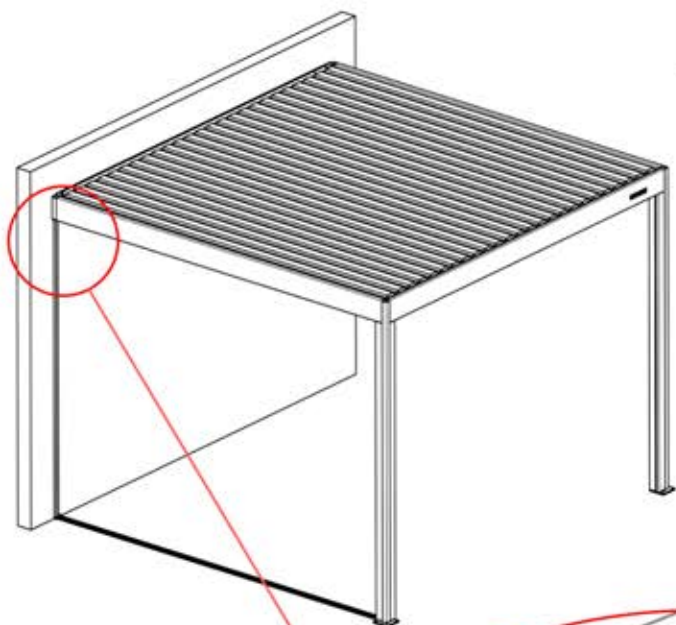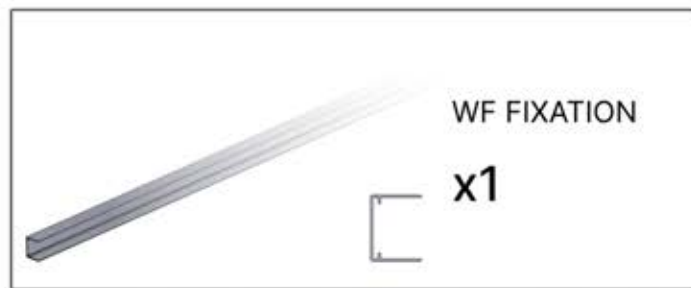





PERGOLUX | SLAT WALL

INFORMATION



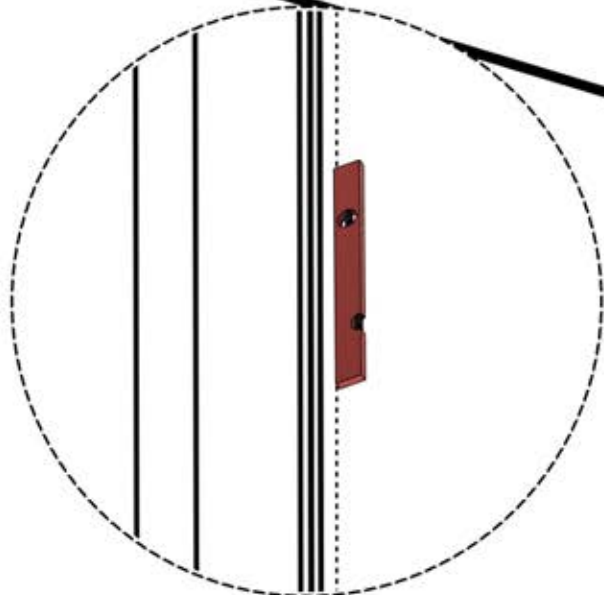
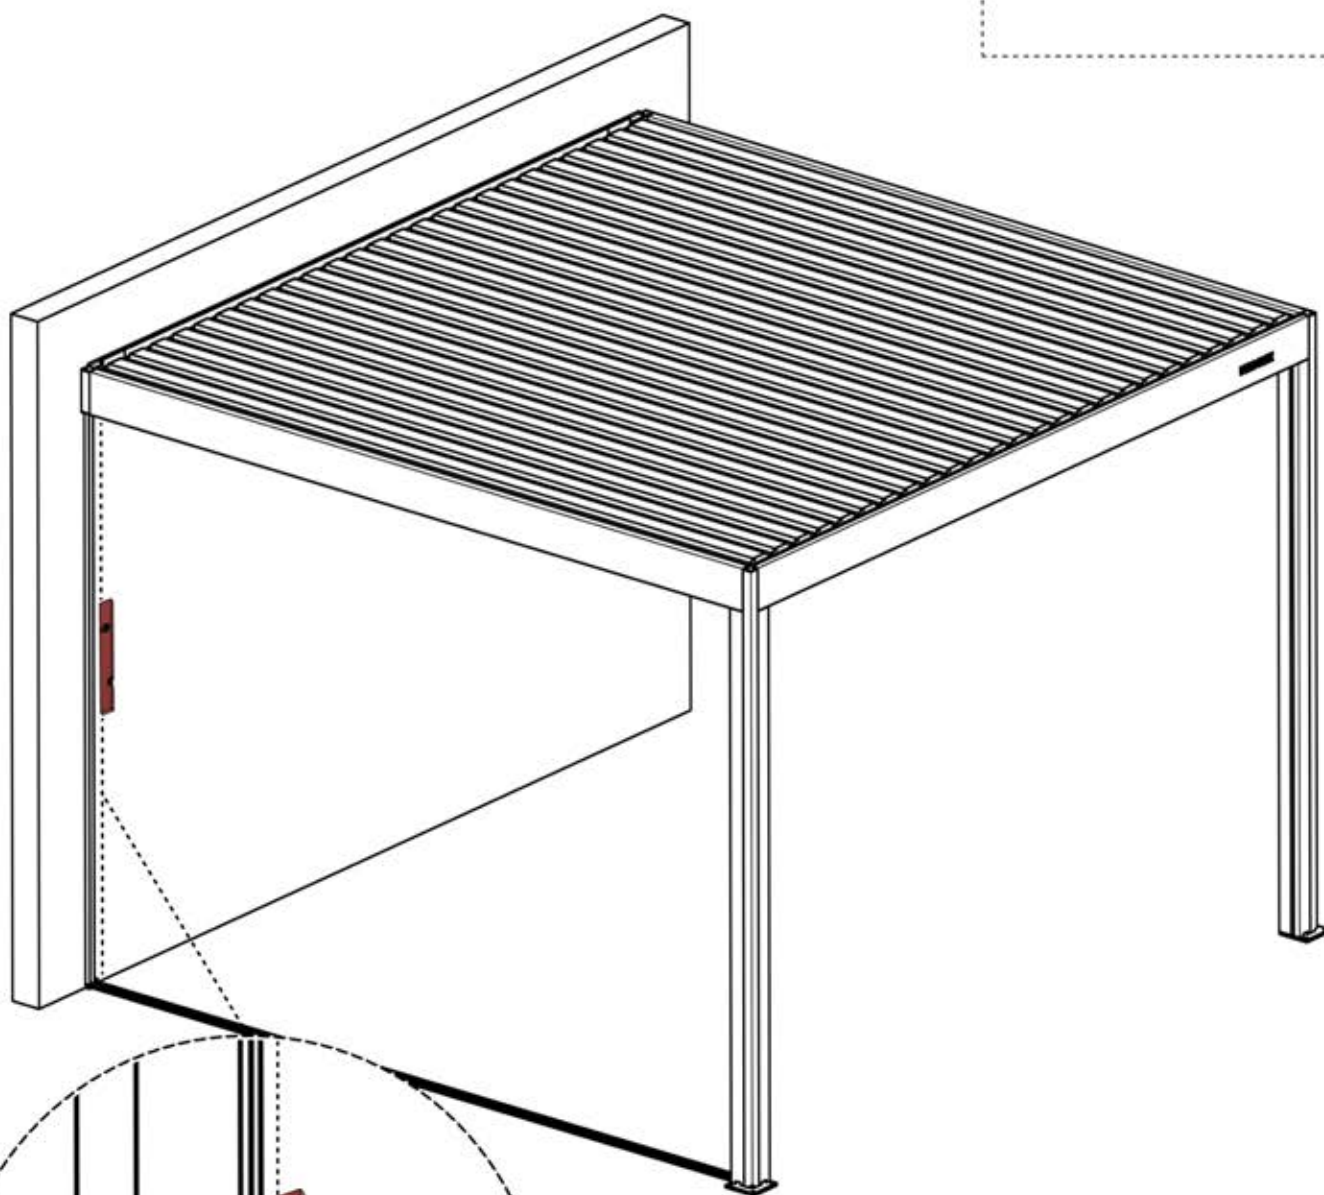
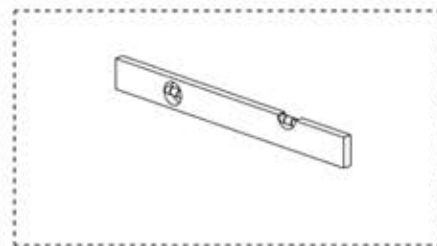


Use a spirit level to align the
WF Fixation part, ensuring it is
exactly parallel to the
centerline of the front pole

5

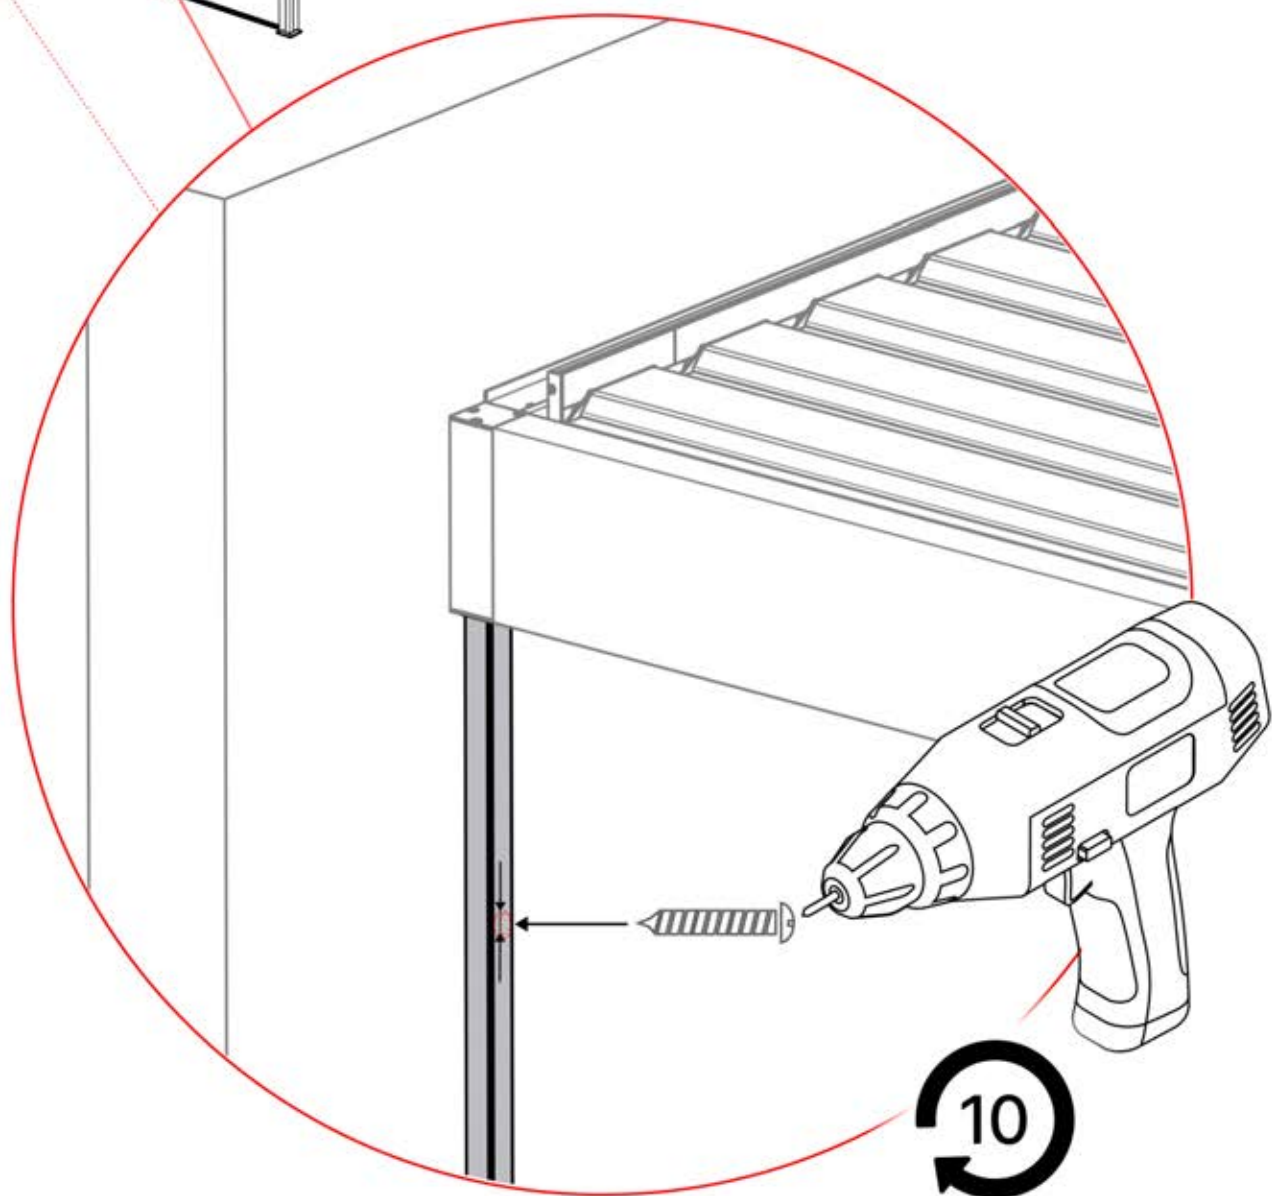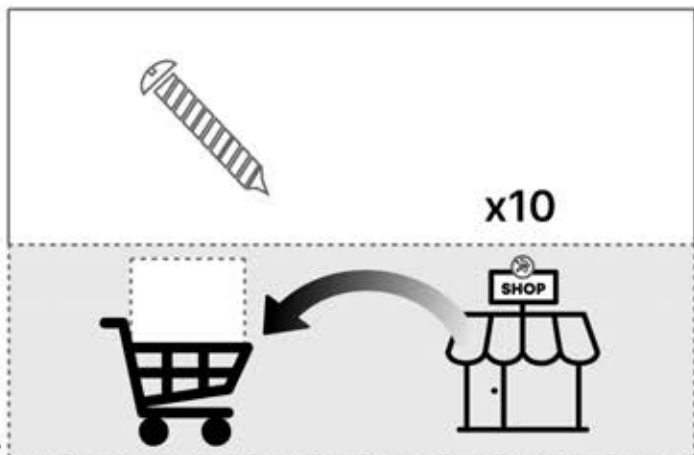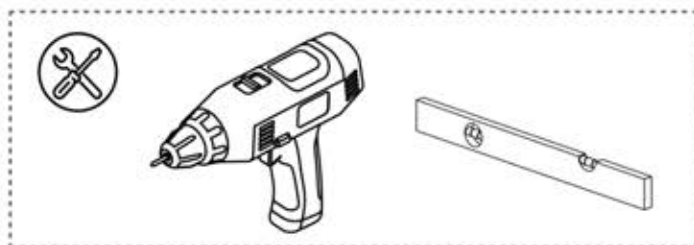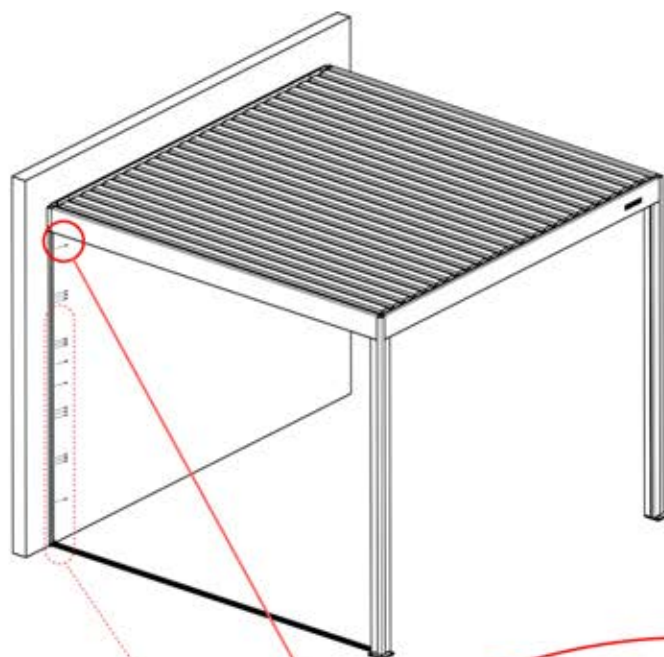


6

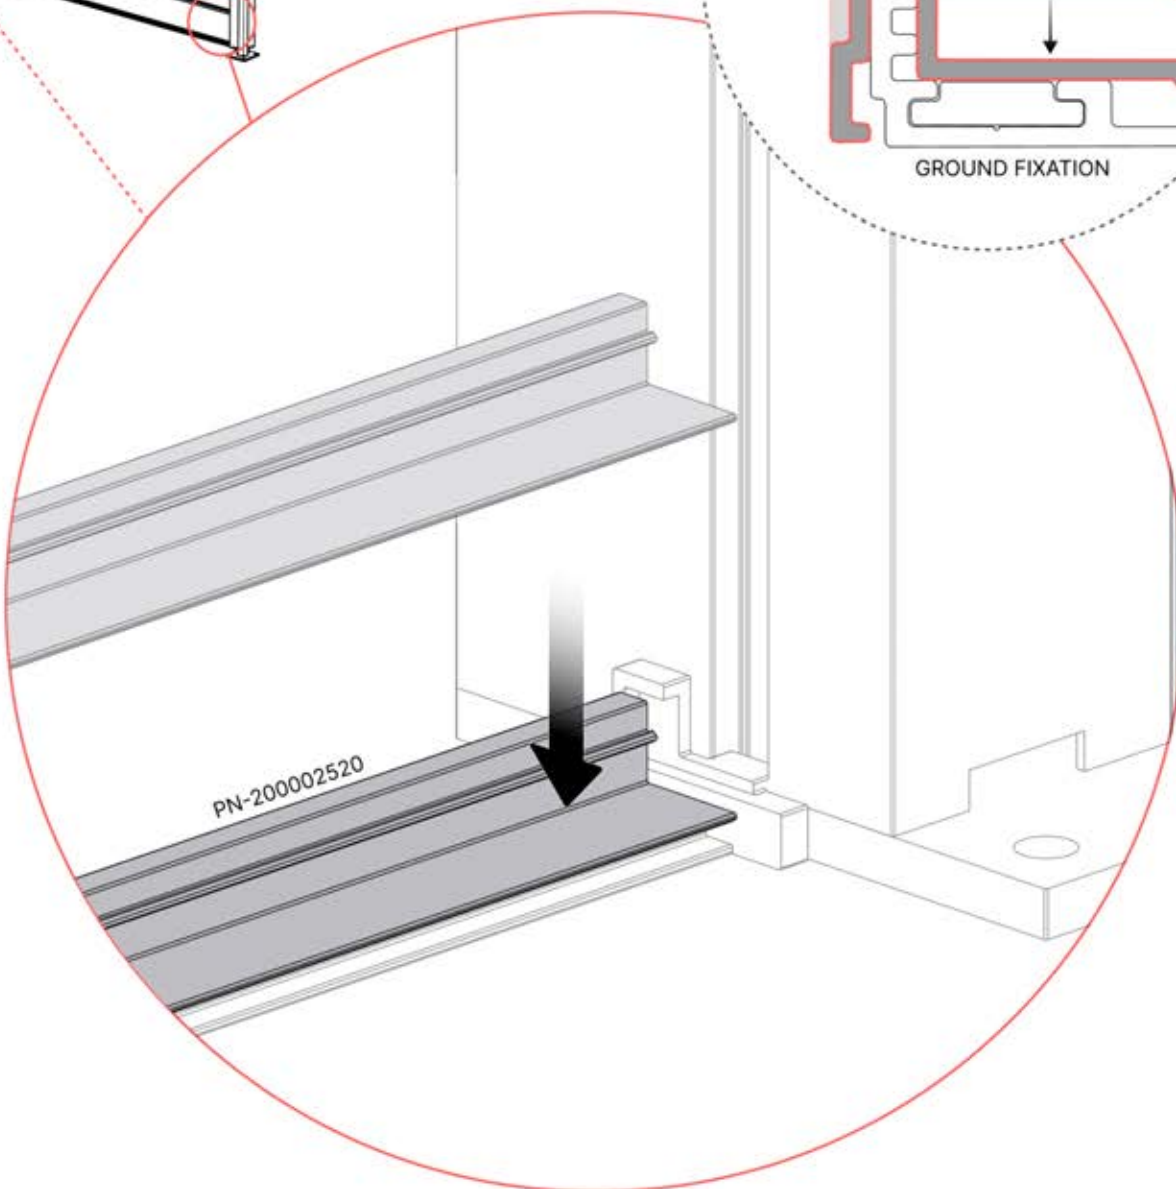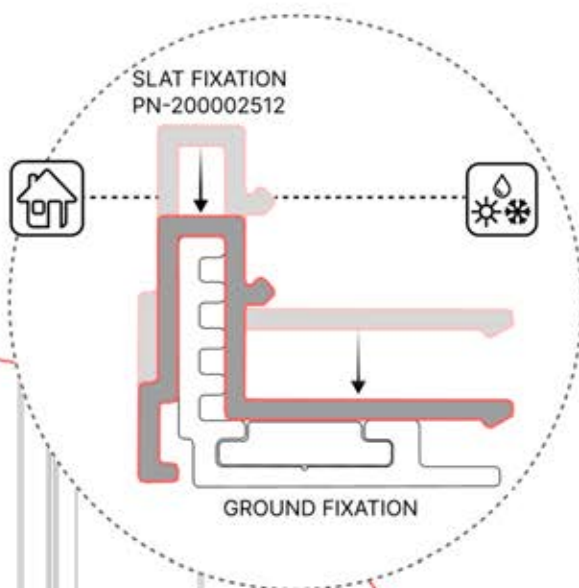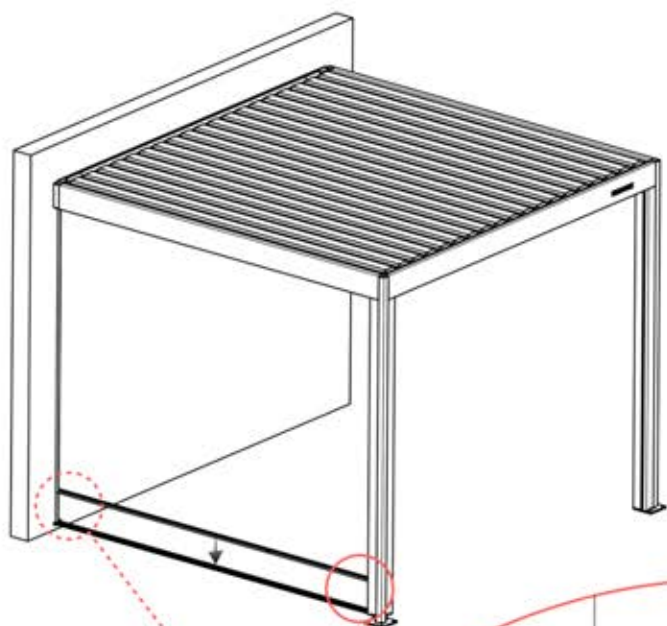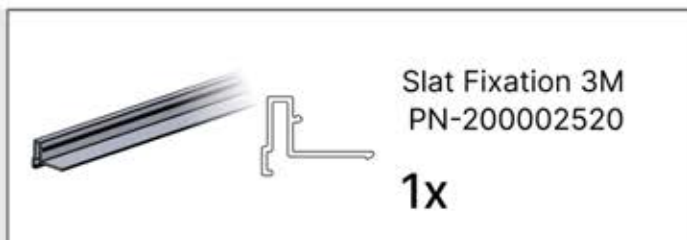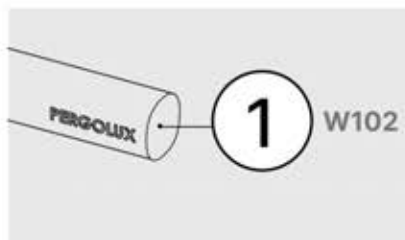


SLAT OVERVIEW


Slat Right
PN-200002509
1x

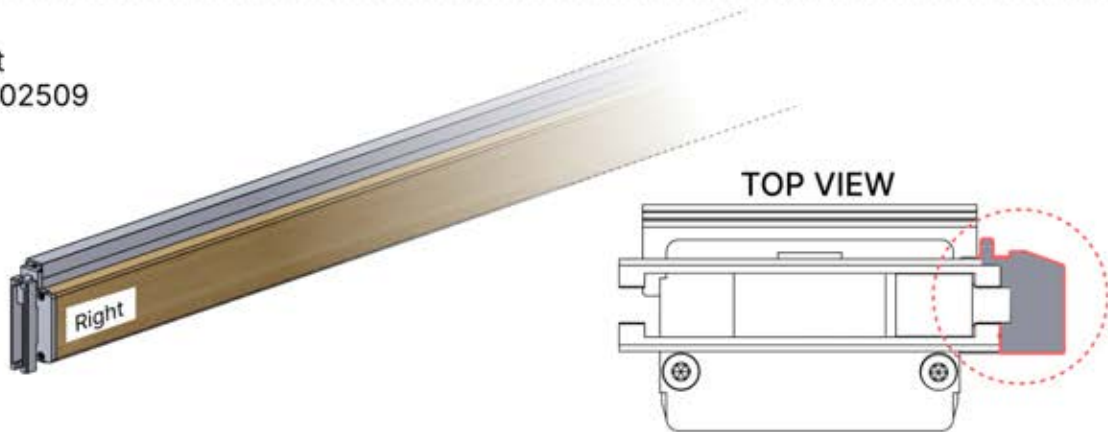





Slat Left
PN-200002508
1x

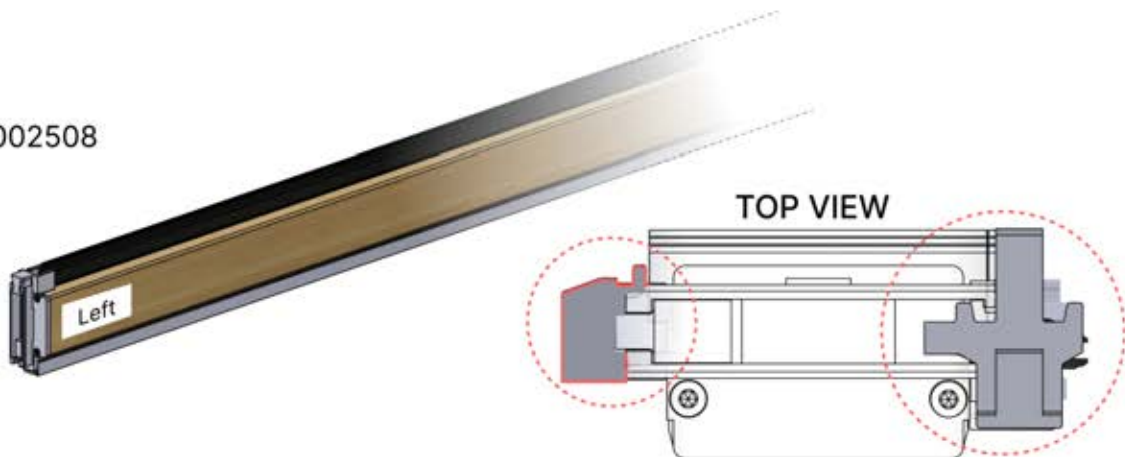




Slat Center
PN-200002507
44x

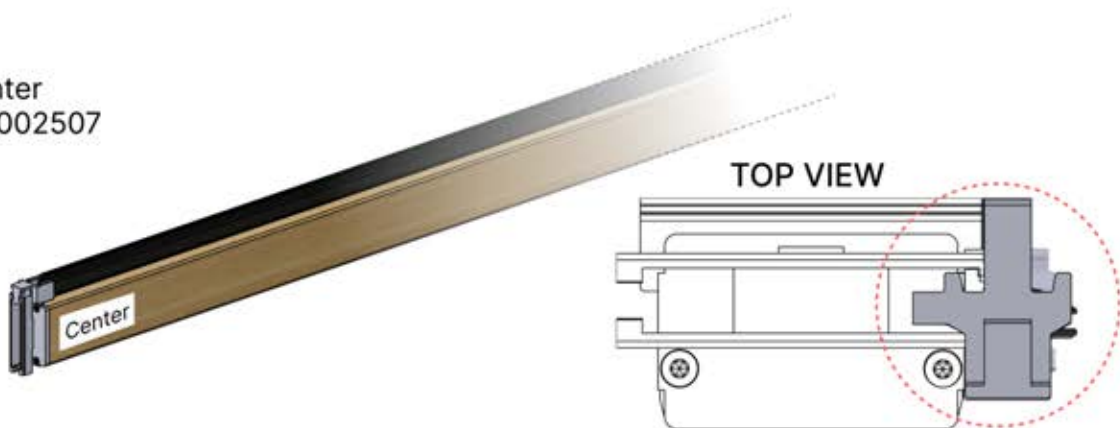



7

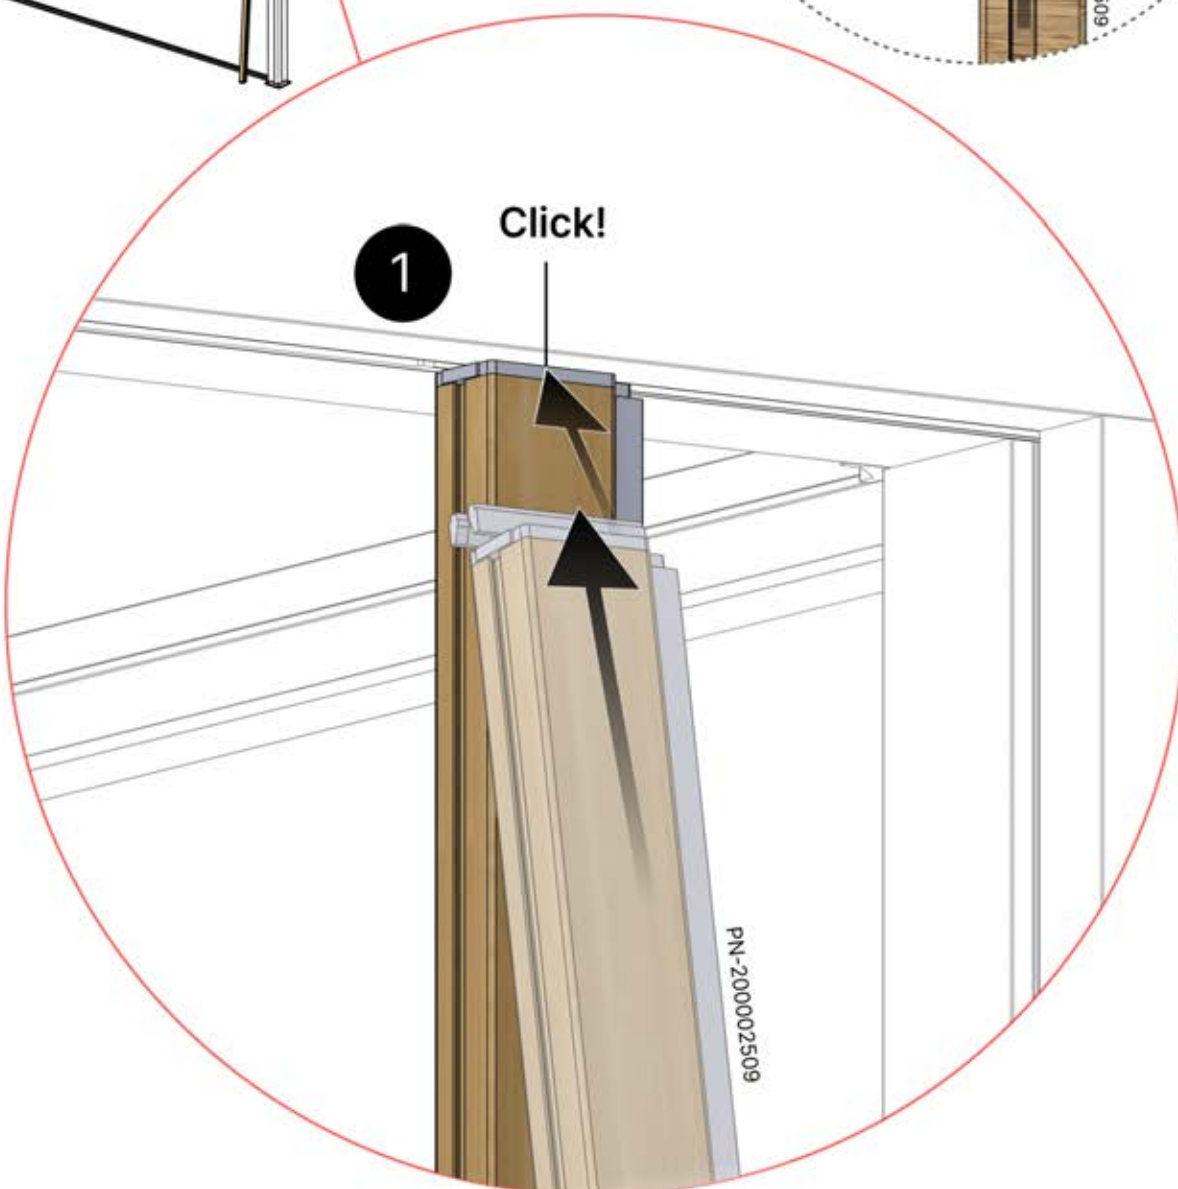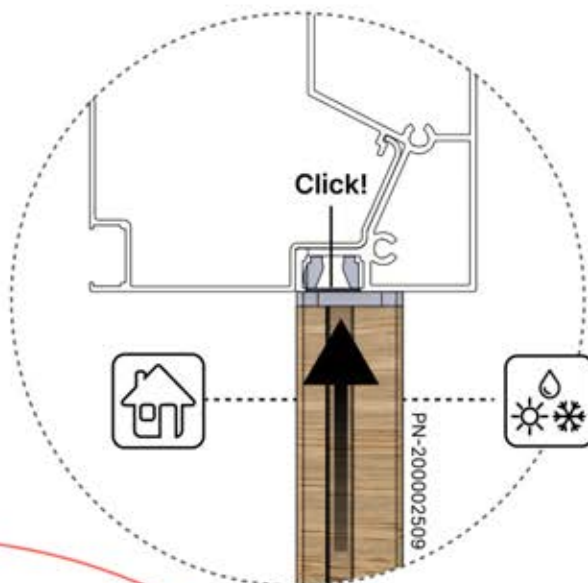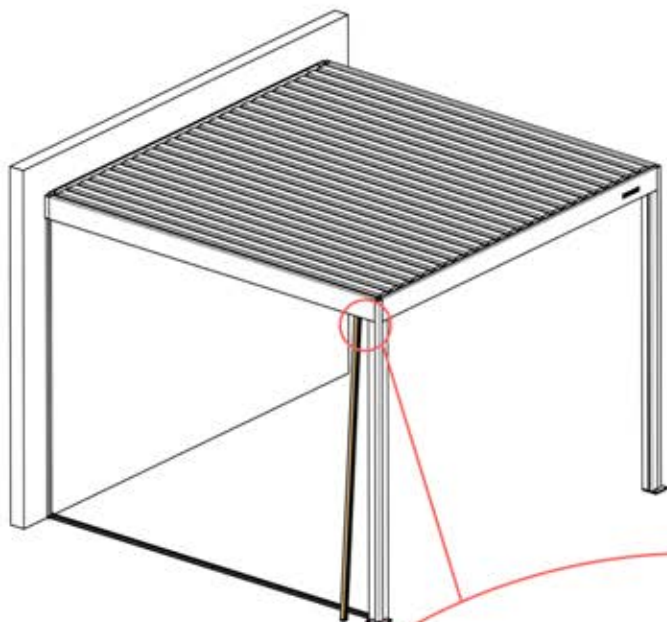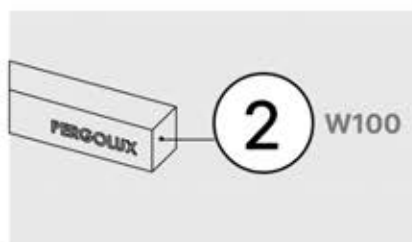





8

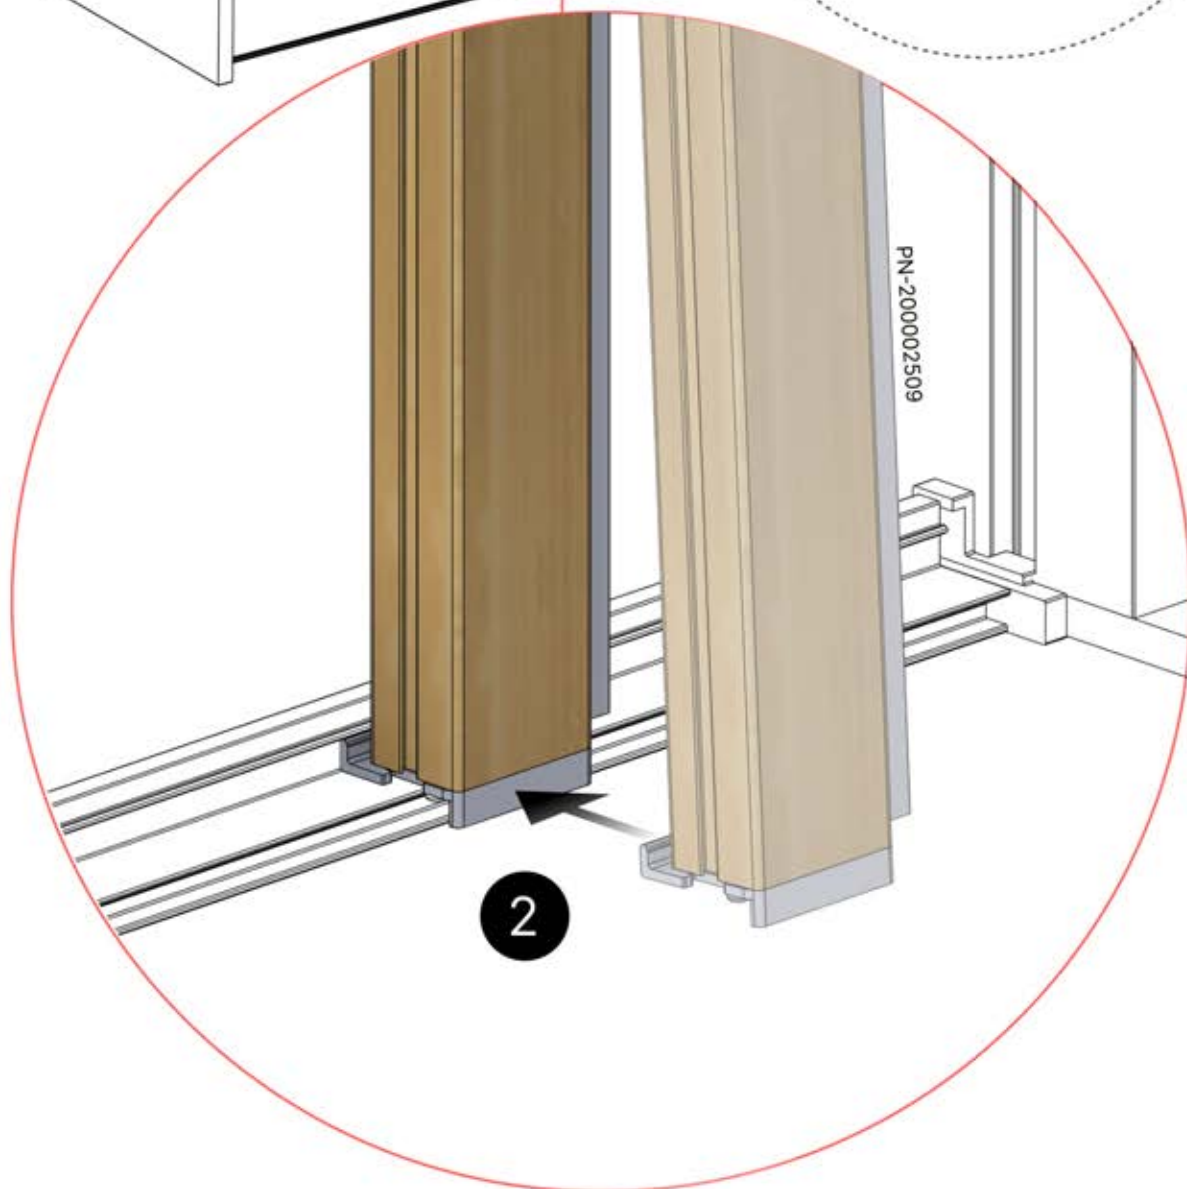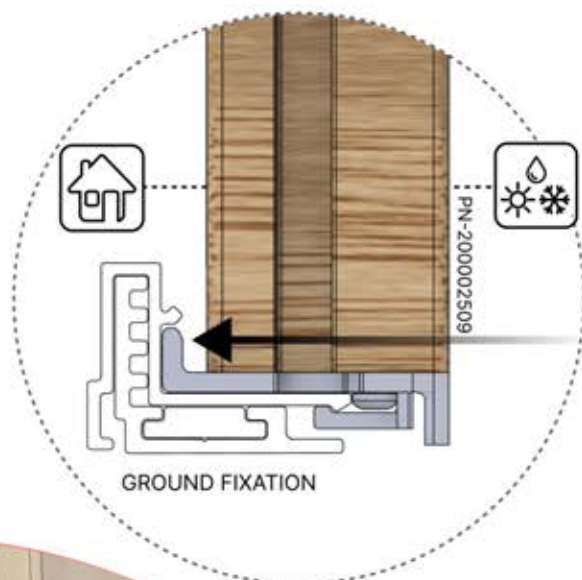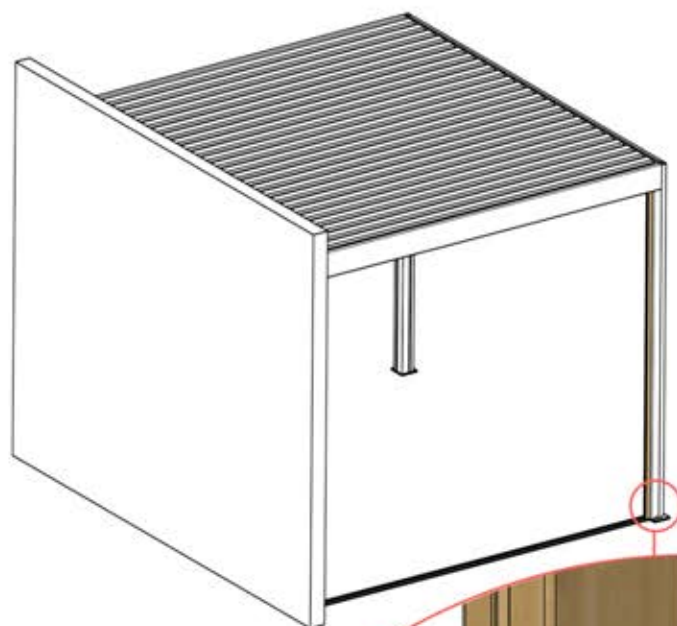






9

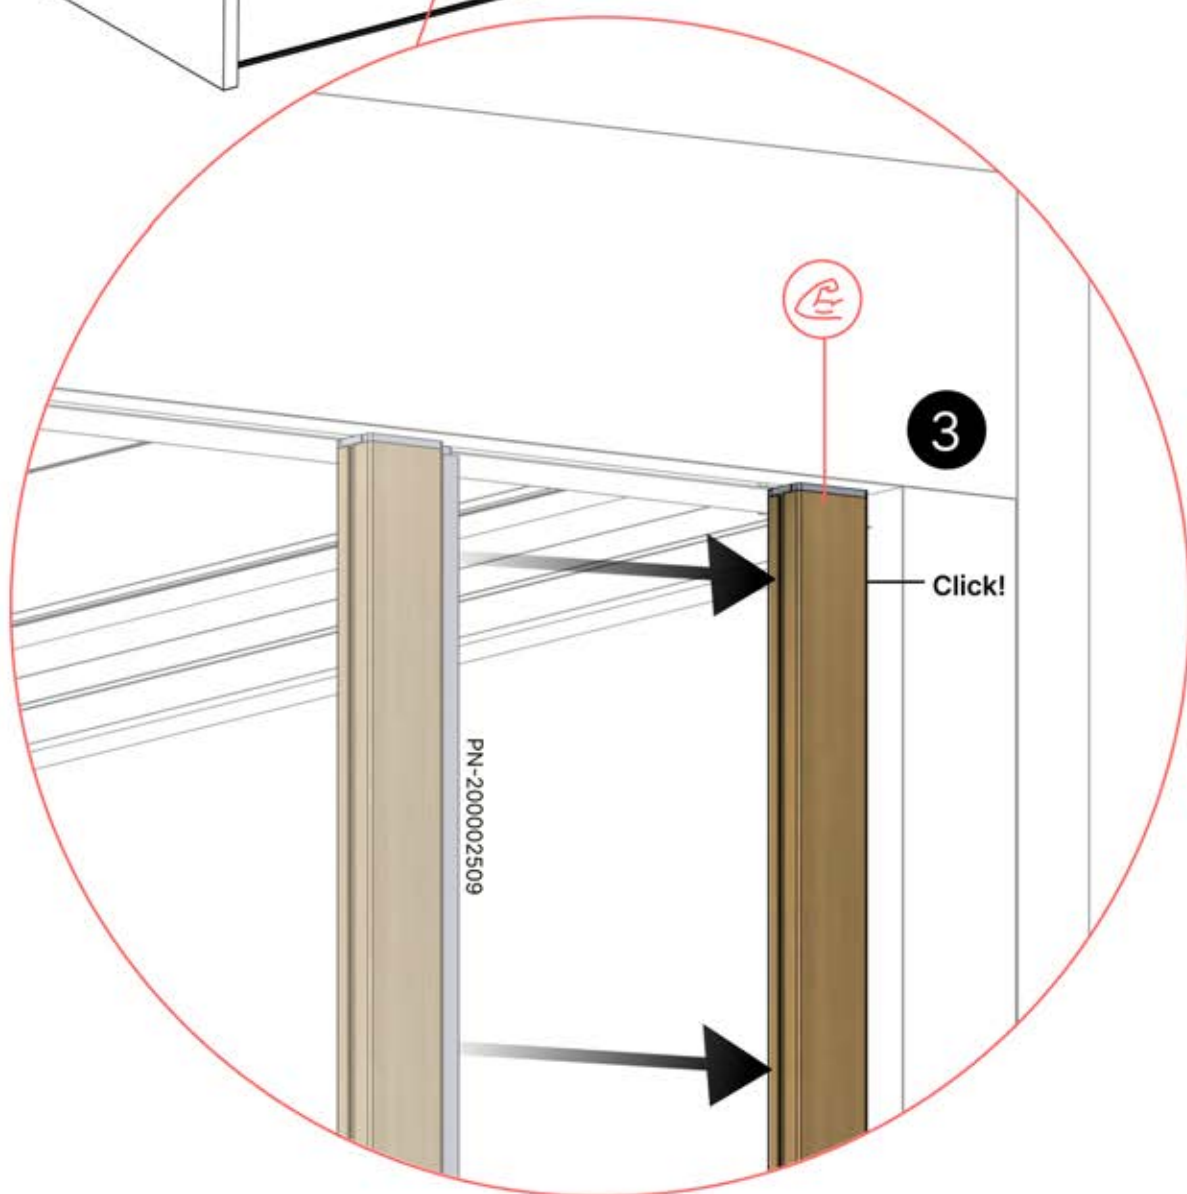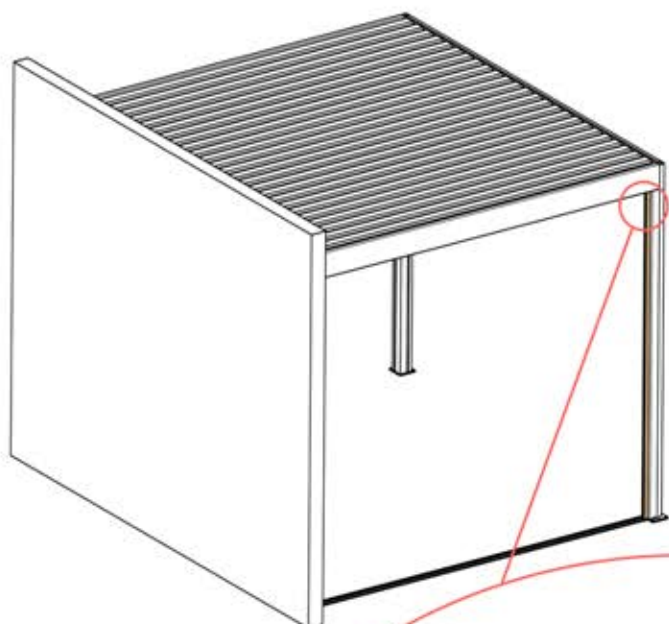




10

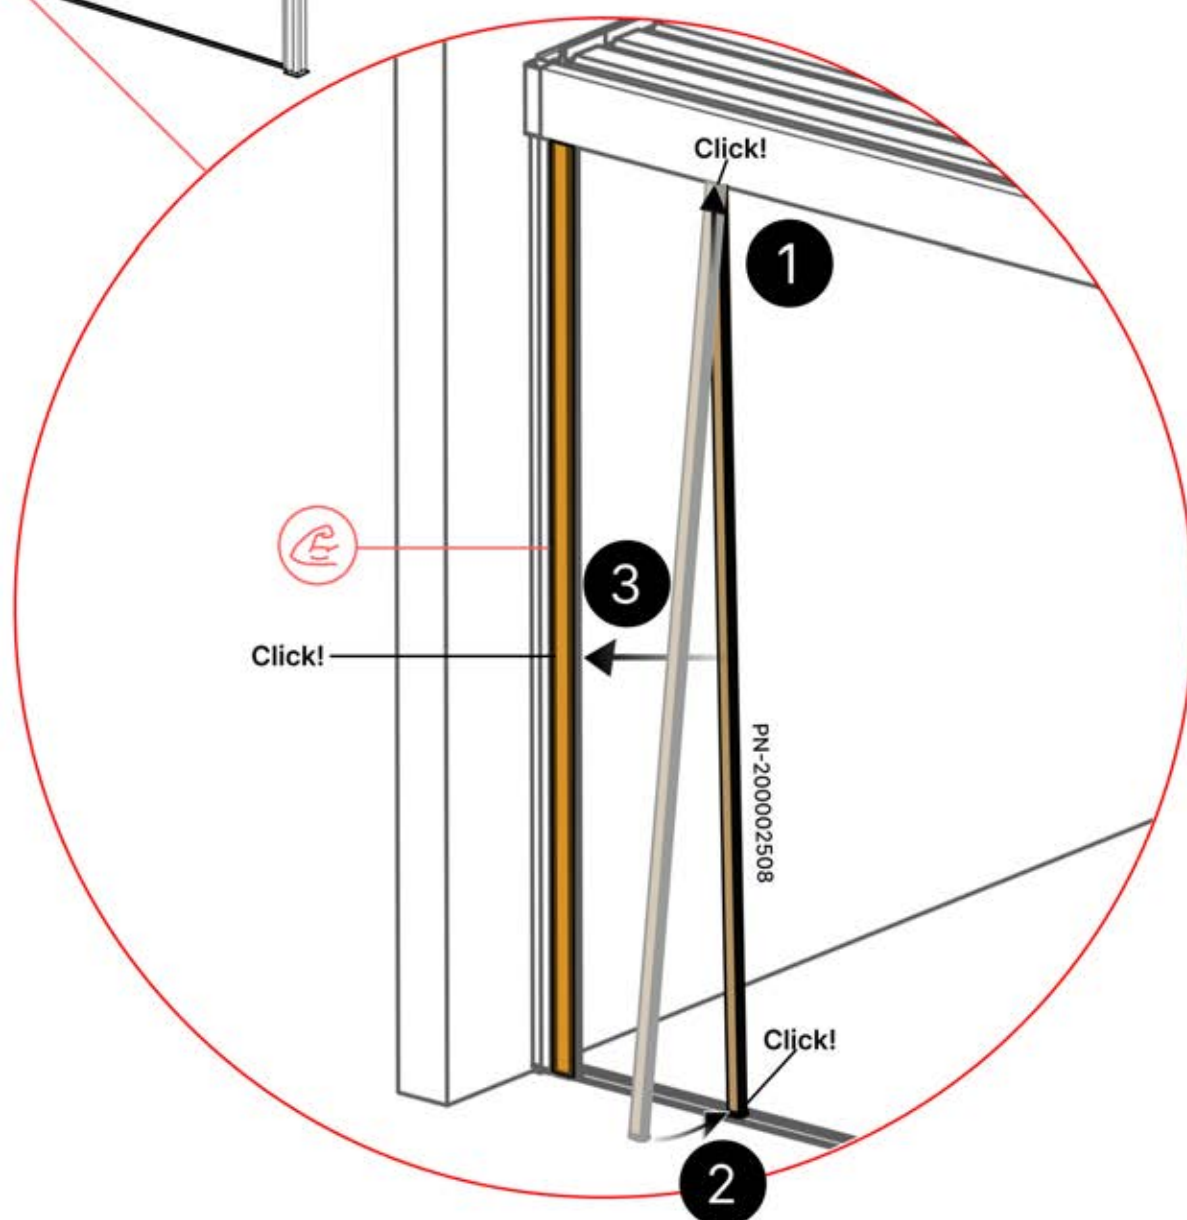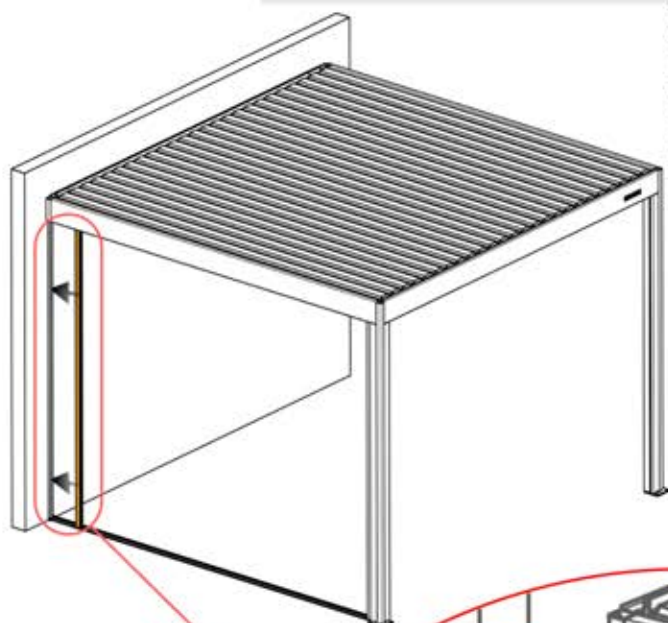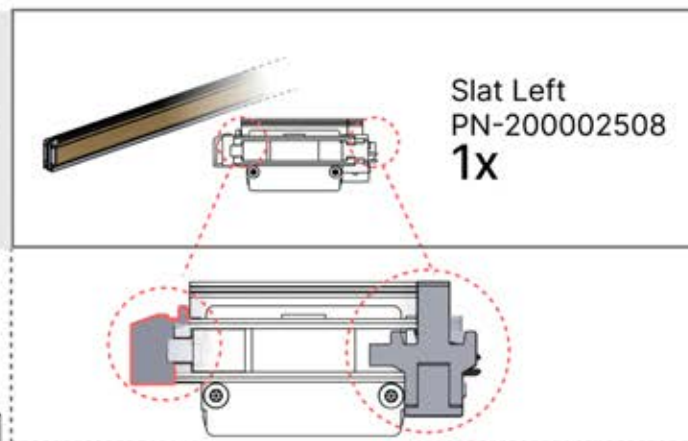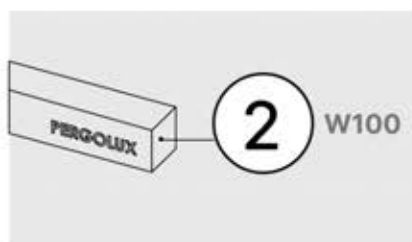



11

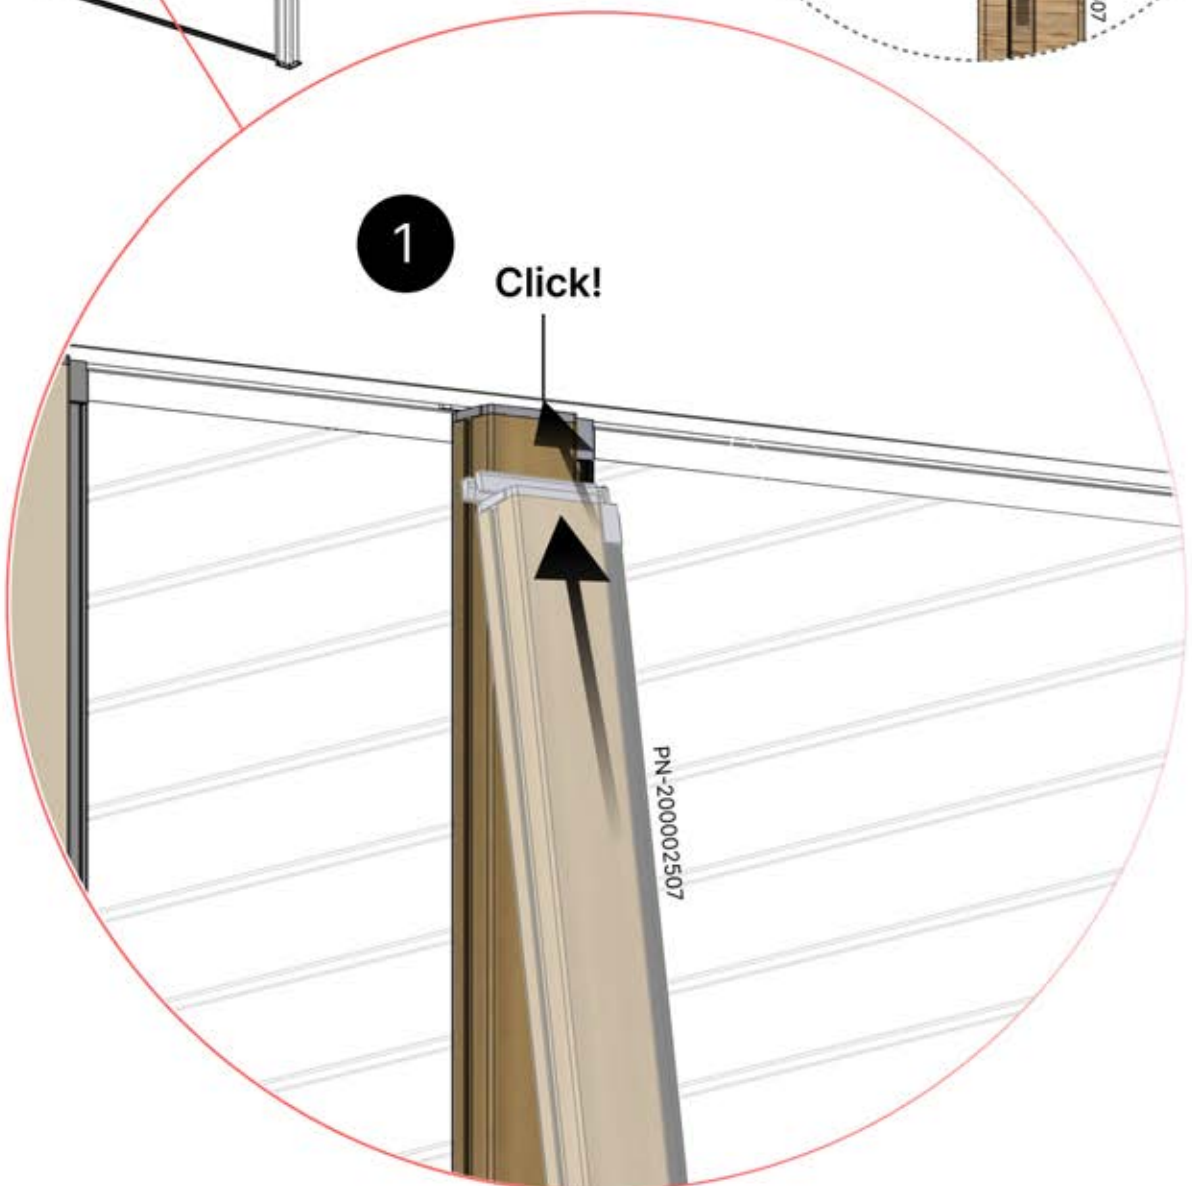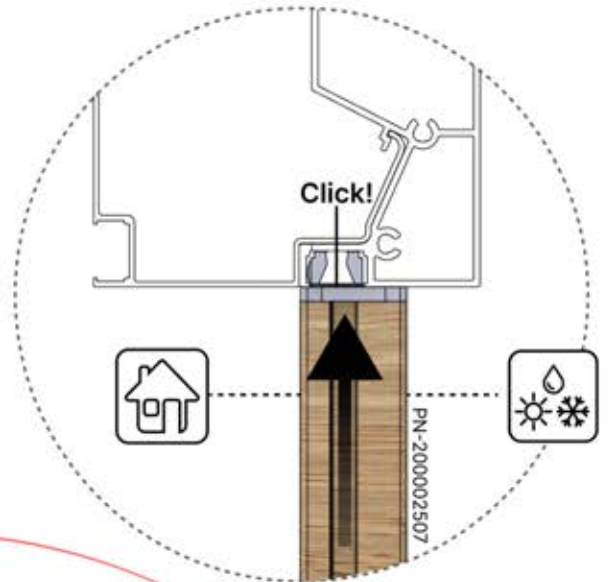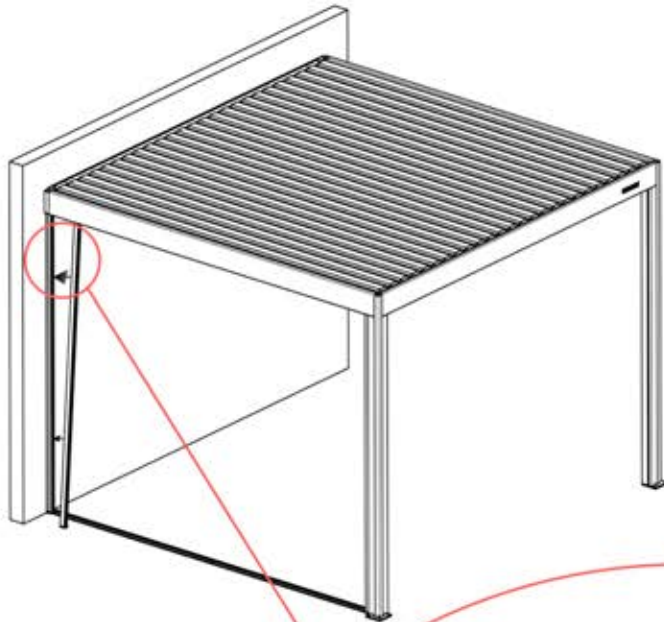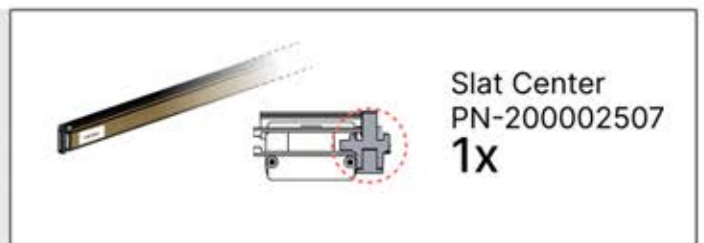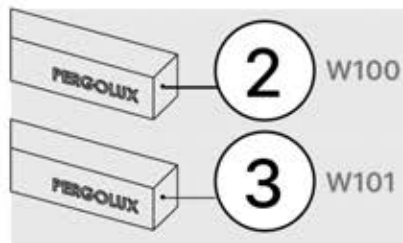




12

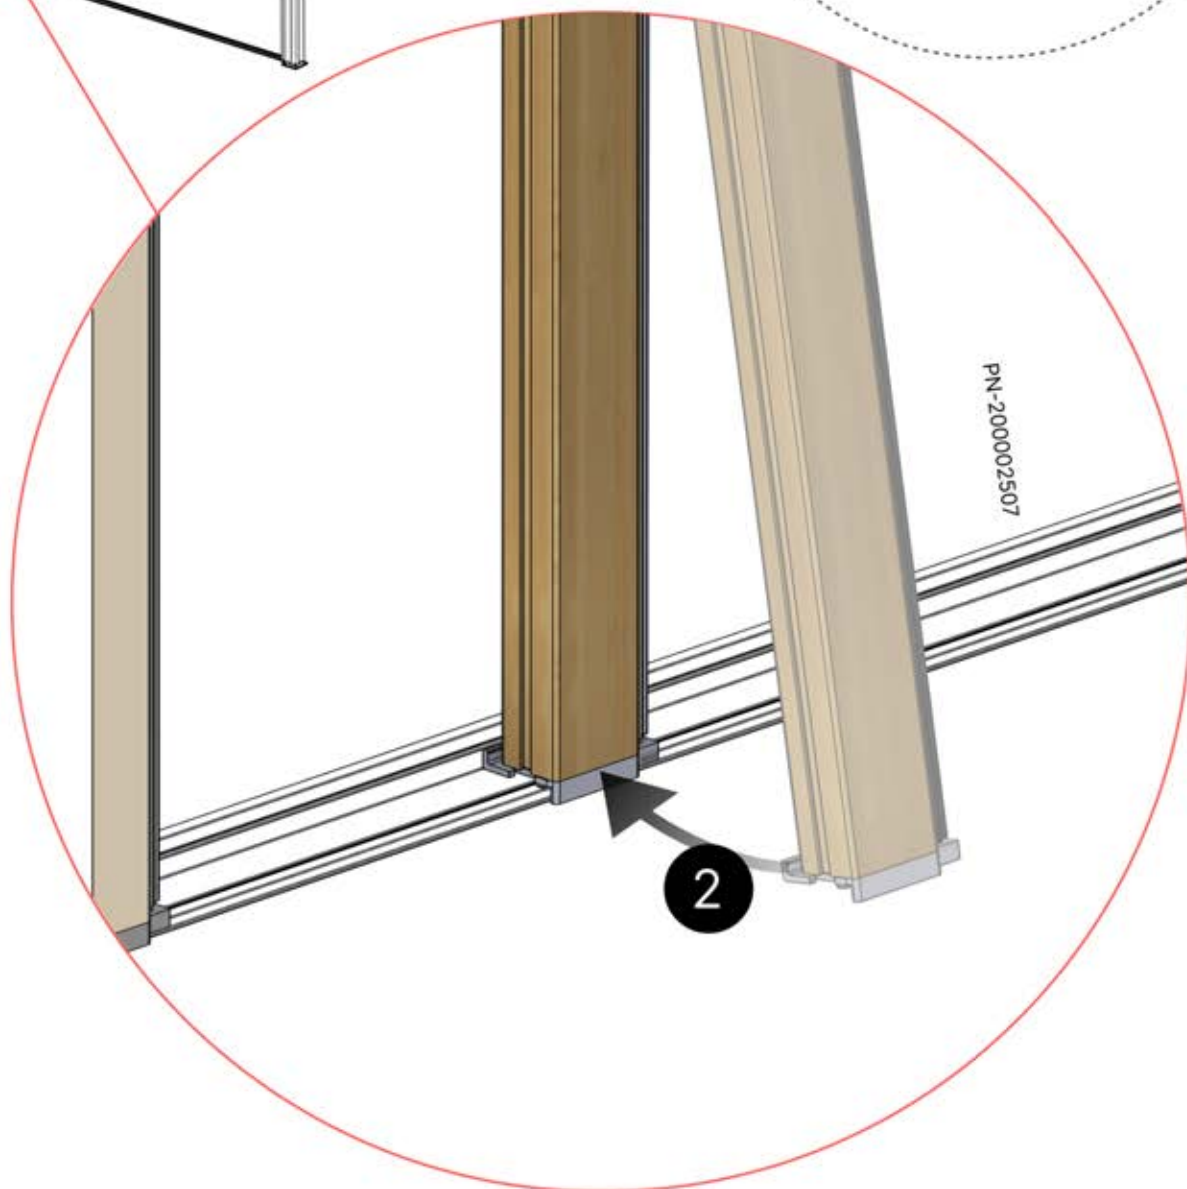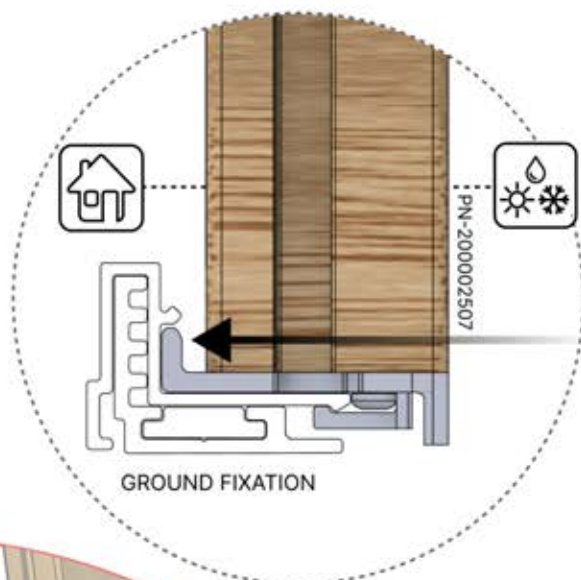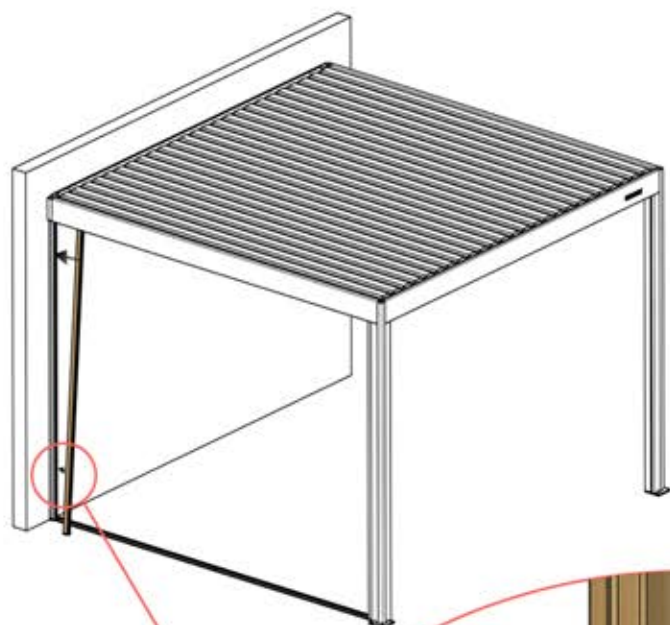




13

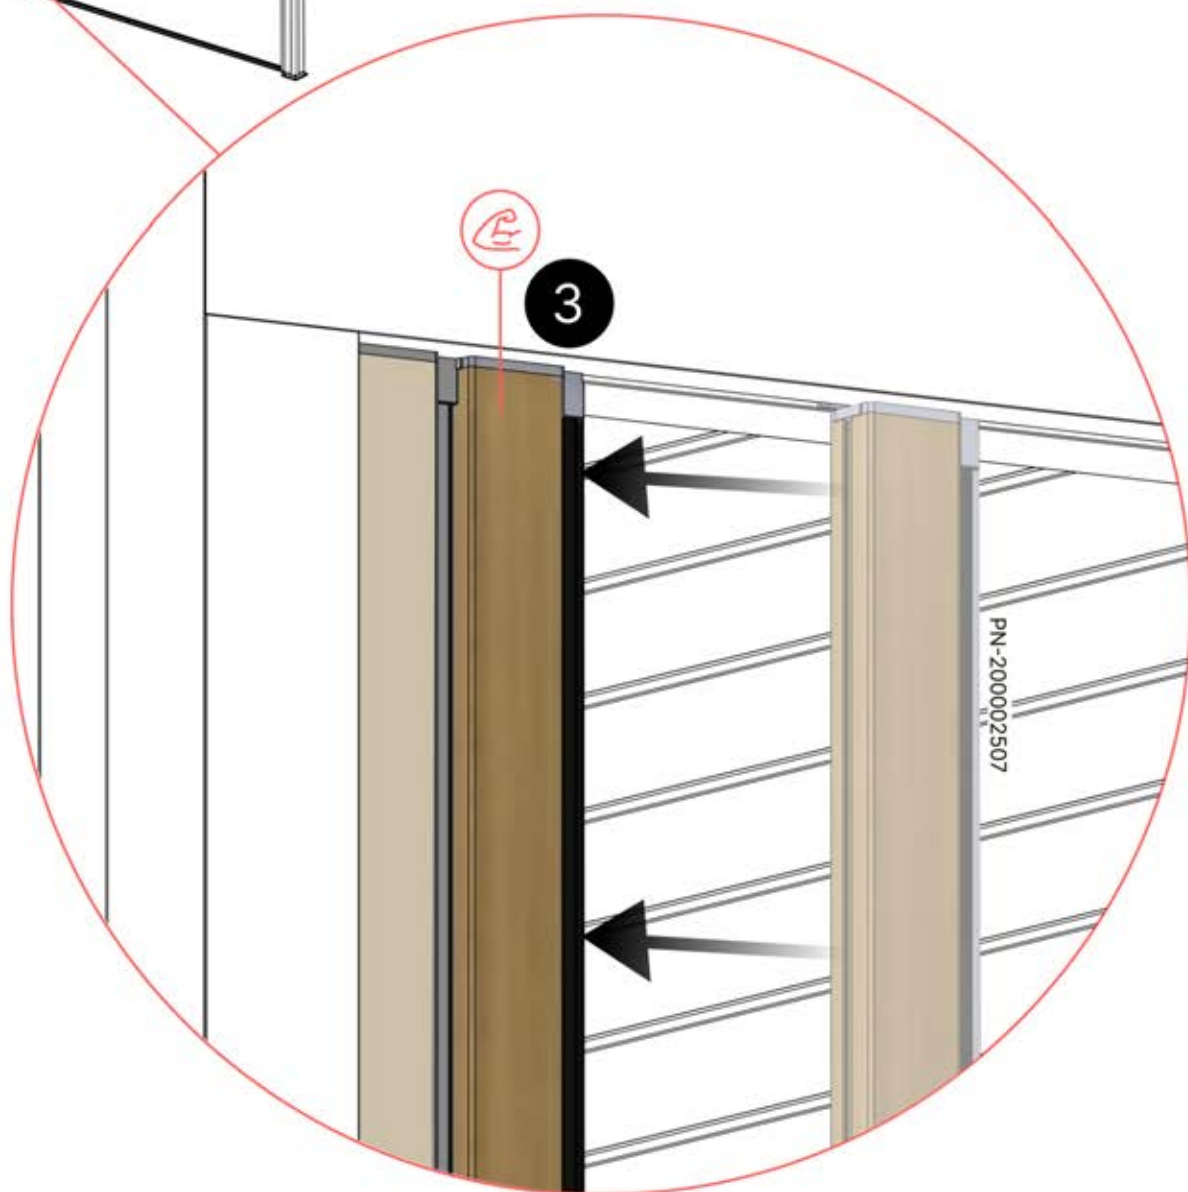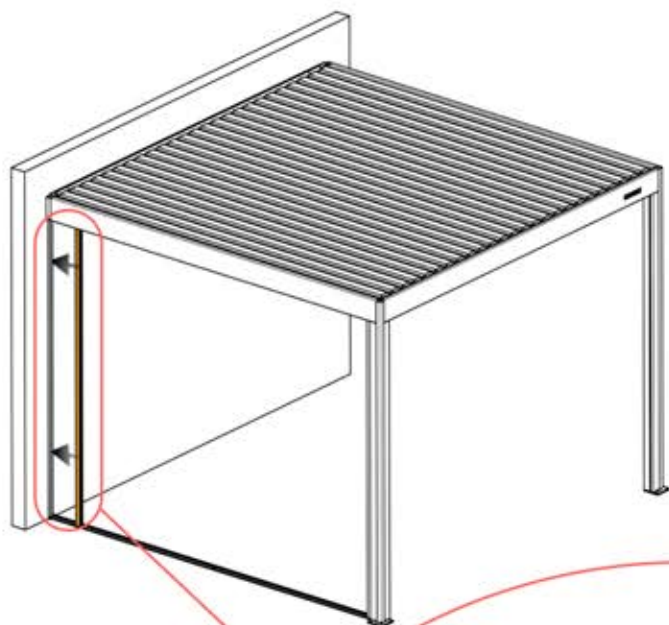


14

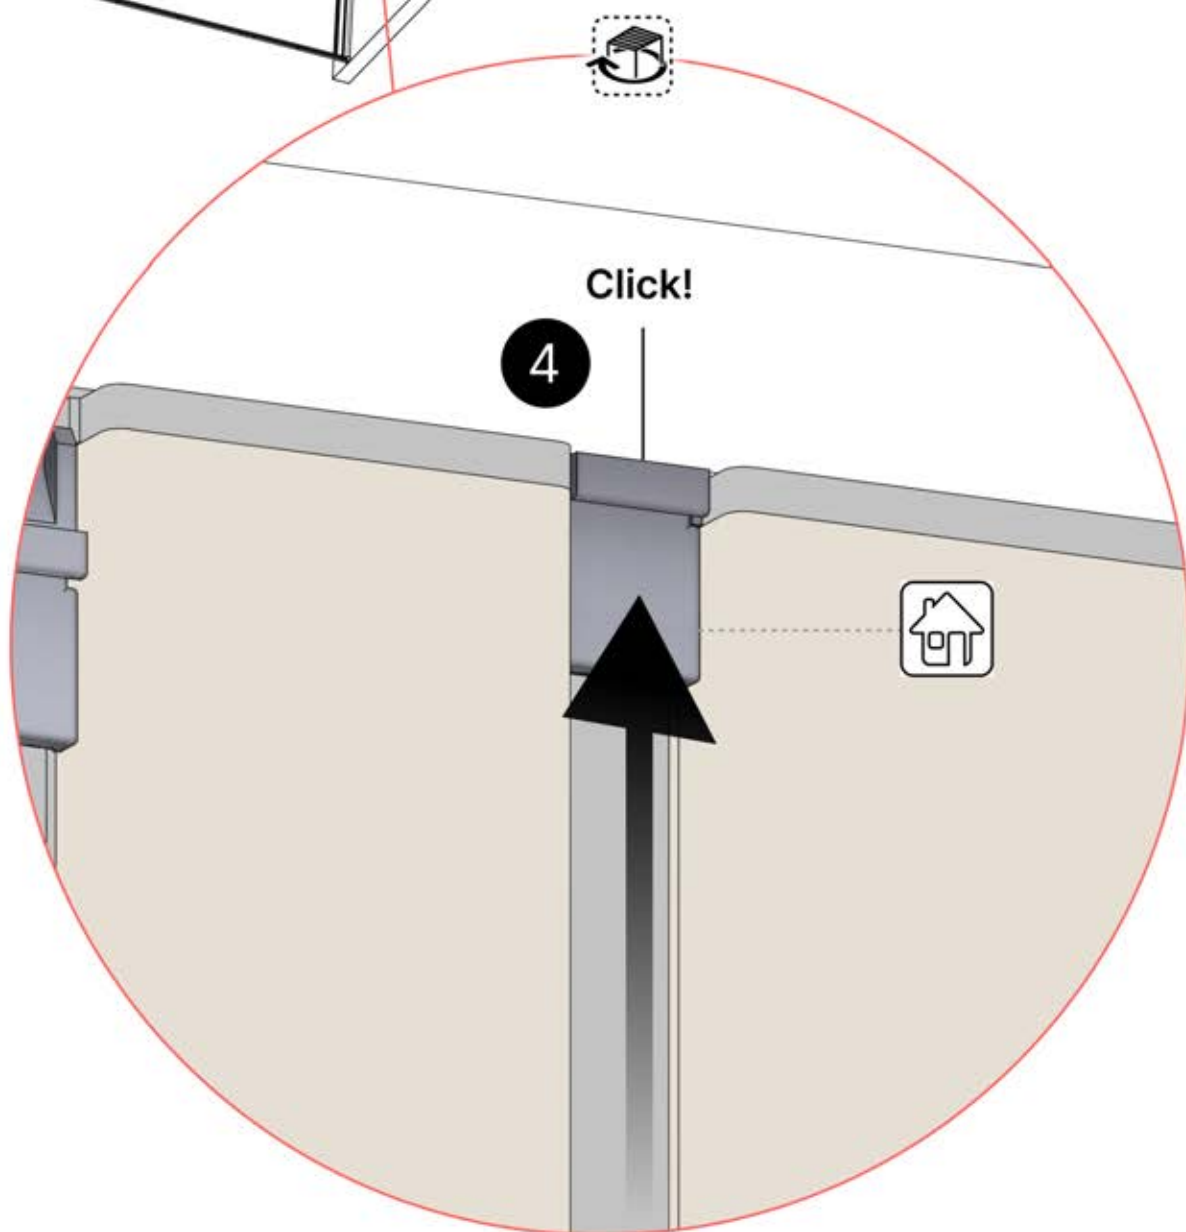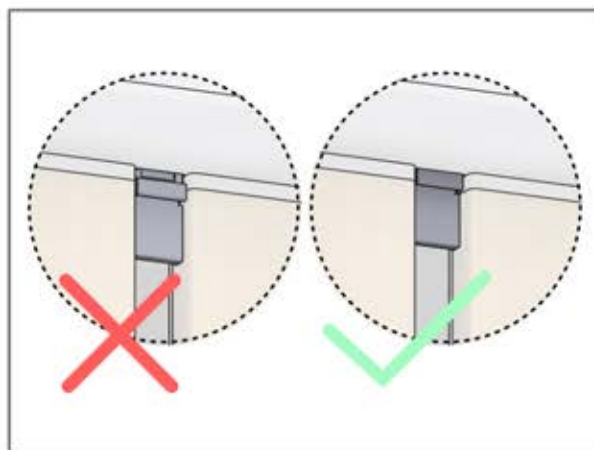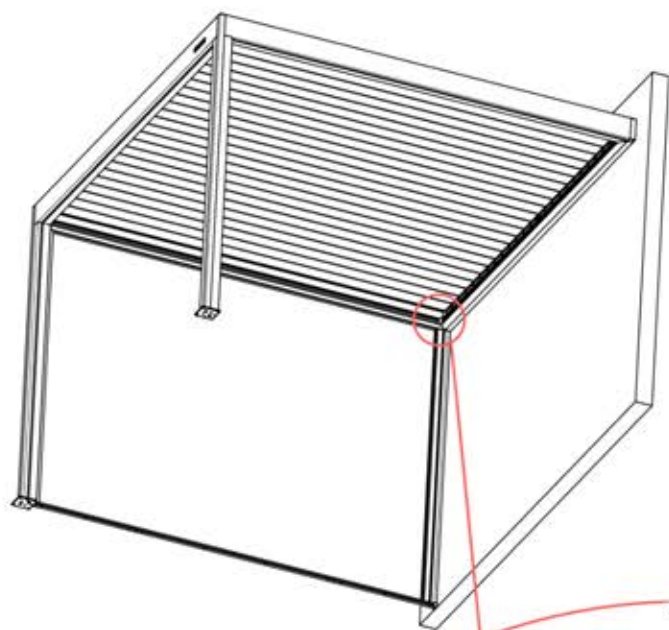


15

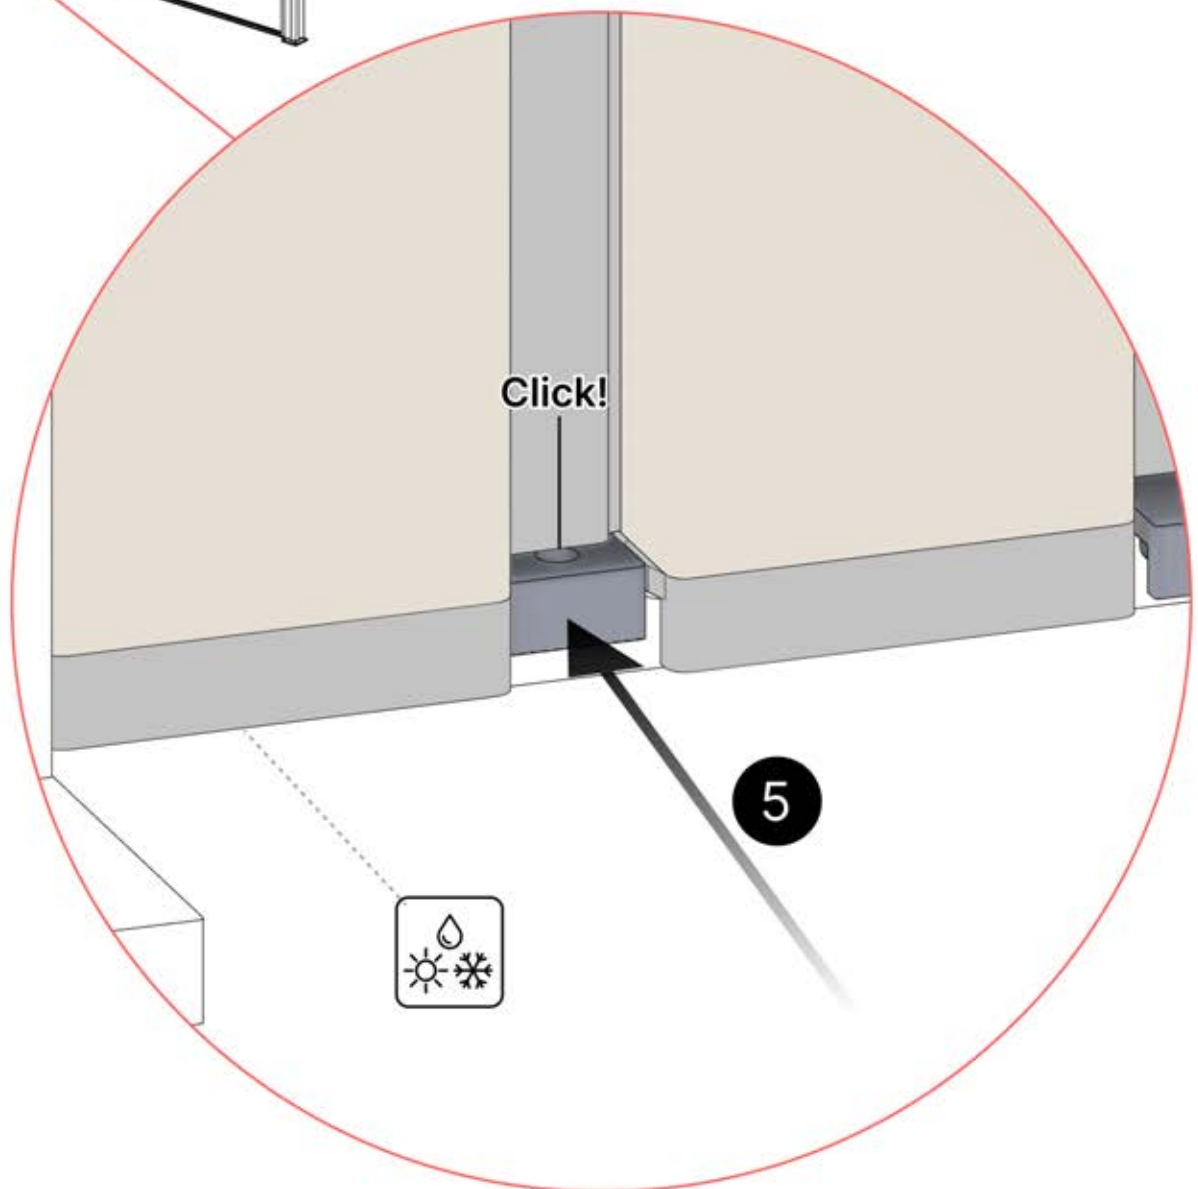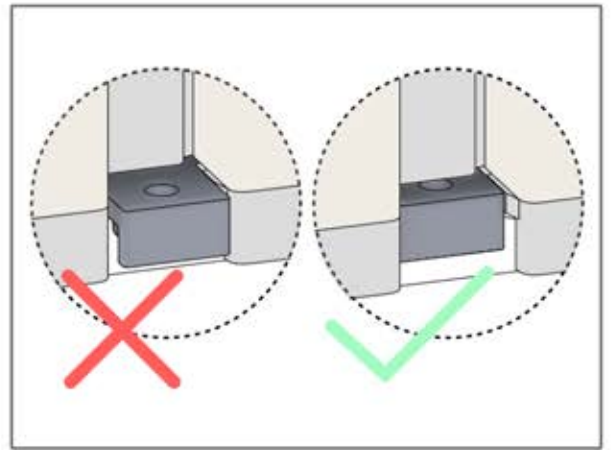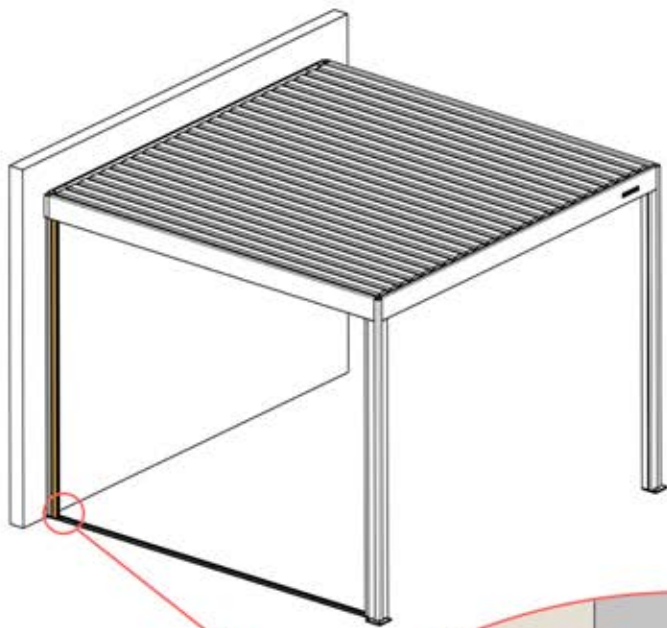

16

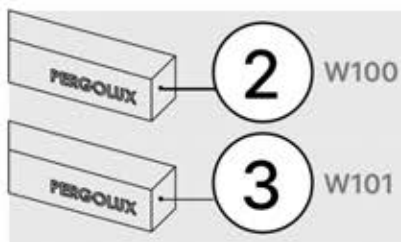

Slat Center
PN-200002507
43x

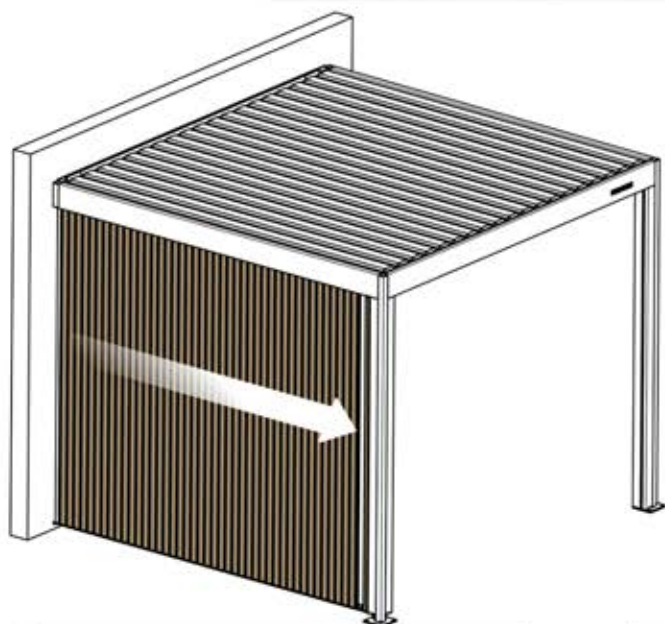

Step

11 → 12 → 13




Step

14




Step

15

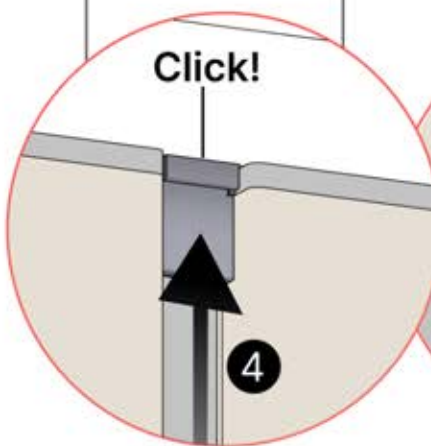

Click!

4

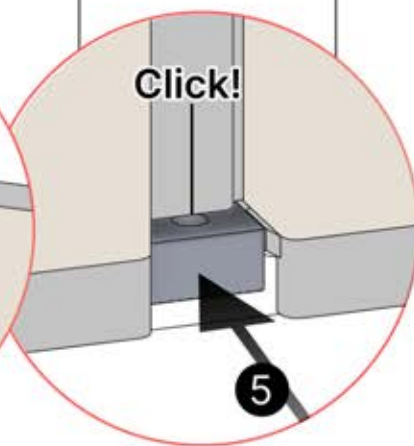

Click!



5





17



The last step can be a bit tricky, we recommend to press all profiles closely together to avoid leaving any gaps, which could prevent the last profile from fitting in place.

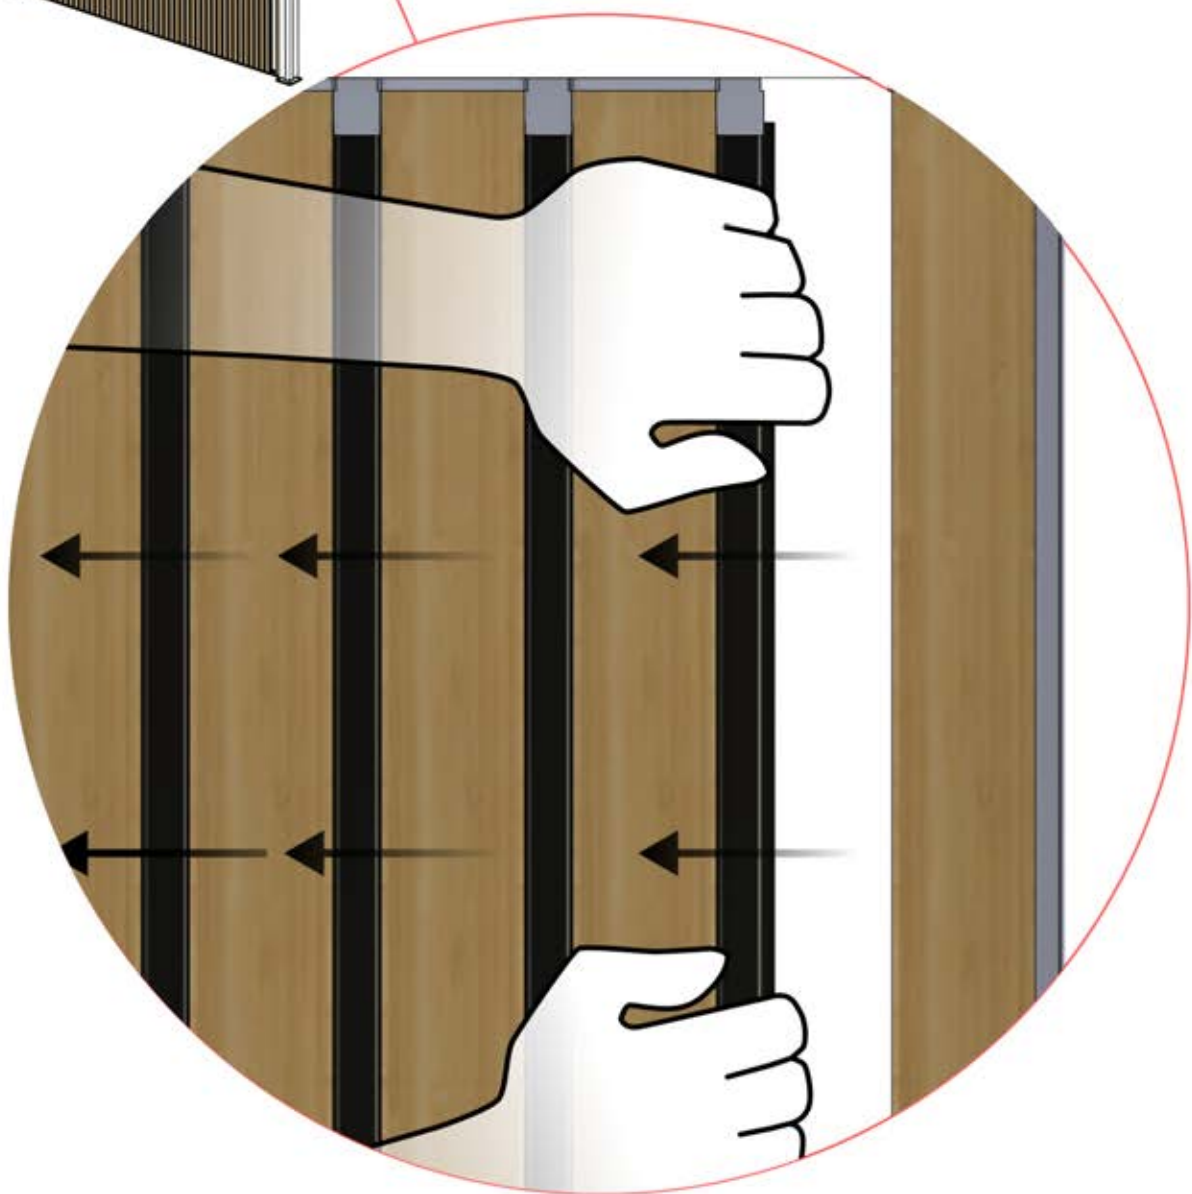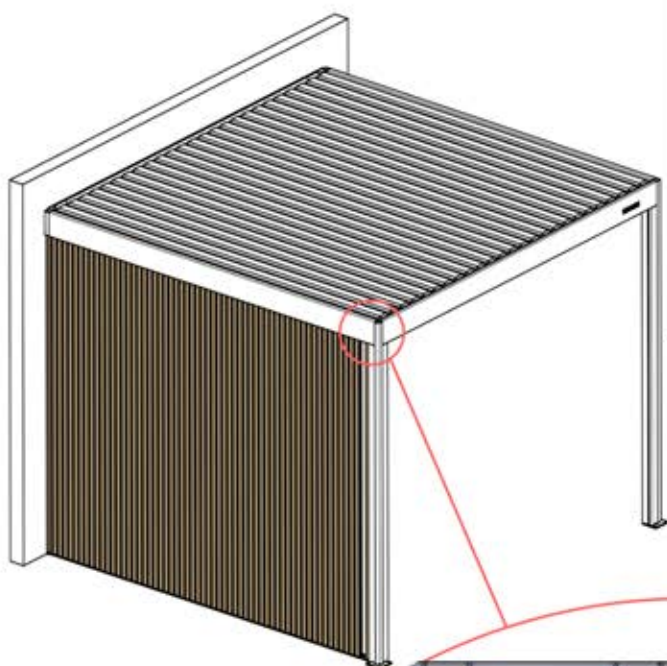




18

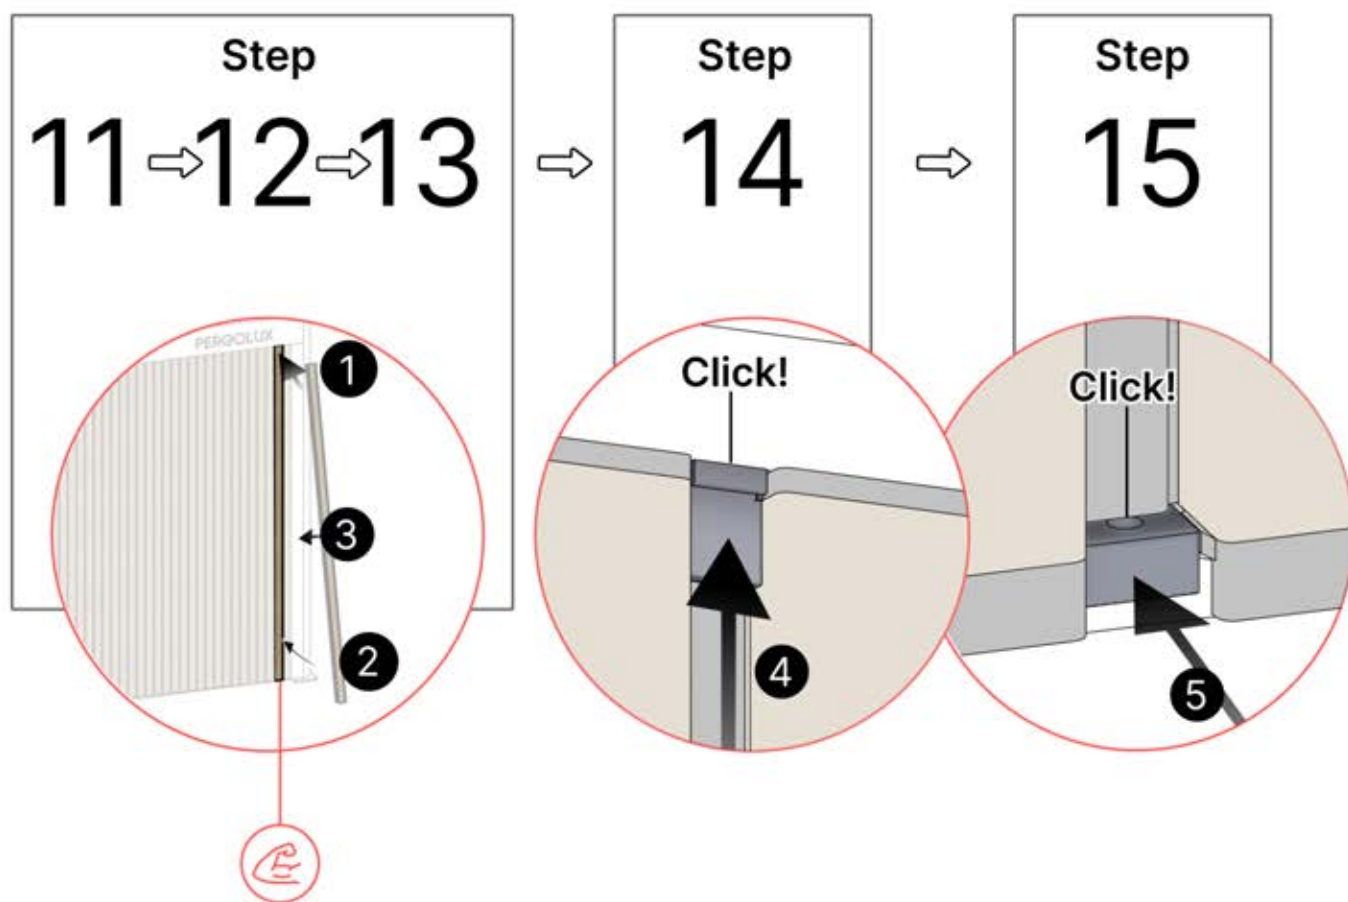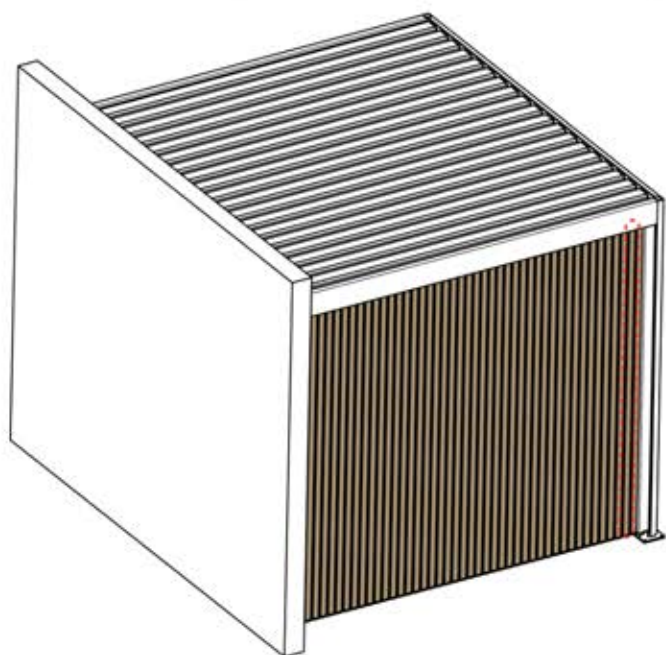





19



Carefully adjust the slats by hand to ensure the gap at the end is even, if necessary.

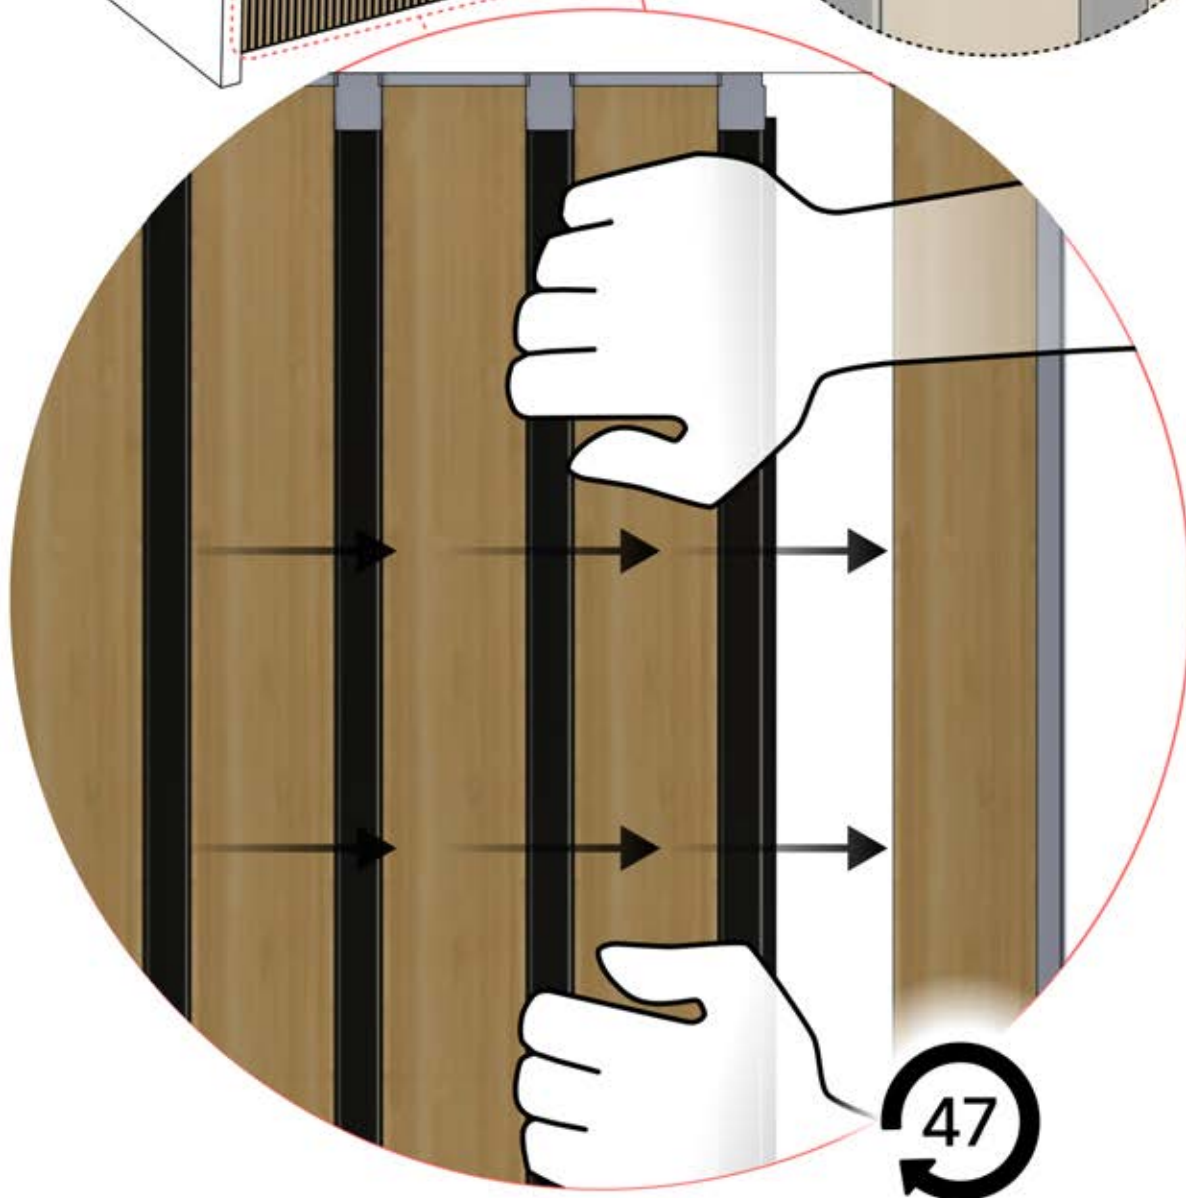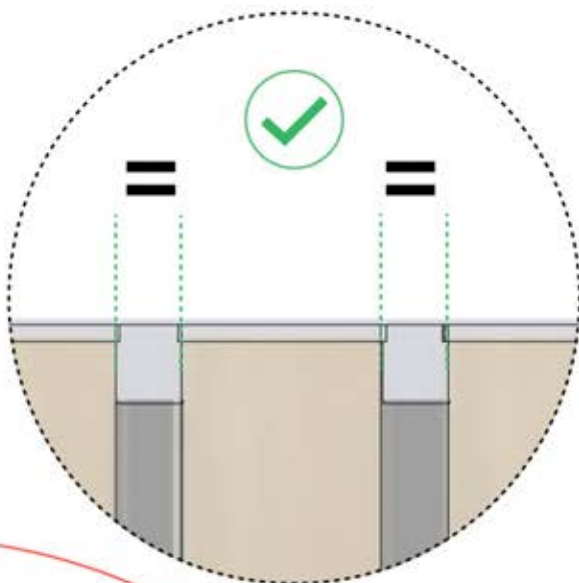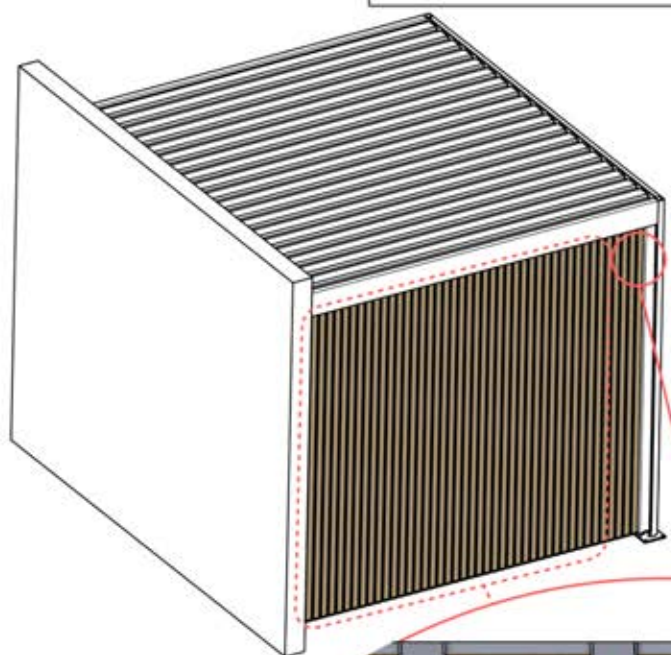


20

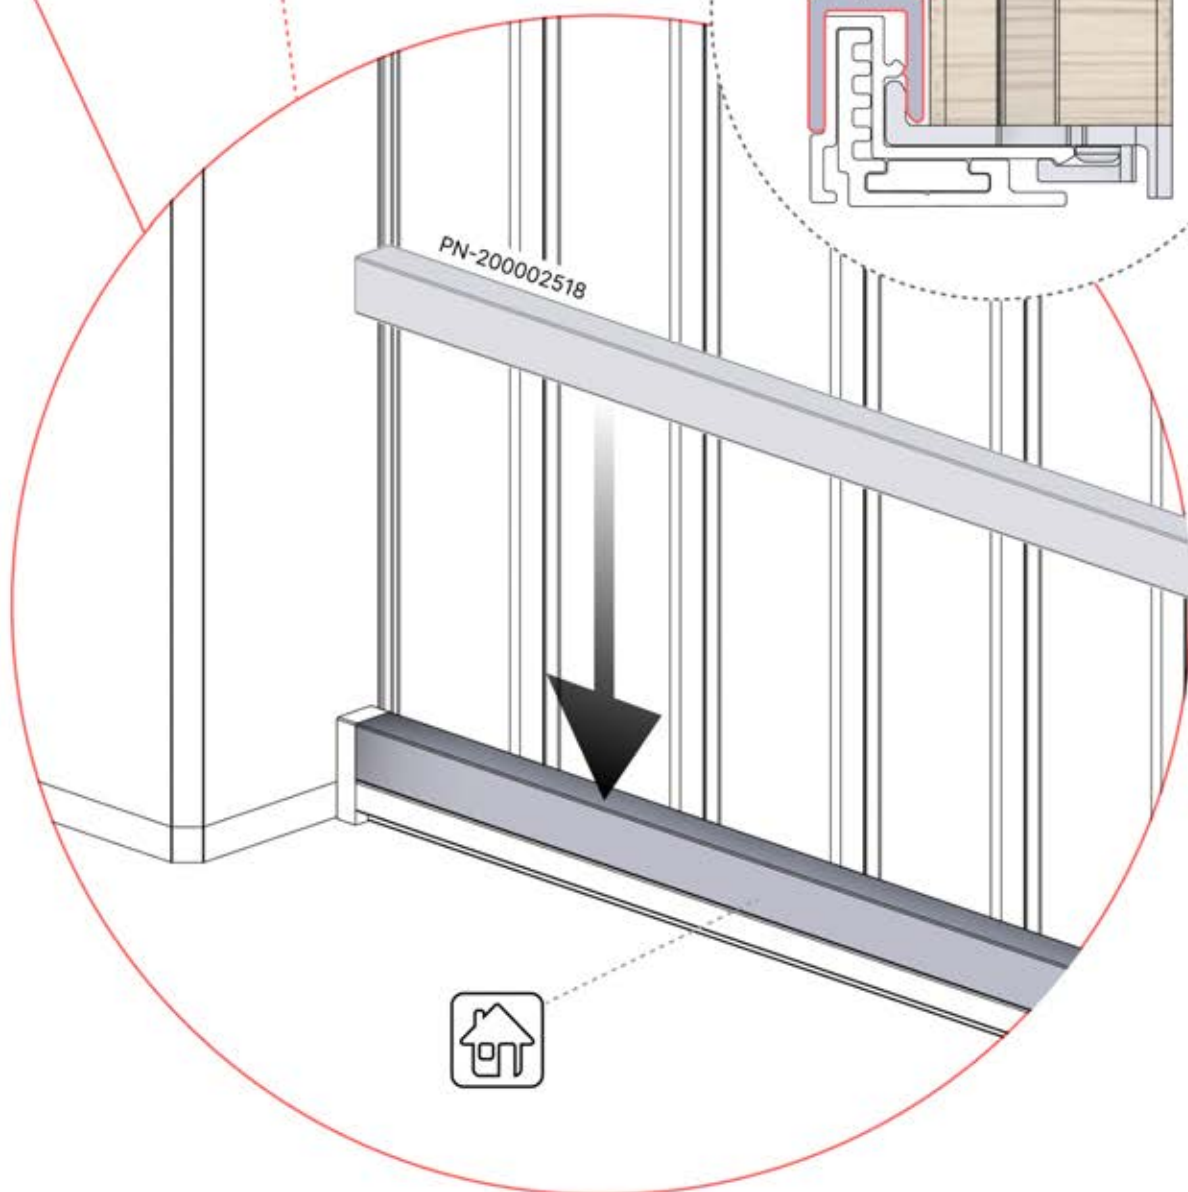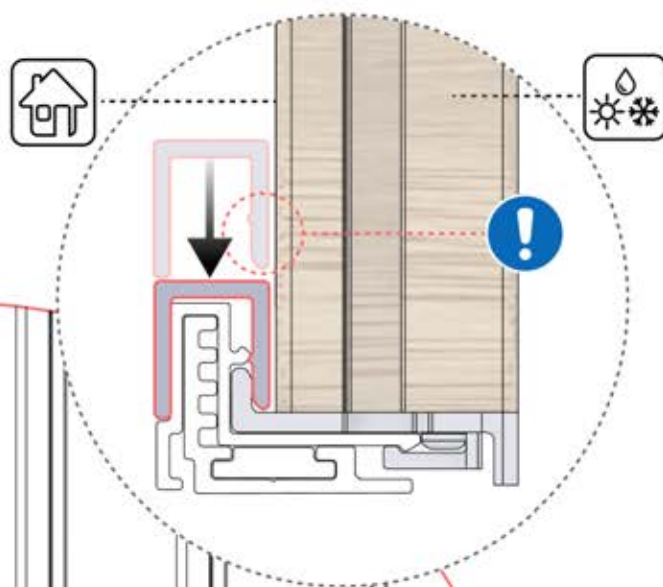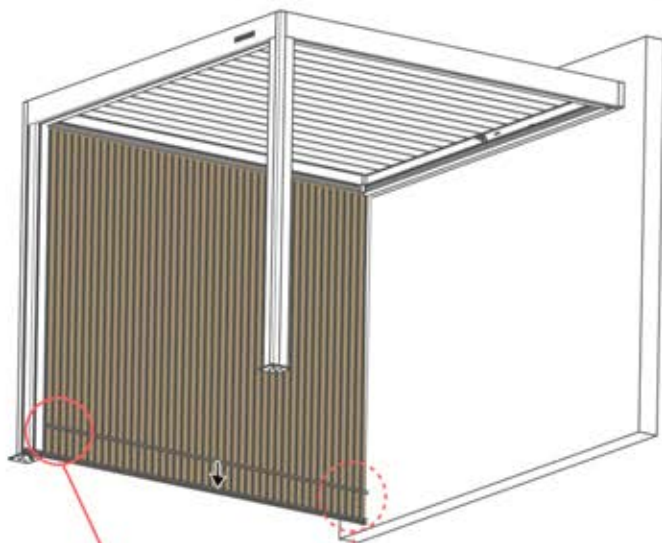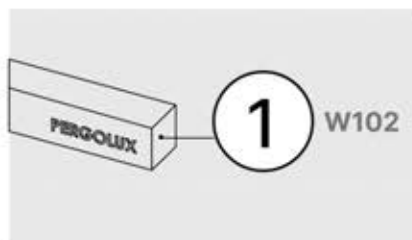

PERGOLUX | SLAT WALL

3 M / 10'

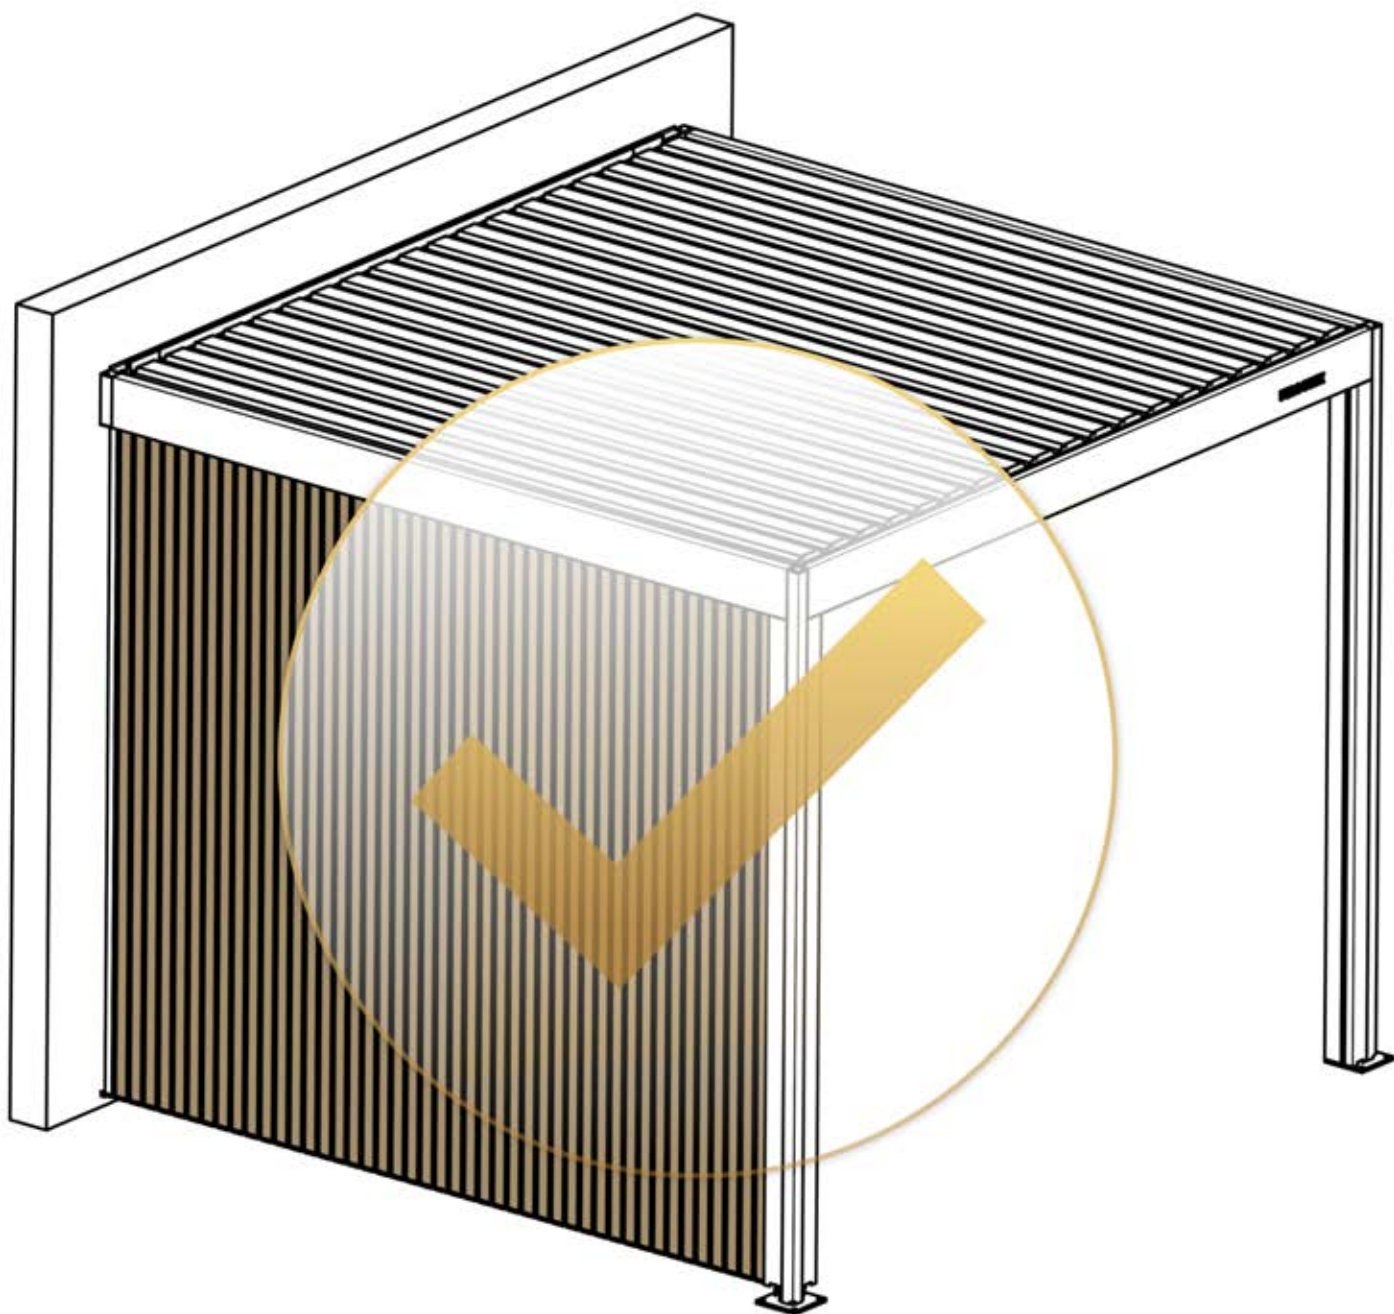

PERGOLUX