


WOODLINE

SLAT WALL



4 M / 13'

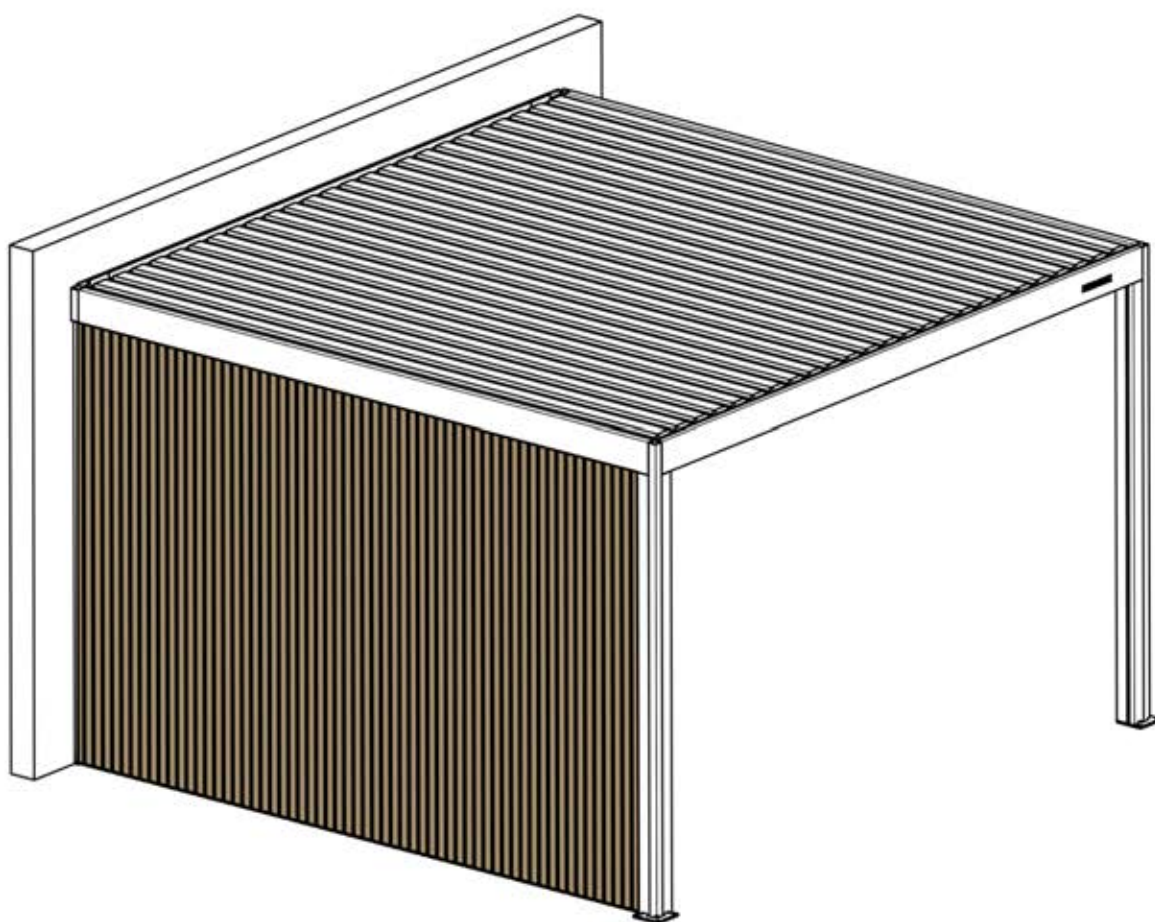

PERGOLUX


PERGOLUX | SLAT WALL

INFORMATION

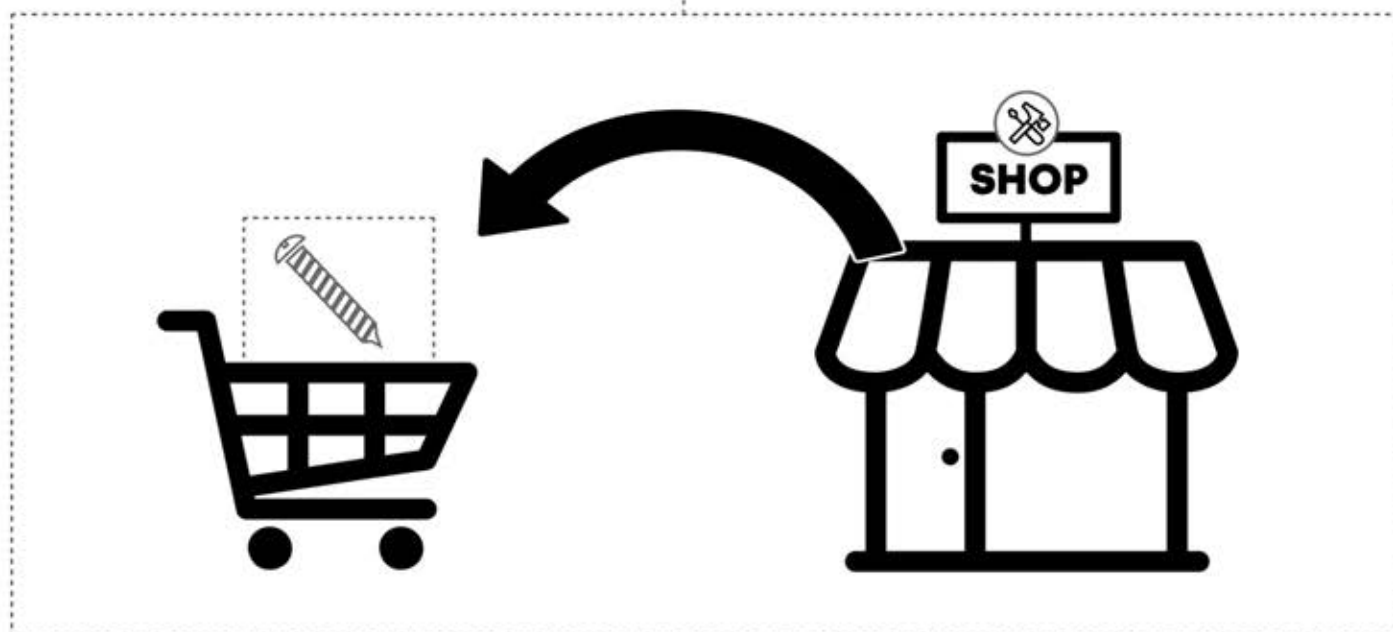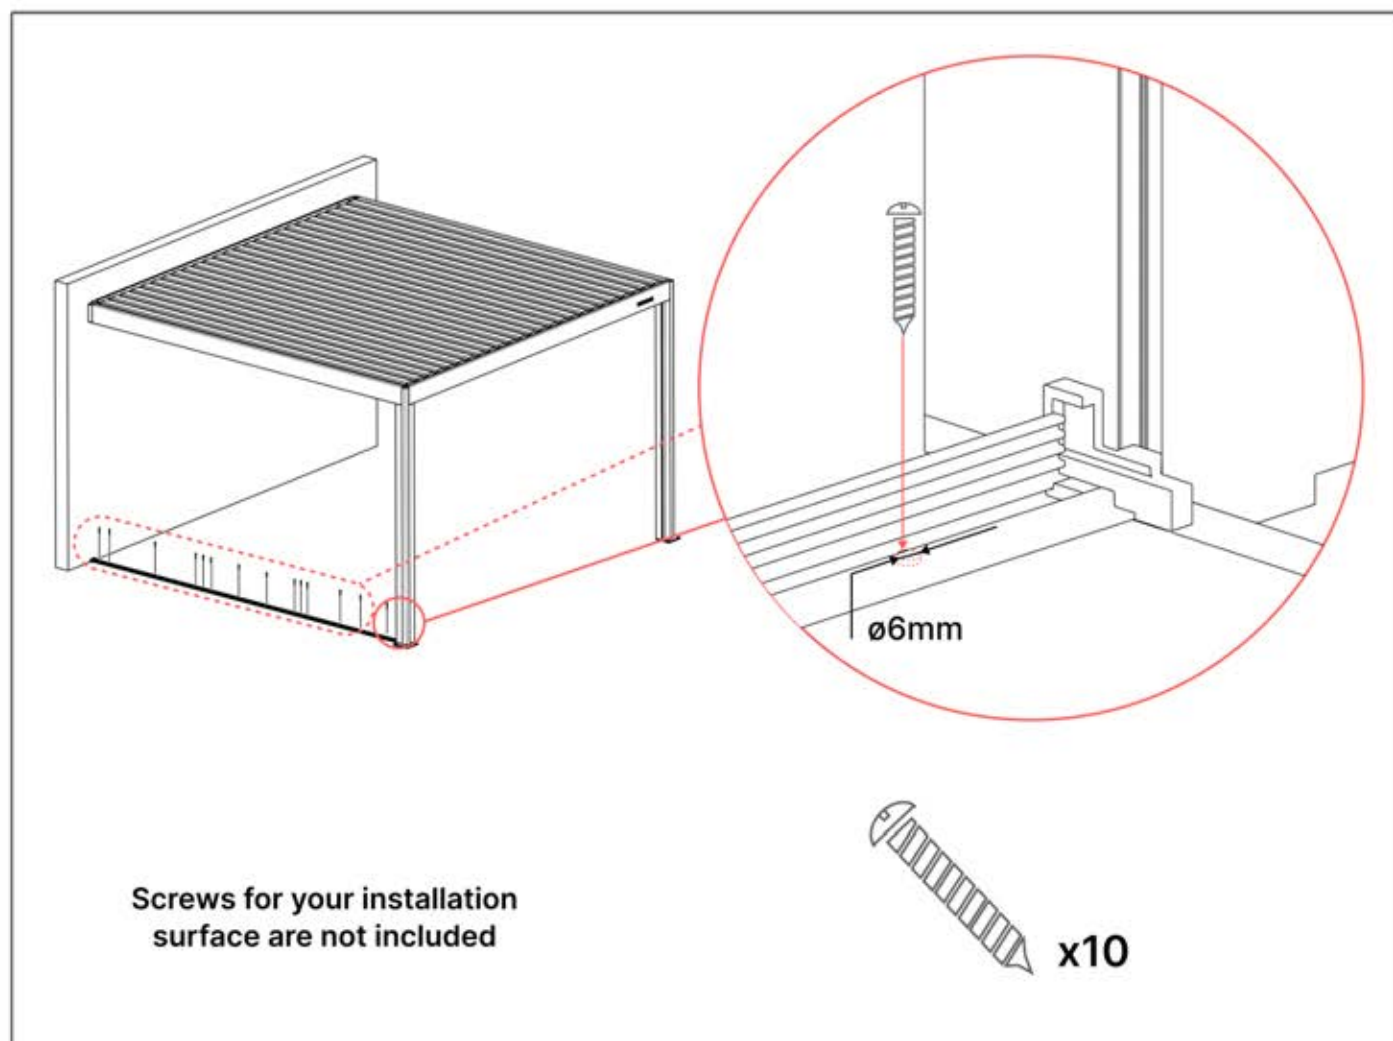






PERGOLUX | SLAT WALL

INFORMATION

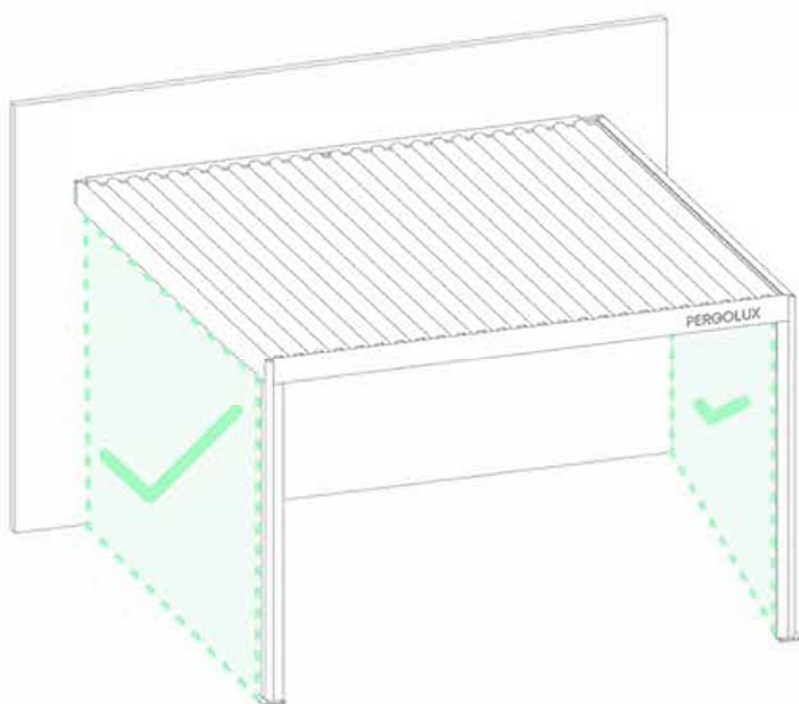


This slat wall cannot be installed on
the Skydance model (S1/S2/S3)

TOOLS

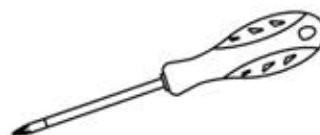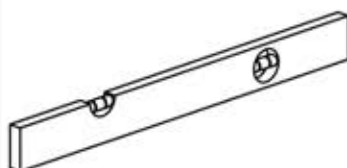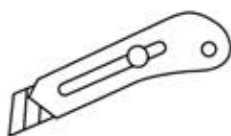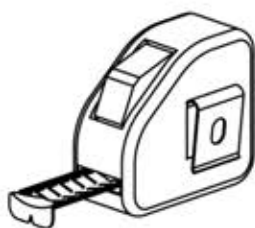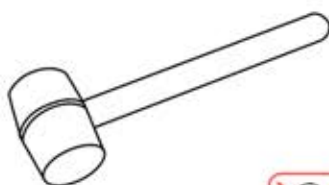

PACKAGE OVERVIEW

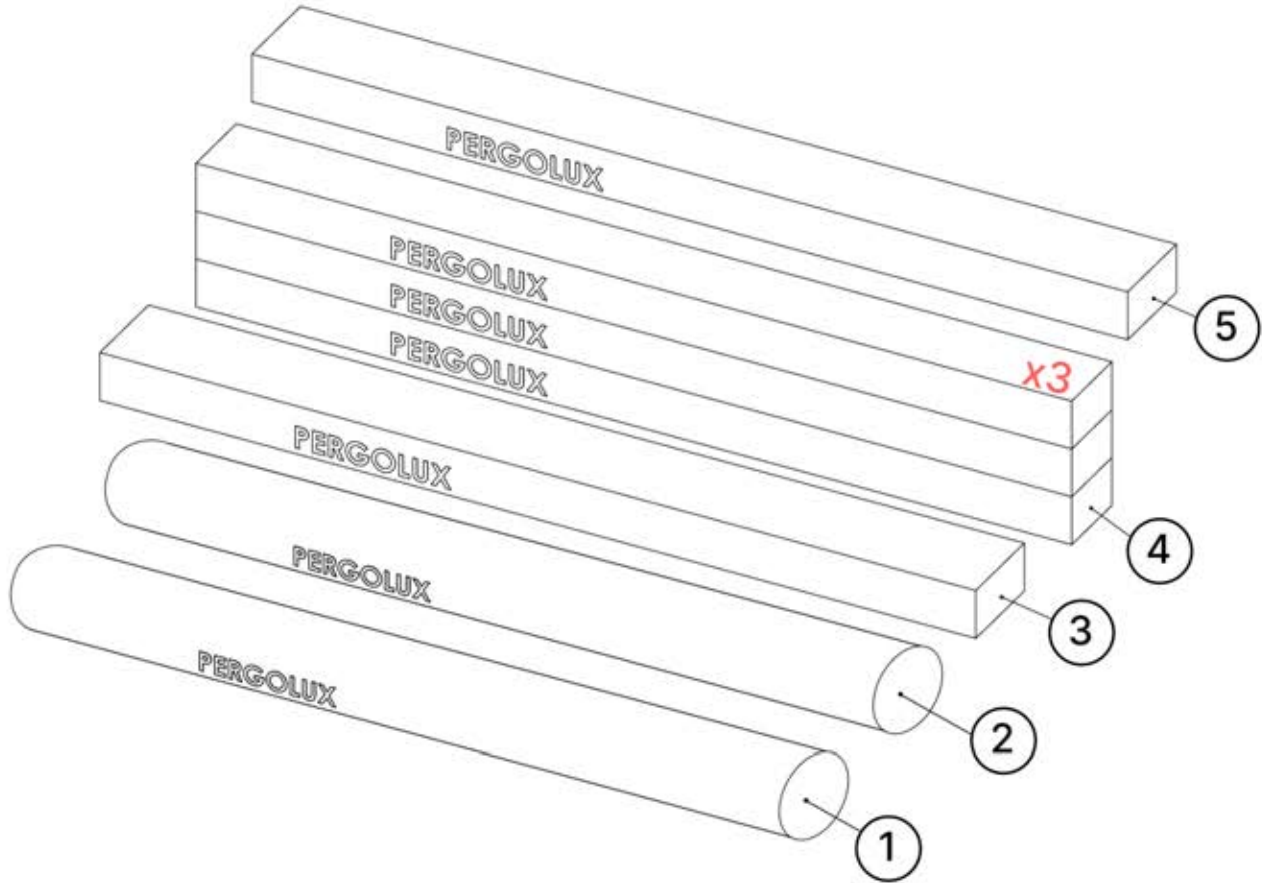

①	W103 FRAME START PACKAGE
②	W104 FRAME CENTER PACKAGE
③	W100 SLAT PACKAGE 16
④	W101 SLAT PACKAGE 15 x3
⑤	W101 WALL MOUNT KIT

PERGOLUX | SLAT WALL

ITEMS IN BOX



W103 FRAME START PACKAGE

1



922.5 mm
36 19/64"




1845 mm
72 41/64"



1845 mm
72 41/64"

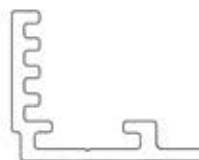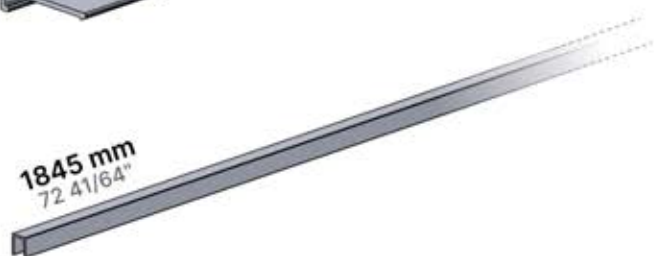


Ground Fixation
Start
PN-200002524
2x

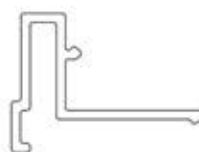

Slat Fixation Start
PN-200002529
1x




Slat Lock Start
PN-200002525
1x

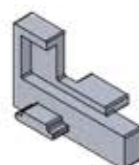

End Cover Left
PN-200002510
1x



PN-200002523
1x

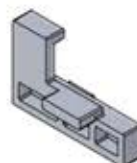

End Cover Right
PN-200002513
1x

PERGOLUX | SLAT WALL


ITEMS IN BOX



W104 FRAME CENTER PACKAGE

2

1800 mm
70 55/64"

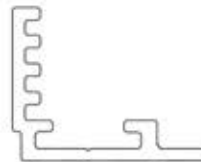

Ground Fixation
Center
PN-200002522

1x

1800 mm
70 55/64"



Slat Fixation Center
PN-200002512

1x

1800 mm
70 55/64"



Slat Lock Center
PN-200002527

1x



PN-200002523

1x


PERGOLUX | SLAT WALL

ITEMS IN BOX





W100 SLAT PACKAGE 16


3

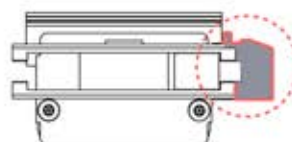

Slat Right
PN-200002509
1x

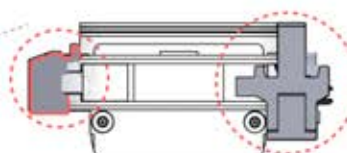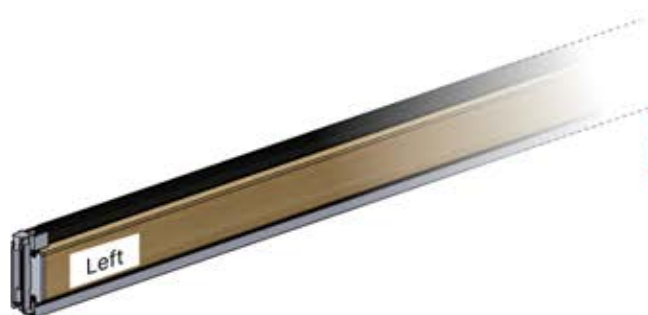

Slat Left
PN-200002508
1x

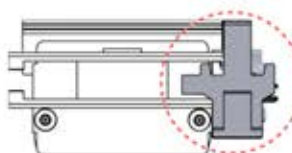

Slat Center
PN-200002507
14x


PERGOLUX | SLAT WALL

ITEMS IN BOX



W101 SLAT PACKAGE 15

4

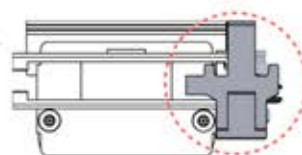

Slat Center
PN-200002507
45x



W100 WALL MOUNT KIT

5



WF FIXATION

1x



WF FIXATION
END COVER R
1x




WF FIXATION
END COVER L
1x



WF SLAT
FLANGE TOP
x1

PERGOLUX | SLAT WALL

OVERVIEW 4M/13'

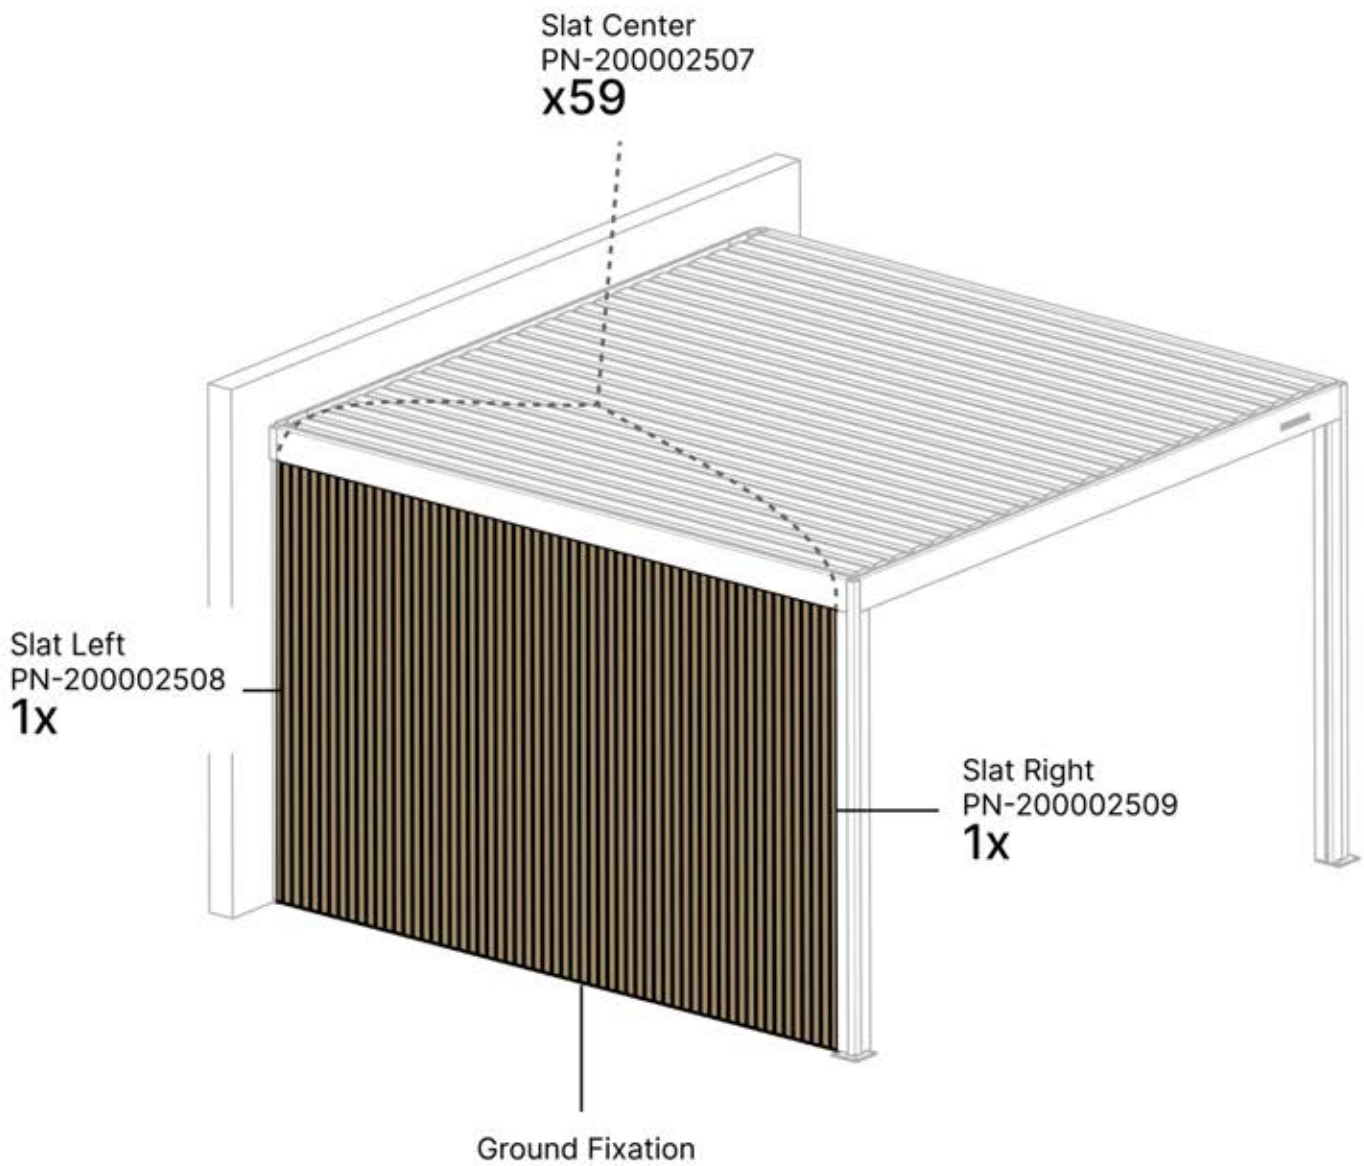

PERGOLUX | SLAT WALL

CLOSED/OPEN

OPTION 1 (Closed):





NOT see through



Water protection



Wind protection

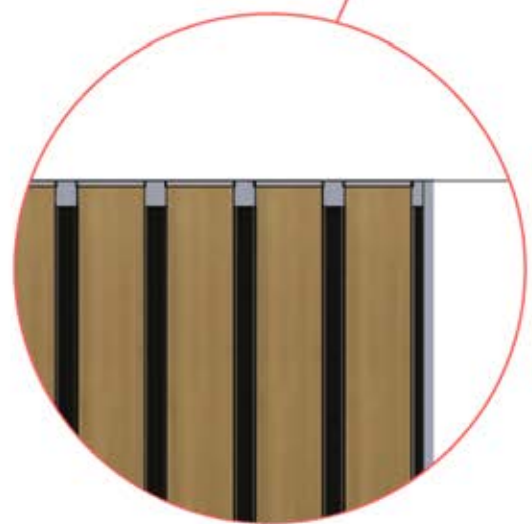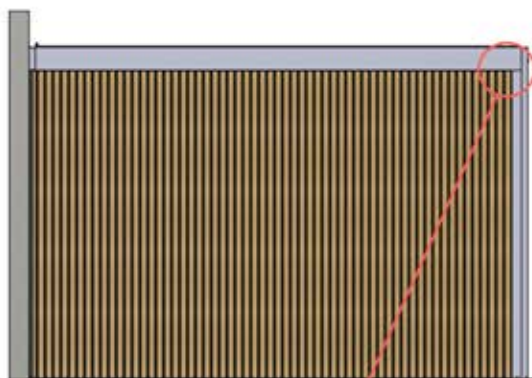

Continue assembling
from **Step 1**

OPTION 2 (Open):





See through



NO Water protection



NO Wind protection

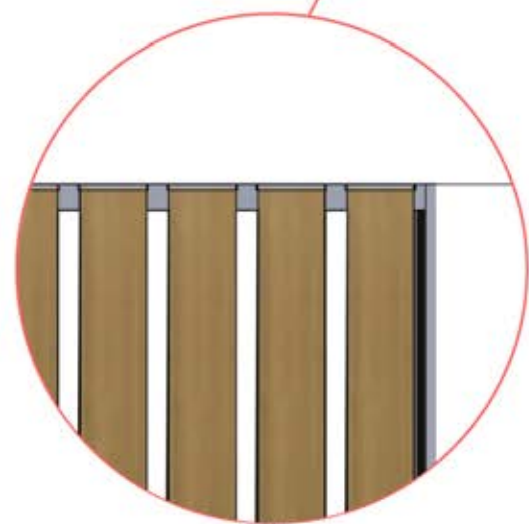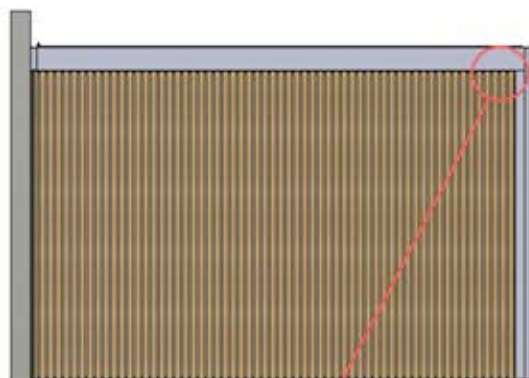


See next
page




OPTION 2 (OPEN)



** Only for option 2

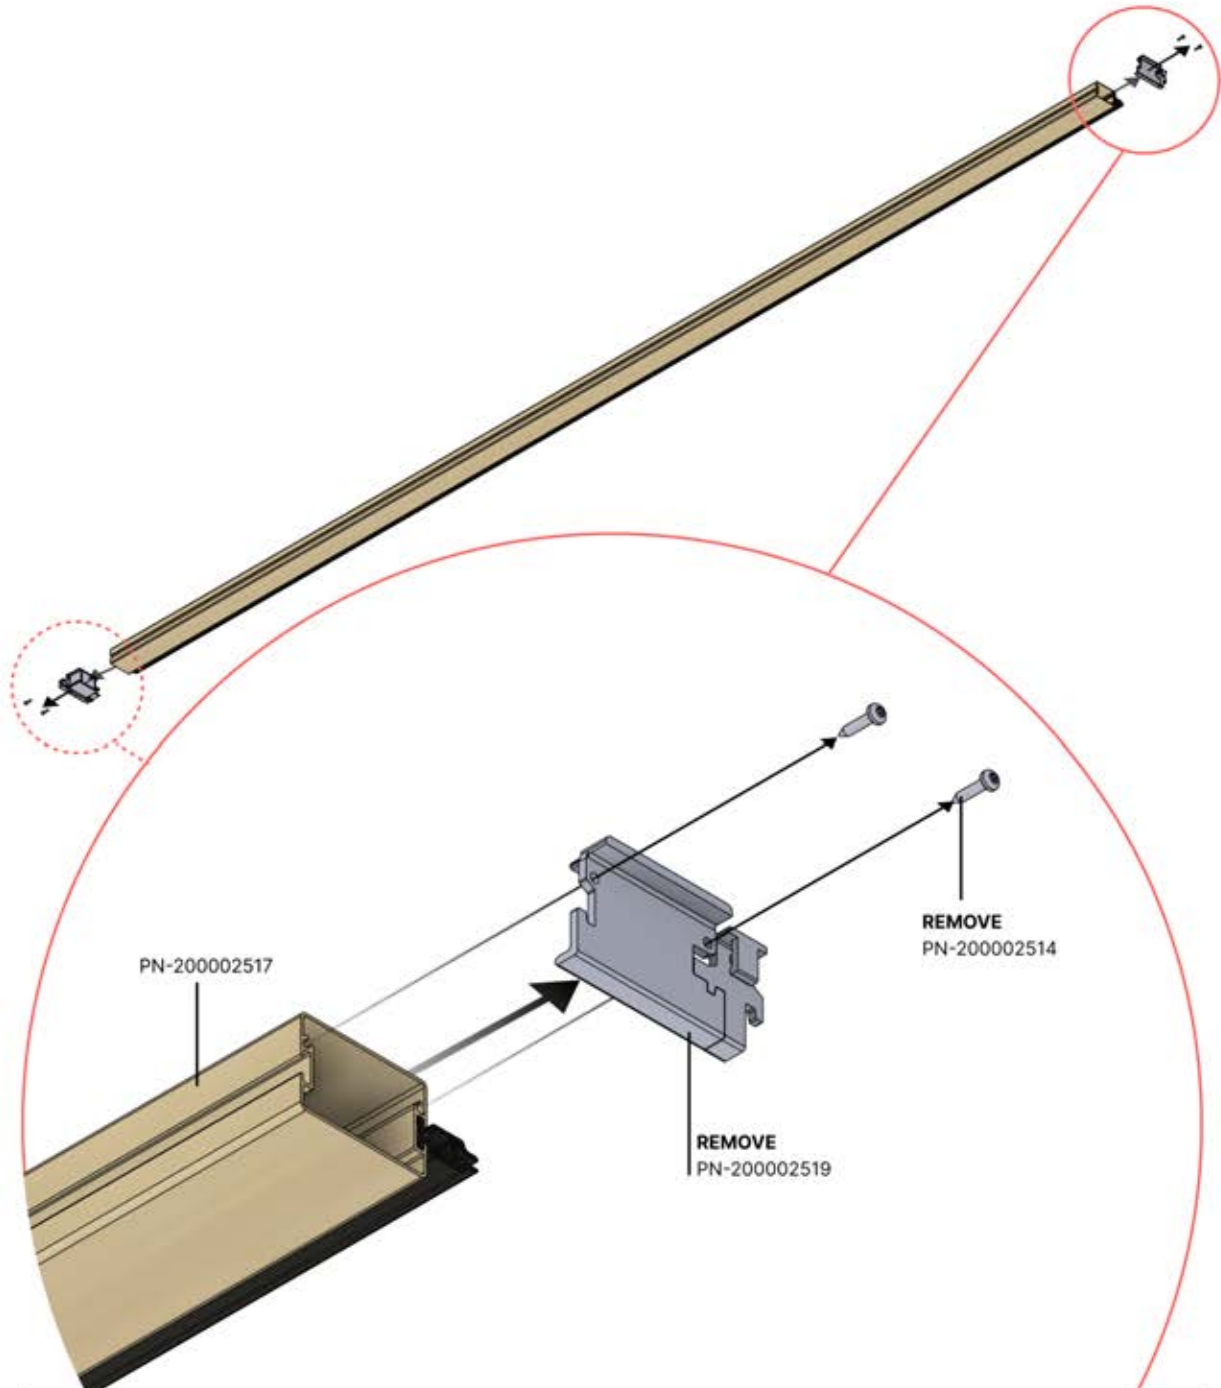

PLEASE NOTE: Do not remove the slat connection profile on the left and right slats, as these will be installed and fixed into the posts.



DO NOT REMOVE




Slat Right
PN-200002509
1x

Slat Left
PN-200002508
1x


OPTION 2 (OPEN)



** Only for option 2

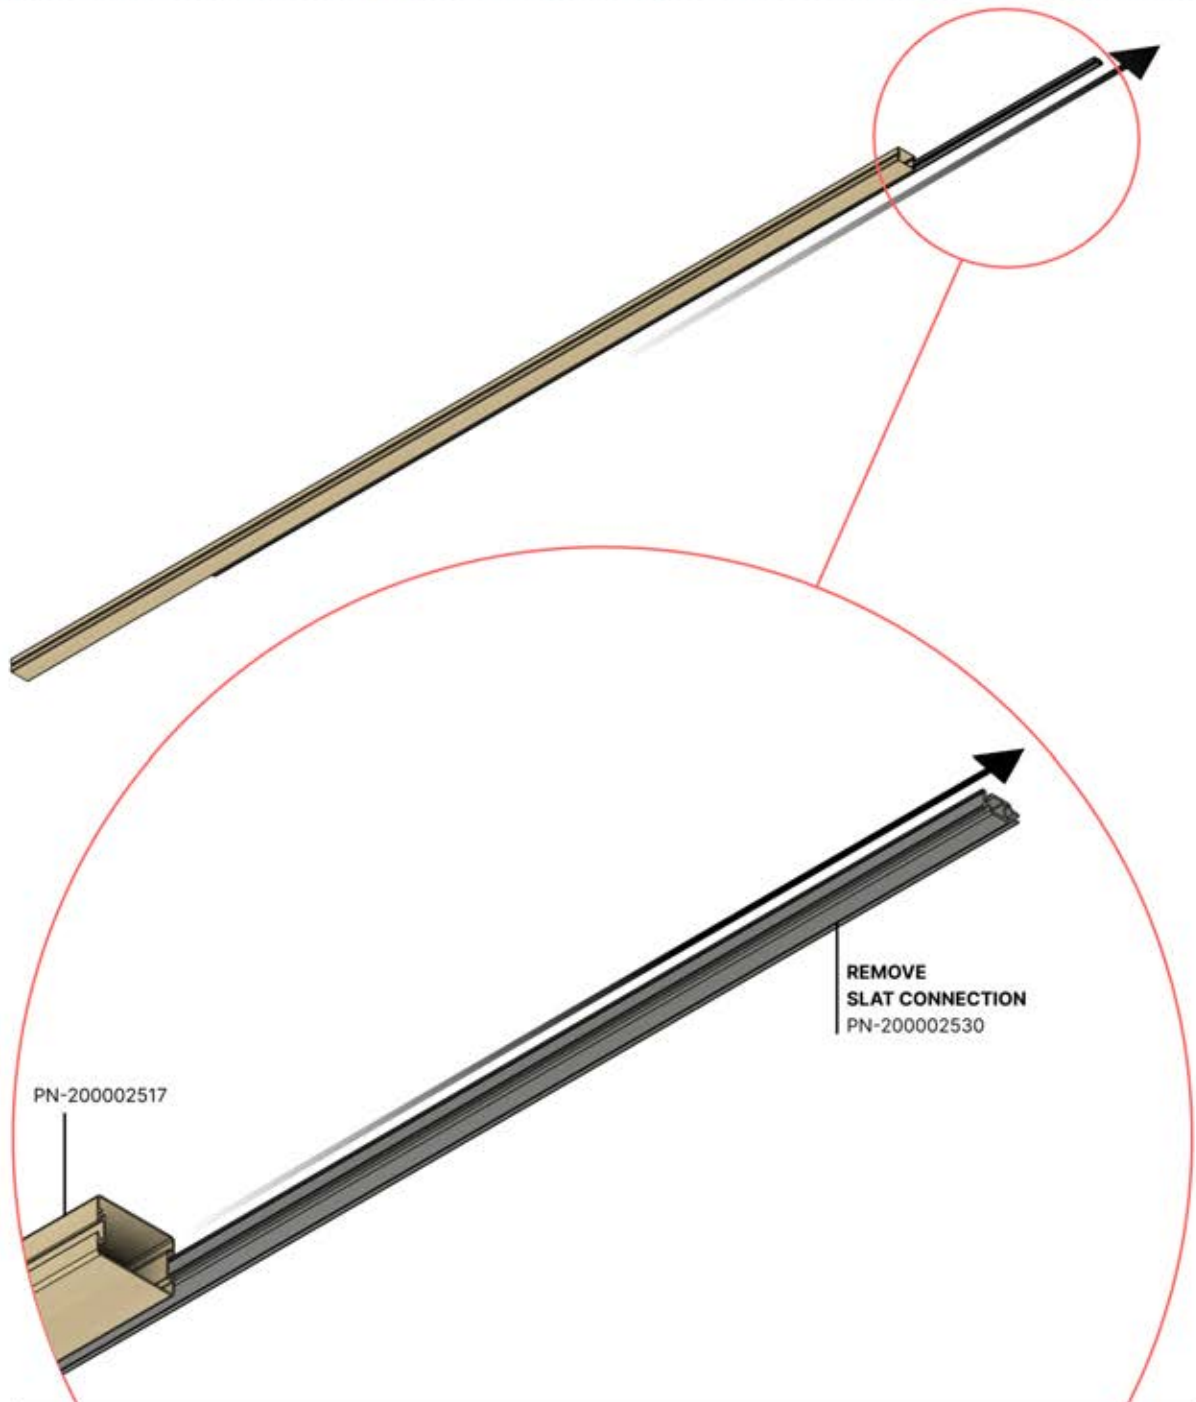

PLEASE NOTE: Do not remove the slat connection profile on the left and right slats, as these will be installed and fixed into the posts.



DO NOT REMOVE




Slat Right
PN-200002509
1x

Slat Left
PN-200002508
1x


OPTION 2 (OPEN)



** Only for option 2

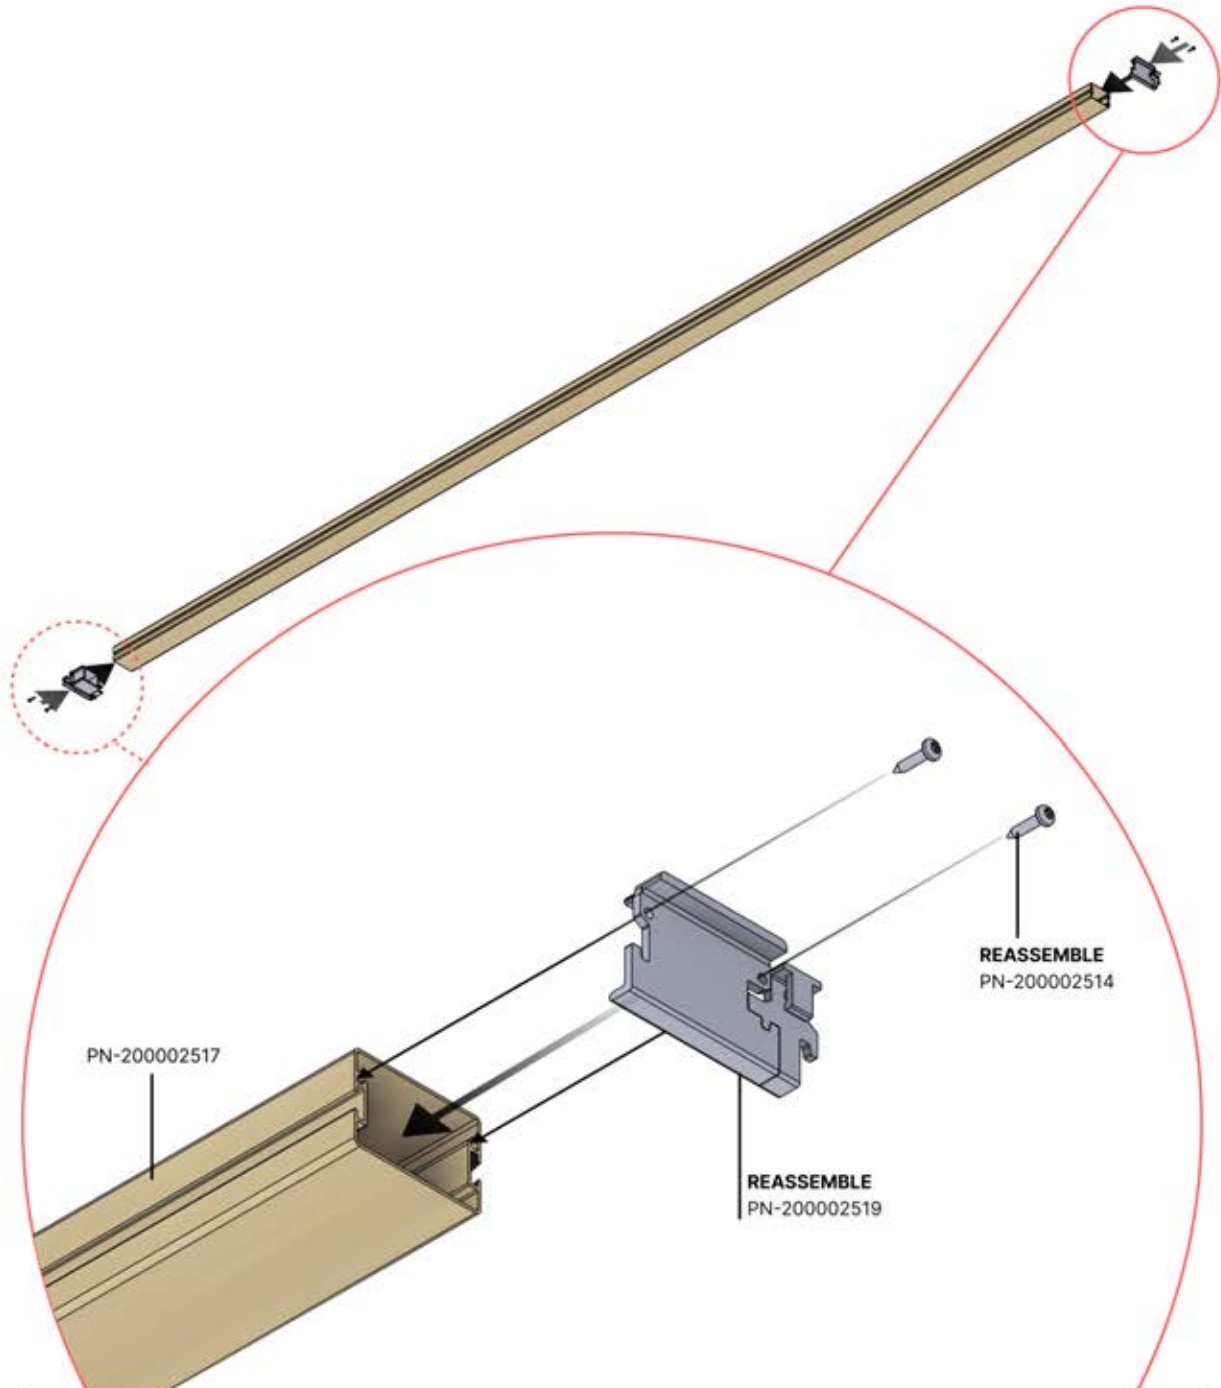

PLEASE NOTE: Do not remove the slat connection profile on the left and right slats, as these will be installed and fixed into the posts.



DO NOT REMOVE




Slat Right
PN-200002509
1x

Slat Left
PN-200002508
1x

WALL MOUNT KIT ASSEMBLY

If you install slat walls to the right of pergola than use this slat


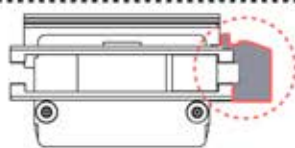


Slat Right
PN-200002509
1x

If you install slat walls to the left of pergola than use this slat




Slat Left
PN-200002508
1x

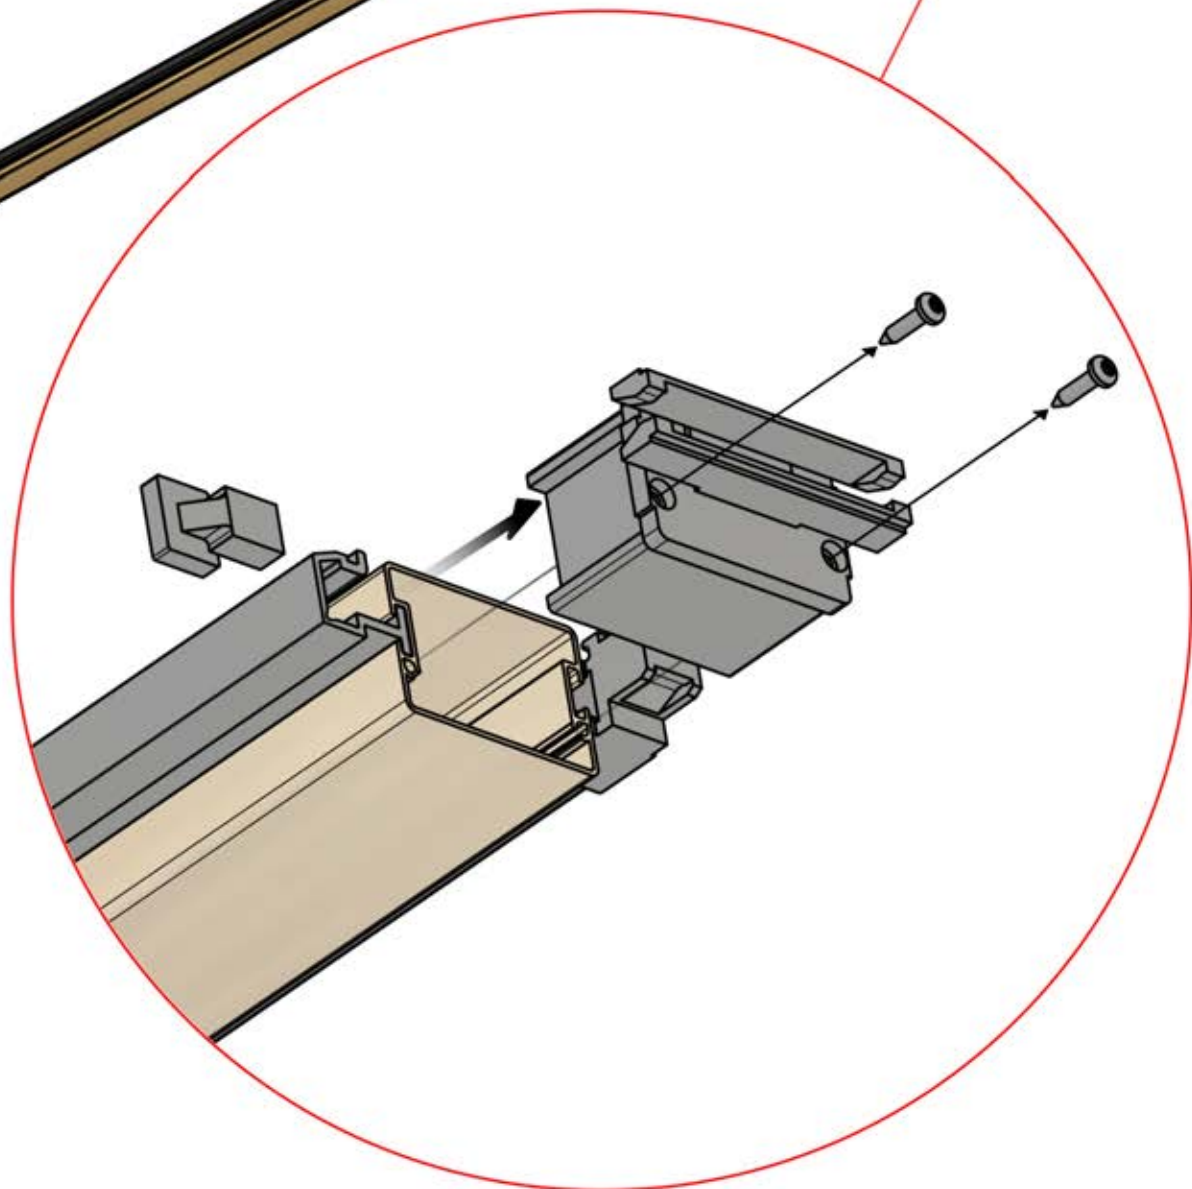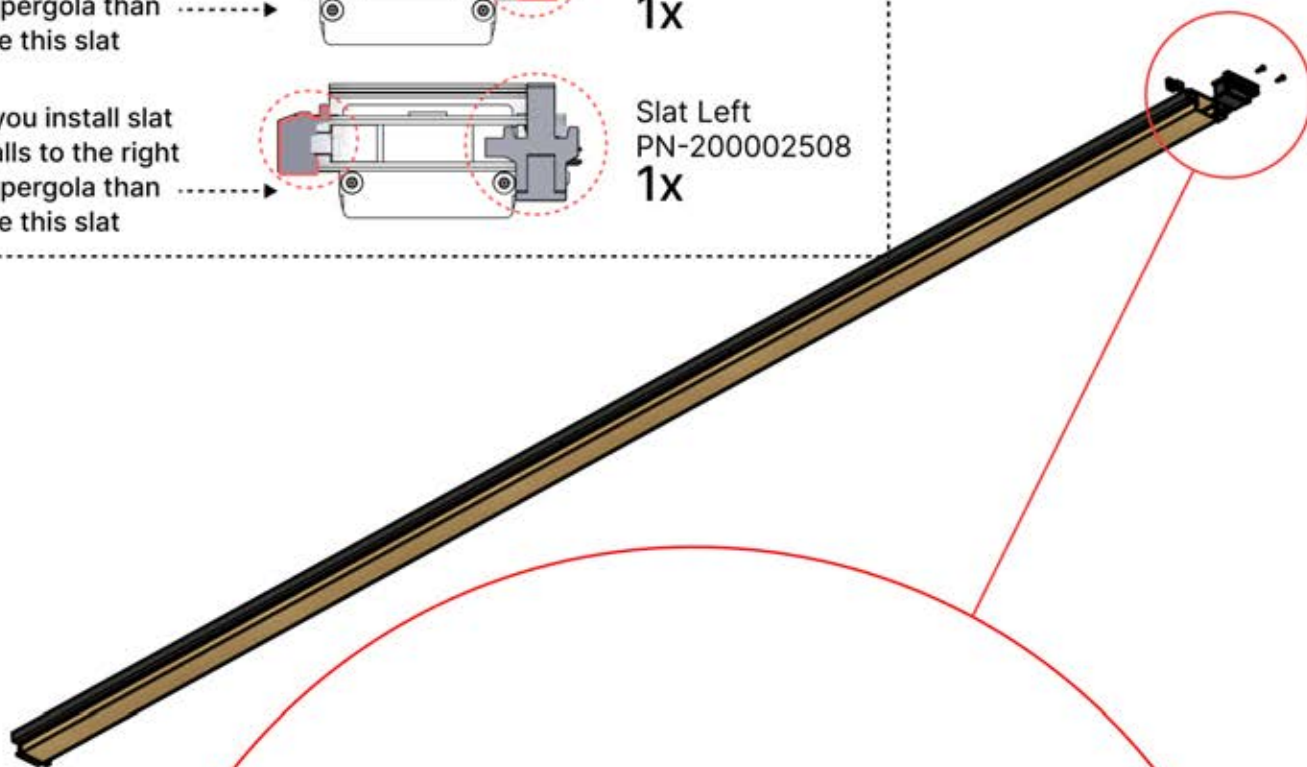

WALL MOUNT KIT ASSEMBLY

If you install slat walls to the right of pergola than use this slat

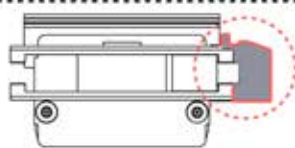


Slat Right
PN-200002509
1x


If you install slat walls to the left of pergola than use this slat




Slat Left
PN-200002508
1x

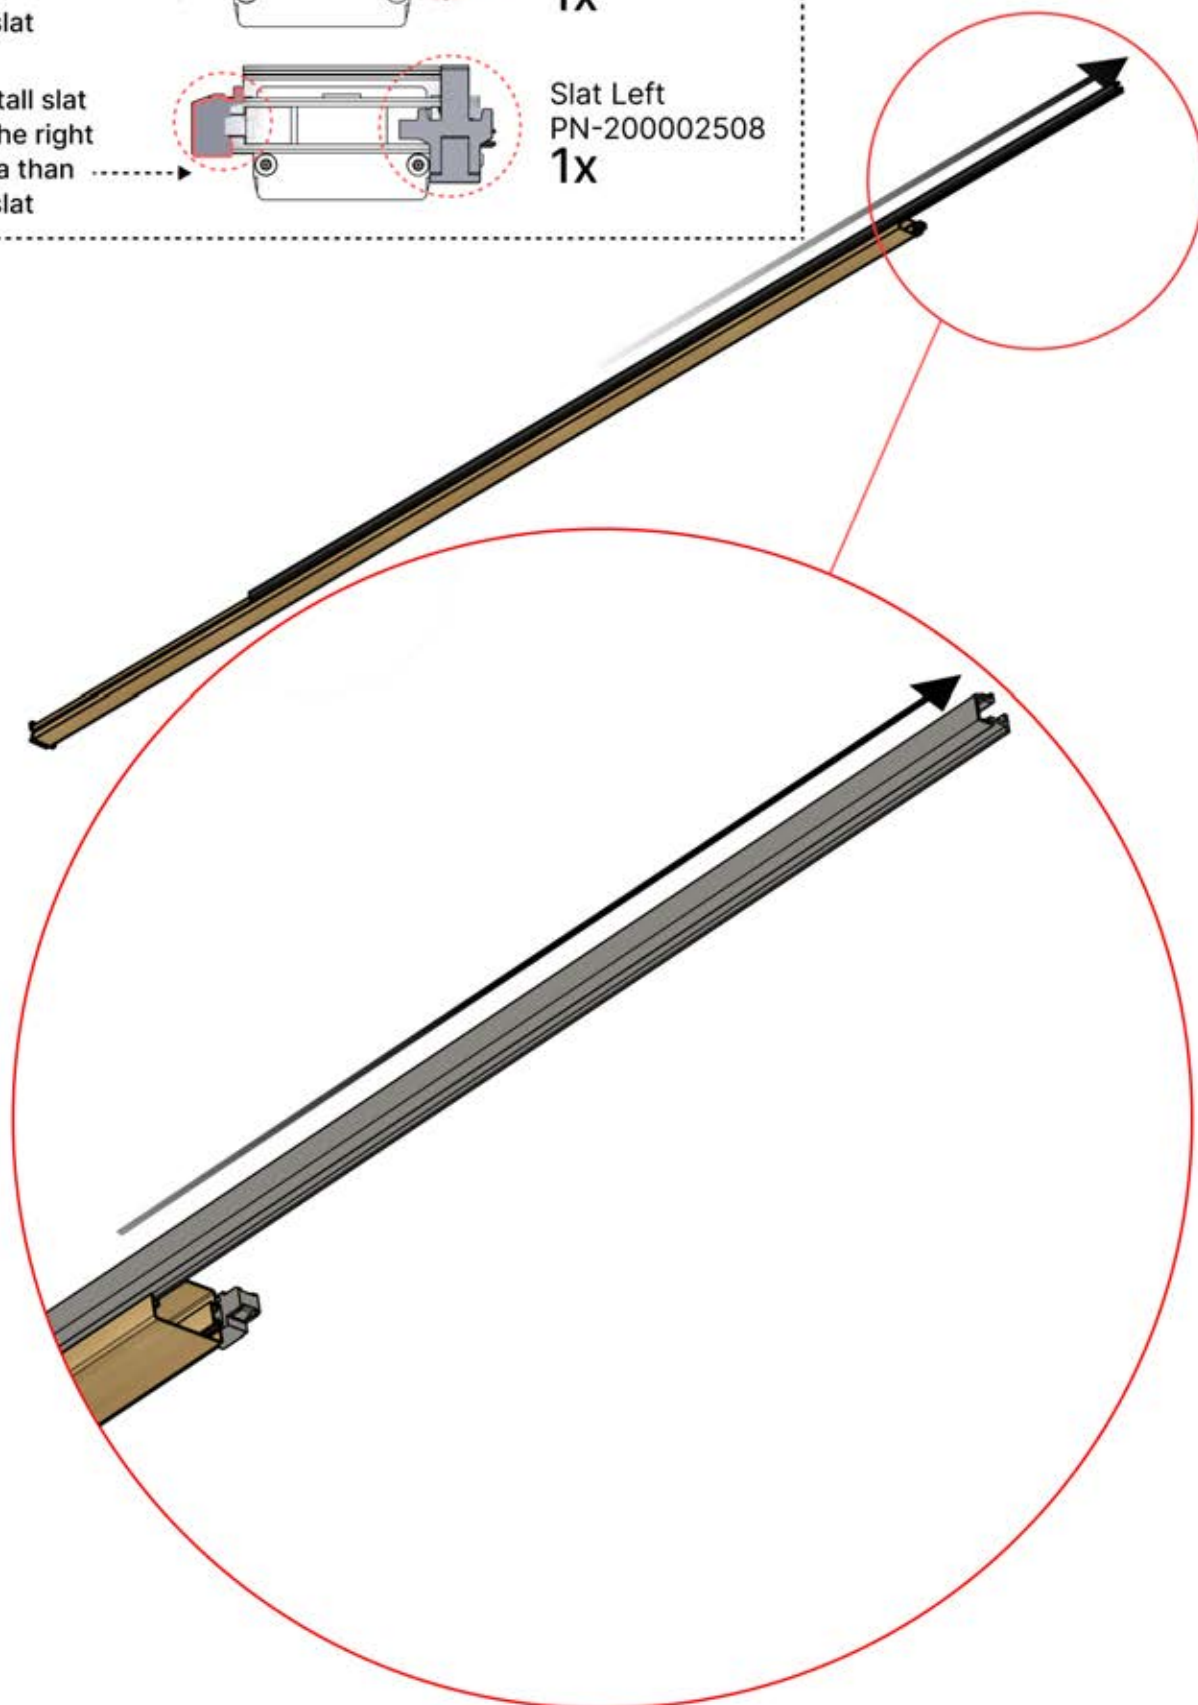

WALL MOUNT KIT ASSEMBLY

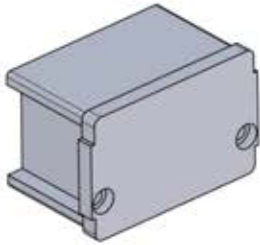


WF SLAT
FLANGE TOP
x1

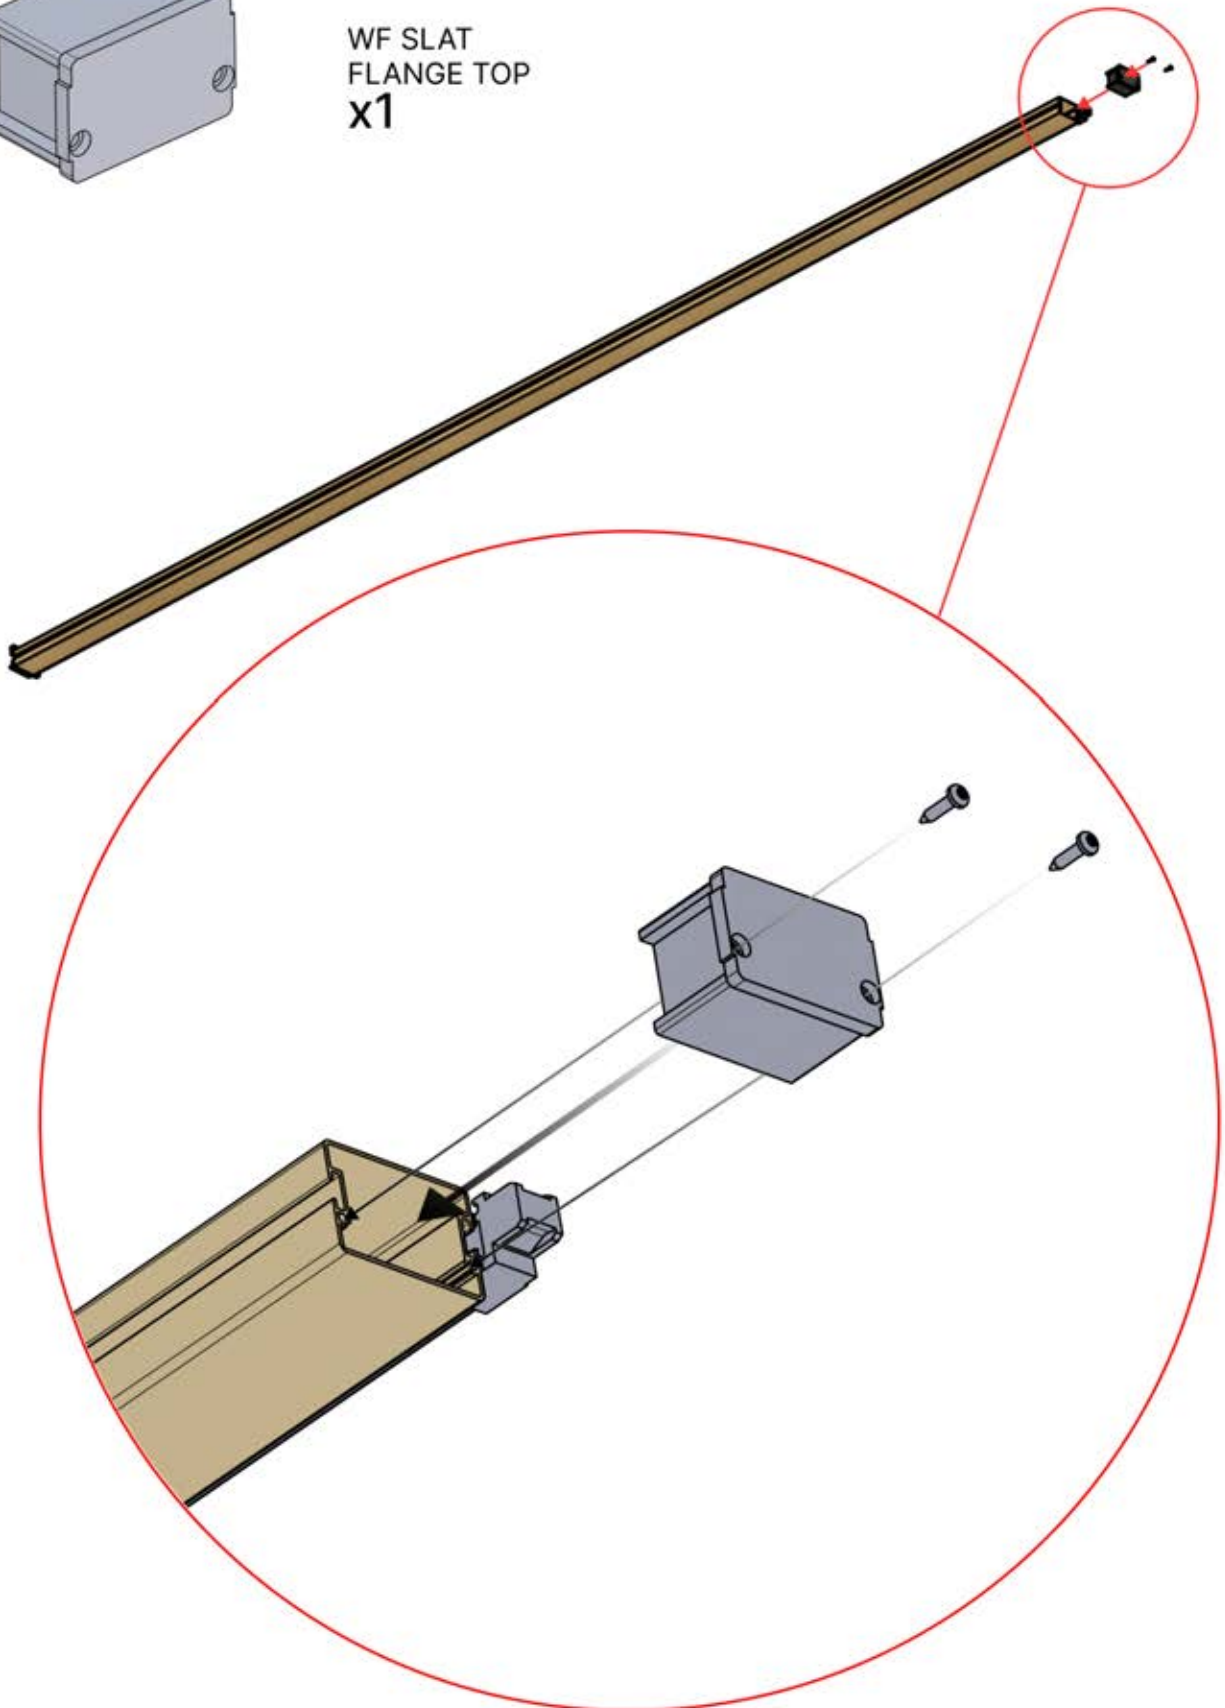

REMOVE COVER AND CLIPS

Remove the cover and clips entirely from the beams and posts on the side where you plan to install the slat wall.

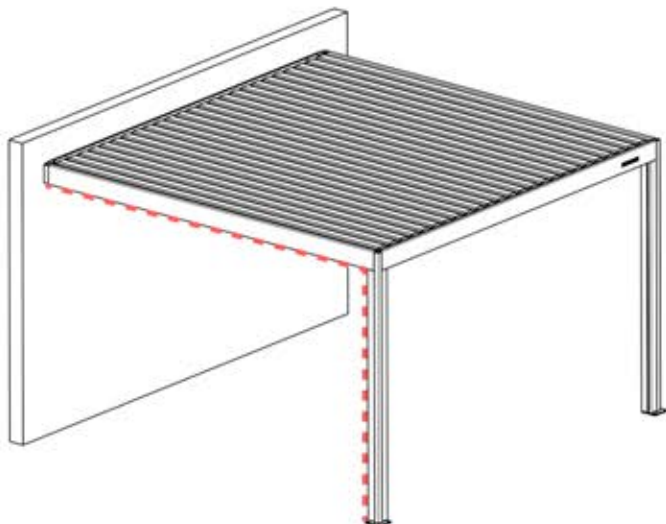

Cover and clip



PN-200000512
STRIP COVER CLIP



SnapFIT Cover


Beams PERGOLA

Remove cover and clips from **beams**.




Beams SUNDREAM

Remove cover and clips from the underside of the **beams**.




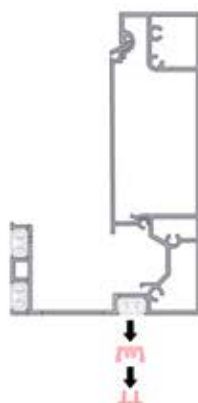


Posts



Remove cover and clips from **posts**.

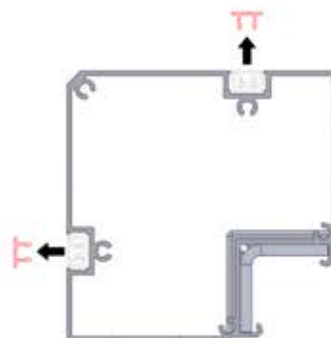

1

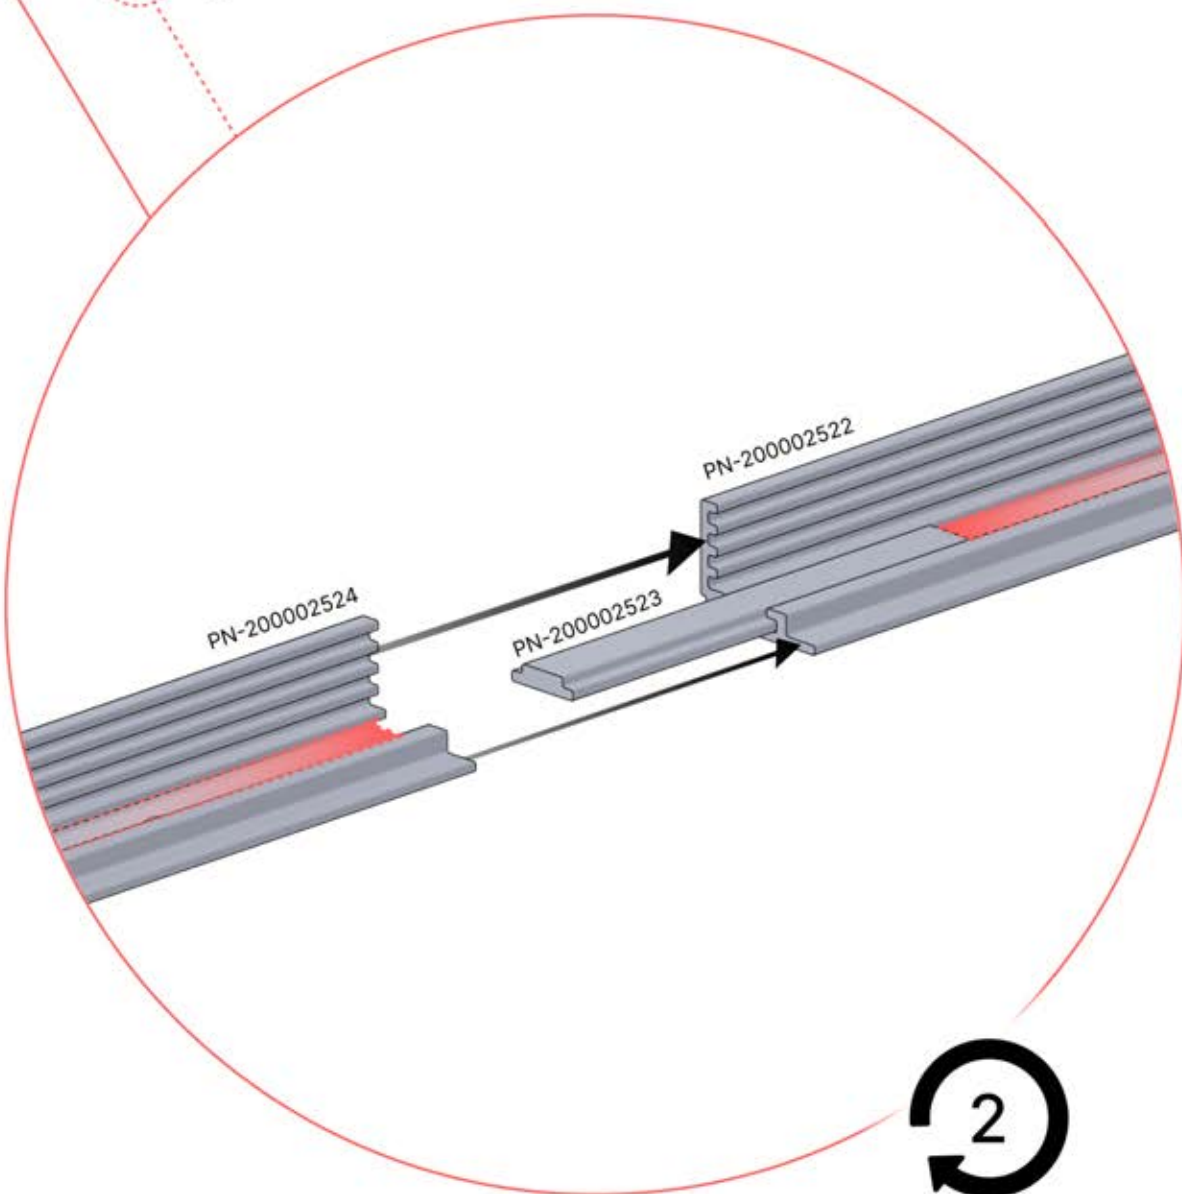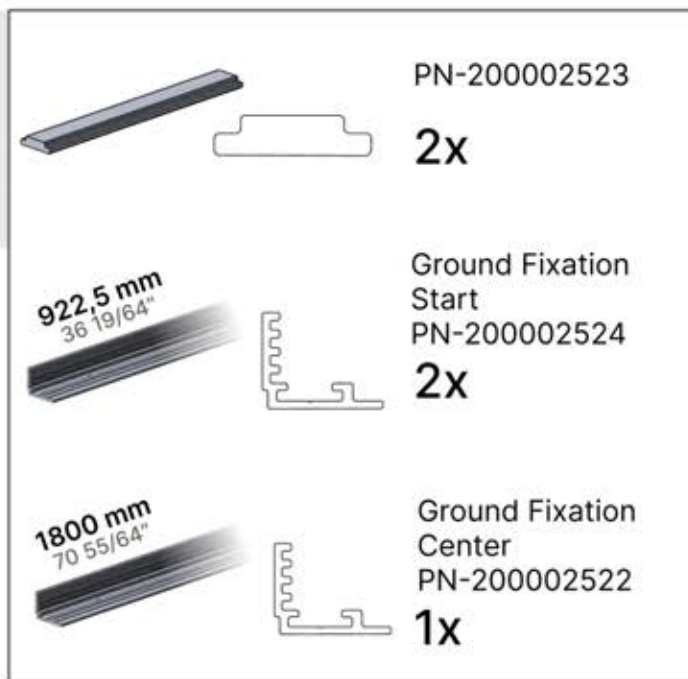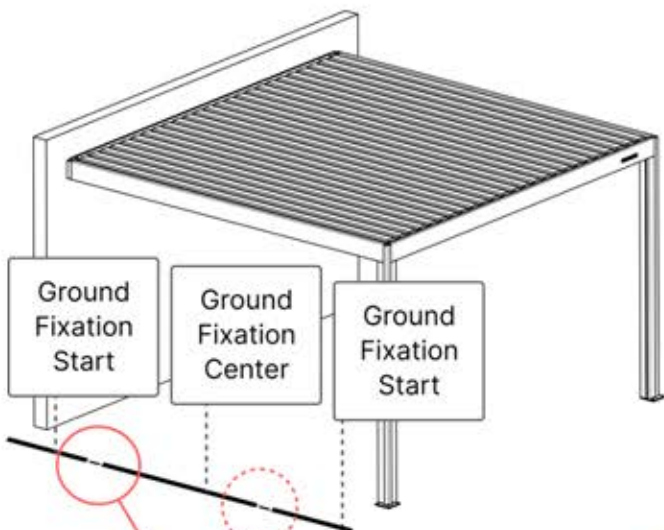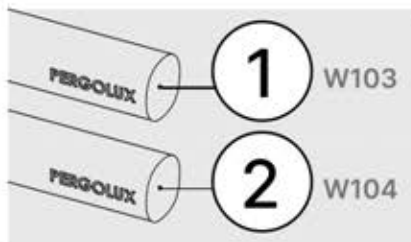



2

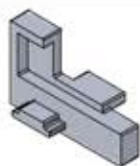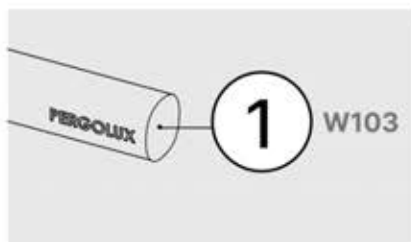




End Cover Right
PN-200002513
x1



WF FIXATION
END COVER L
x1


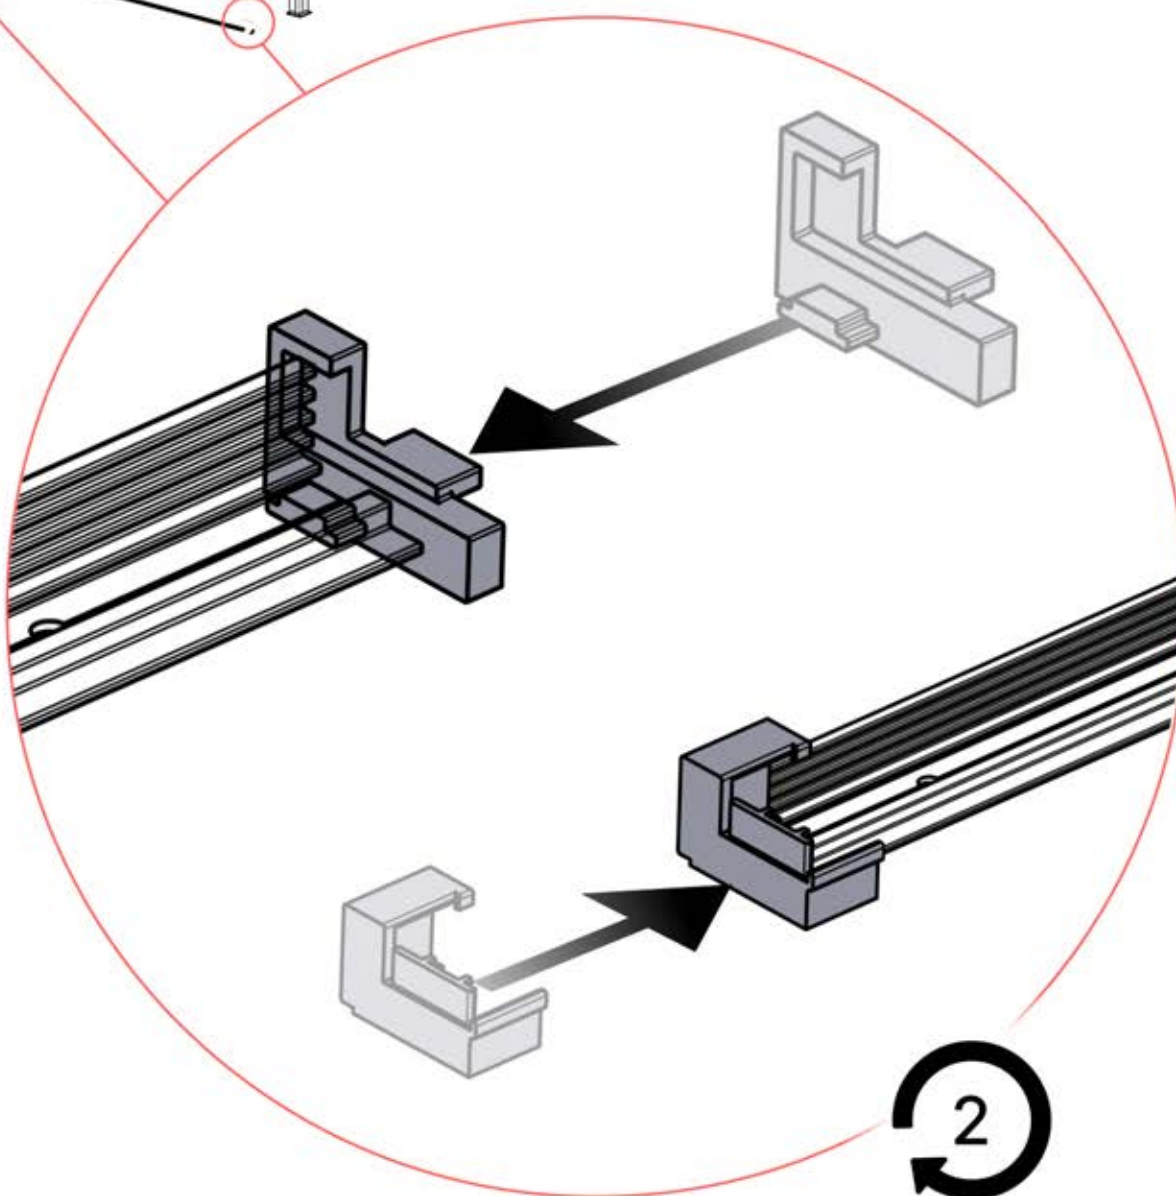
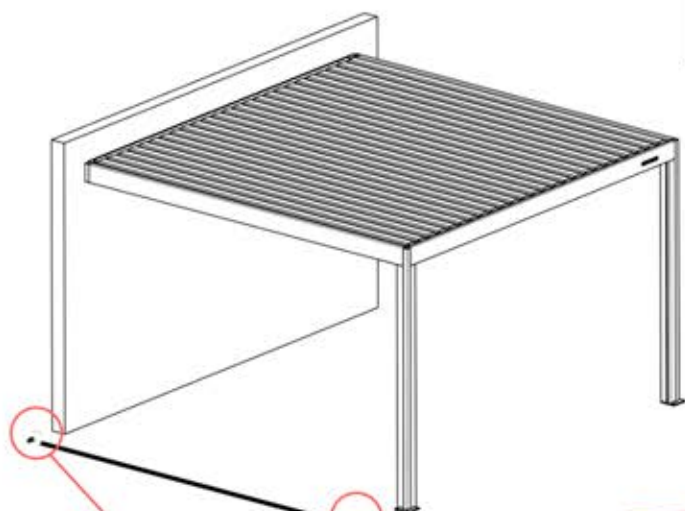


3

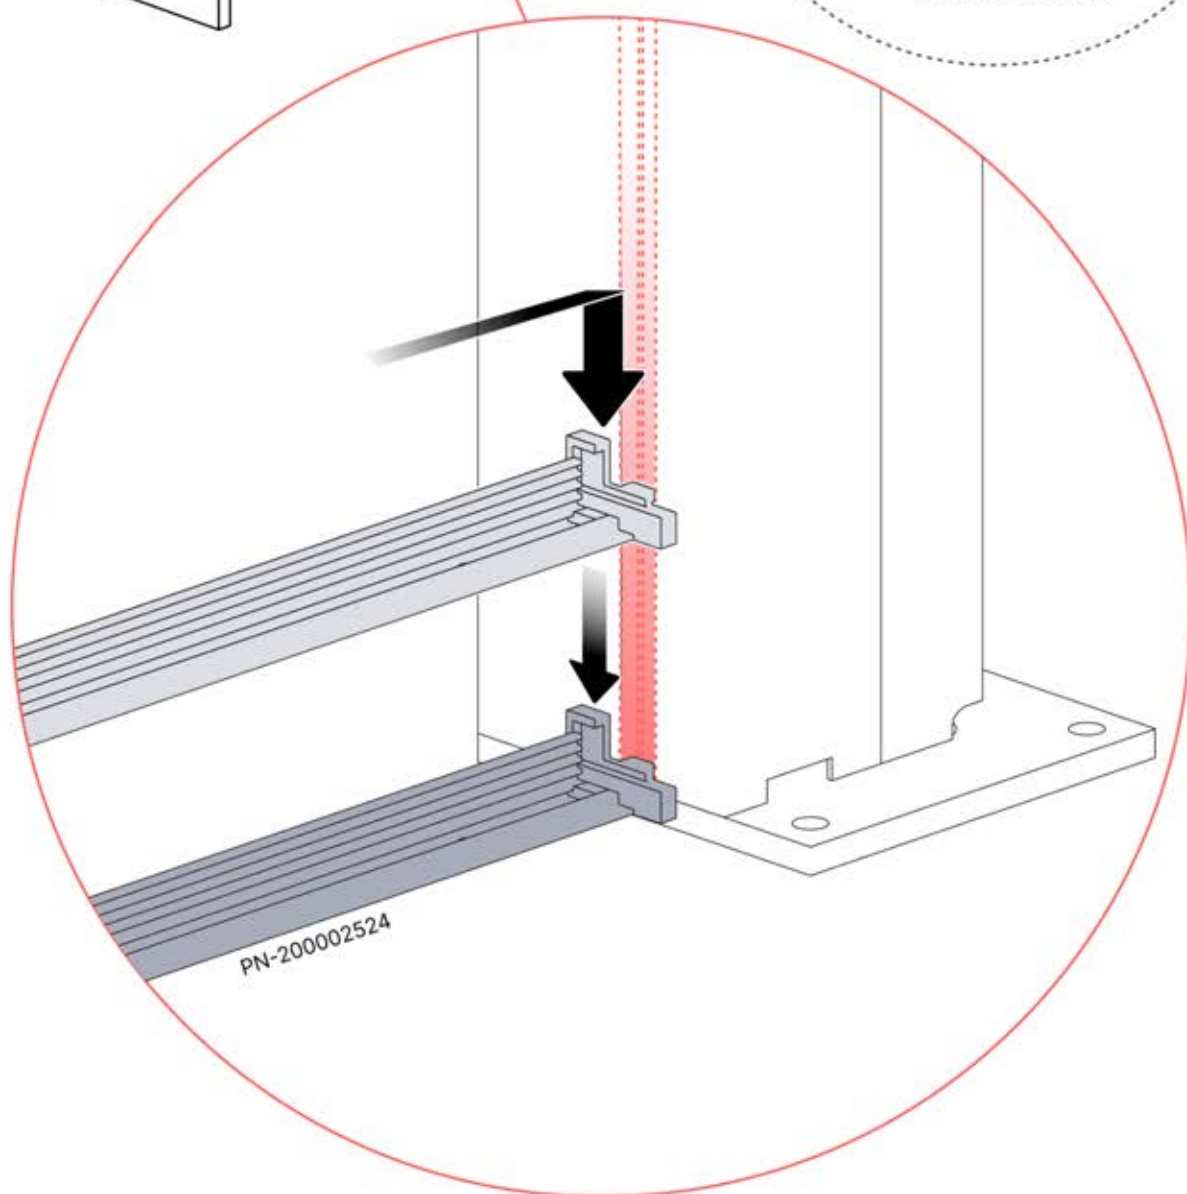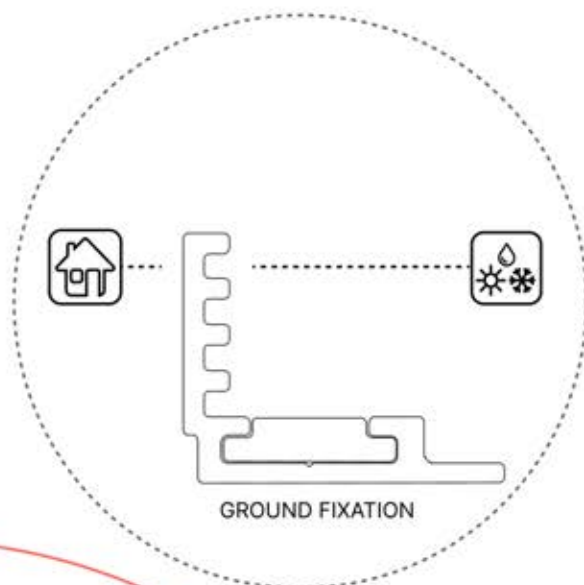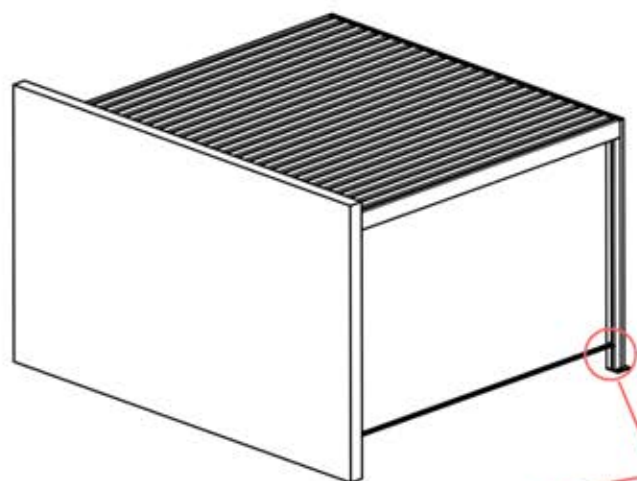





PERGOLUX | SLAT WALL

INFORMATION

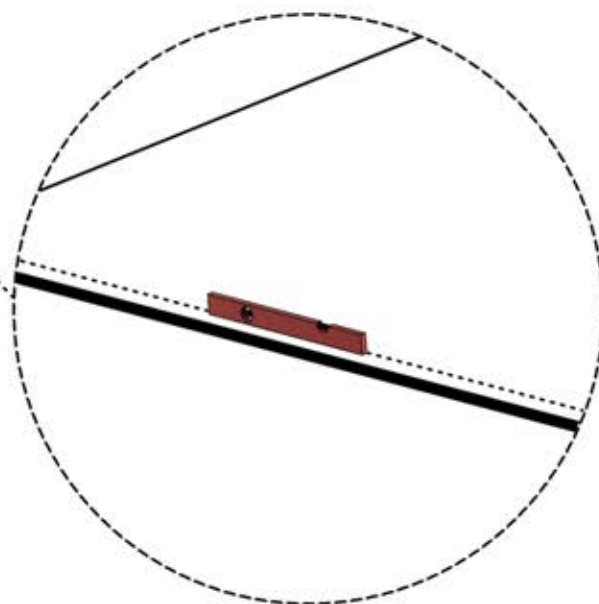
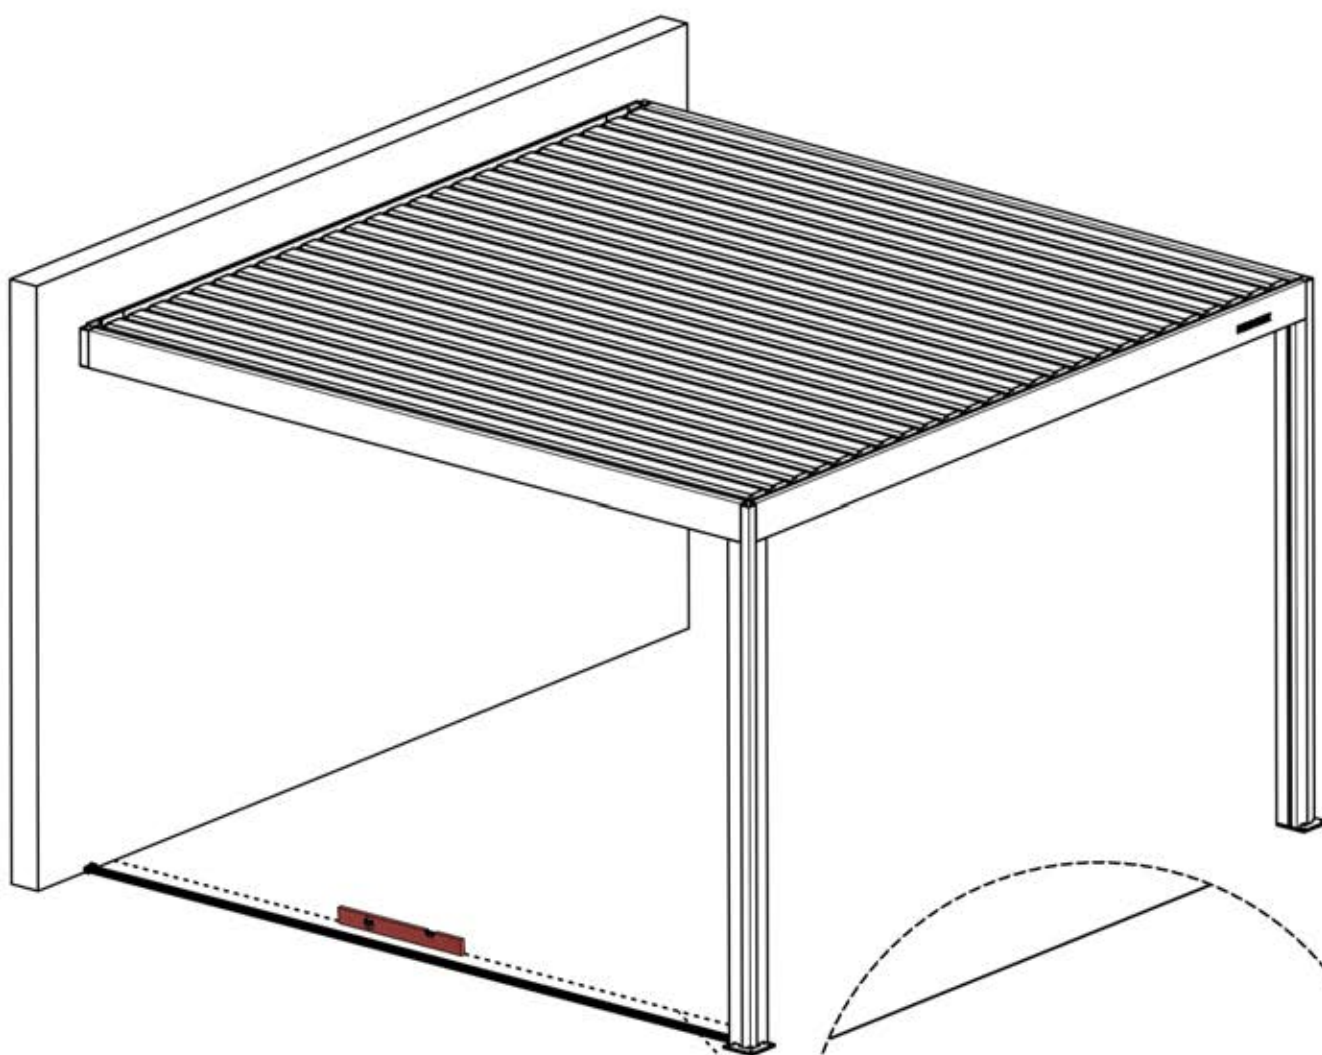
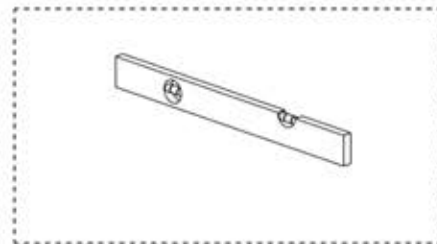


Use a spirit level to align the ground fixation part, ensuring it is exactly parallel to the centerline of the front pole.

4

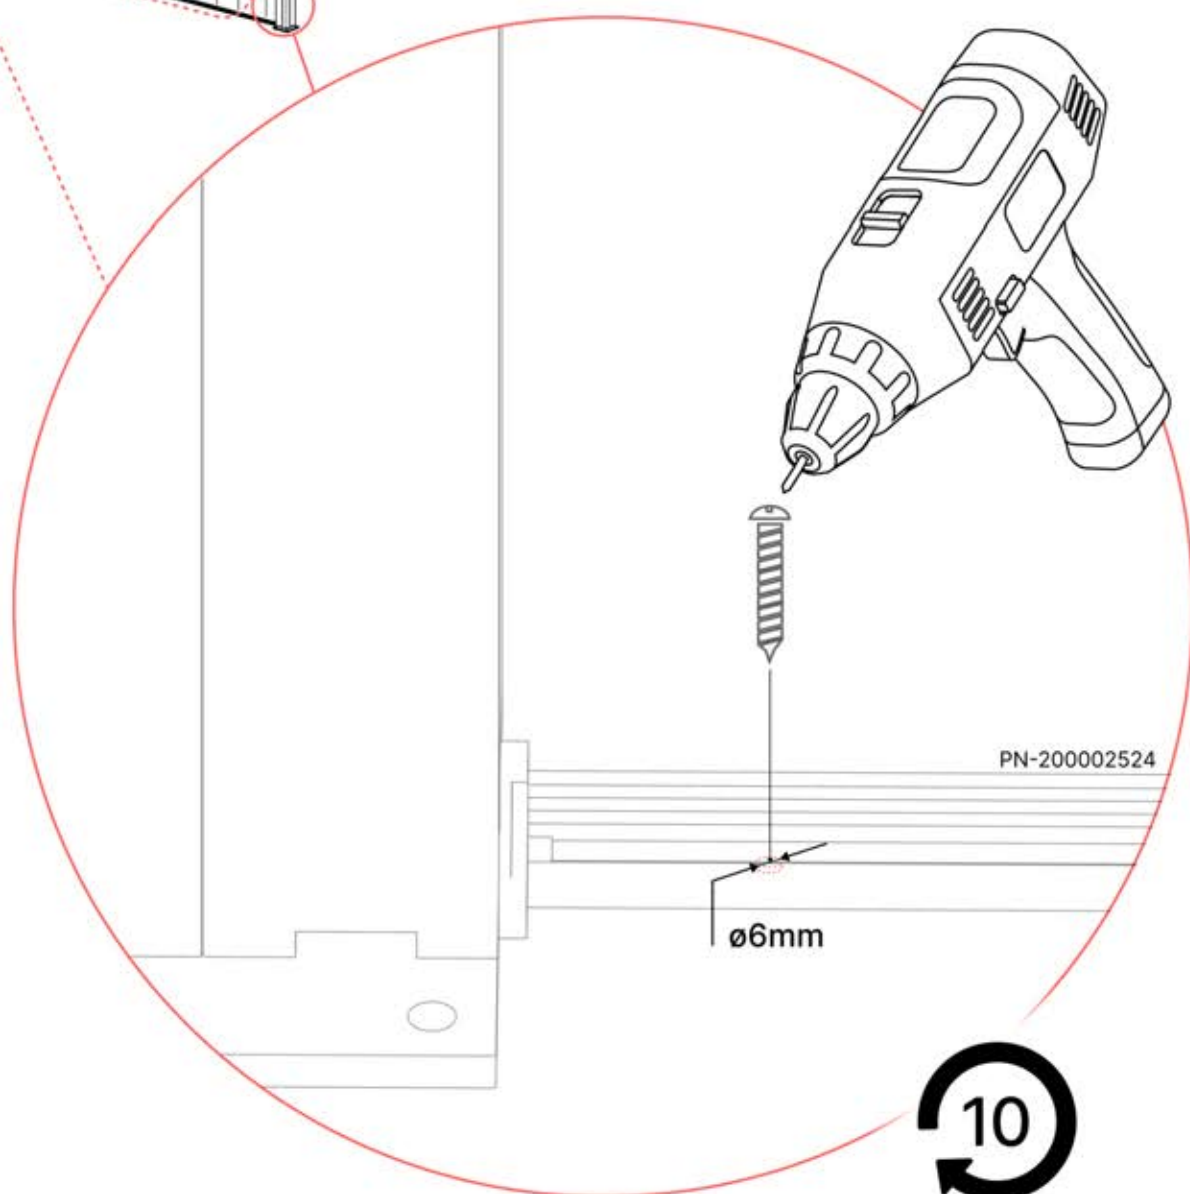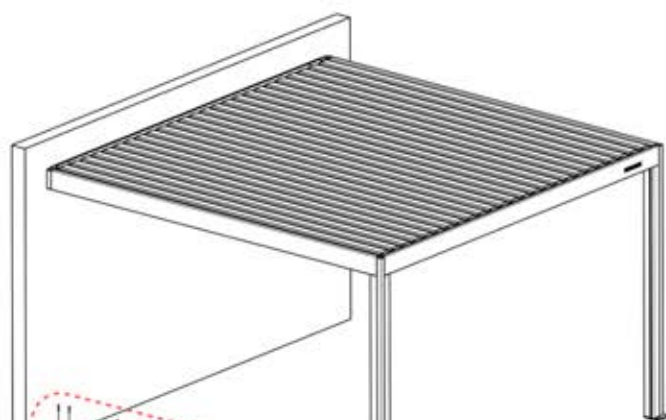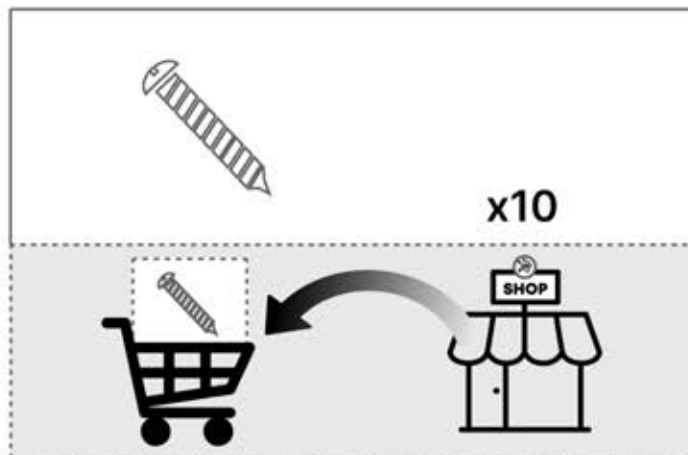
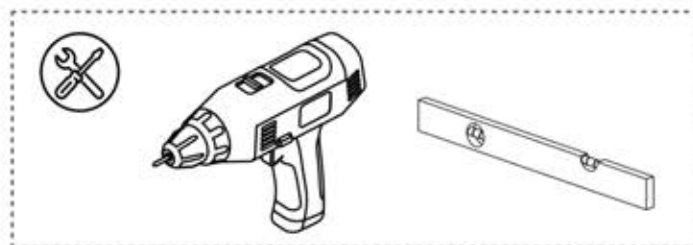


5

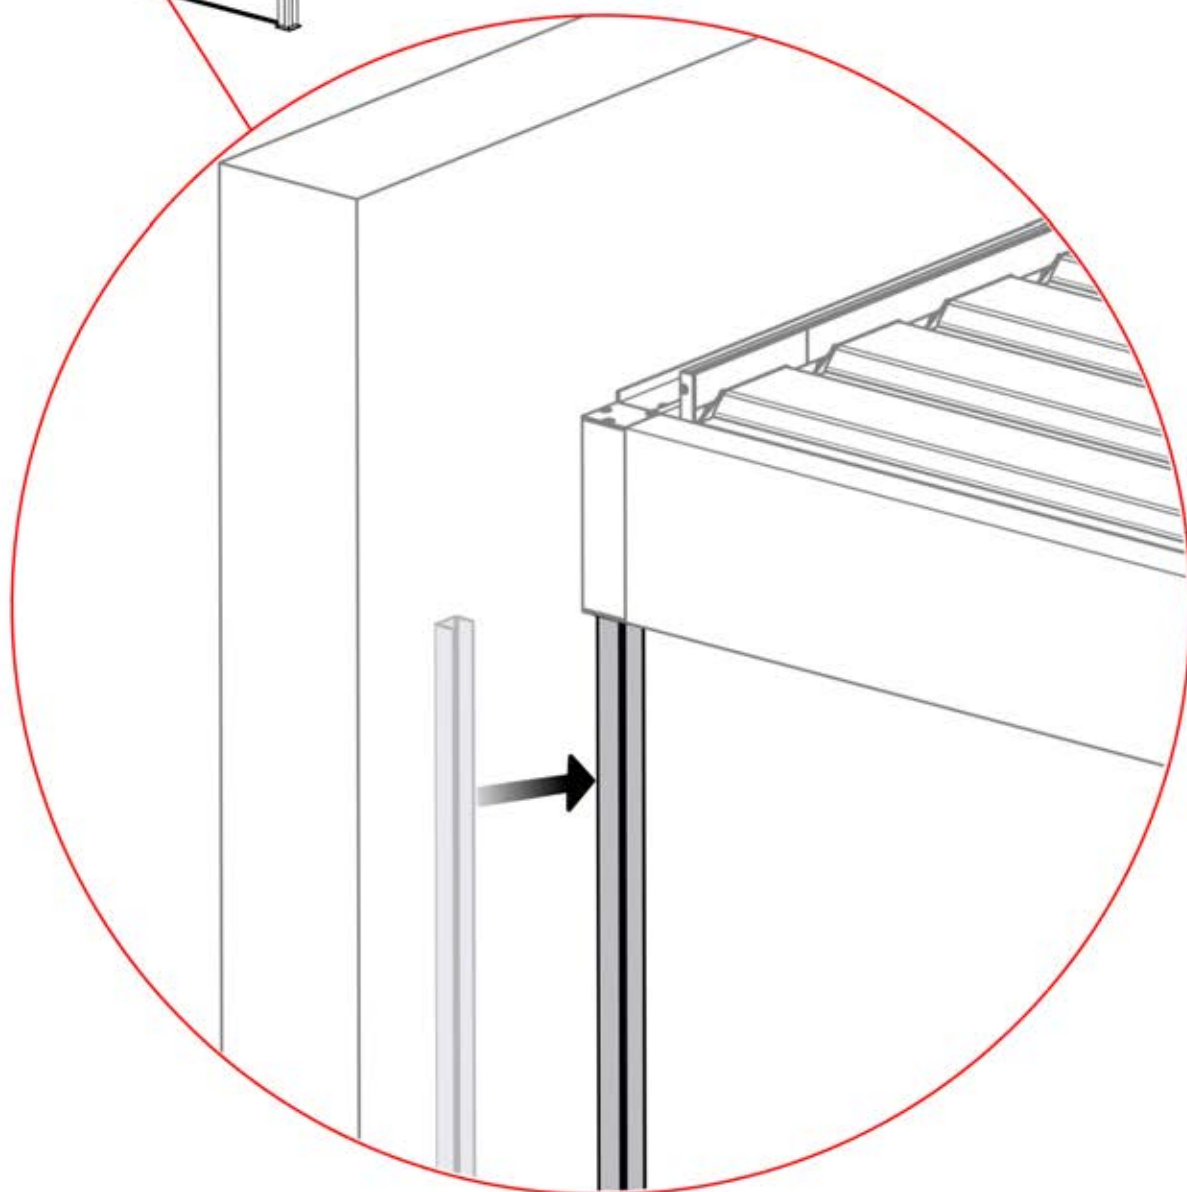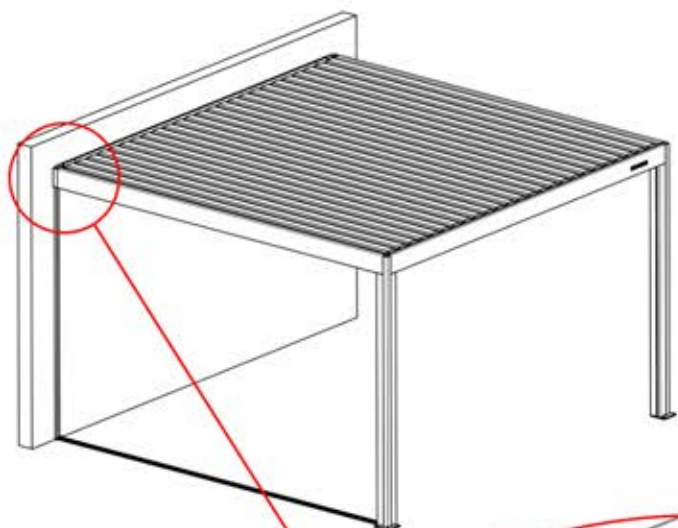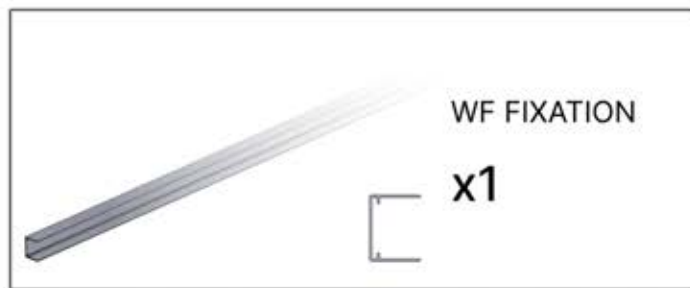




PERGOLUX | SLAT WALL

INFORMATION



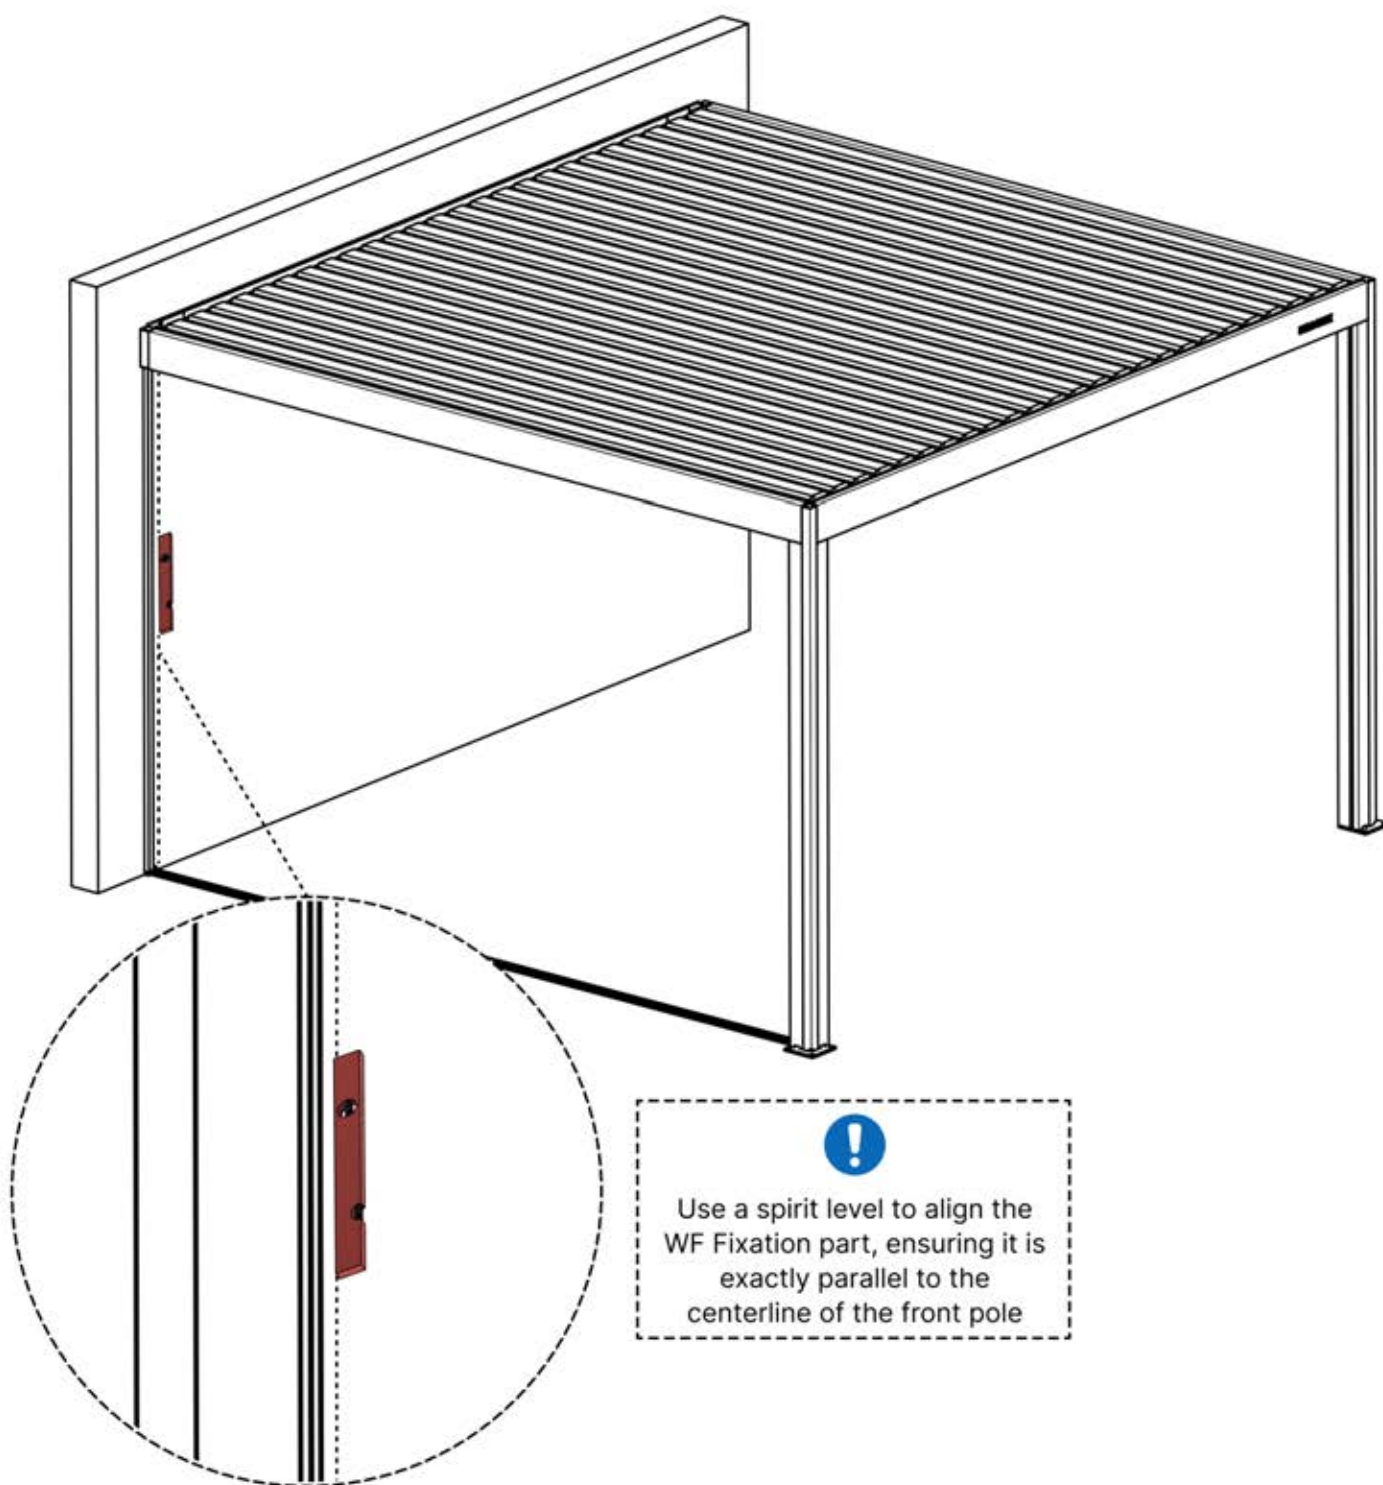
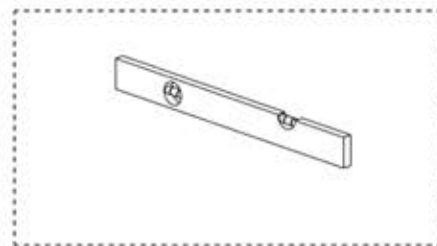


Use a spirit level to align the WF Fixation part, ensuring it is exactly parallel to the centerline of the front pole

6

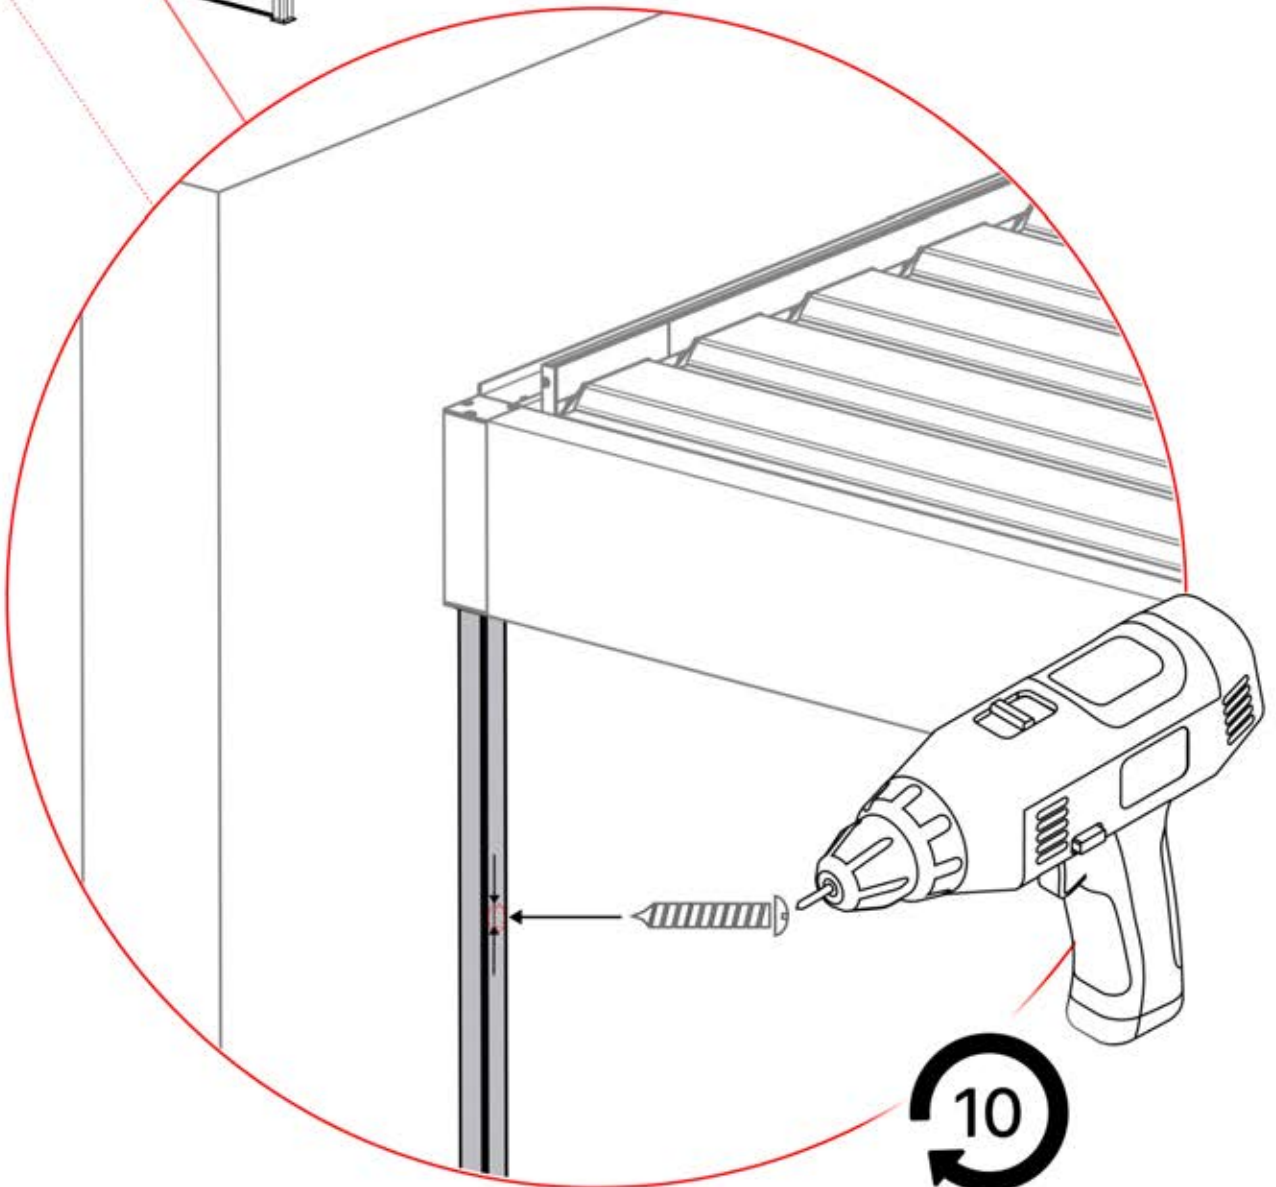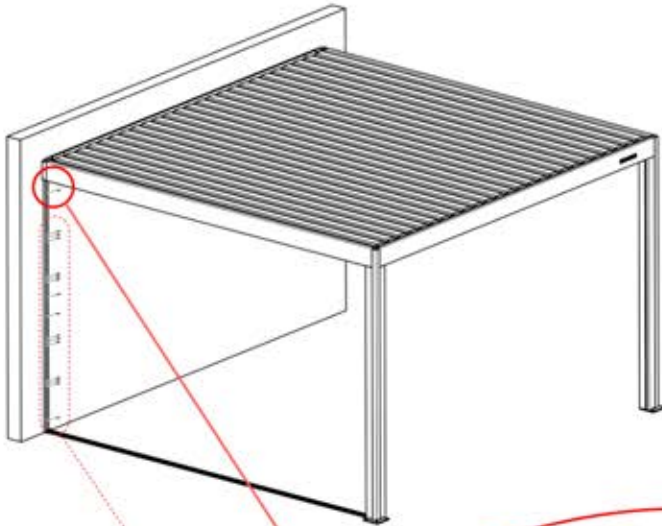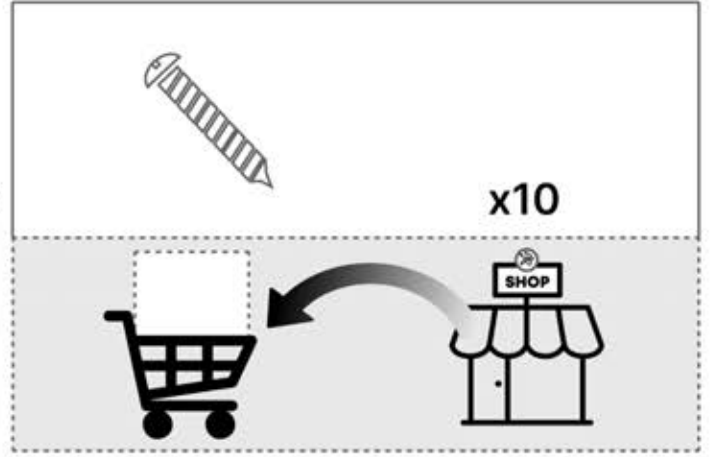


7

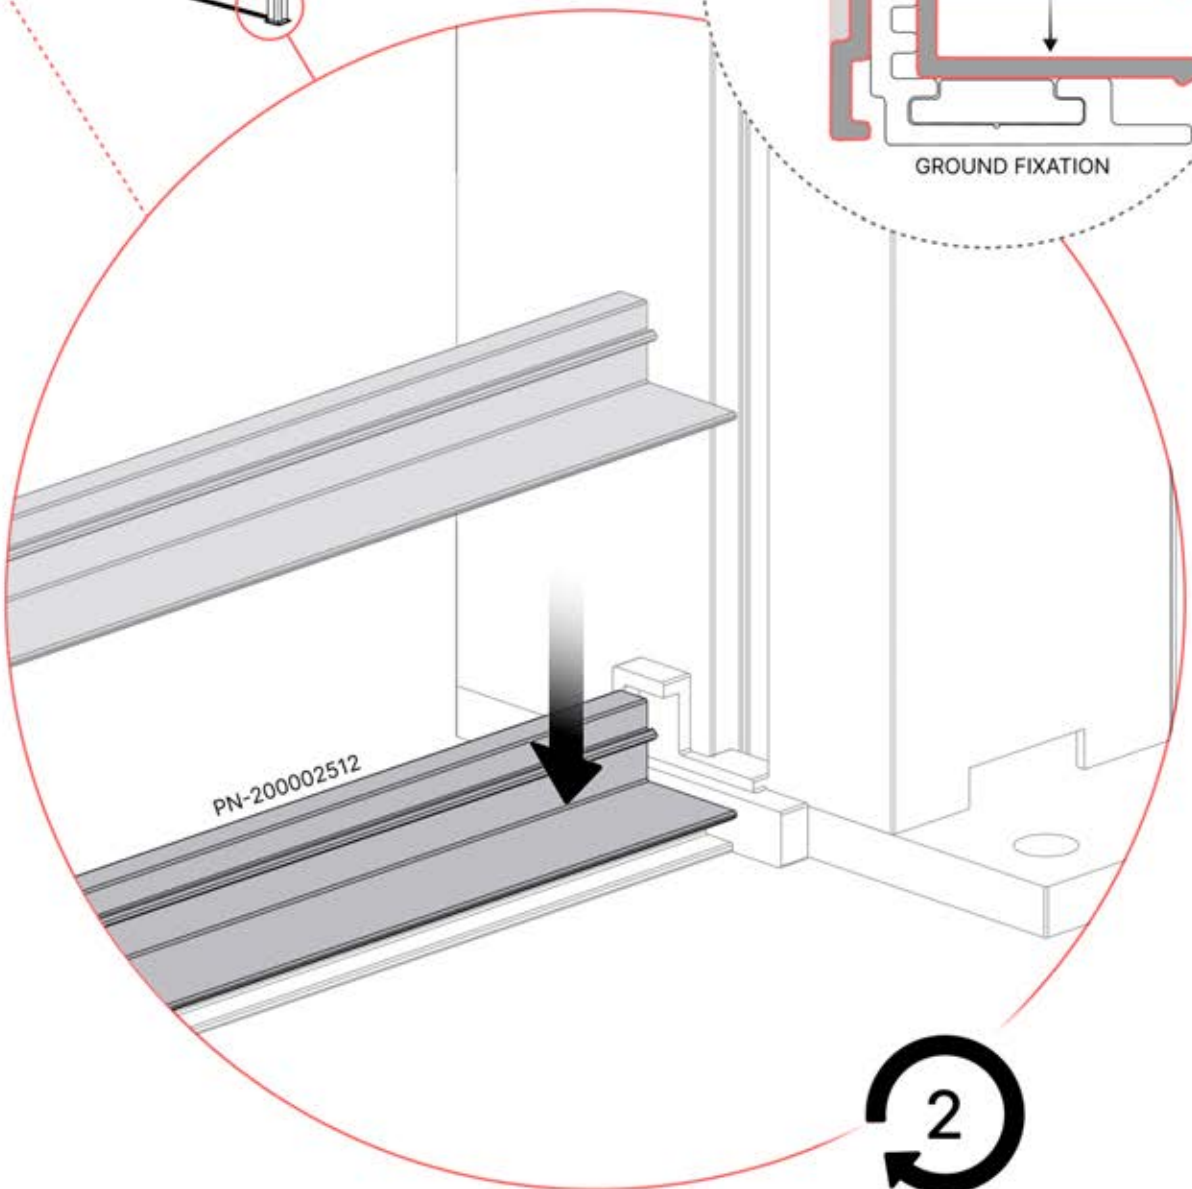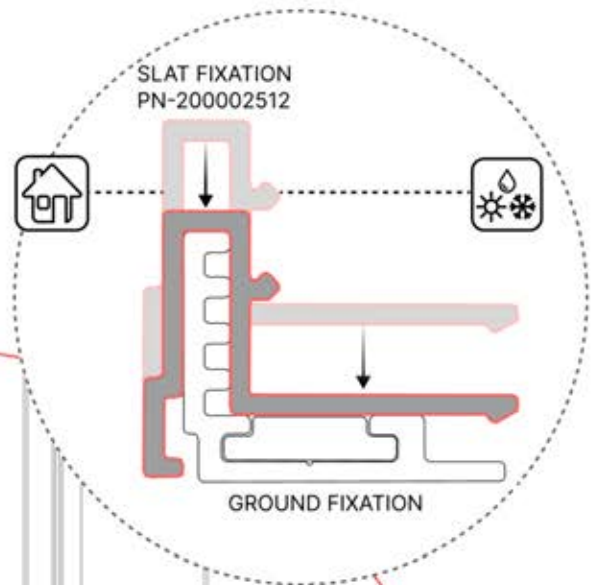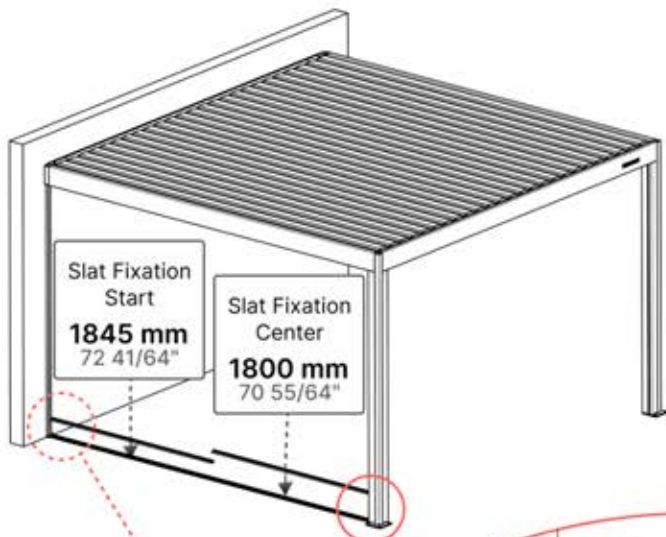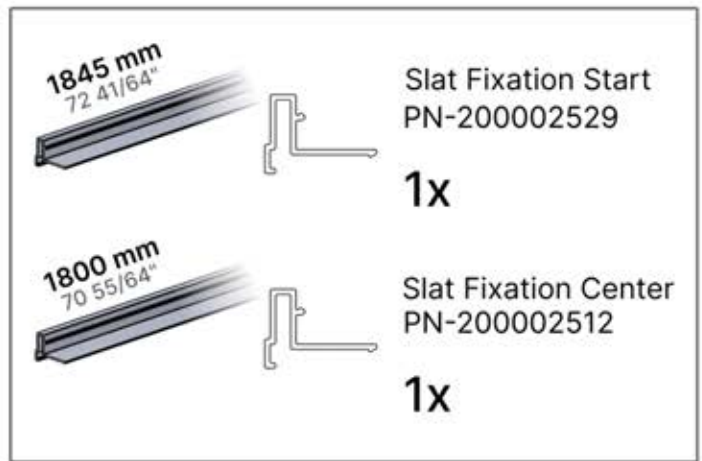


SLAT OVERVIEW


Slat Right
PN-200002509
1x

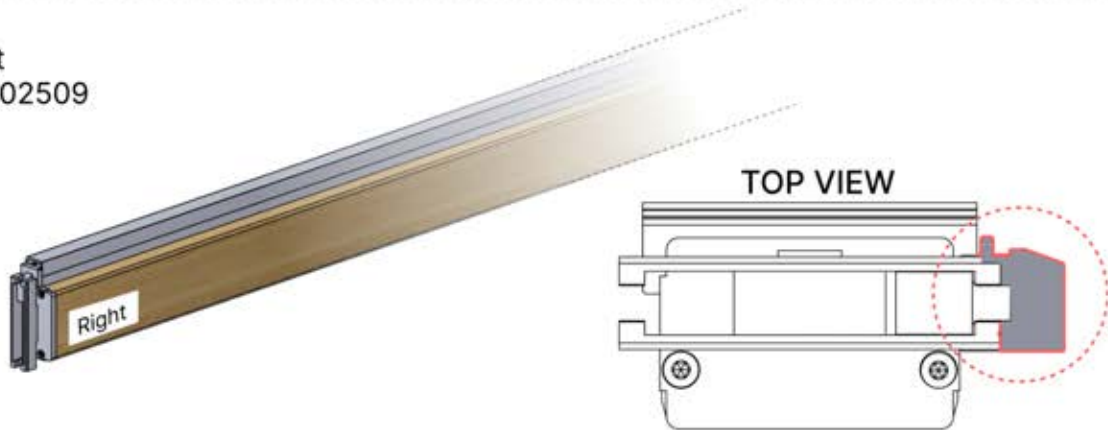





Slat Left
PN-200002508
1x

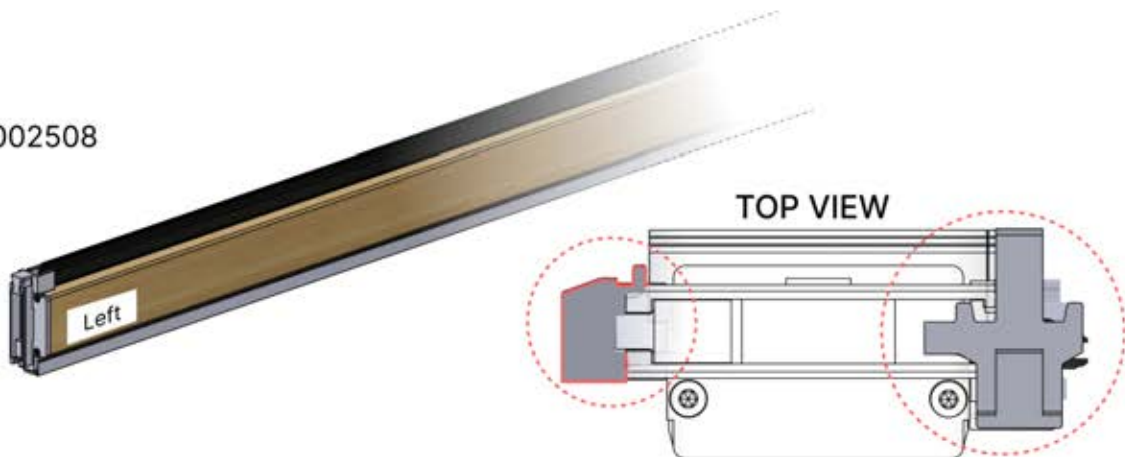


Slat Center
PN-200002507
59x

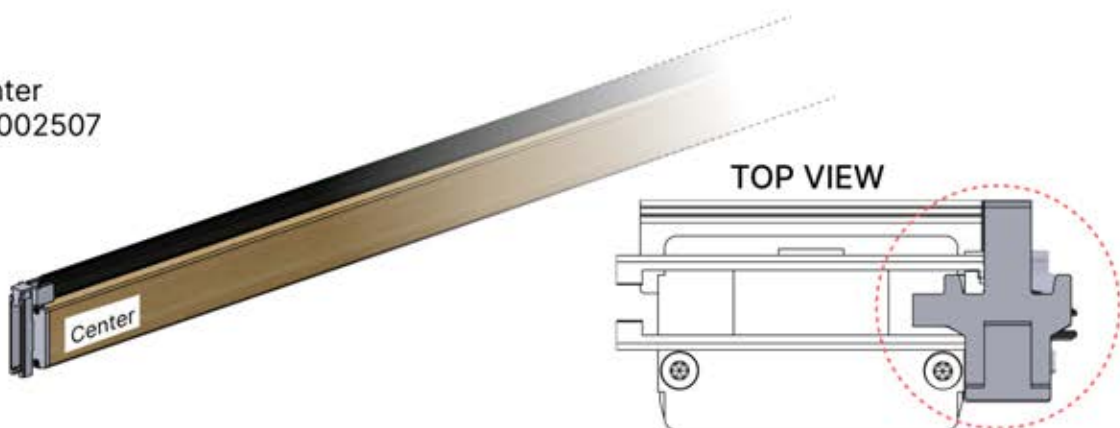



8

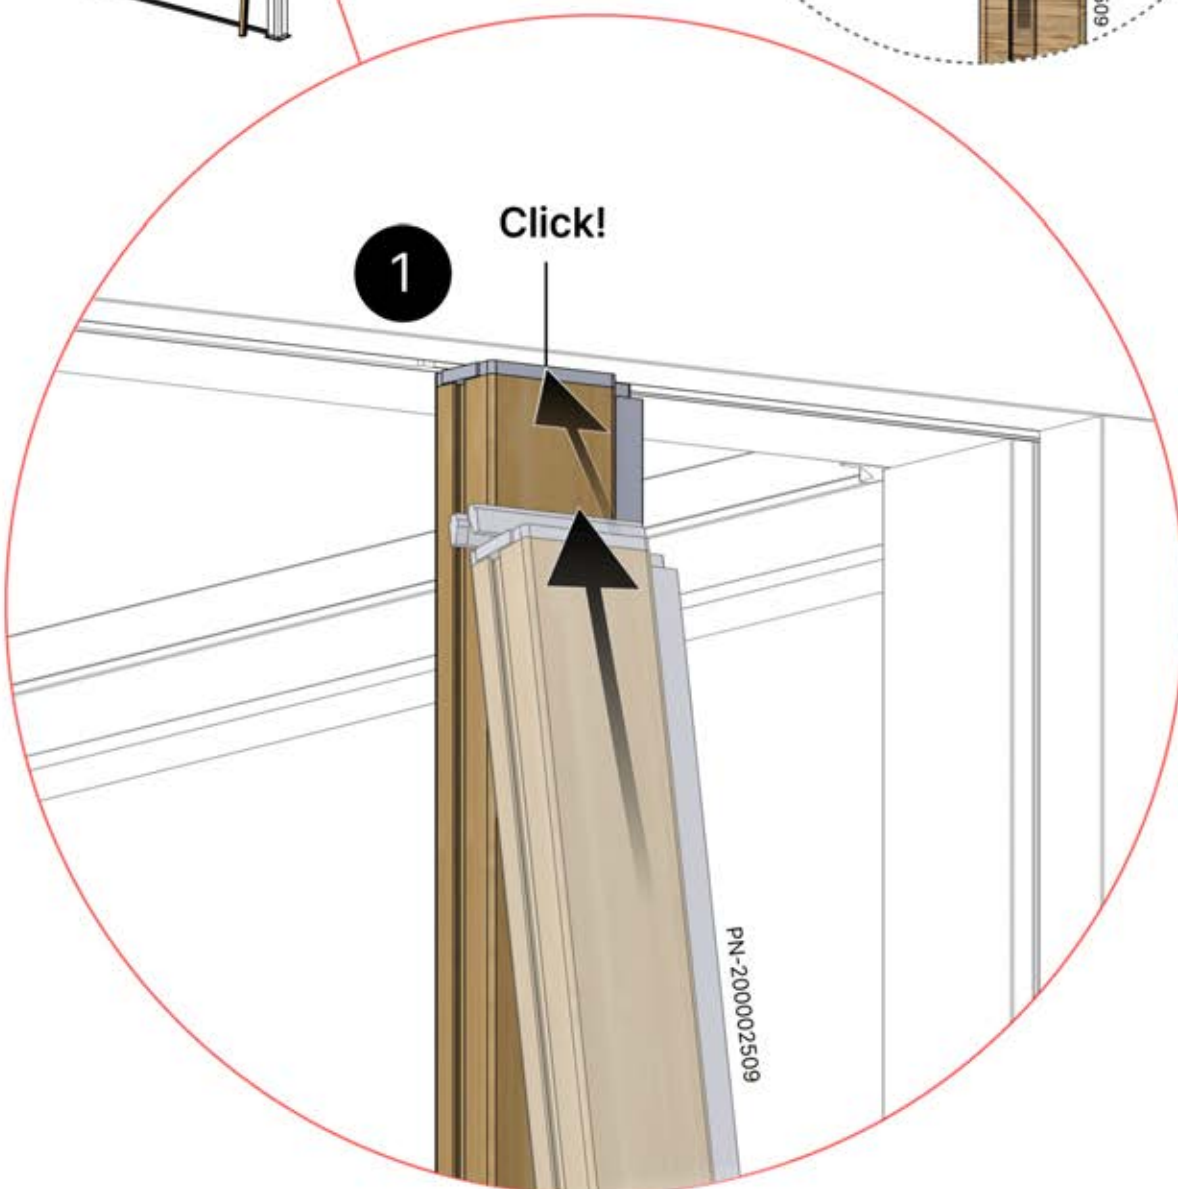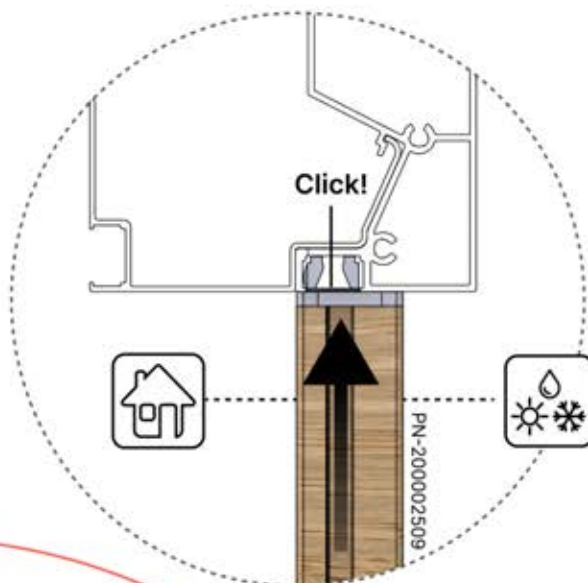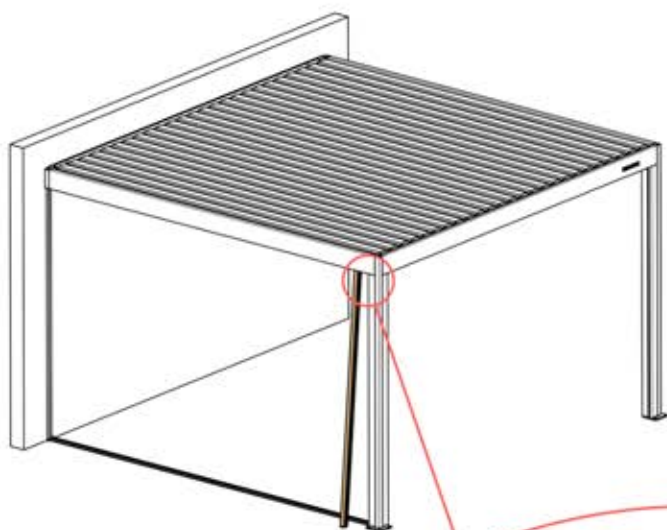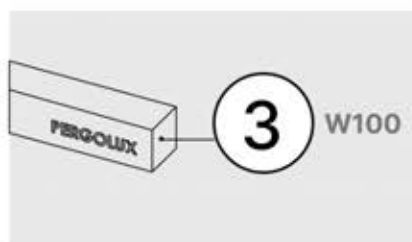





9

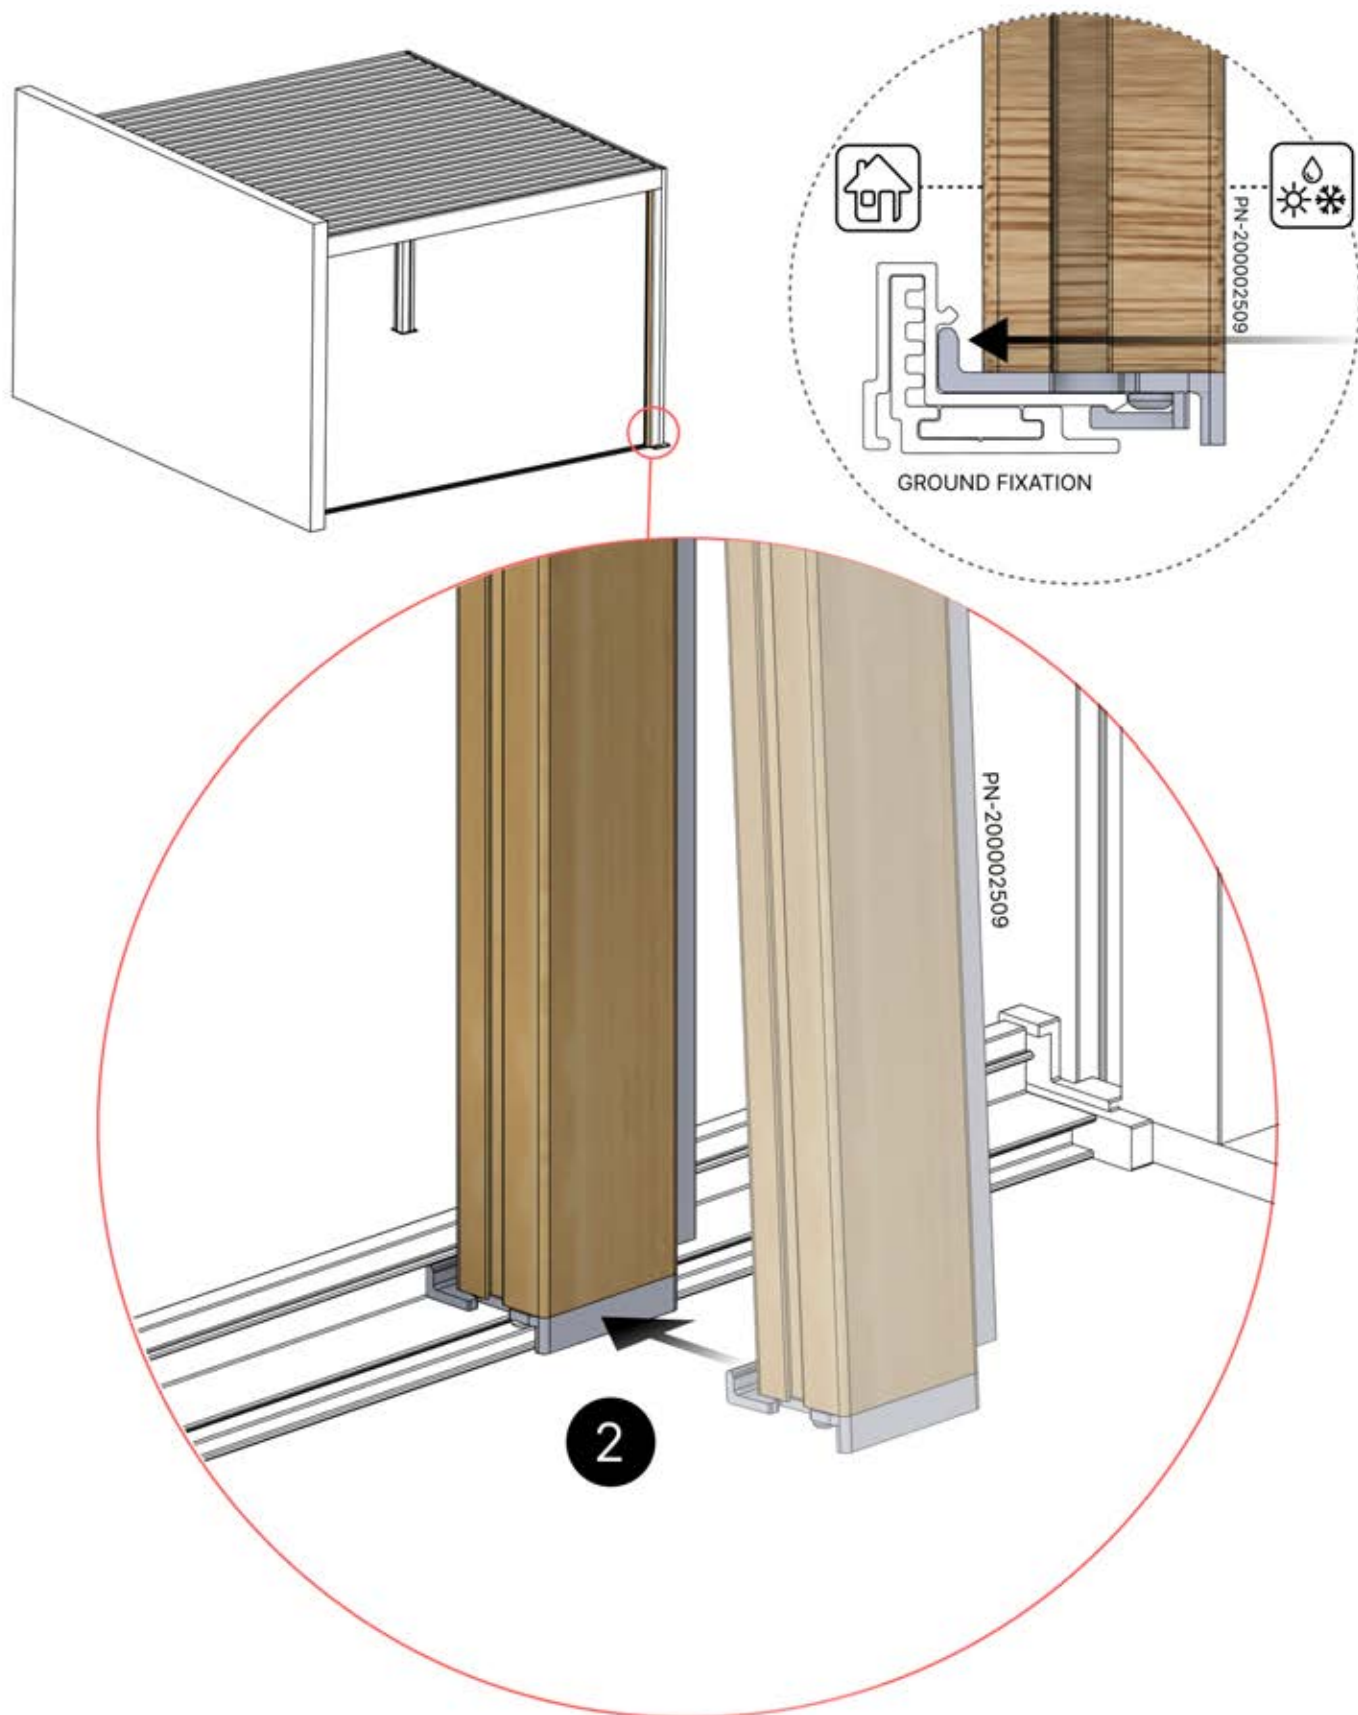


10

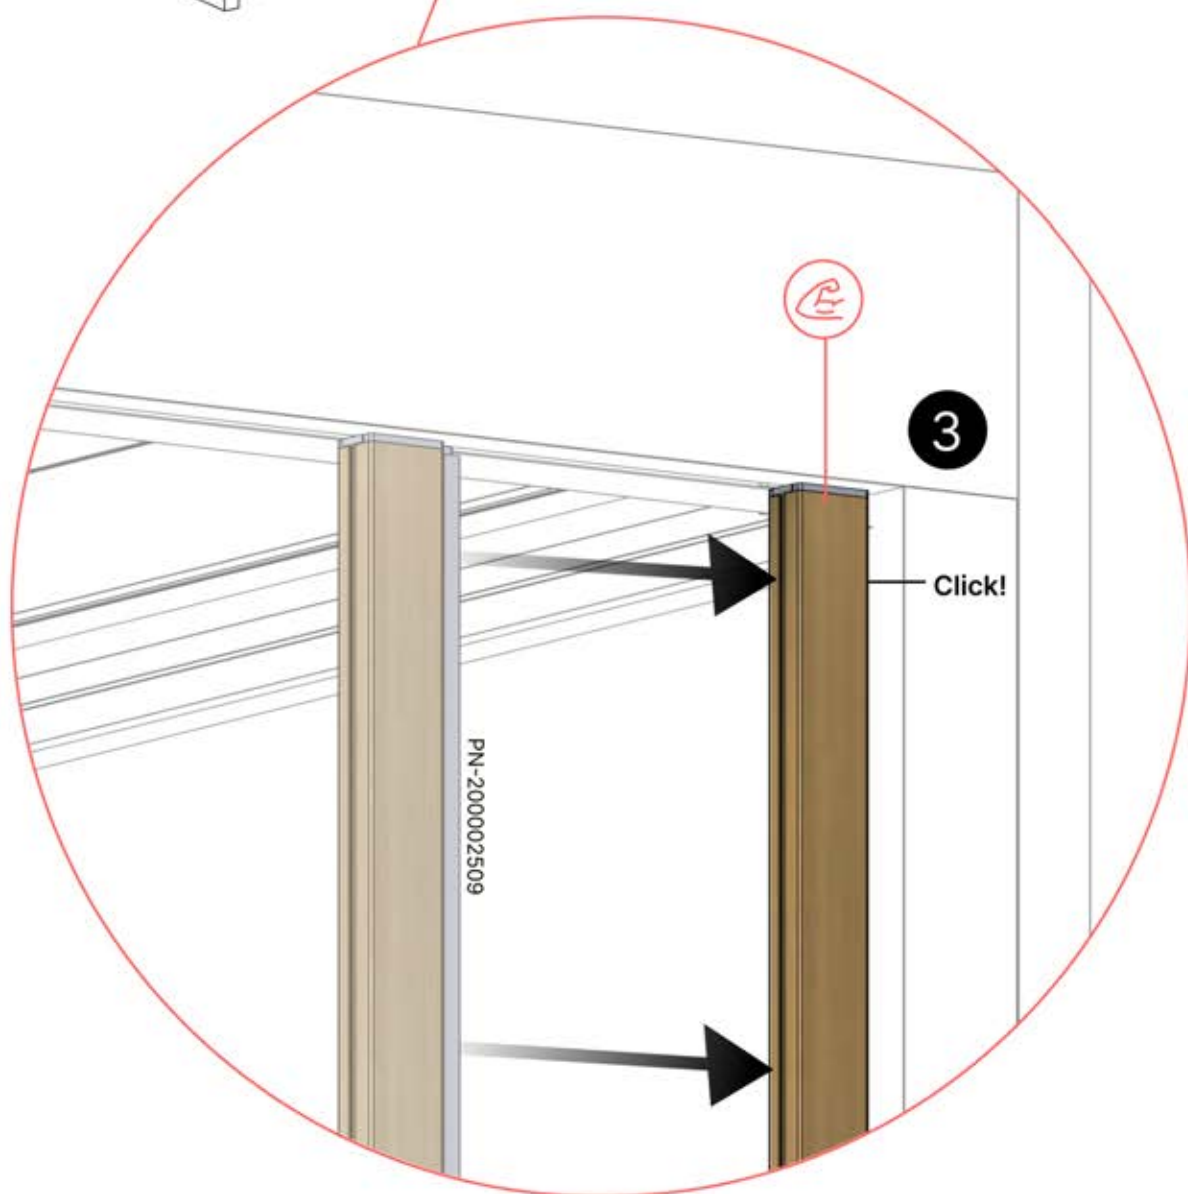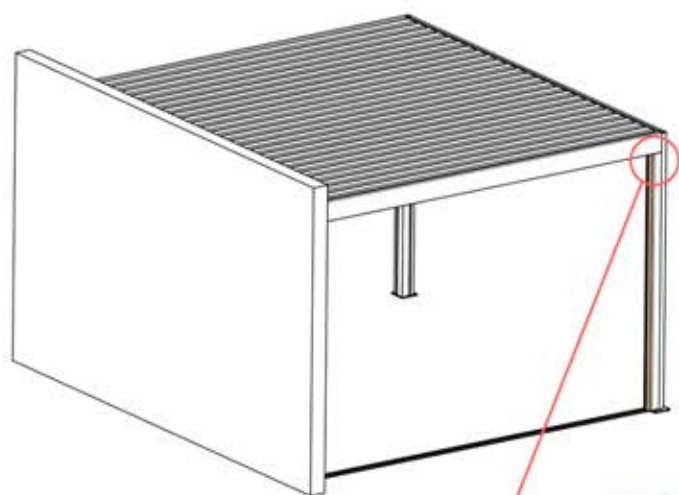




11

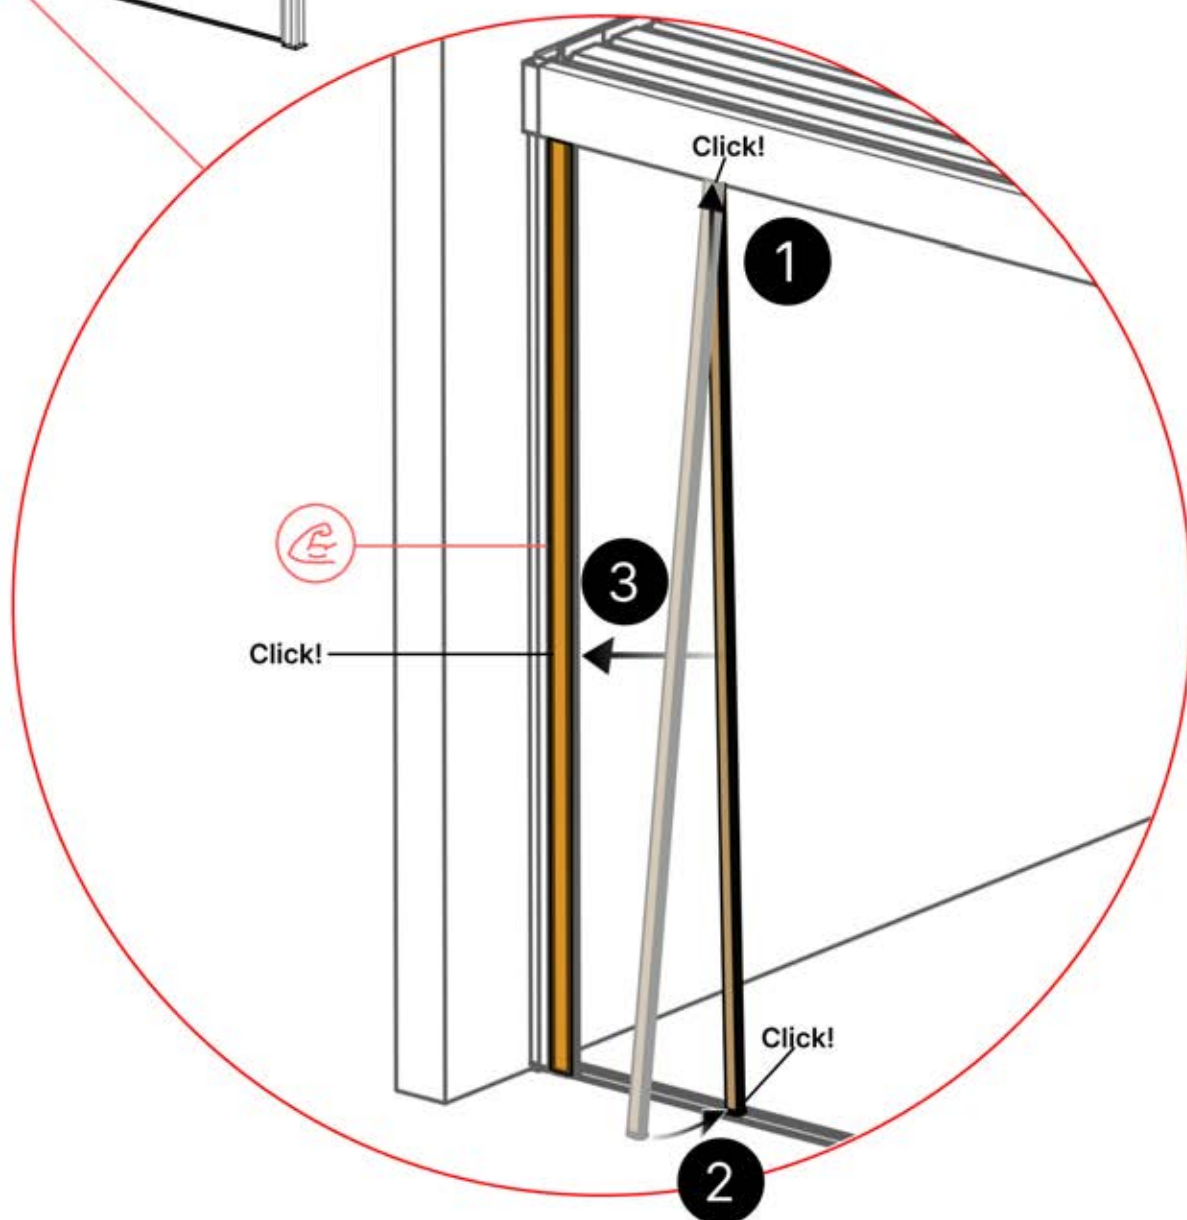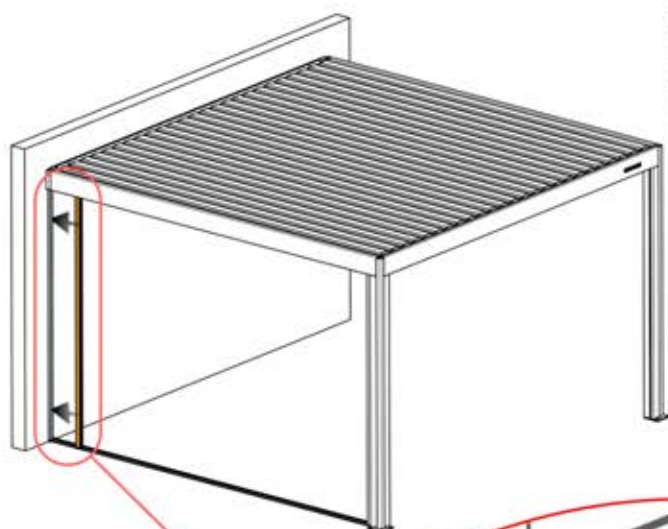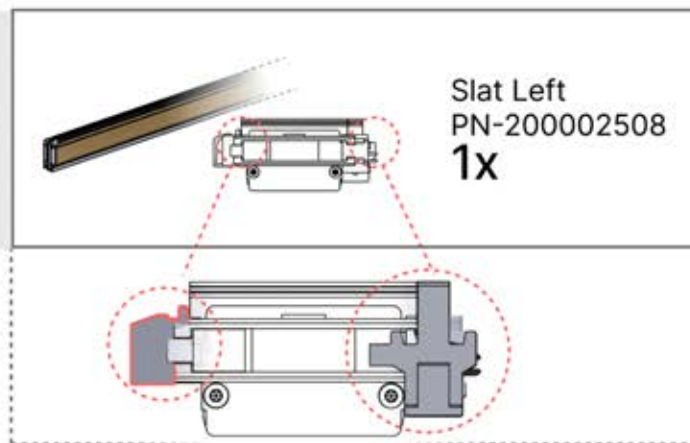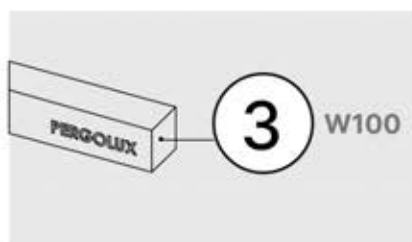




12

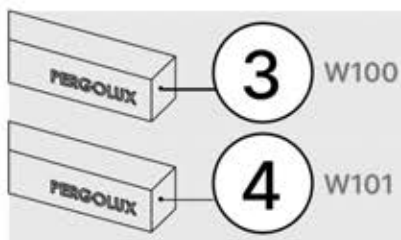



Slat Center
PN-200002507
1x

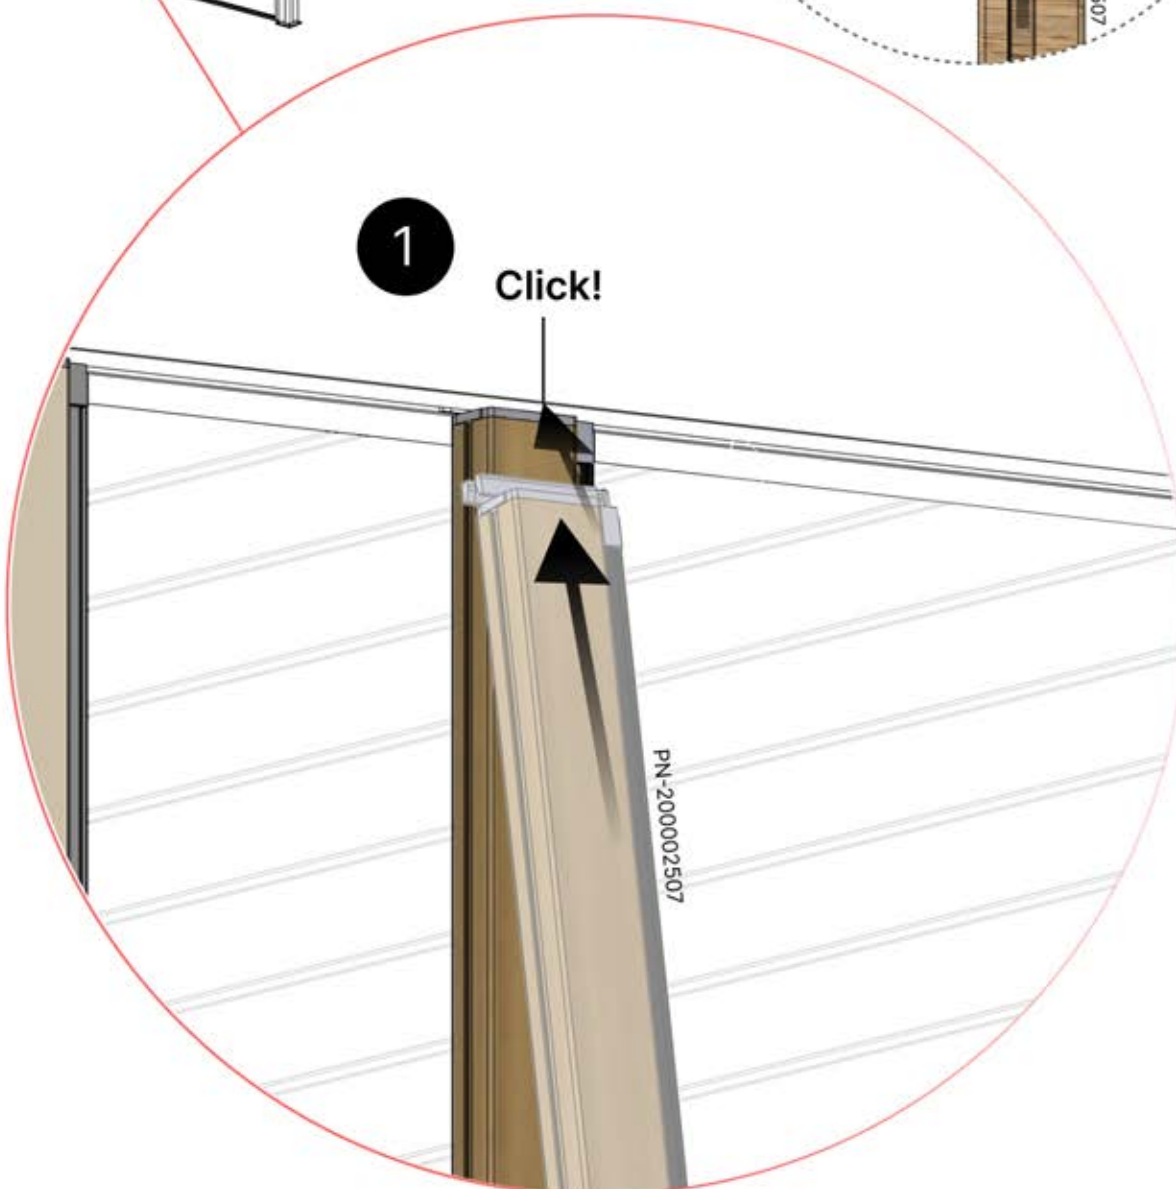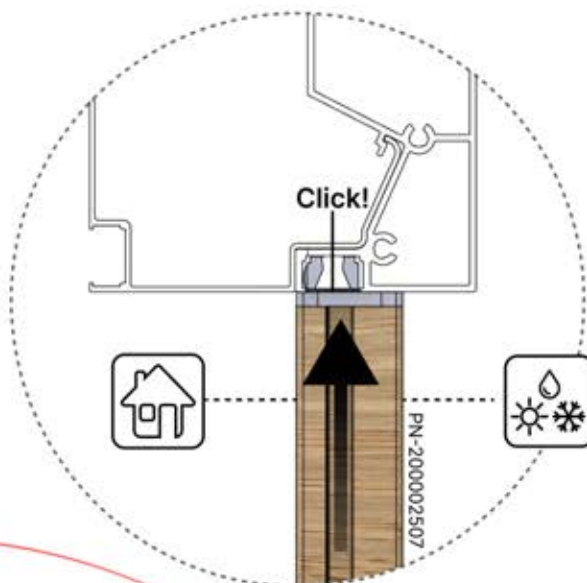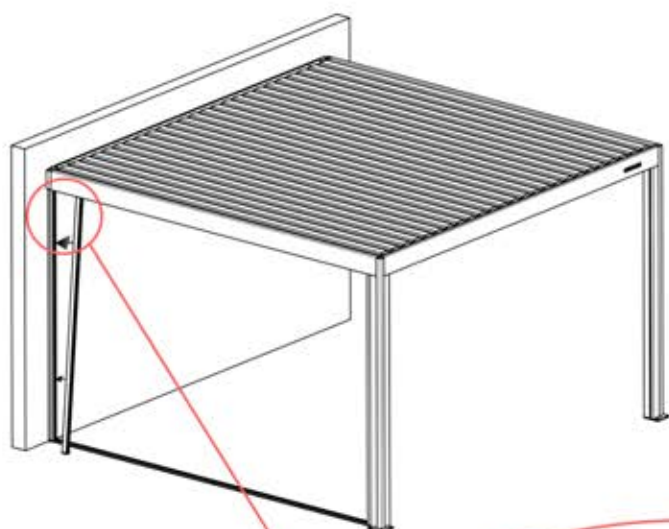




13

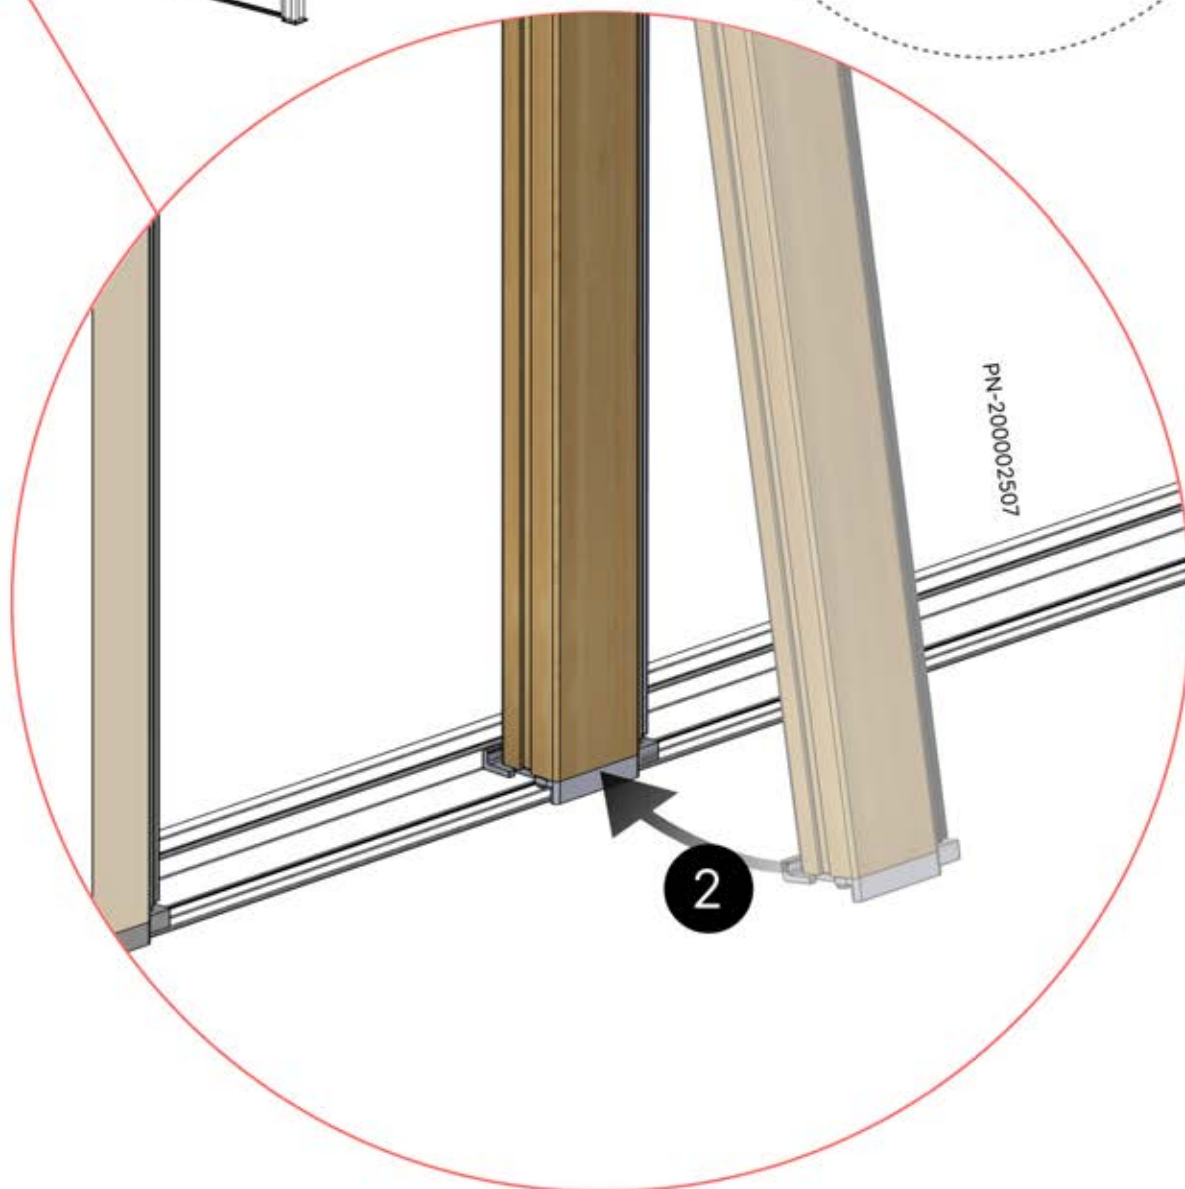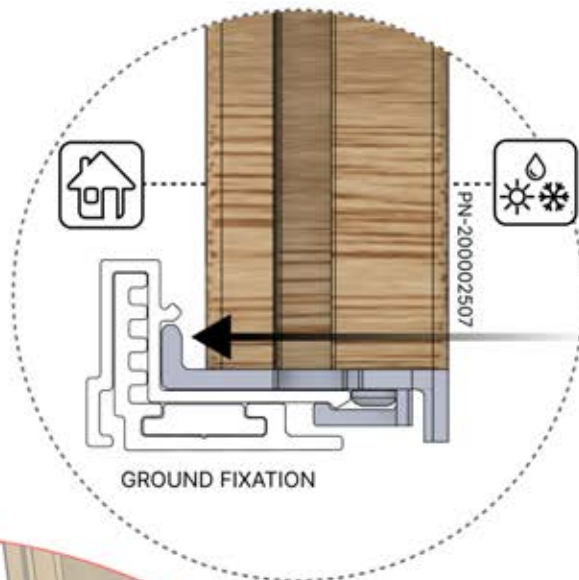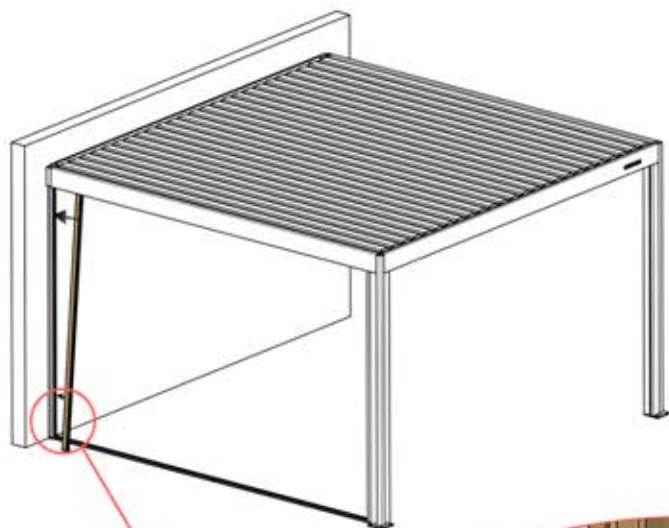




14

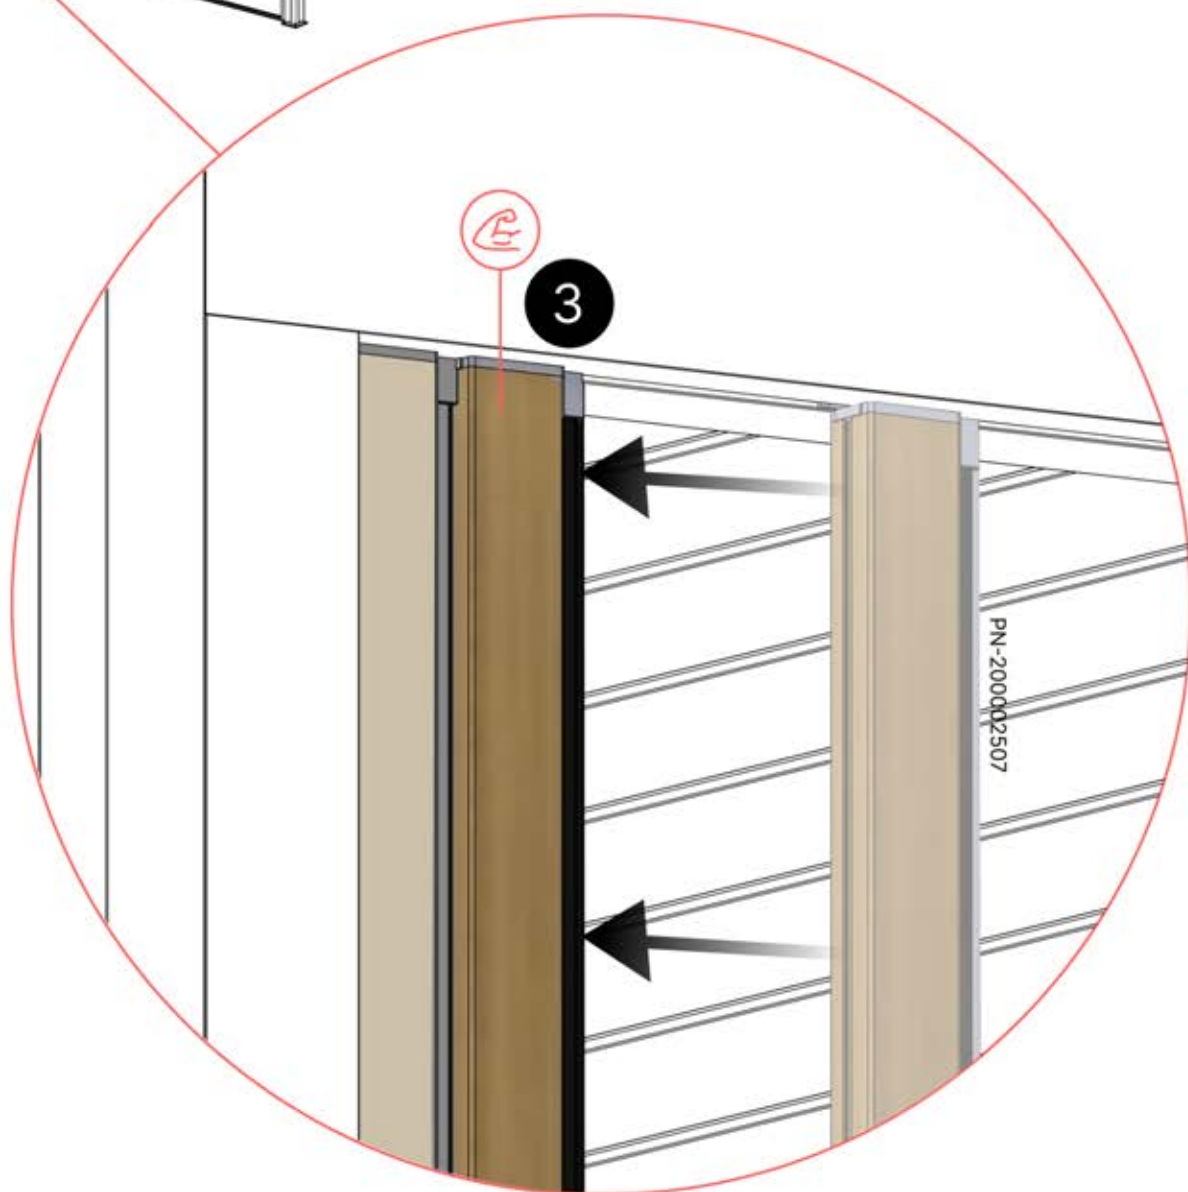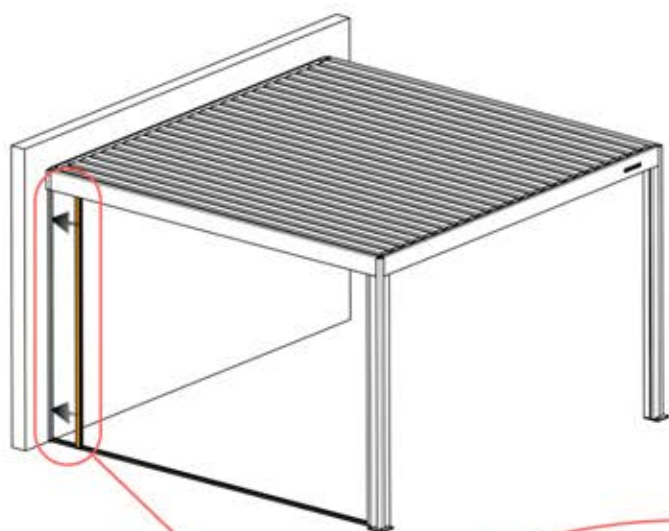



15

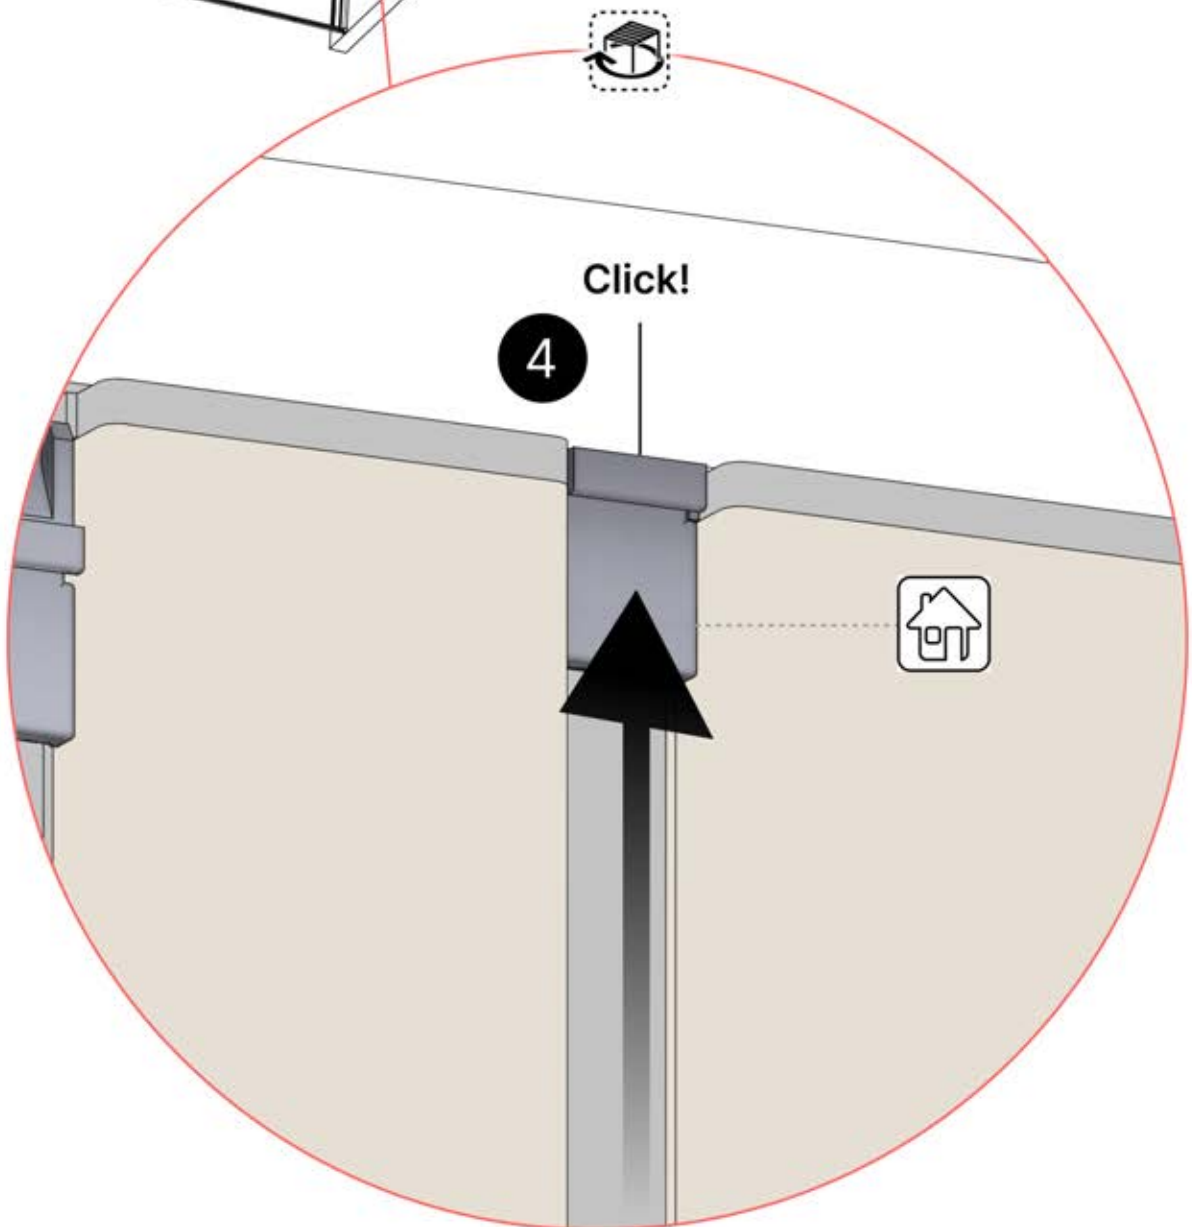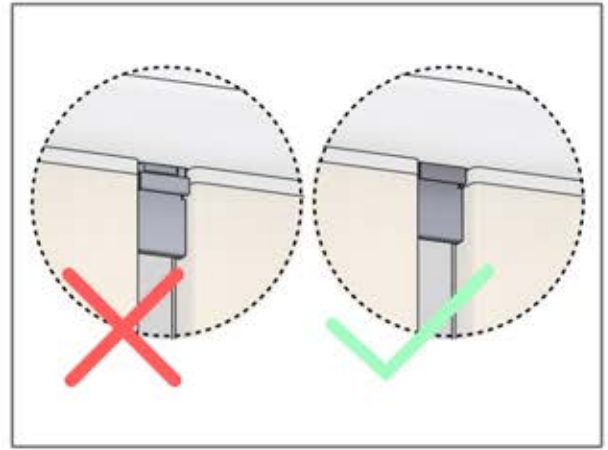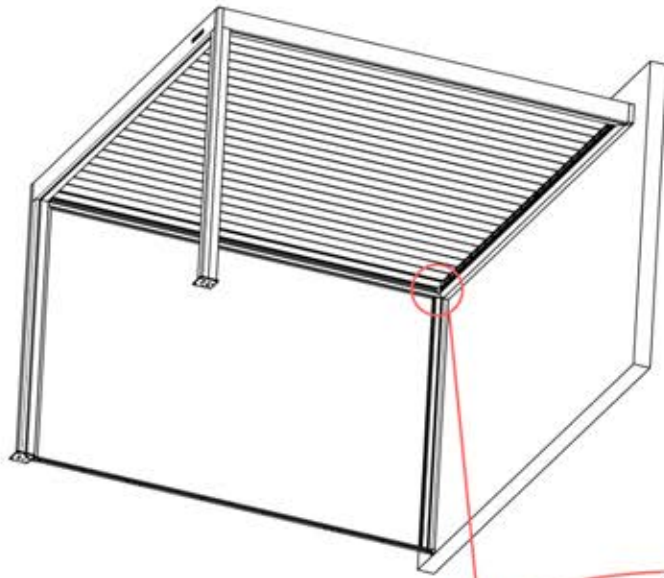




16

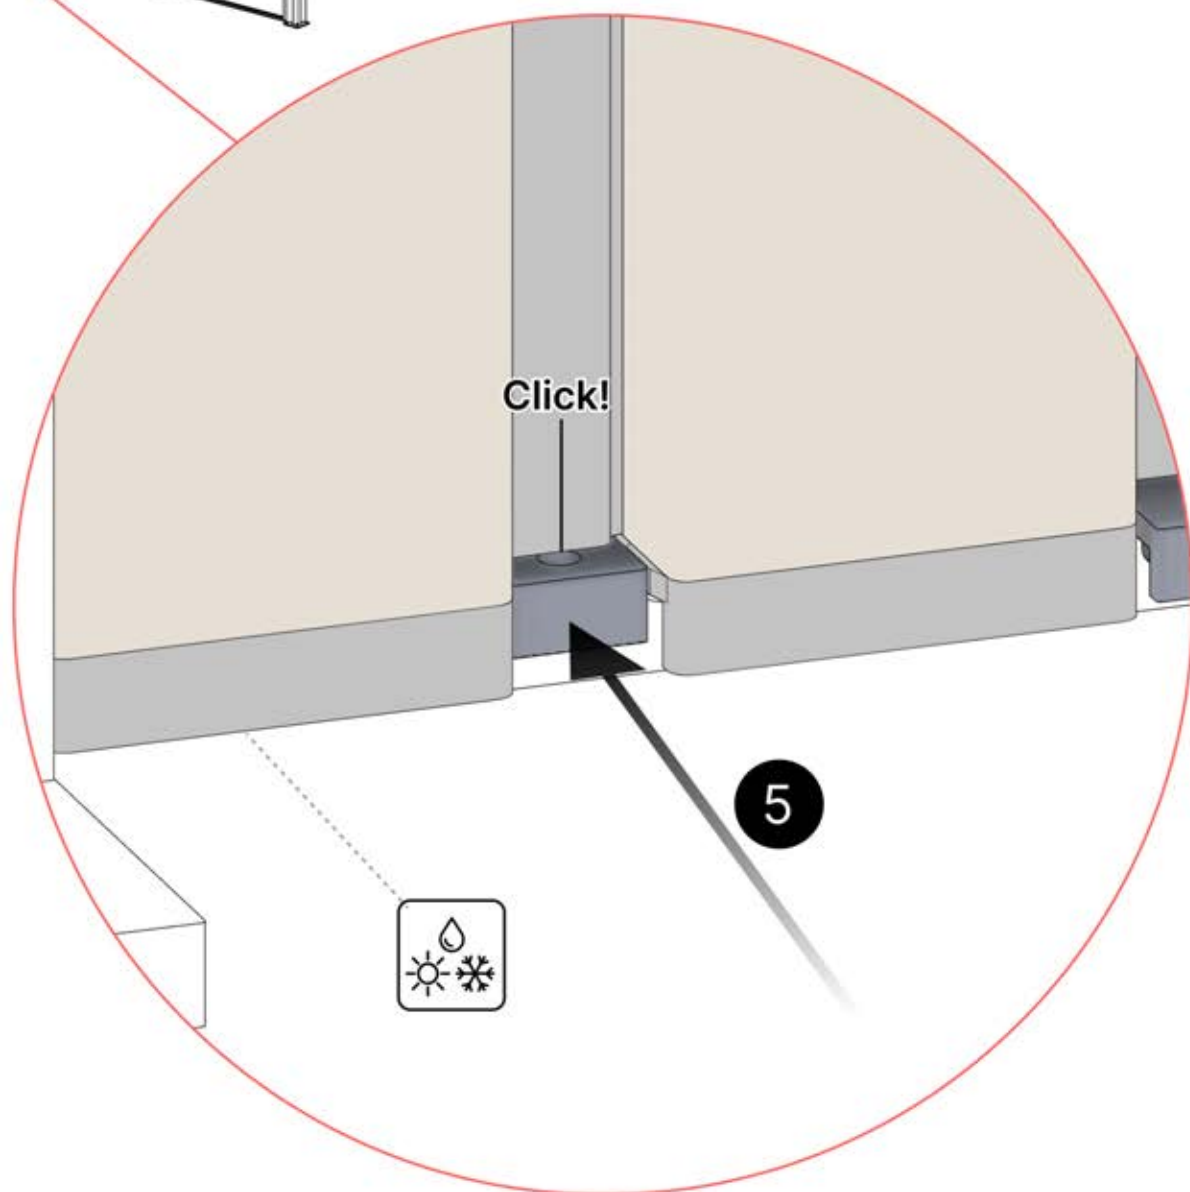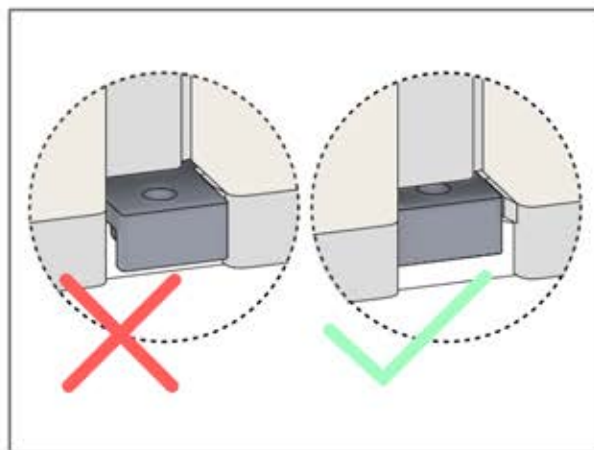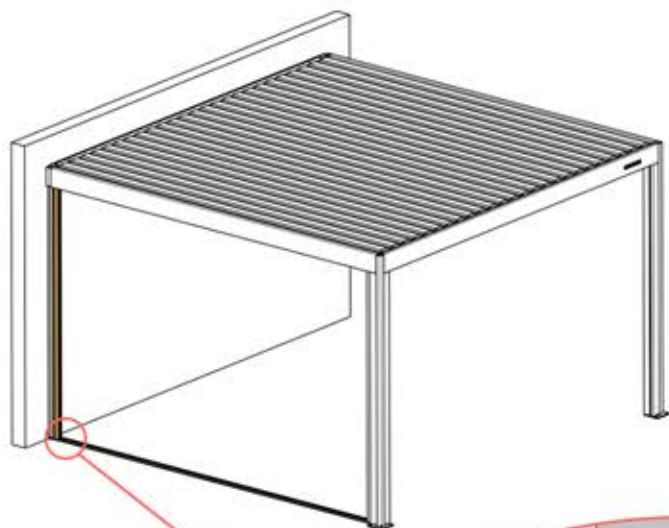

17

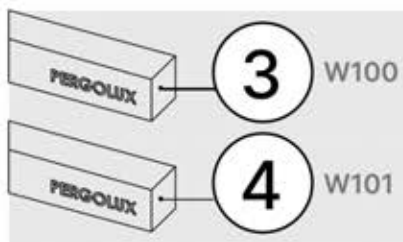



Slat Center
PN-200002507
57x

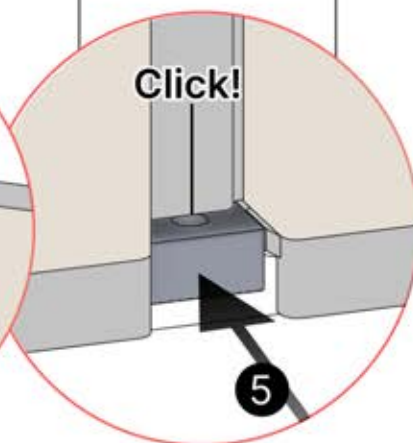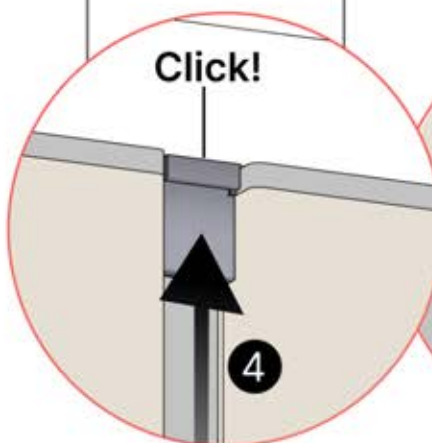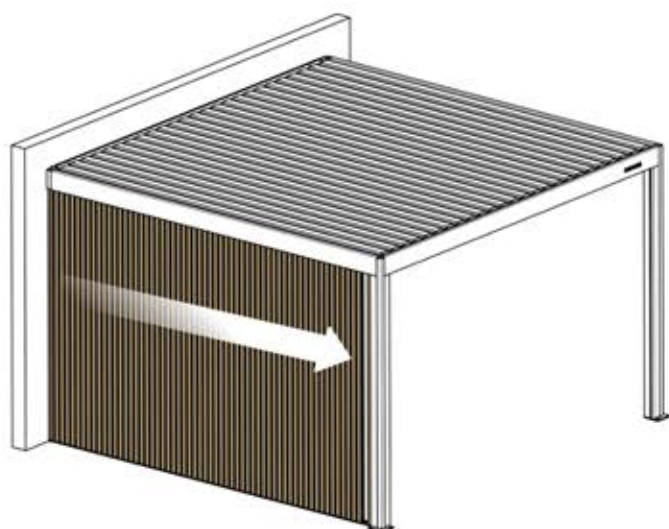





18



The last step can be a bit tricky, we recommend to press all profiles closely together to avoid leaving any gaps, which could prevent the last profile from fitting in place.

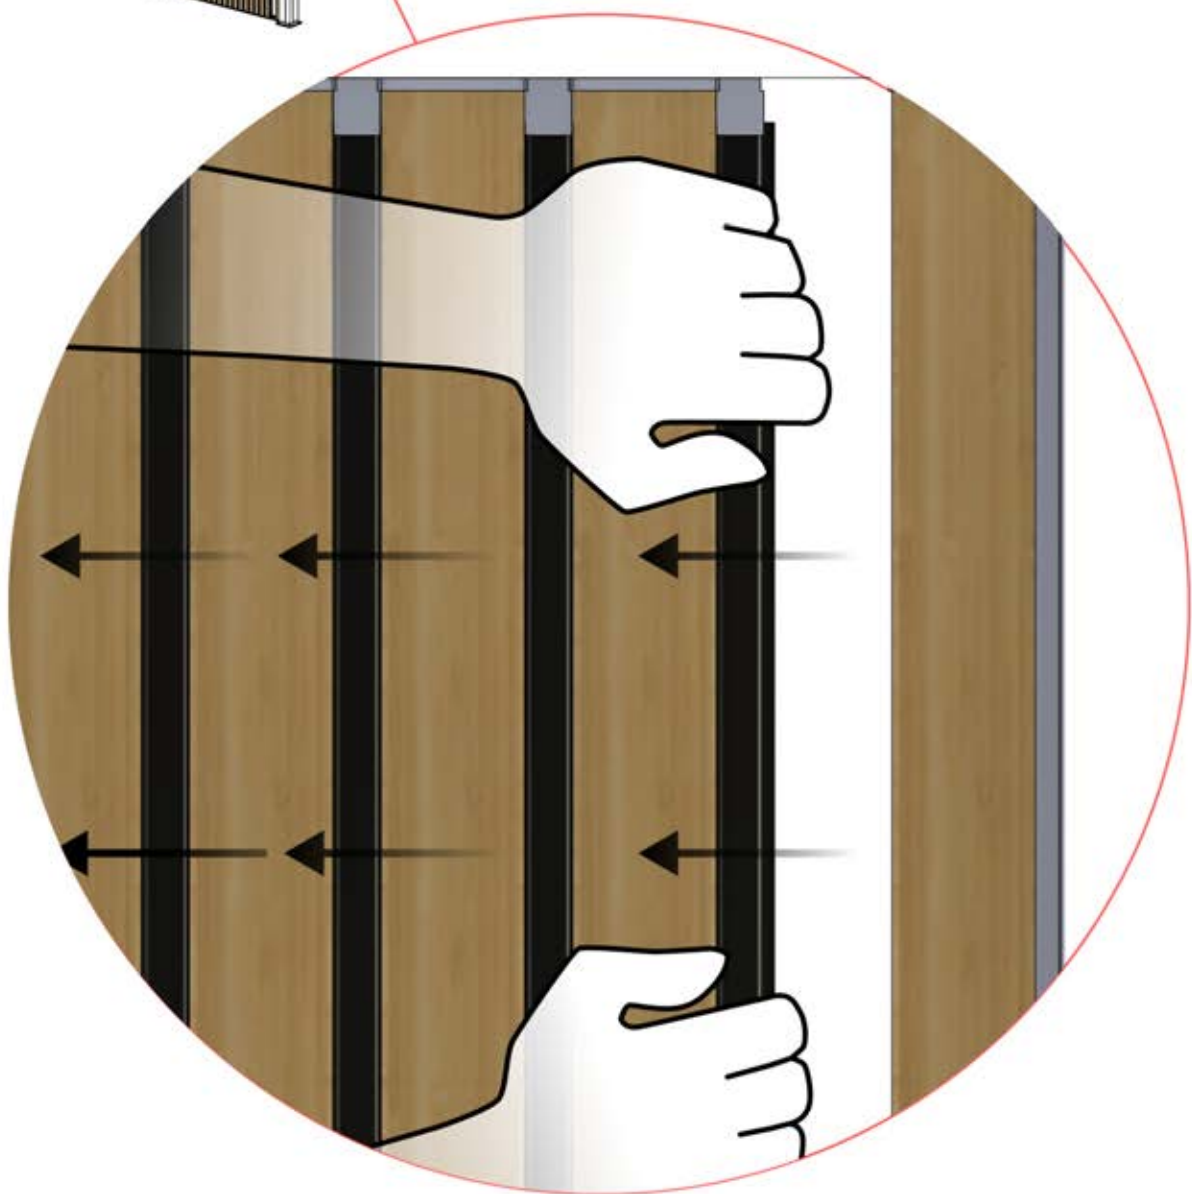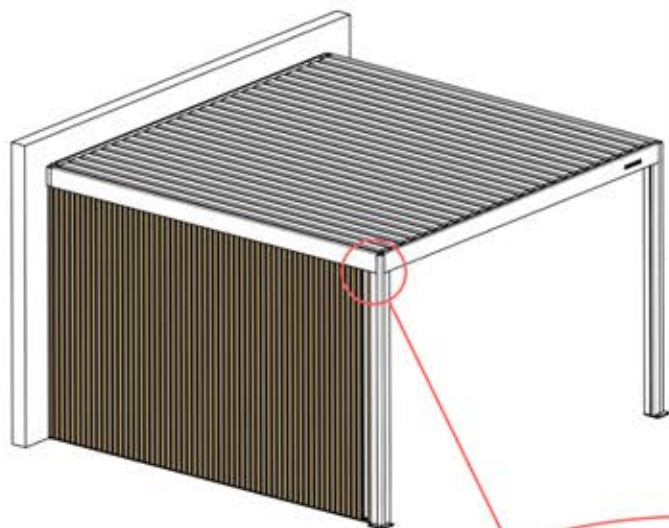




19

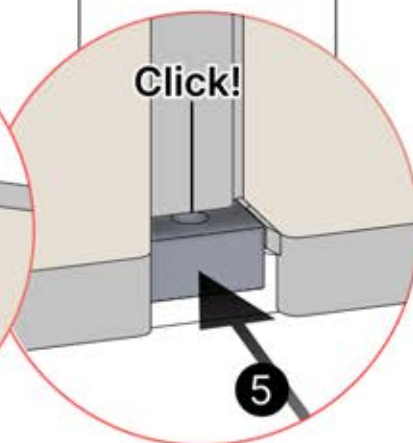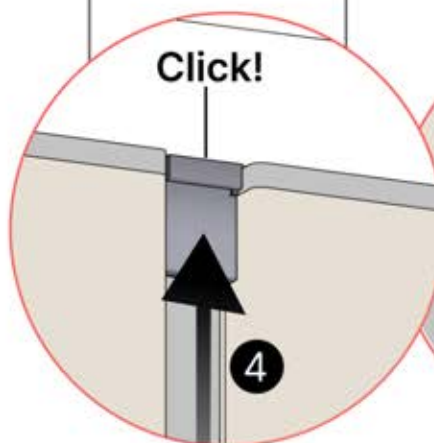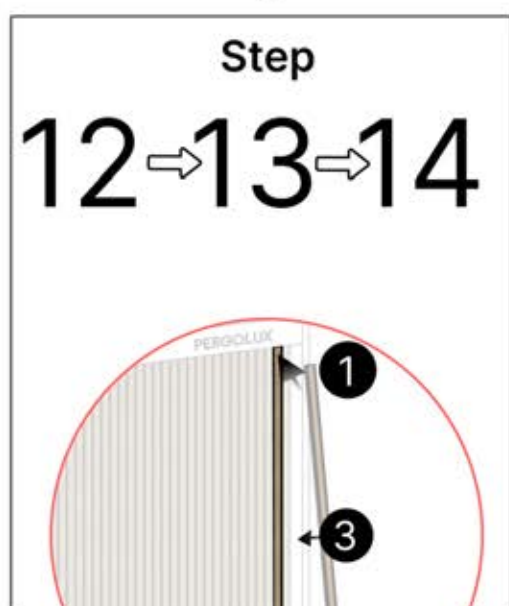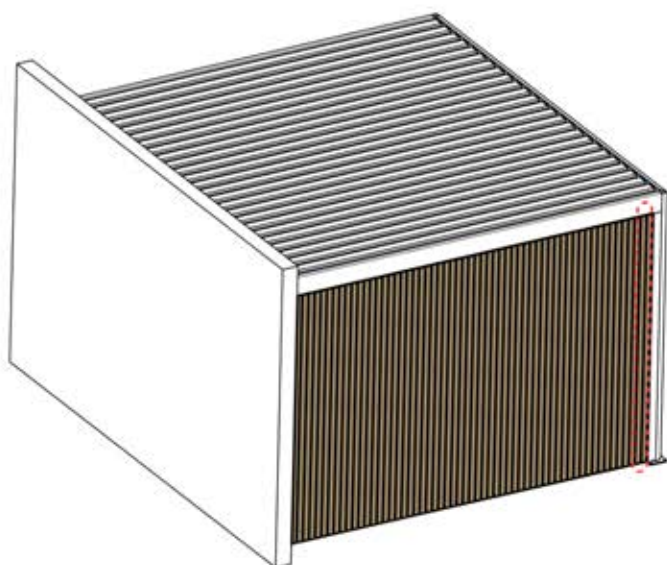






20



Carefully adjust the slats by hand to ensure the gap at the end is even, if necessary.

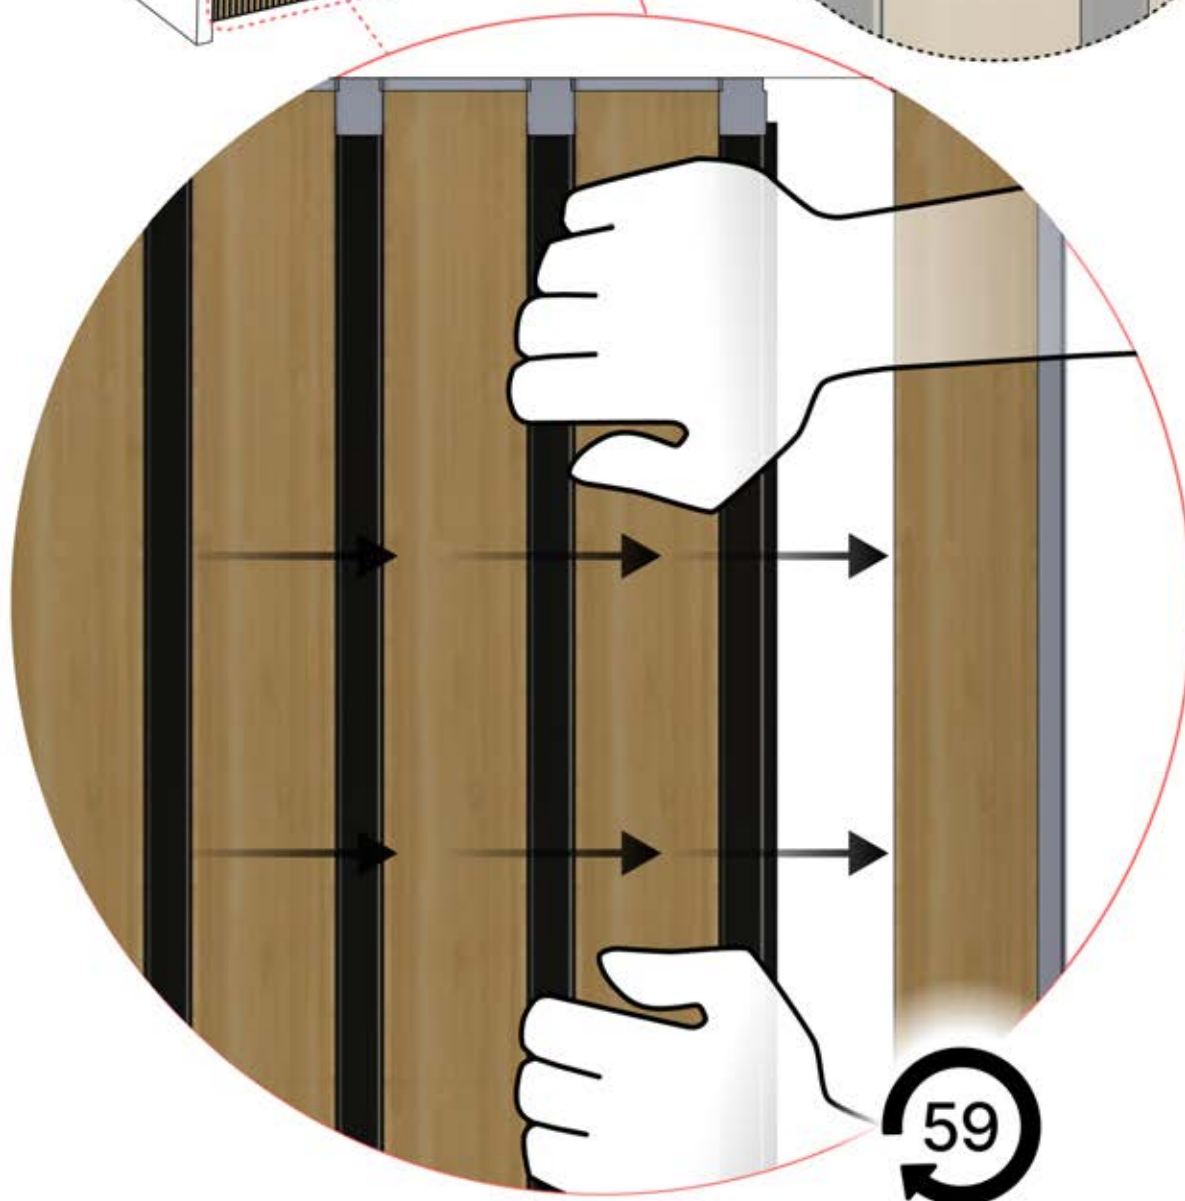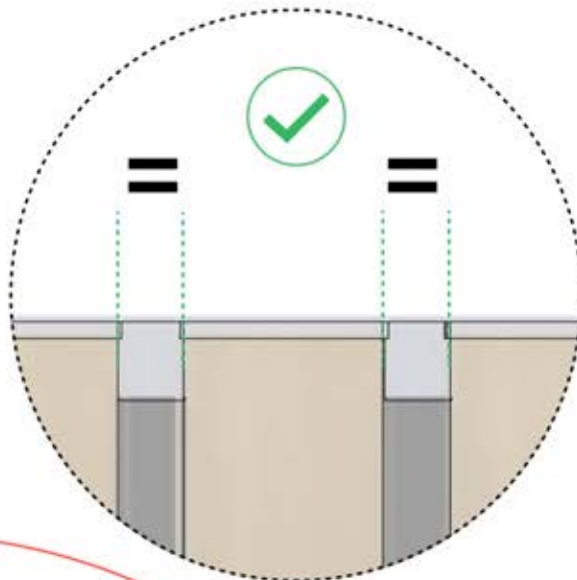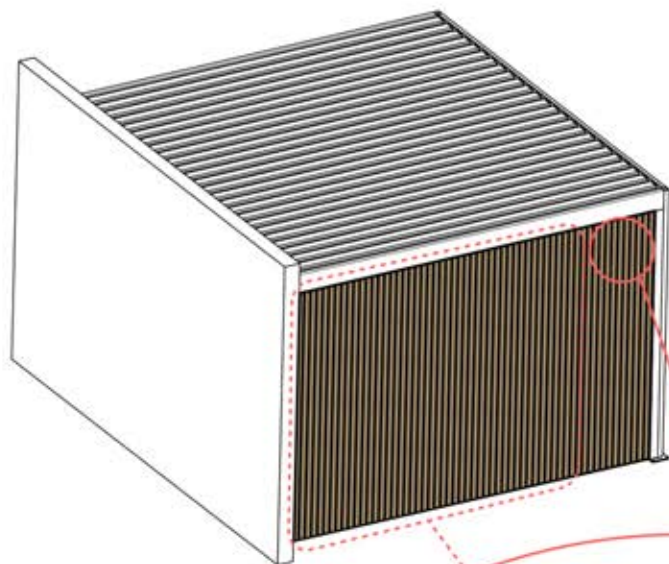


21

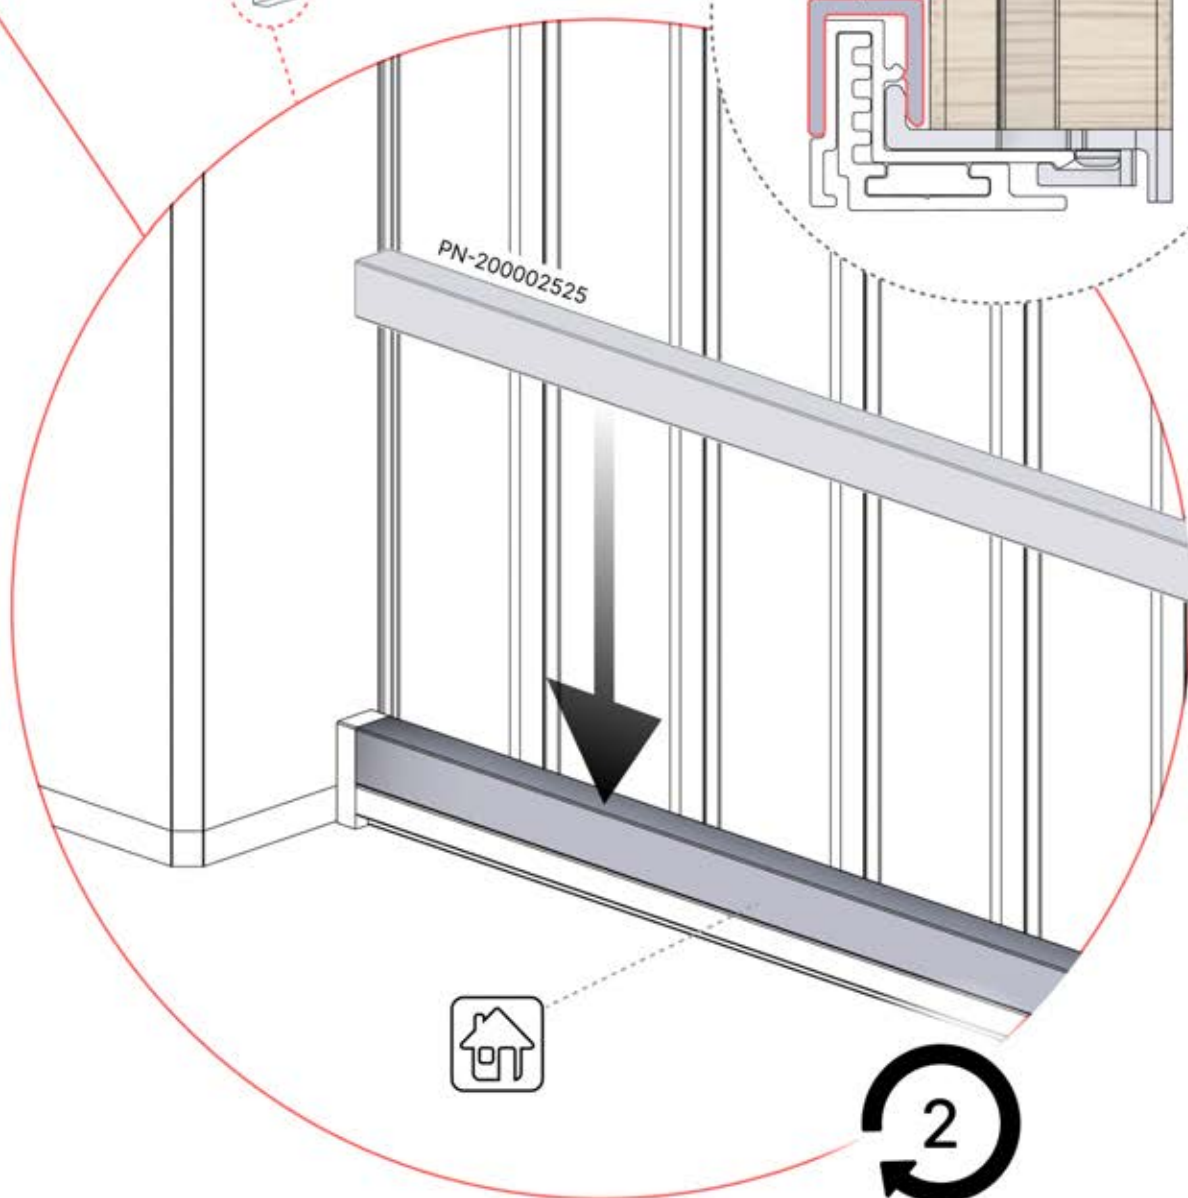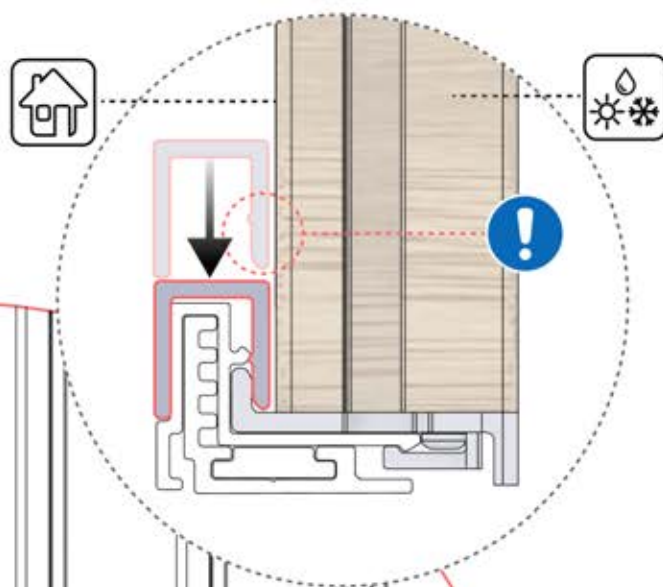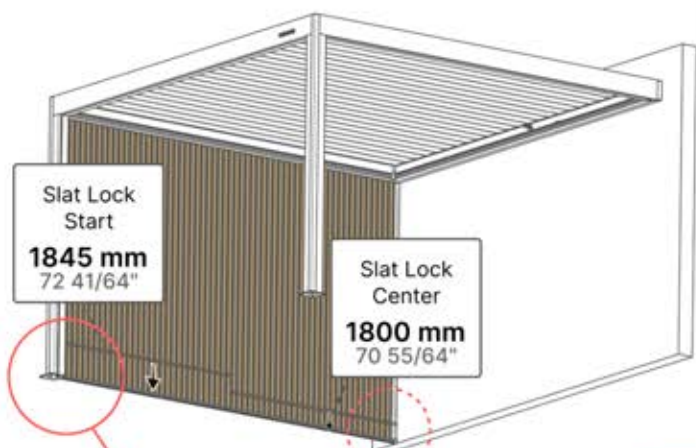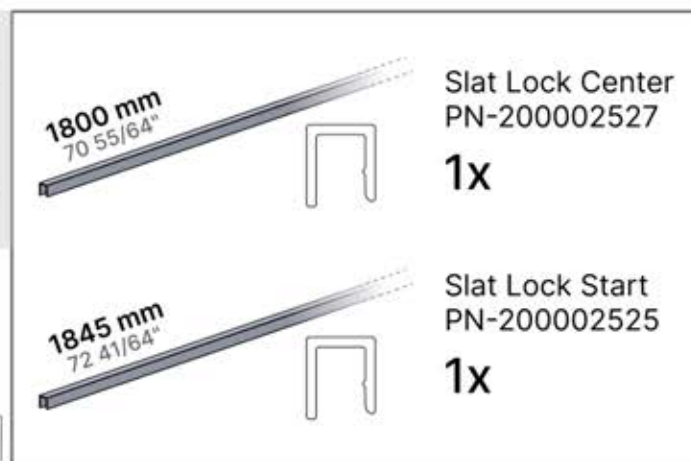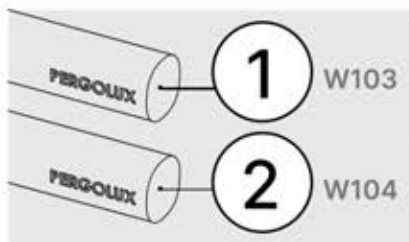

PERGOLUX | SLAT WALL

4 M / 13'

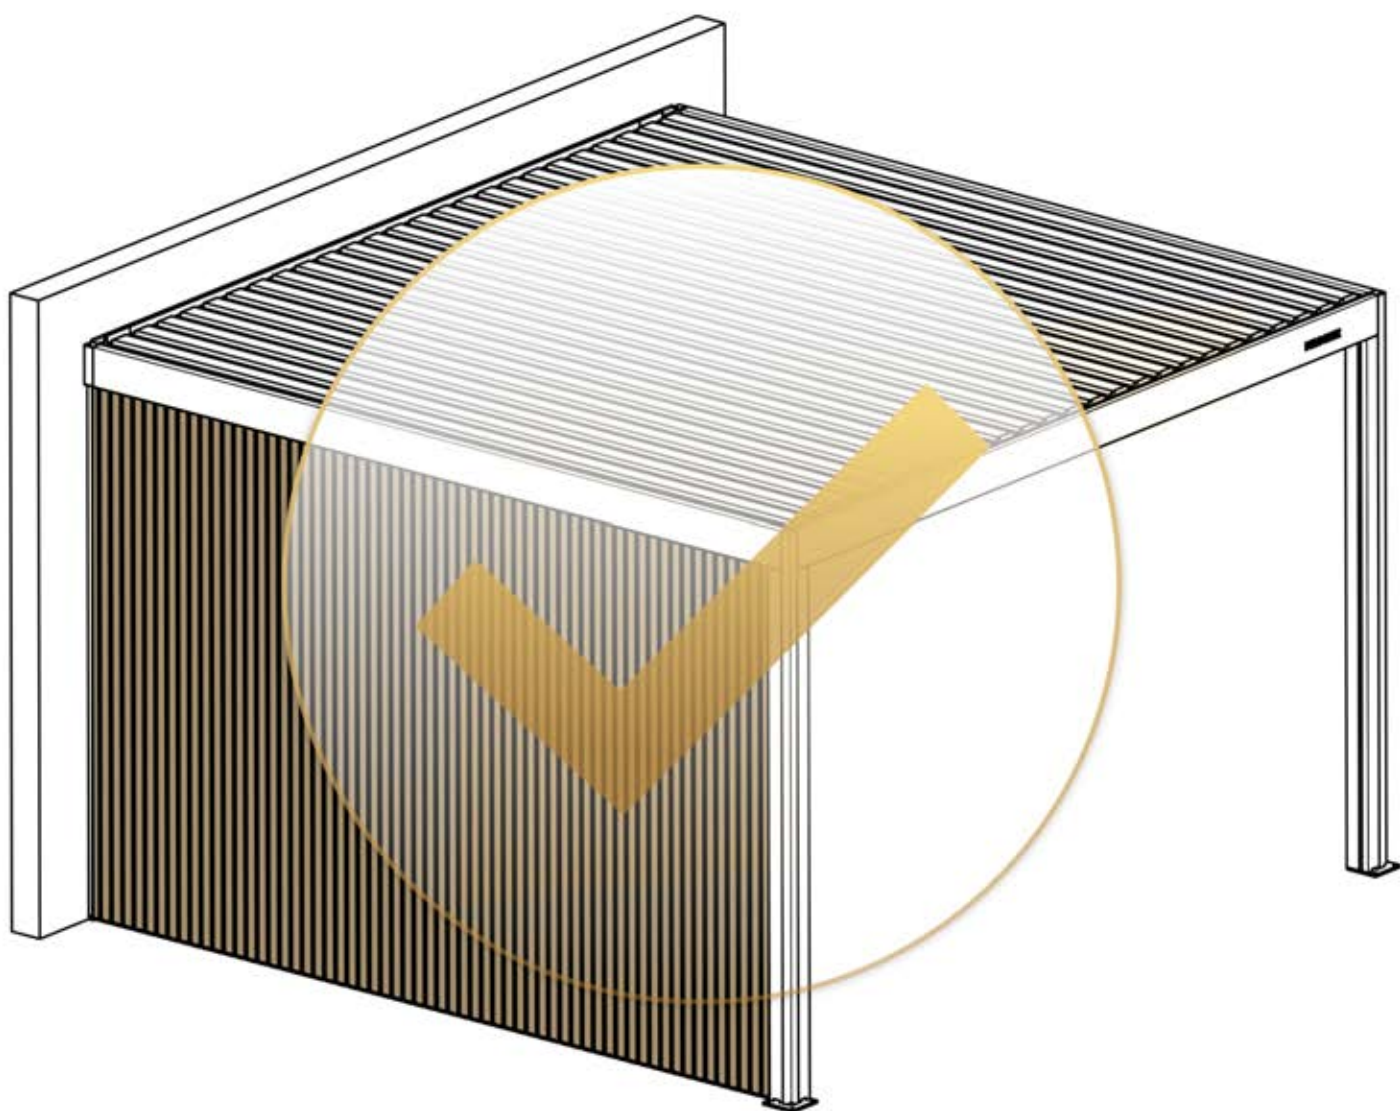

PERGOLUX