



Wellness Suite Installation Guide



Wellness Suite Installation


Step One: Install the Rear Wall Panels

- Identify the short sides of the bases as the front and rear of the booth. Ensure the slats on the bases are facing up.
- Locate the rear wall panels. The right panel is identified by the large cable pass-through hole at the bottom of the panel.
- Stand up the rear panels and attach them to the separate bases using 3 hex screws and washers
- Insert 5 double sided connecting dowels into the left edge of the right rear panel.

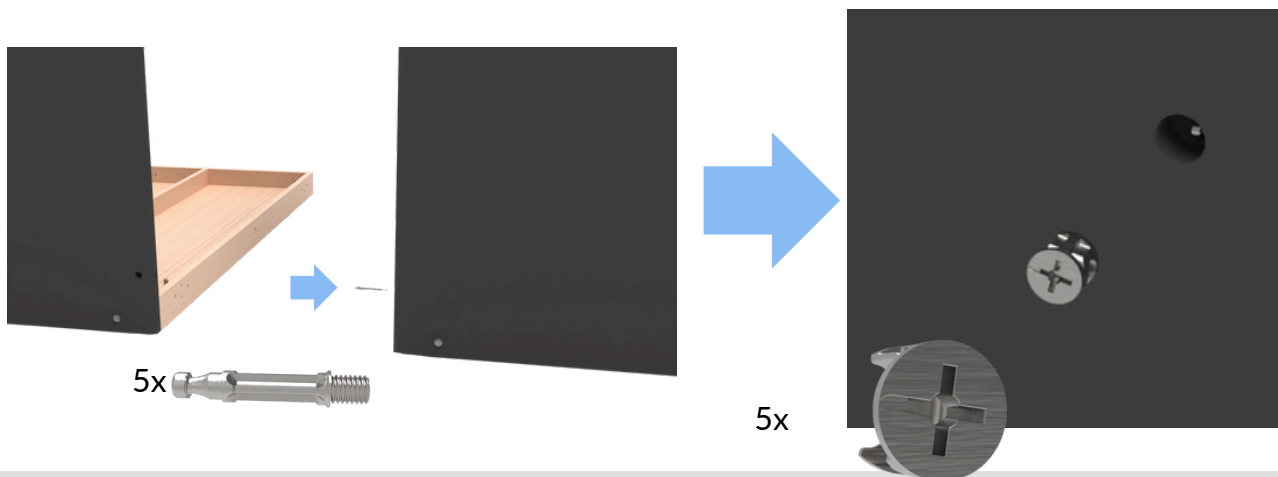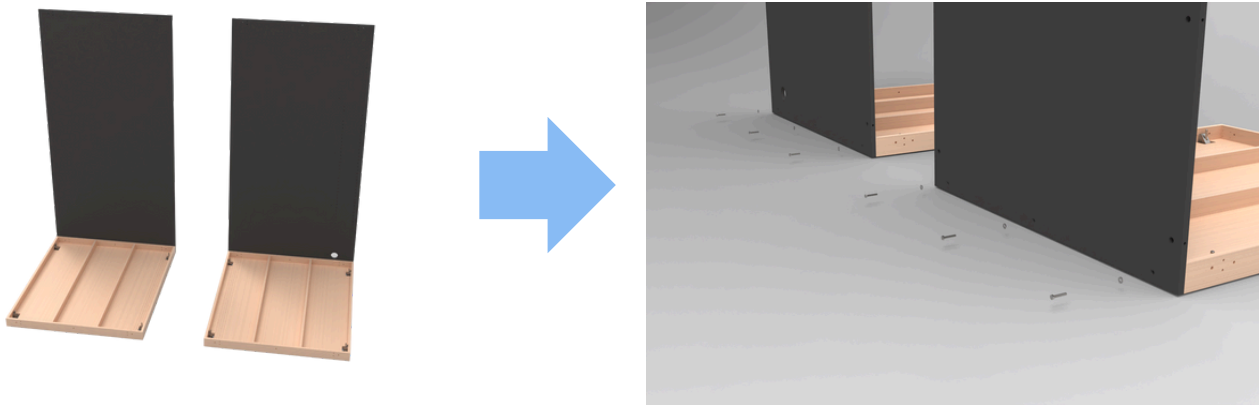



Step Two: Assemble the Bases


- Slide the bases together, inserting the connecting dowels into the left rear panel.
- Using 3 hex screws join the sides of the two bases together.
- Insert 10 cam locks into the rear panels and tighten, securing the joint between the two rear wall panels.
- Place the base in its final location and level the base using the adjustable leveling feet with an allen key. Ensure all 8 leveling feet are touching the ground.

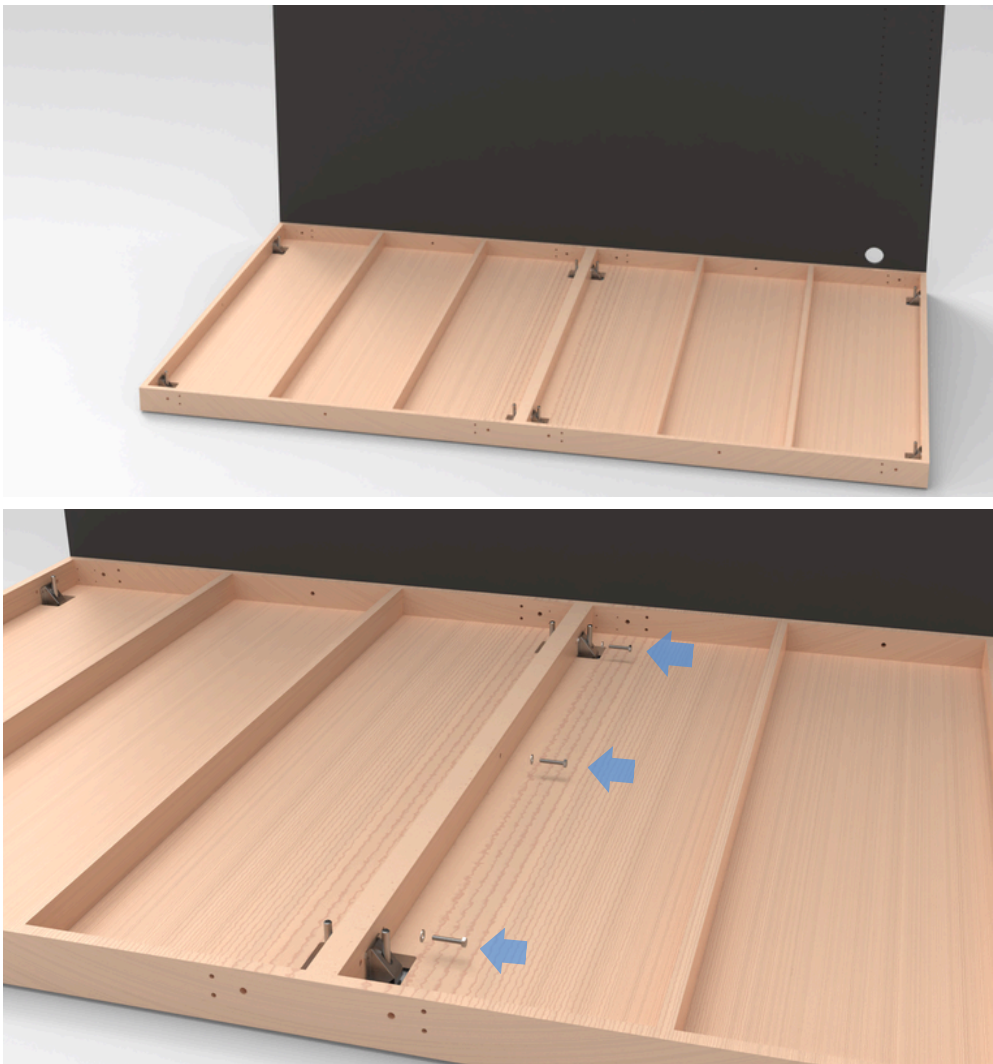

Step Three: Assemble the Left Side Wall

- Identify the left side wall panel by the larger window.
- Thread 5 metal connecting dowels into the left side wall panel.
- Align the connecting dowels with the left rear wall panel and slide the left side wall panel into place.
- Attach the left side wall panel to the base with 3 hex screws and washers.
- Insert 5 cam locks into the left rear wall panel and tighten.

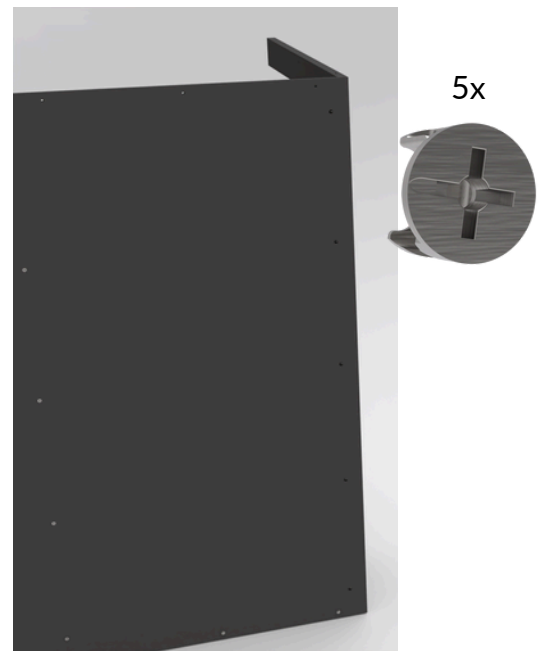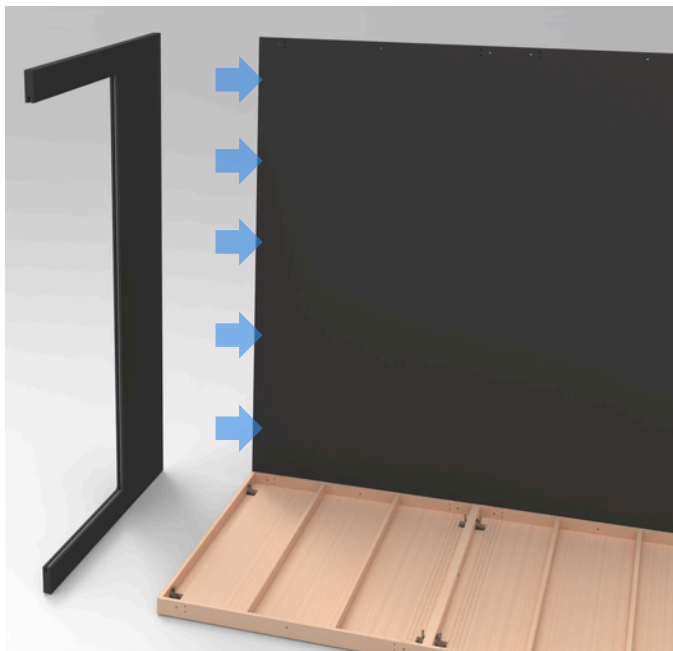

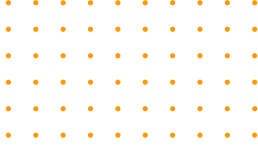



Step Four: Assemble the Right Side Wall

- Identify the right side wall panel by the smaller window and closet door opening
- Thread 2 metal connecting dowels into the right side wall panel.
- Align the connecting dowels with the right rear wall panel and slide the right side wall panel into place.
- Attach the right side wall panel to the base with 3 hex screws and washers.
- Insert 2 cam locks into the right rear wall panel and tighten.




Step Five: Build the Closet


- Identify the rear wall of the closet by the halo generator hole and the left wall of the closet by the small shelf mounting holes.
- Thread 5 metal connecting dowels into the left wall of the closet.
- Align the dowels and connect the left wall to the rear wall of the closet at a right angle.
- Install 5 cam locks into the rear wall and tighten.

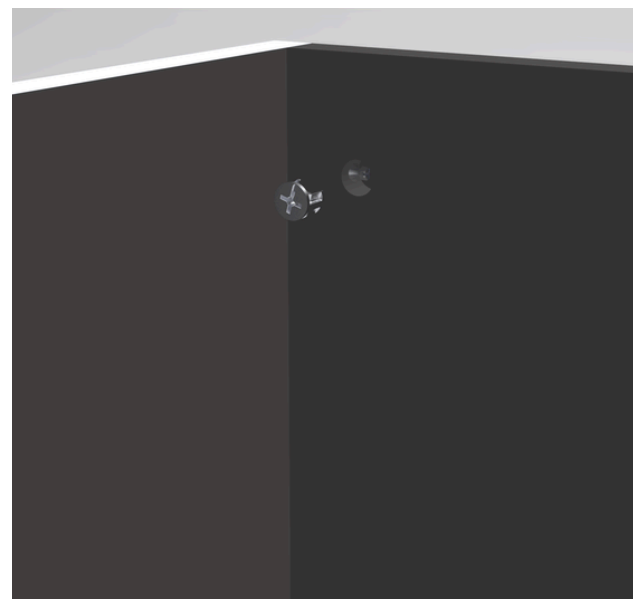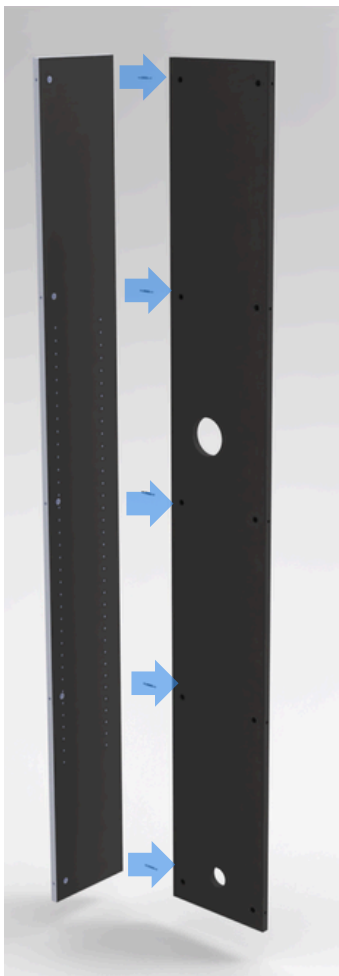

5x

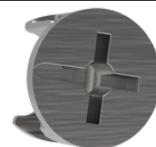


5x 

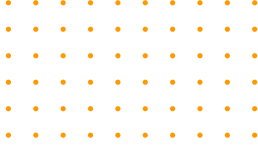

Step Six: Install the Closet



- Thread 5 metal connecting dowels into the right side wall panel, next to the closet opening.
- Align the connecting dowels with the left wall of the closet and slide the closet assembly into place.
- Use 5 hex screws and washers to secure the closet assembly to the right rear wall panel.
- Install 5 cam locks into the left closet wall panel and tighten




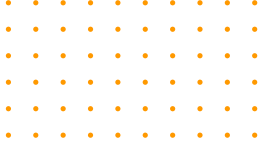

Step Seven: Install the Closet Door


- Install two fixed mounting plates to the enclosure, and separate hinges to the door, then click the door assembly onto the mounting plates. Do not use the middle hinge mounting location
- Ensure the door is level and aligned with the adjacent panels, leaving a consistent panel gap all around. adjust the hinges as necessary using the adjustment screws.
- Install the door handle using the included hardware

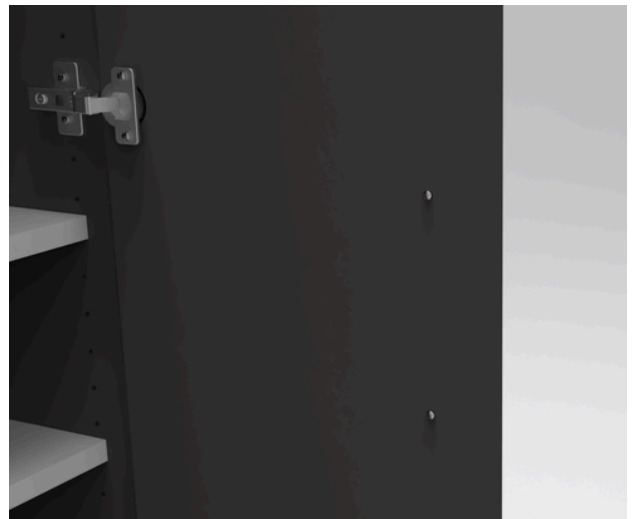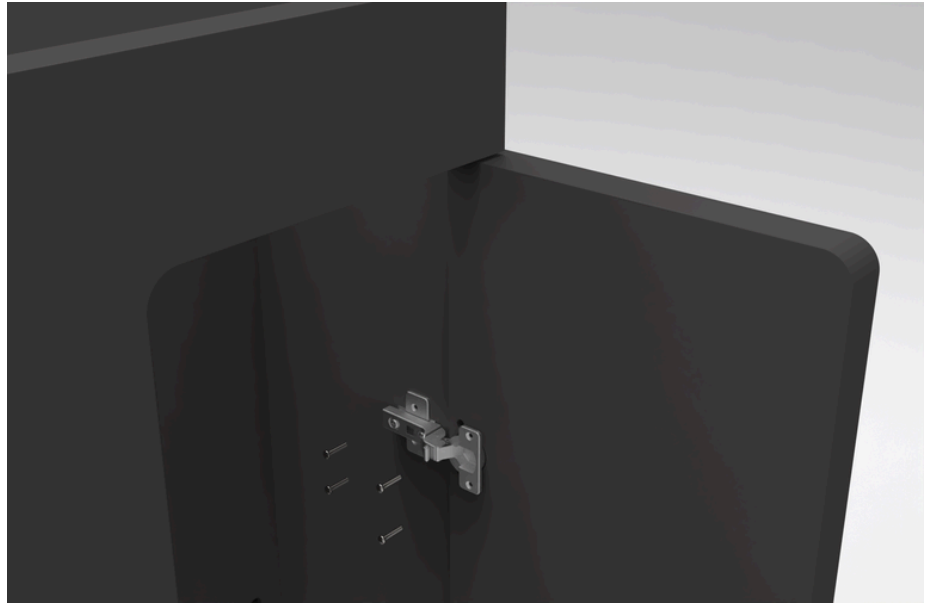

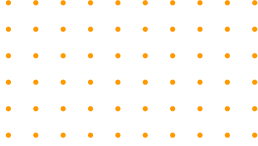

Step Eight: Install the Roof


- Note the “front” labels on the roof panels, the right roof panel has the cable opening which sits over the closet. Ensure the side wall LED wiring is passed through the roof cutouts during installation.
- Insert dowels into the sides of the right roof panel and the top of the left side wall.
- With an assistant, lift the right roof panel in place and attach to the rear and right walls with 3 hex screws and washers each.
- With an assistant, lift the left roof panel in place and secure it to the rear wall, left wall, and right roof panel with 3 hex screws and washers each.

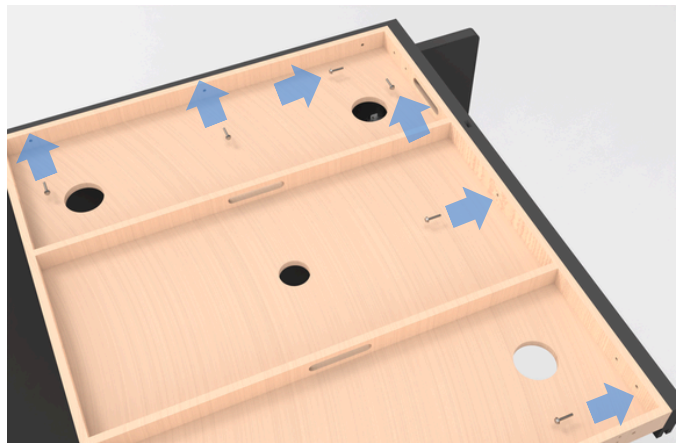

Step Nine: Install the Side Glass


Handle the glass with care, and never place it directly on a hard surface without protection.


- Identify the two side glass panels by their two notched corners, which will face the front of the enclosure.
- The narrow panel goes on the right side, and the wide panel goes on the left side.
- Using caution, slide the glass into the grooves in the side wall panels.
- Once the glass is in place, press the rubber window gaskets into the groove on the interior of the glass.

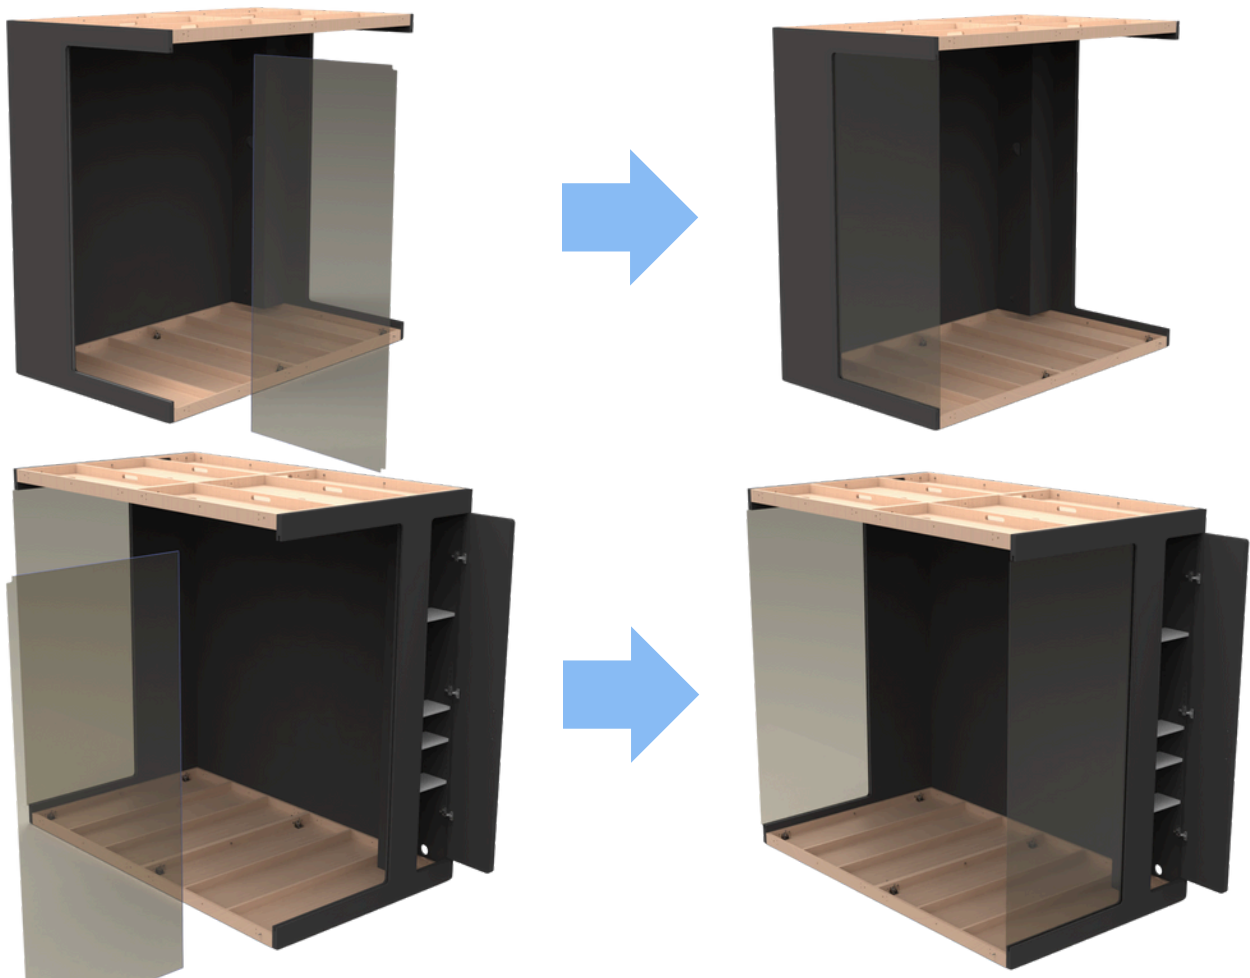

Step Ten: Install the Lower Beam

- Install 4 dowels in the front of the base and roof and 4 dowels on the front of each side panel.
- Identify the lower beam labeled "LOWER"
- Ensure the slot in the lower beam is facing up.
- Align the lower beam with the dowels.
- Secure the lower beam in place with 6 hex screws through the base.

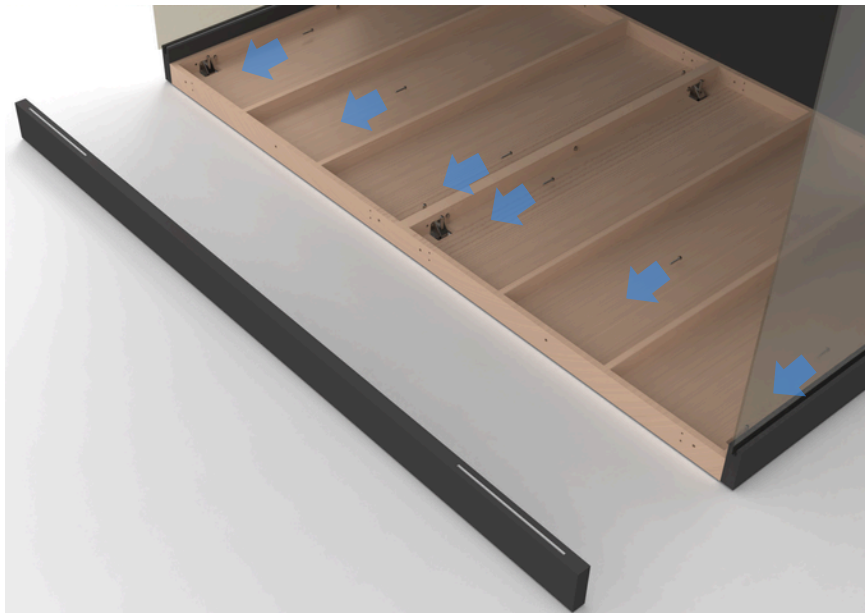


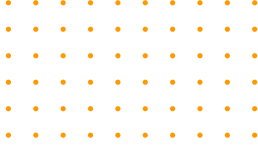


Step Eleven: Install the Floor

Recheck level and adjust as necessary before installing floor panels.


For loose salt crystals:

- Install the solid finished wood panel. (Salt will be added after assembly is complete) For finished wood:
- Install the ribbed flooring spacer.
- Install the solid finished wood panel on top of the spacer.

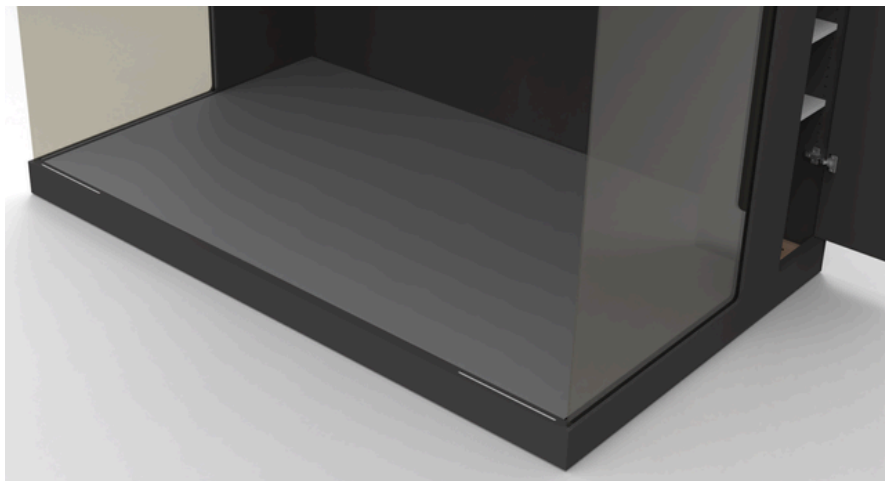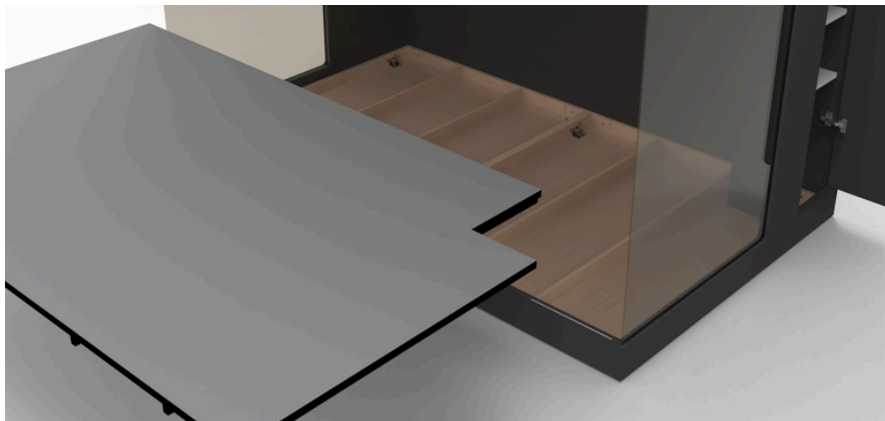

Step Twelve: Install the Fixed Glass


- Identify the fixed glass as the narrow panels with 3 hinge cutouts.
- Carefully insert the bottom of the 2 fixed glass panels into the slot in the lower beam.
- Install the upper beam, aligning the upper beam with the roof dowels and the fixed glass and install 6 hex screws through the roof into the upper beam.
- Tighten the upper beam bolts, ensuring the fixed glass is aligned with the right side wall glass.

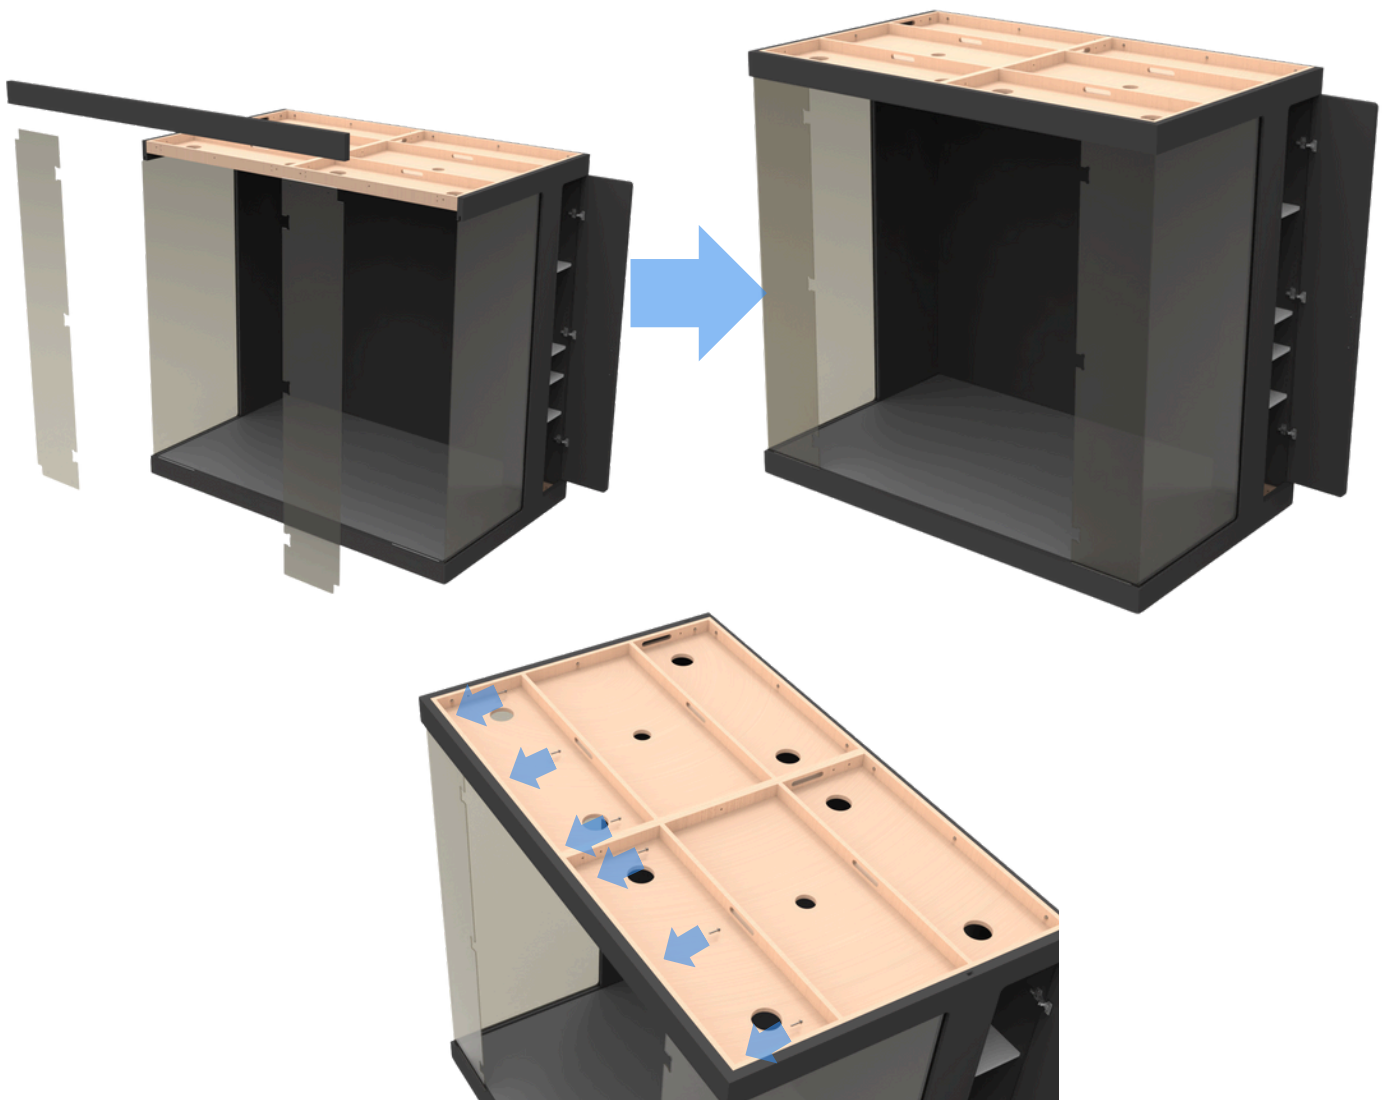

Step Thirteen: Install the Doors


- Install the handles on the doors, note that the handle holes are offset towards the bottom of the doors.
- Attach all 3 hinges to each door. The screws should be located on the interior of the enclosure.
- The C-shaped cutout is the fixed side of the hinge.
- Ensure the glass is sandwiched between the rubber hinge gaskets, and that the plastic edge protector is properly located inside the hinge.
- Align the glass flush with the inside edge of the hinge.
- Lift one door into place, using a 1/2" spacer below the door and a 1/8" spacer between the door and the side wall glass to ensure alignment.
- Have an assistant install and tighten the hinge from the interior of the enclosure.
- Repeat this procedure for the second door
- Install the provided slide on gaskets on the top, bottom, and left hand side of the door. Cut to length using a sharp utility knife.



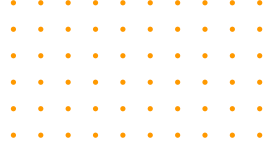

Step Fourteen: Connect the Wiring

- Pass the 2 power cables from the top of the closet through the roof and connect them to the fan power supplies. The two lower cables will be used later for the halogenerator.
- Pass the roof mounted power bar cable down into the closet and connect it inside the column.
- Connect the 2 LED controllers to the 2 side wall LEDs, ensuring the connector arrows are aligned.
- Pass the speaker wire through the roof frame and connect it to the left-hand speaker.
- For connector pairs labeled A, B, C, and D, pass these leads through the roof frame and connect them to their corresponding connectors.
- Feed the power cable from the central roof harness through the roof frame and connect it to the left-hand LED controller.
- Pass the main power lead from inside the closet through the hole in the rear wall panel and connect it to power.
- Test the overhead lights, side wall LEDs, and the speaker to ensure they are functioning correctly.

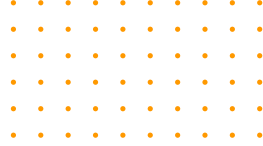

Step Fifteen: Install the Salt Outlet


- Thread the extension pipe into the back of the salt outlet and hand tighten.
- From inside the enclosure, insert the salt outlet into the cutout on the closet wall and rotate it clockwise to lock it into place on the pre installed screws.
- Ensure the salt outlet is level when installed correctly.



Step Sixteen: Install the Halogenerator

- Place the halogenerator into the closet, sliding the rear pipe through the cutout in the closet wall.
- While holding the halogenerator in place, secure the top mounting bracket to the closet wall using the 2 included Phillips head screws.
- Connect the power and control connectors on the bottom of the halogenerator, ensuring the control connector's lock ring is secured.



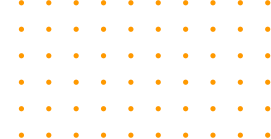

Final Setup and Operation Tips

Congratulations on completing the assembly of your **Wellness Suite**! Before you begin enjoying the benefits of salt therapy, here are some recommended settings to optimize your experience with the halogenerator:

Halogenerator Settings:

- Fan Speed: 1 (Low)
- Concentration Level: Approximately 20%

Suggested Session Length:

- For the best results, we recommend a 20-minute session.

These settings are designed to provide a comfortable and effective salt therapy experience. However, feel free to adjust them based on your personal preferences or specific wellness needs.

For detailed instructions on operating and maintaining the halogenerator, please refer to the Halogenerator User Manual. This will guide you through proper usage and any advanced settings available on the device.

If you encounter any issues or need further assistance, please refer to the troubleshooting section or contact our customer support team. Enjoy your Wellness Suite and the rejuvenating benefits it brings!