

DESKPRO DIS-ASSEMBLY INSTRUCTION







Linear Back-to-Back Workstation

Total Time: 45 Mins for 6 seater cluster

Major Tools Required :


- M6 Allen Key
- M8 Allen Key

FLAPPER & SCREEN DISASSEMBLY

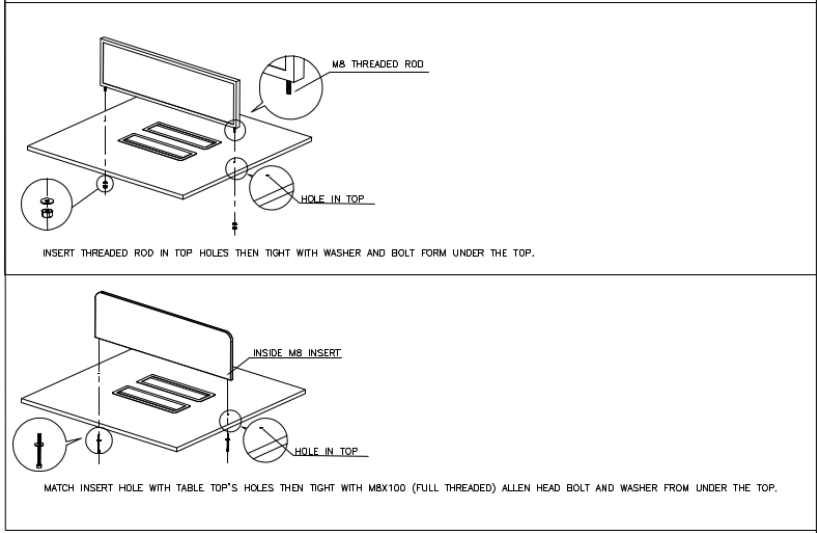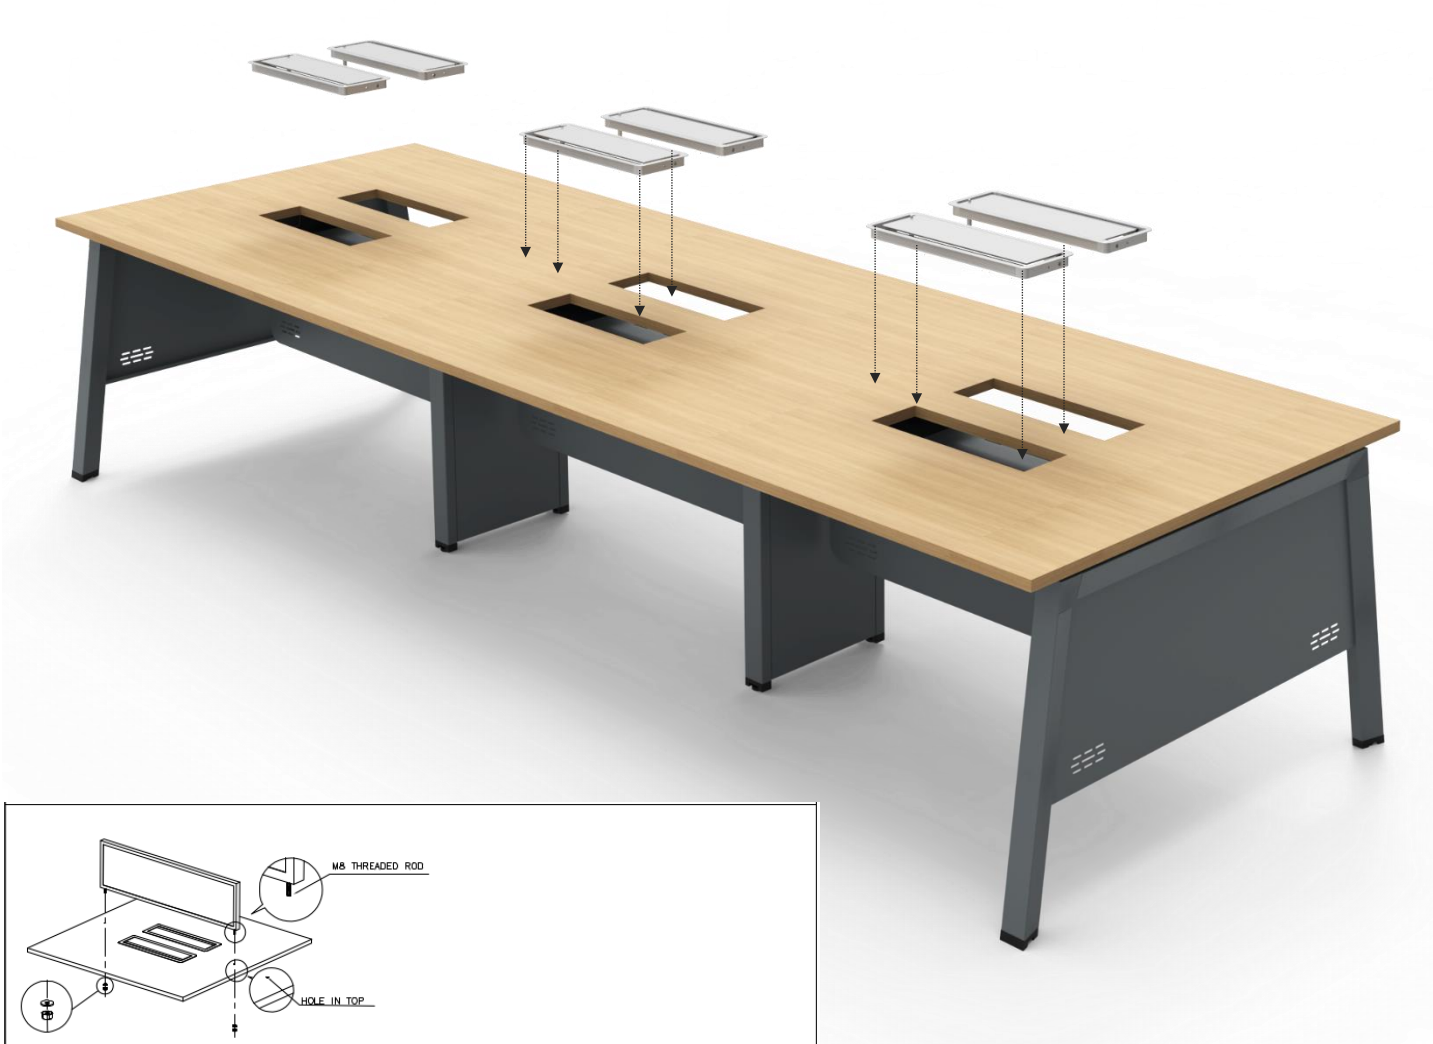

- Tools Requirement :**
- M6 Allen Key
 - M8 Allen Key
- Time Required:**
- 5 mins

PART DETAILS				
S. No	DESCRIPTION	SIZE	QTY	REMARKS
1	DISASSEMBLY - H	AS REQ	01 NOS	
2	FLAPPER	AS REQ	06 NOS	ELECTRIC BOX

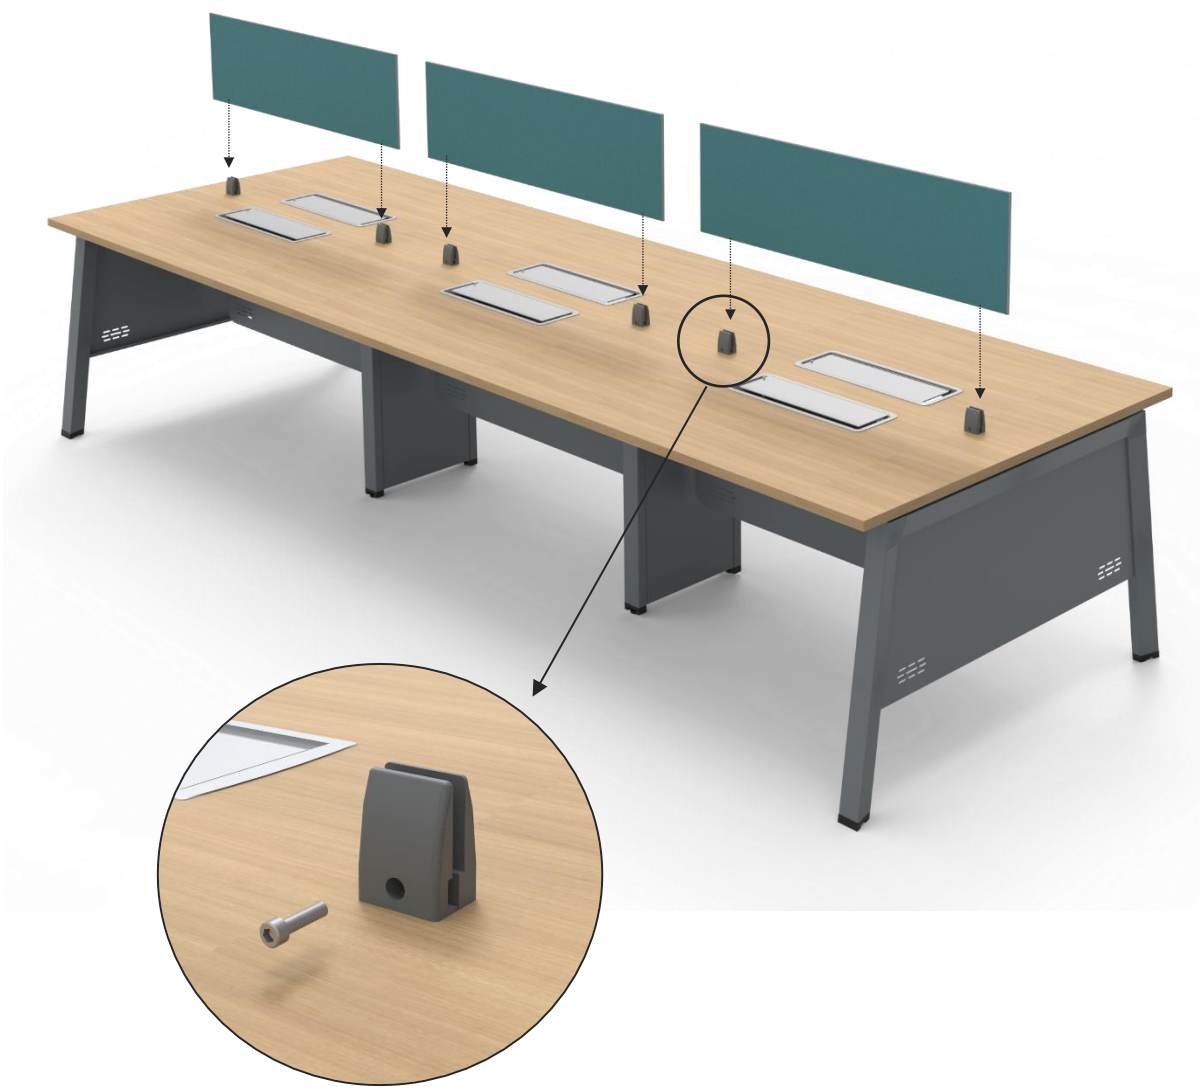

MODESTY DISASSEMBLY


Tools Requirement :

- M6 Allen Key
- M8 Allen Key

Time Required:

- 5 mins

PART DETAILS				
S. No	DESCRIPTION	SIZE	QTY	REMARKS
1	DISASSEMBLY - H	AS REQ	01 NOS	
2	FLAPPER	AS REQ	02 NOS	
3	CENTER MODESTY	AS PER TABLE TOP	03 NOS	
4	ALLEN HEAD BOLT	6X25	12 NOS	
5	SELF TAPPING SCREW	3'		

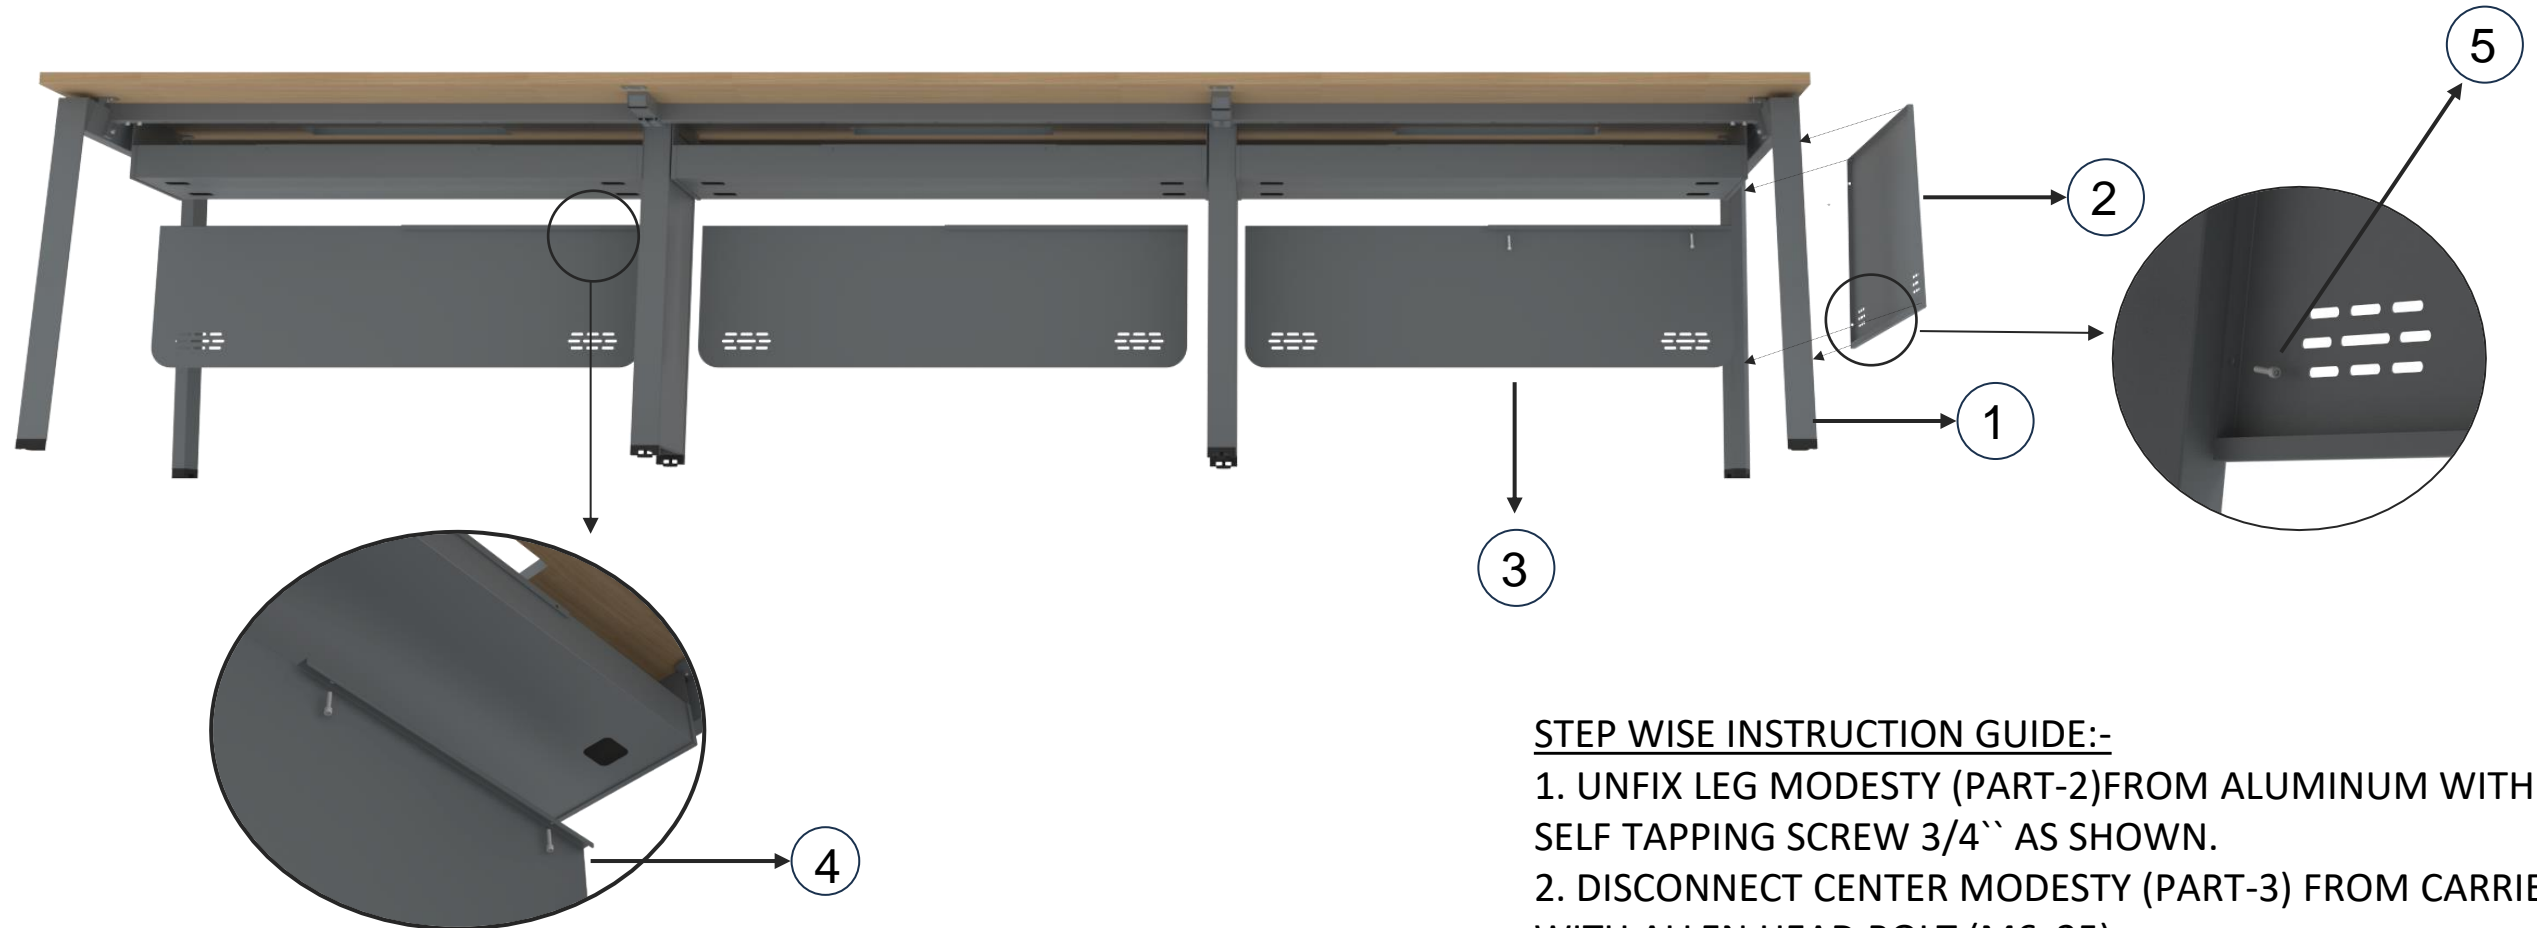

STEP WISE INSTRUCTION GUIDE:-

1. UNFIX LEG MODESTY (PART-2) FROM ALUMINUM WITH SELF TAPPING SCREW 3/4" AS SHOWN.
2. DISCONNECT CENTER MODESTY (PART-3) FROM CARRIER WITH ALLEN HEAD BOLT (M6x25).


TABLE-TOP DISASSEMBLY

Tools Requirement :

- M6 Allen Key
- M8 Allen Key

Time Required:

- 5 mins

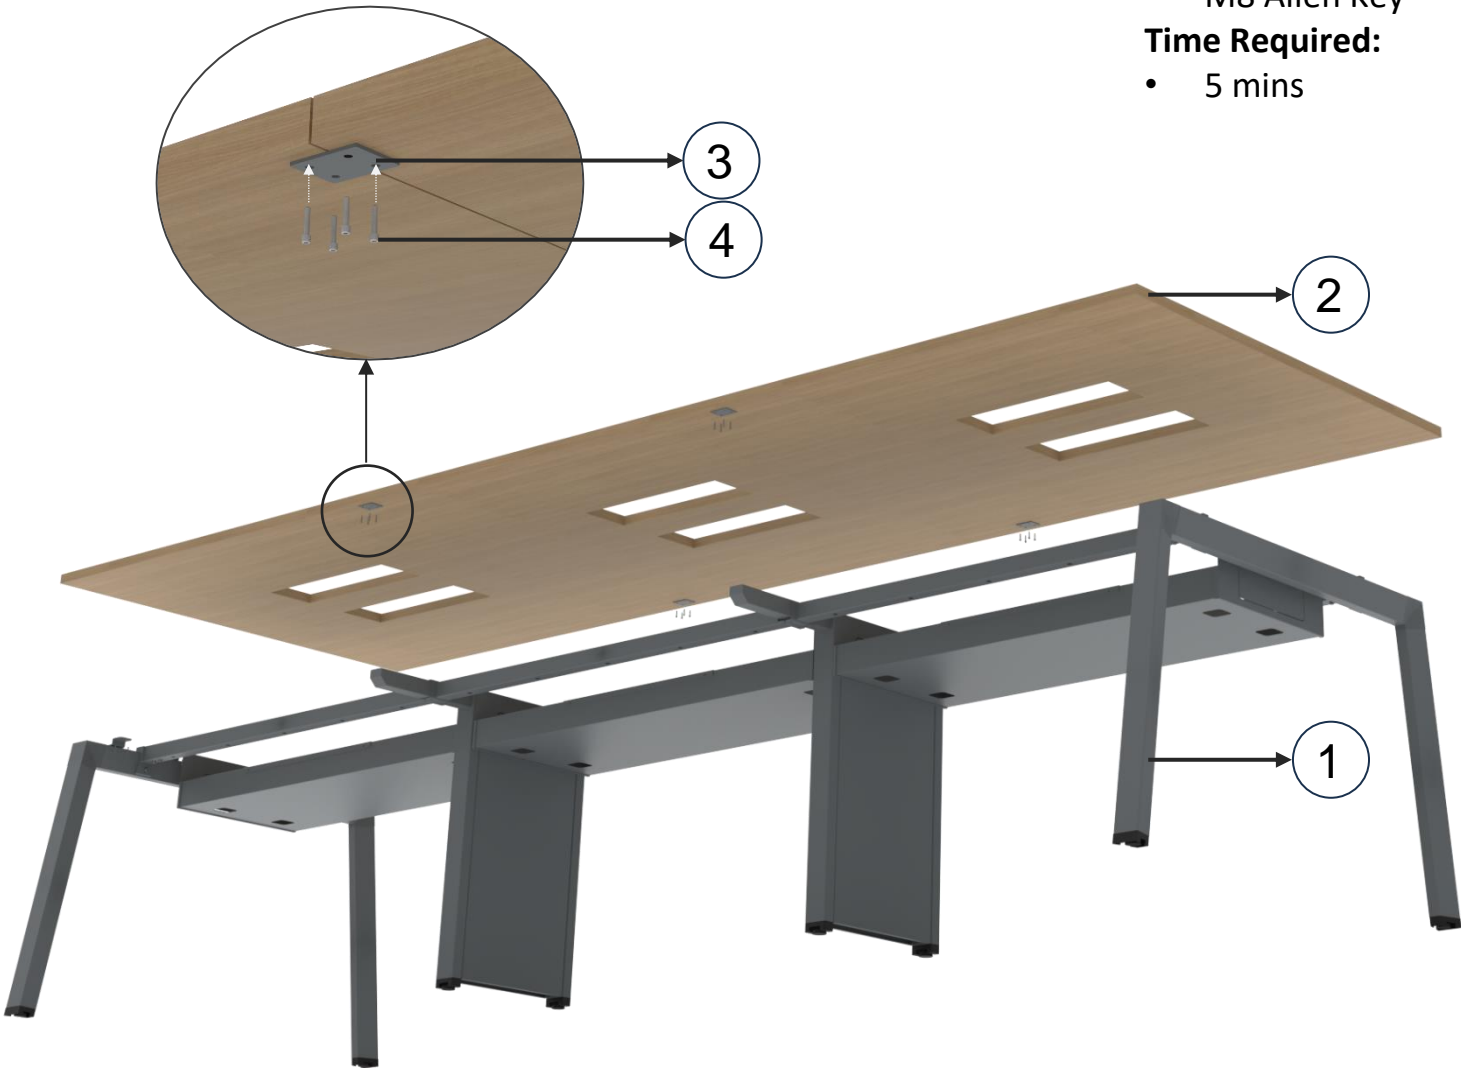


PART DETAILS				
S. No	DESCRIPTION	SIZE	QTY	REMARKS
1	DISASSEMBLY - F	AS REQ	01 NOS	
2	TABLE TOP	AS REQ	03 NOS	25mm ENGINEERED WOOD
3	FLAT PATTI	STD.	04 NOS	
4	8X19 SCREW	8X19		WOOD TO METAL CONNECT




DISCONNECT TOP & BEAM WITH SCREW (8X19)

WIRE CARRIER DISASSEMBLY

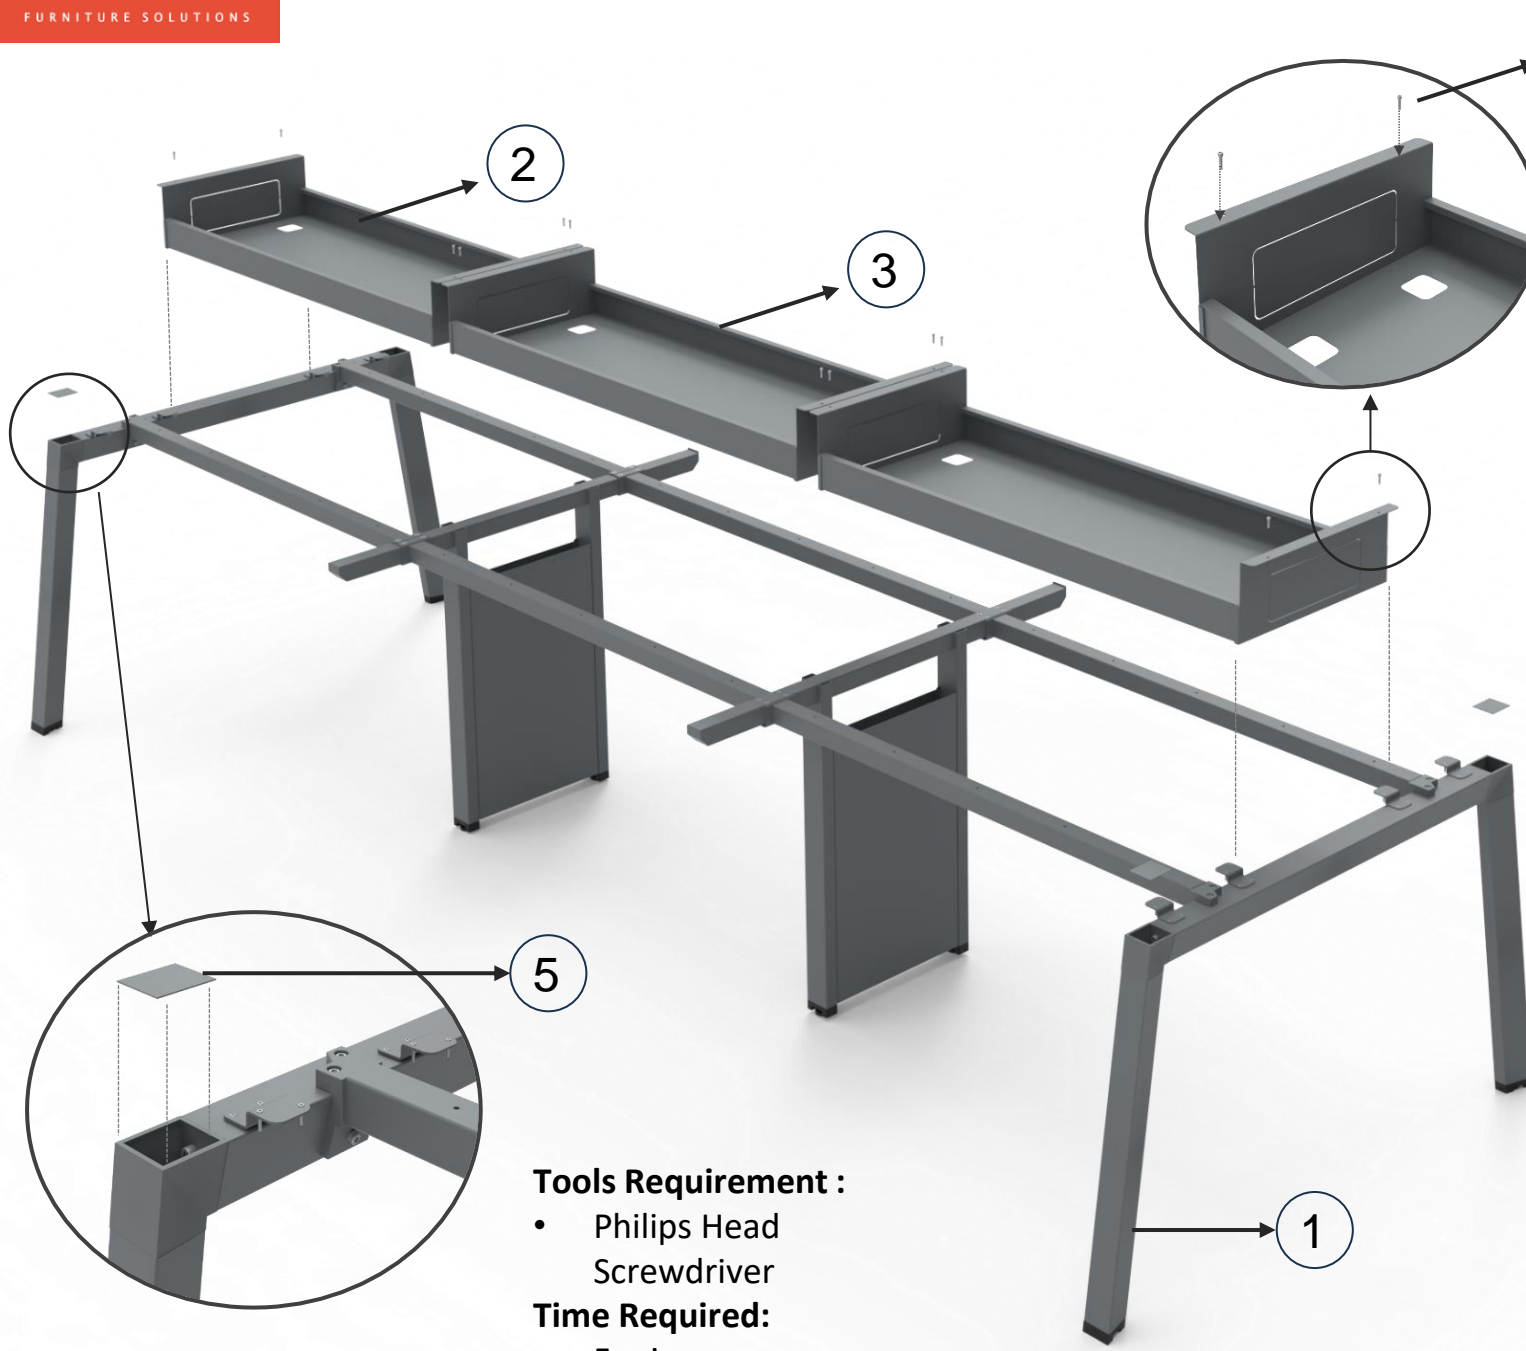

PART DETAILS				
S. No	DESCRIPTION	SIZE	QTY	REMARKS
1	DISASSEMBLY - E	AS REQ	01 NOS	
2	END CARRIER	STD.	02 NOS	
3	CENTER CARRIER	STD.	01 NOS	
4	SELF TAPPING SCREW	3/4	12 NOS	
5	CRCA COVER FOR BKT	54X49	04 NOS	

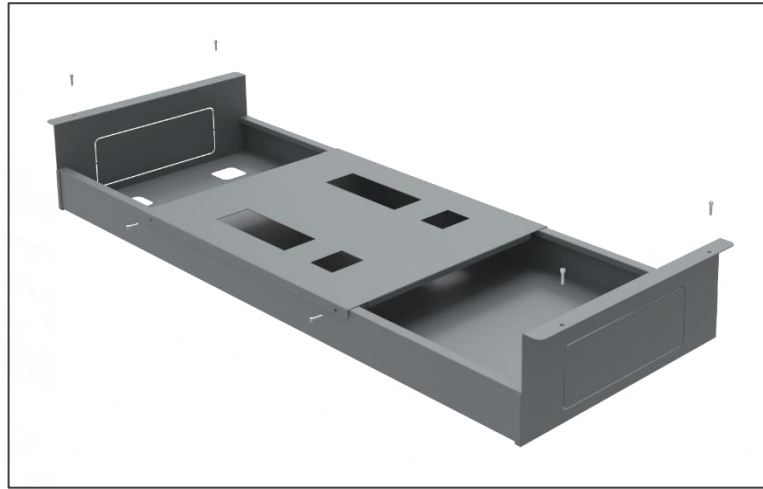

1.UNFIX SWITCH
PLATE FROM
CARRIER AS PER
FLAPPER LOCATION
ON TOP ,LOOSE
WITH SELF TAPPING
SCREW 3/4`.

Tools Requirement :

- Philips Head
Screwdriver


Time Required:

- 5 mins

STEP WISE INSTRUCTION GUIDE:-

- 1.UNCLOSE ALUMINUM BKT WITH CRCA COVER.
- 2.UNFIX WIRE CARRIER FROM LEGS WITH SELF TAPPING SCREW 3/4` AS SHOWN.

METAL SINGLE & DOUBLE BRACKET DISASSEMBLY

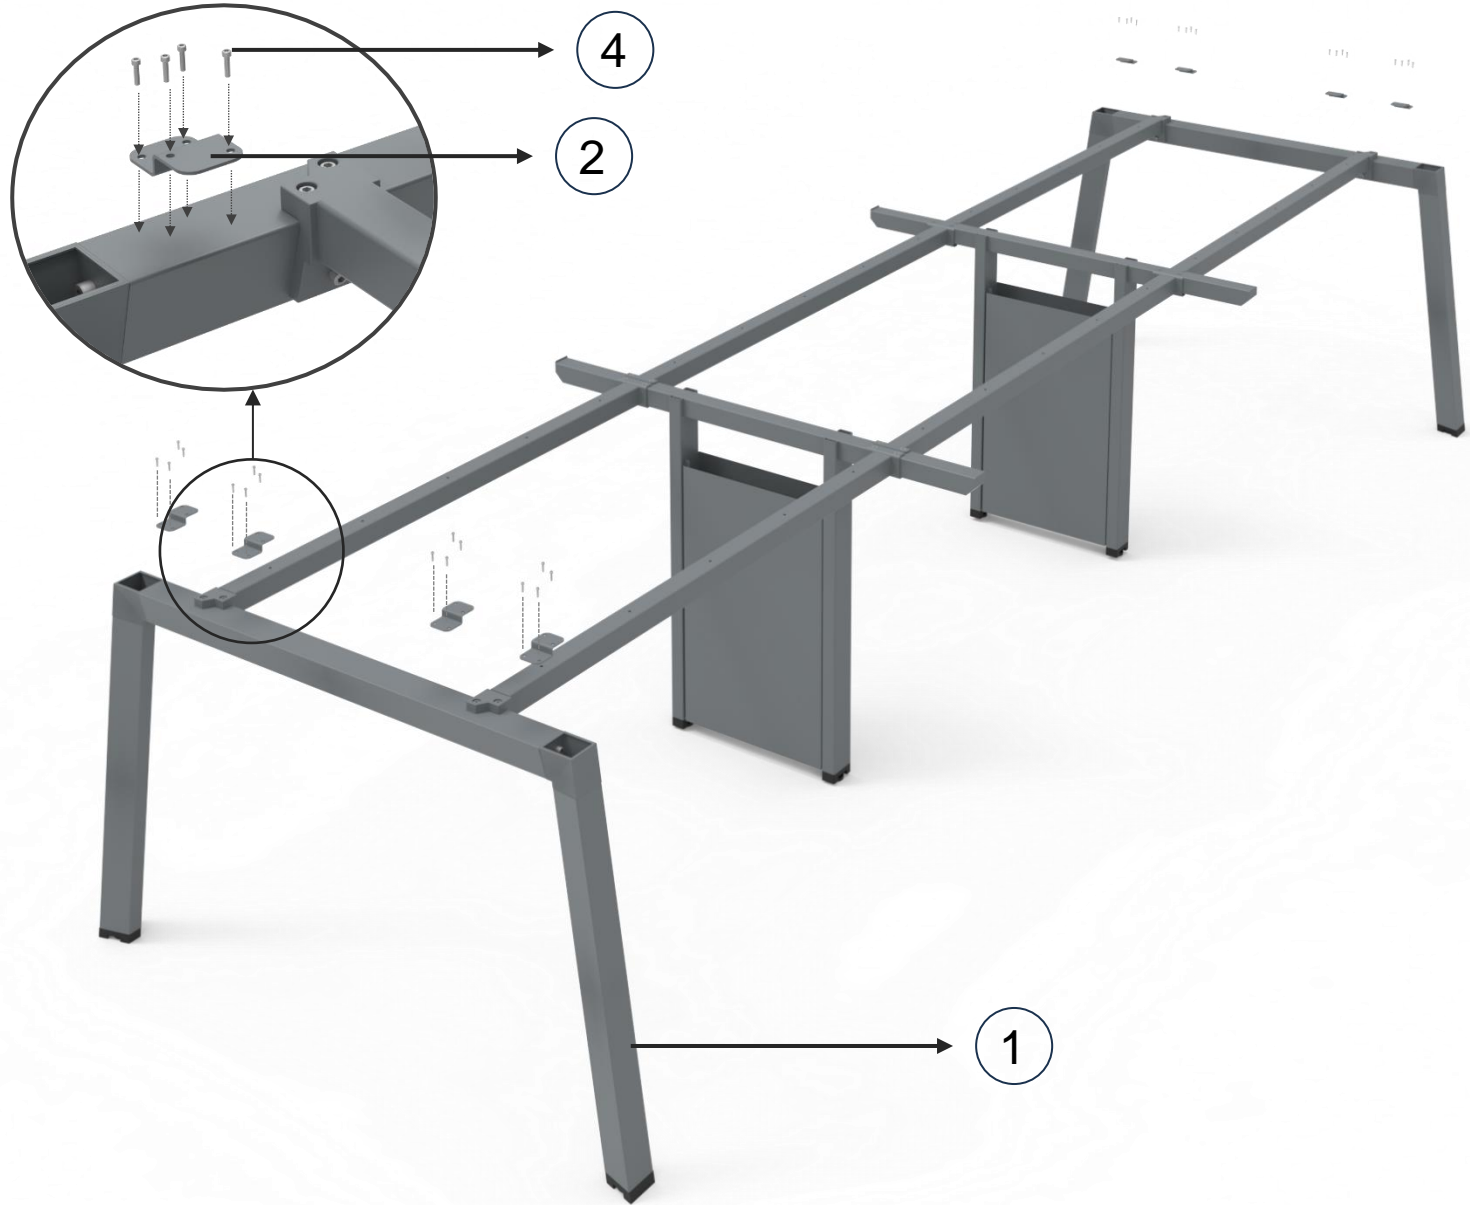

PART DETAILS				
S. No	DESCRIPTION	SIZE	QTY	REMARKS
1	BEAM AND LEG DISASSEMBLY-2	AS REQ	01 NOS	DISASSEMBLY - D
2	METAL SINGLE BRACKET	STD.	08 NOS	
3	METAL DOUBLE BRACKET	STD.	08 NOS	
4	SELF TAPPING SCREW	3/4"	32 NOS	

Tools Requirement :

- Philips Head Screwdriver


Time Required:

- 5 mins

STEP WISE INSTRUCTION GUIDE:-

1. UNMOUNT METAL DOUBLE BRACKET(PART-3) FROM RISER LEGS WITH SELF TAPPING SCREW 3/4".
- 2.UNMOUNT METAL SINGLE BRACKET(PART-2) FROM DESK PRO LEGS WITH SELF TAPPING SCREW 3/4".

BEAM AND LEG DISASSEMBLY - 2

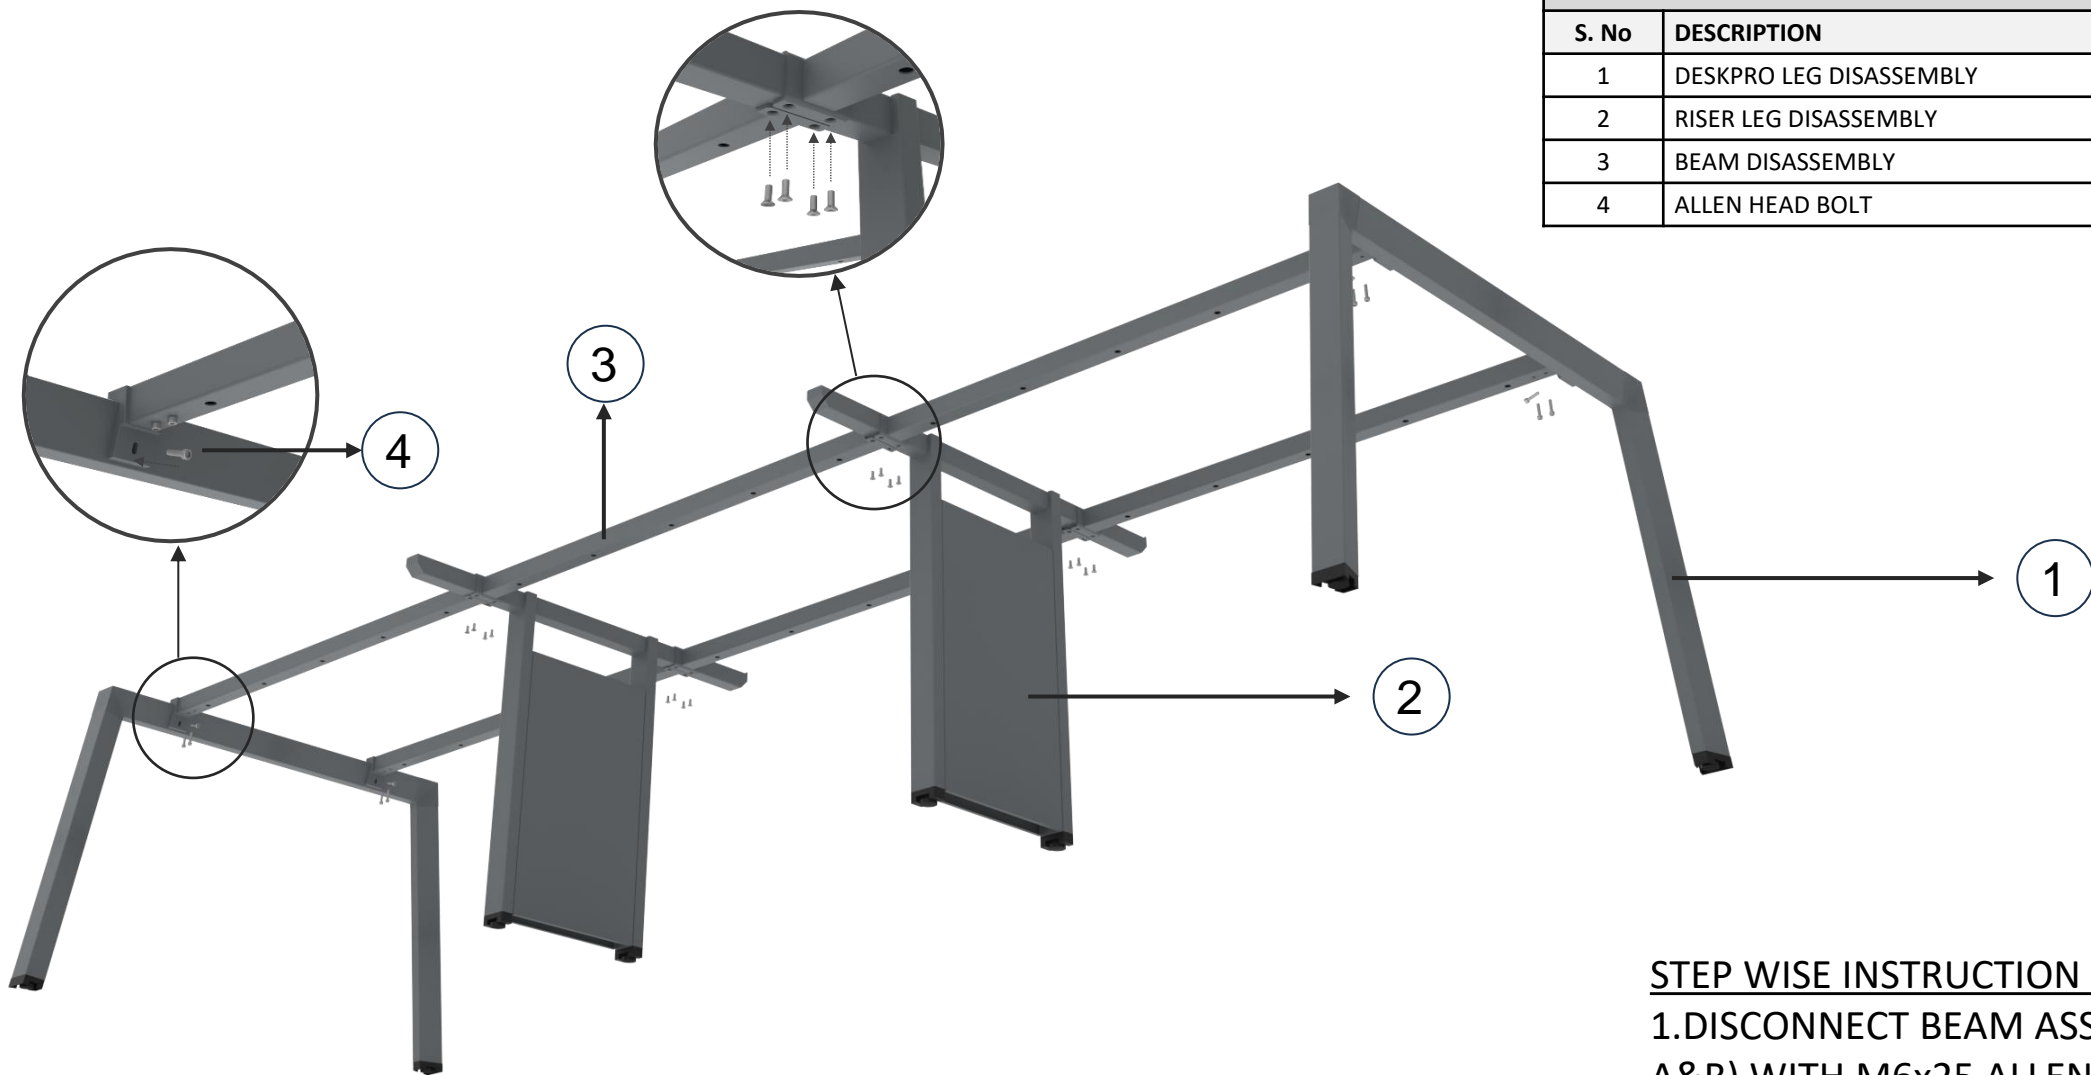

PART DETAILS				
S. No	DESCRIPTION	SIZE	QTY	REMARKS
1	DESKPRO LEG DISASSEMBLY	AS REQ	02 NOS	DISASSEMBLY -A
2	RISER LEG DISASSEMBLY	AS REQ	02 NOS	DISASSEMBLY -B
3	BEAM DISASSEMBLY	AS REQ	02 NOS	DISASSEMBLY -C
4	ALLEN HEAD BOLT	6X25	28 NOS	

Tools Requirement :


- M6 Allen Key

Time Required:

- 5 mins

STEP WISE INSTRUCTION GUIDE:-
 1.DISCONNECT BEAM ASSY (ASSY-C) FROM LEGS ASSY (ASSY A&B) WITH M6x25 ALLEN HEAD BOLT.

BEAM AND LEG DISASSEMBLY - 1

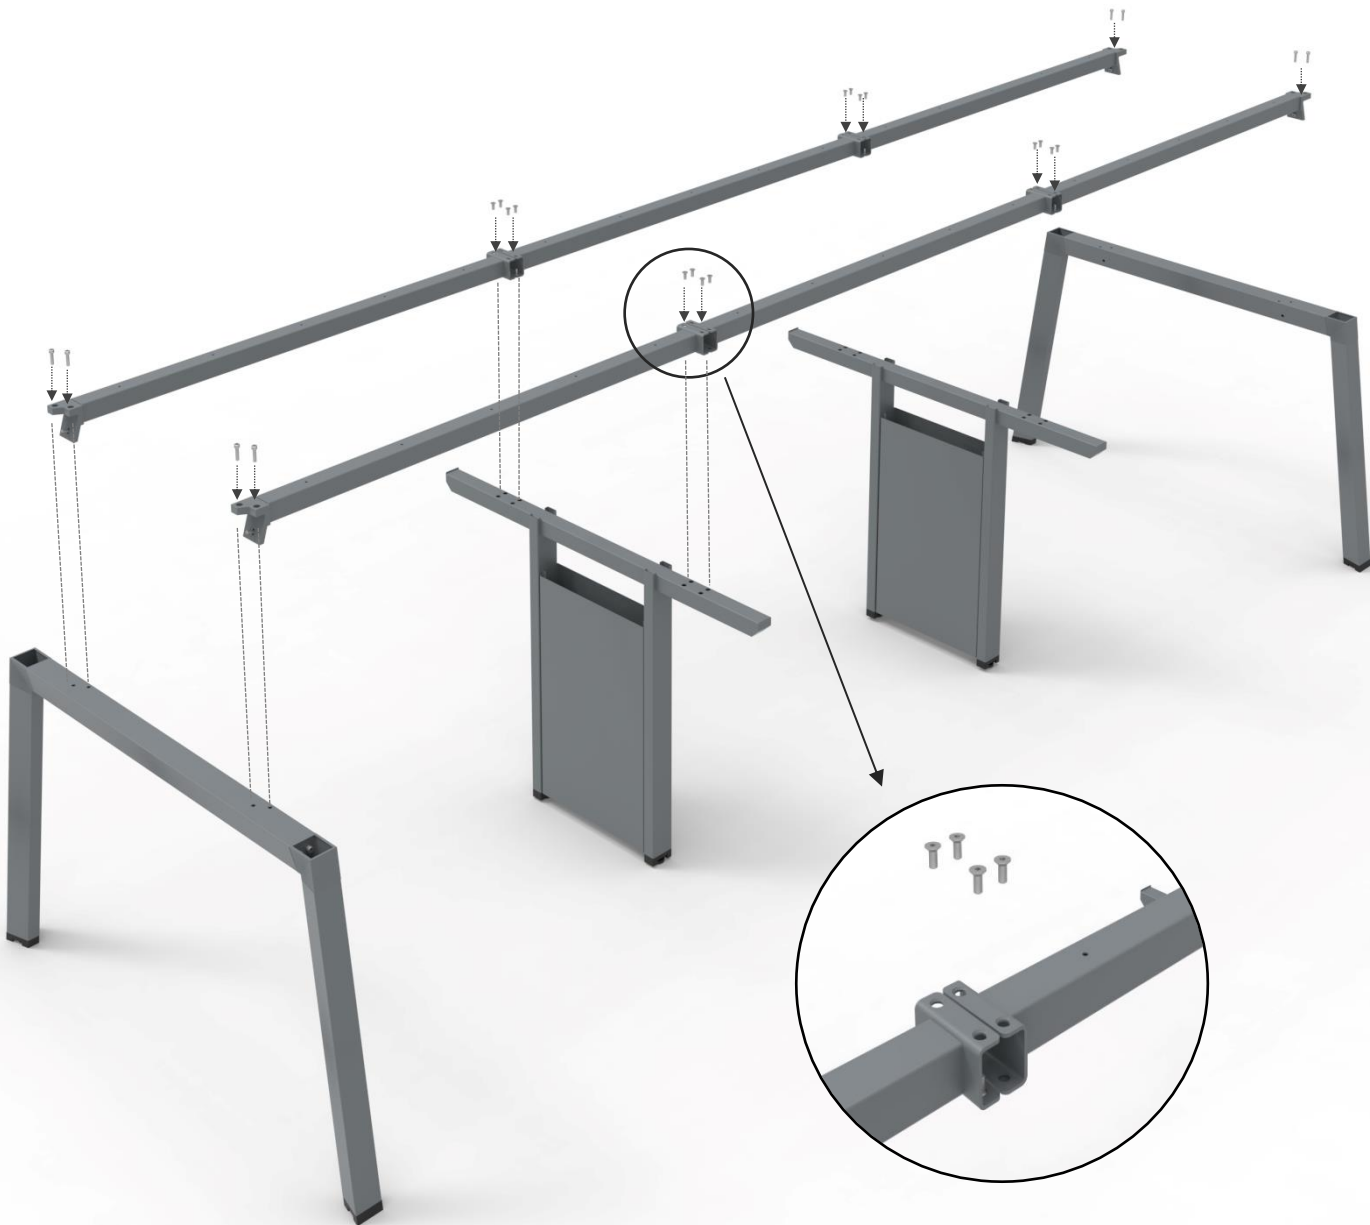

PART DETAILS				
S. No	DESCRIPTION	SIZE	QTY	REMARKS
1	DESKPRO LEG DISASSEMBLY	AS REQ	02 NOS	DISASSEMBLY -A
2	RISER LEG DISASSEMBLY	AS REQ	02 NOS	DISASSEMBLY -B
3	BEAM DISASSEMBLY	AS REQ	02 NOS	DISASSEMBLY -C
4	ALLEN HEAD BOLT	6X25	28 NOS	

- Tools Requirement :**
- M6 Allen Key
- Time Required:**
- 5 mins

STEP WISE INSTRUCTION GUIDE:-
 1.DISCONNECT BEAM ASSY (ASSY-C) FROM LEGS ASSY (ASSY A&B) WITH M6x25 ALLEN HEAD BOLT.


Tools Requirement :

- M6 Allen Key

Time Required:


- 5 mins

PART DETAILS				
S. No	DESCRIPTION	SIZE	QTY	REMARKS
1	SINGLE DIA CAST BKT	STD.	02 NOS	FOR DESKPRO
2	DOUBLE DIA CAST BKT	STD.	02 NOS	FOR CENTER LEG
3	END BEAM	AS PER TABLE TOP	02 NOS	40X40 CRCA PIPE
4	CENTER BEAM	AS PER TABLE TOP	28 NOS	40X40 CRCA PIPE
5	ALLEN HEAD BOLT	6X25	04 NOS	
6	ALLEN HEAD BOLT	8X25	04 NOS	

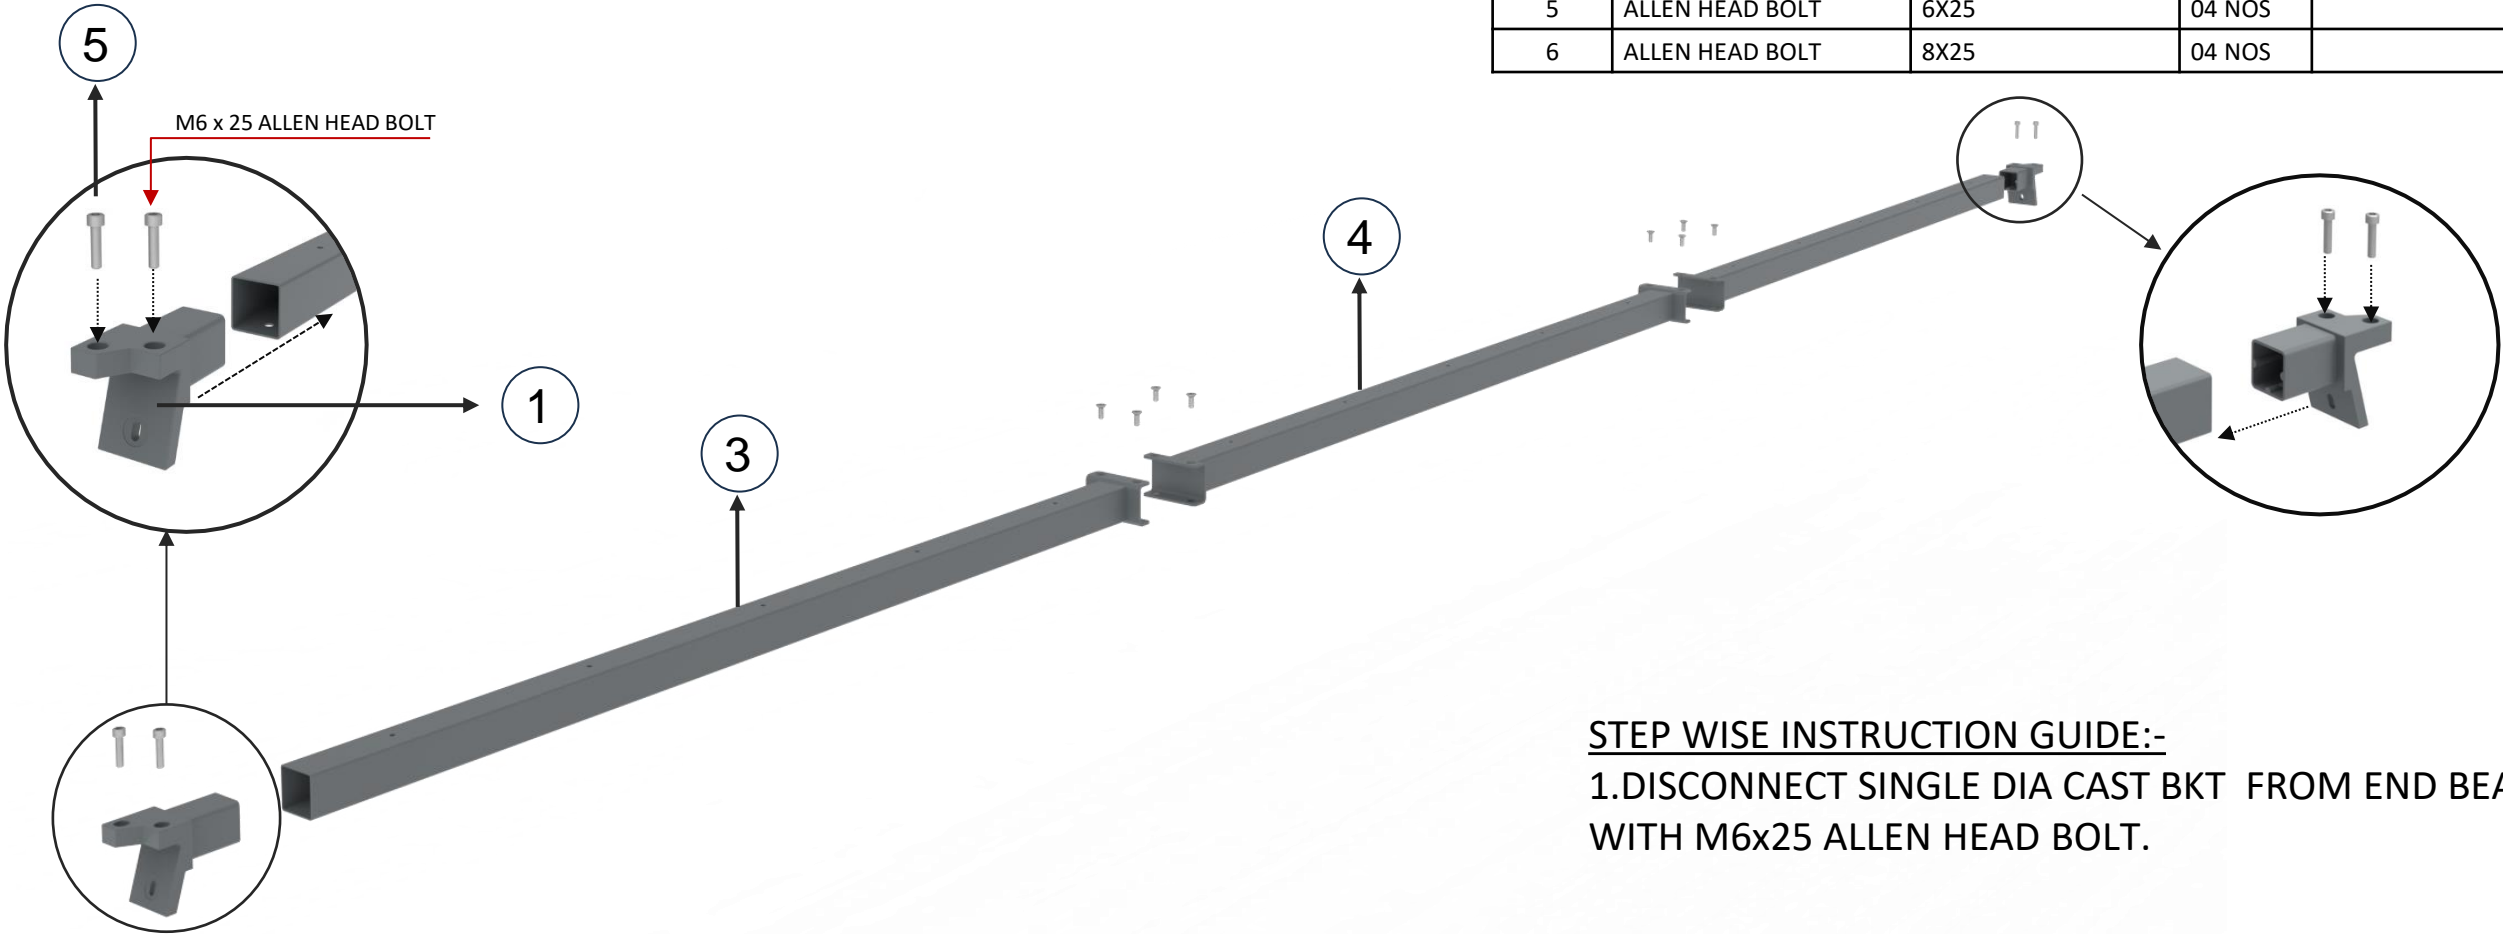

STEP WISE INSTRUCTION GUIDE:-
 1.DISCONNECT SINGLE DIA CAST BKT FROM END BEAM WITH M6x25 ALLEN HEAD BOLT.

RISER LEG DISASSEMBLY

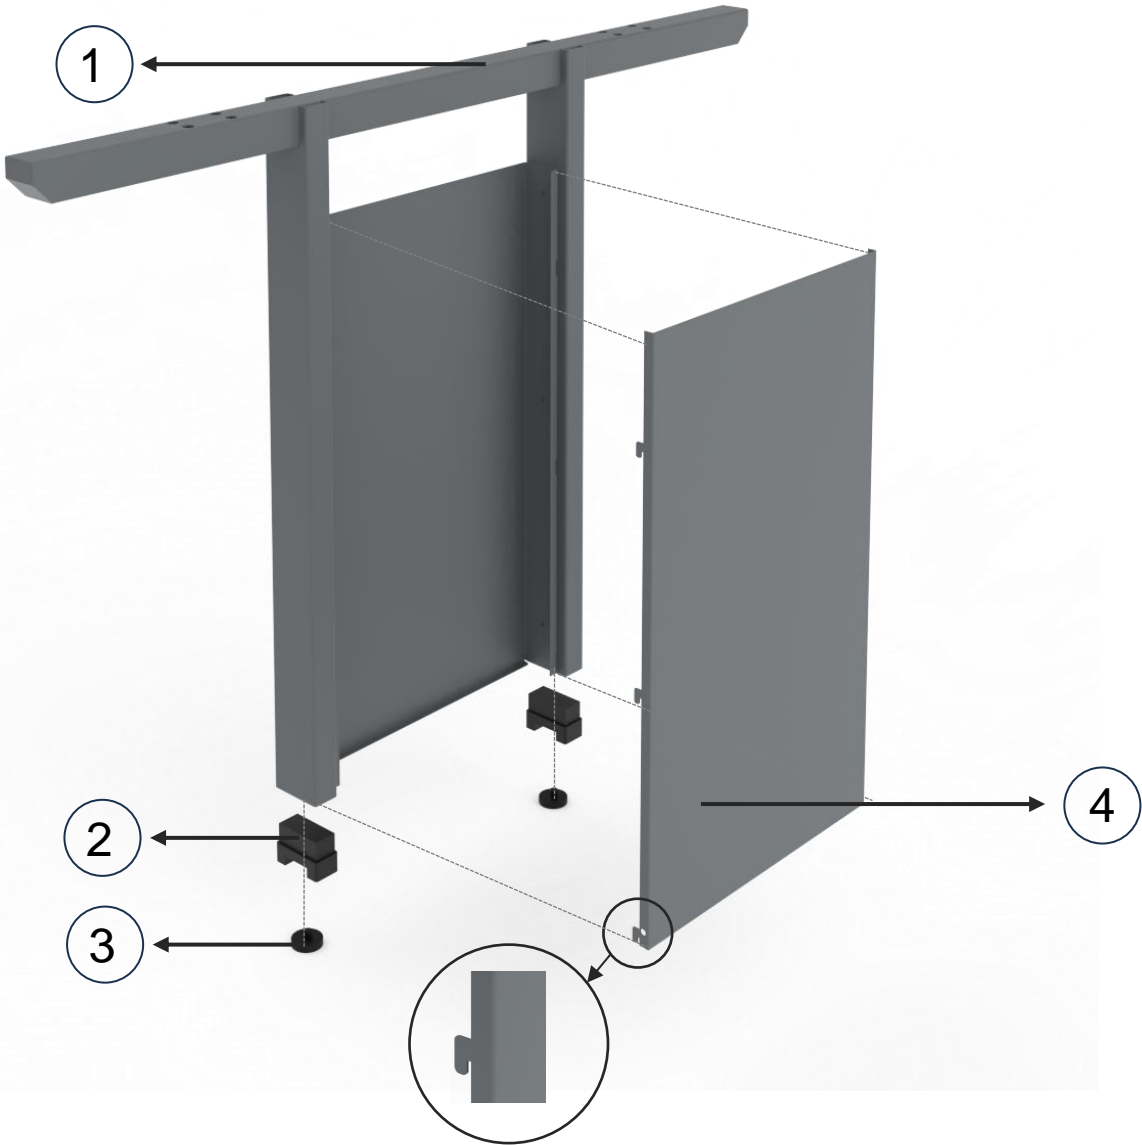

PART DETAILS				
S. No	DESCRIPTION	SIZE	QTY	REMARKS
1	RISER LEG WITH WELDED COVER	AS REQ.	01 NOS	RISER LEG
2	60X30 LEG BKT	STD.	02 NOS	PVC
3	LEVELING SHOES	60X30	02 NOS	
4	OPENABLE COVER	AS REQ.	01 NOS	CRCA

Tools Requirement :

- Philips head screwdriver
- Soft Mallet


Time Required:

- 5 mins

STEP WISE INSTRUCTION GUIDE:-

1. REMOVE OPENABLE COVER FROM LEG.
2. ROTATE TO LOOSEN AND REMOVE LEVELING SHOE FROM PVC LEG BRACKET
3. REMOVE PVC BRACKET FROM LEG.
4. UNWRAP THE ALL ITEMS.

DESKPRO LEG DISASSEMBLY

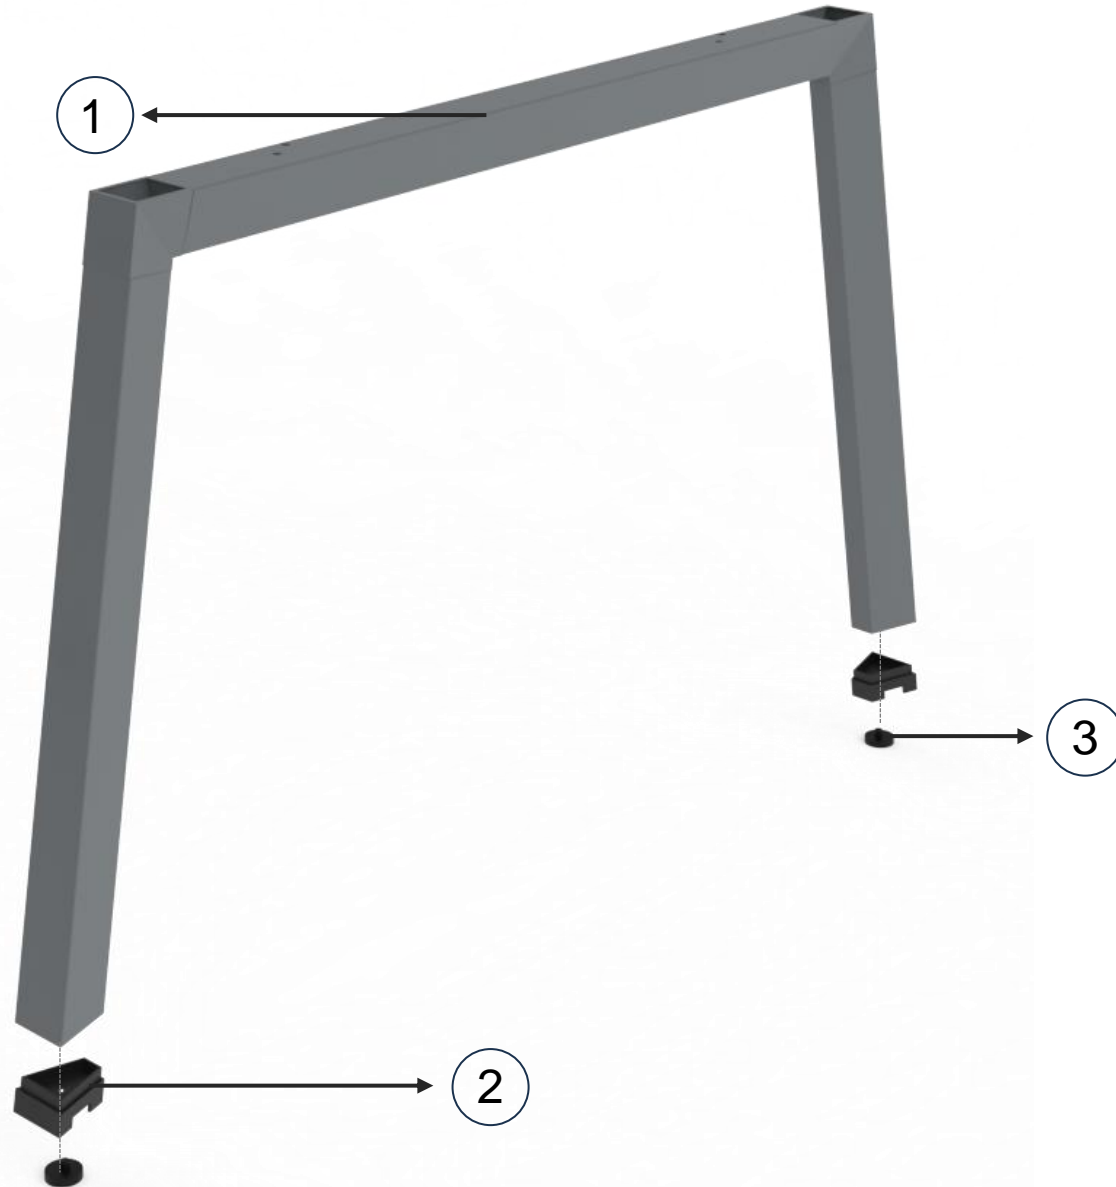

PART DETAILS				
S. No	DESCRIPTION	SIZE	QTY	REMARKS
1	LEG	AS REQ.	01 NOS	DESKPRO (ALUMINIUM)
2	DESKPRO LEG BKT	STD.	02 NOS	PVC
3	LEVELING SHOES	60X30	02 NOS	

Tools Requirement :

- Philips head screwdriver
- Soft Mallet

Time Required:

- 5 mins

STEP WISE INSTRUCTION GUIDE:-

1. ROTATE TO LOOSEN AND REMOVE LEVELING SHOE FROM PVC LEG BRACKET
2. REMOVE PVC BRACKET FROM LEG.
3. UNWRAP ALL ITEMS

THANK YOU
