

THERMAGLASS

NūVō™ SHOWER BASES

Item No.

NUV-BASE-/4836C/6032E/6036C/7236C/7836C CW

NUV-BASE-/4836C/6032E/6036C/7236C/7836C BL

NUV-BASE-/4836C/6032E/6036C/7236C/7836C GR

NUV-BASE-/4836C/6032E/6036C/7236C/7836C WH

NUV-THR-60 / NUV-THR-80 CW


NUV-THR-60 / NUV-THR-80 BL

NUV-THR-60 / NUV-THR-80 GR


NUV-THR-60 / NUV-THR-80 WH

NuVo Shower Base


Installation Guide

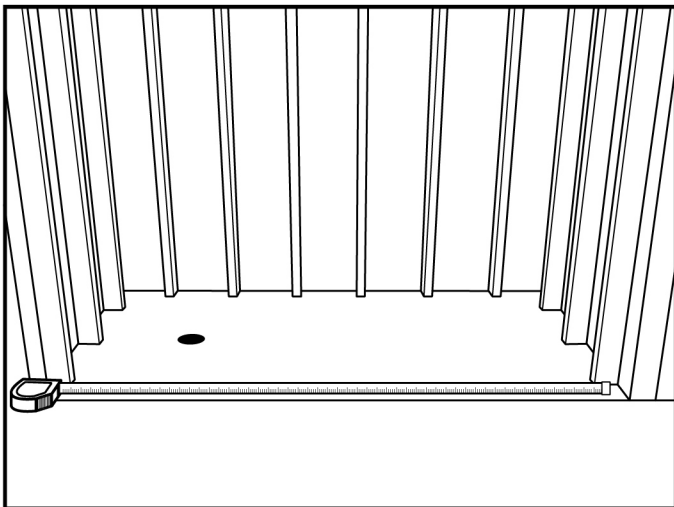


STEP 01: Measure length & depth. Verify floor is level. If needed use floor leveling product or mortar.

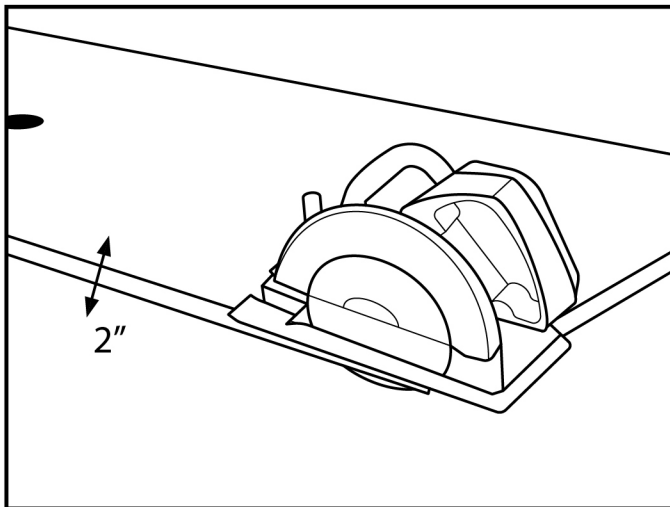


STEP 02: Cut base to fit using a carbide finishing blade. On center drain bases 2" can be cut from all sides. On end drain bases you can cut 2" from all side except for the end that has the drain on it.

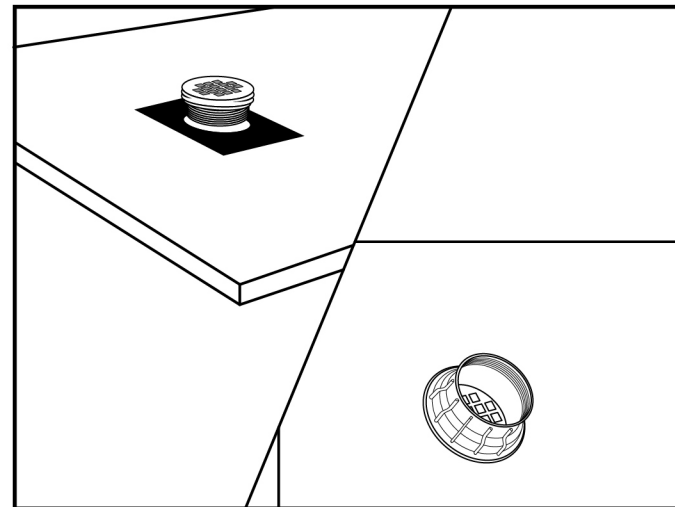


STEP 03: Drain not included with base. Apply silicone caulking to the underside of the drain flange and insert into base removing excess silicone. Install gaskets and tighten the nut on the bottom of the drain.

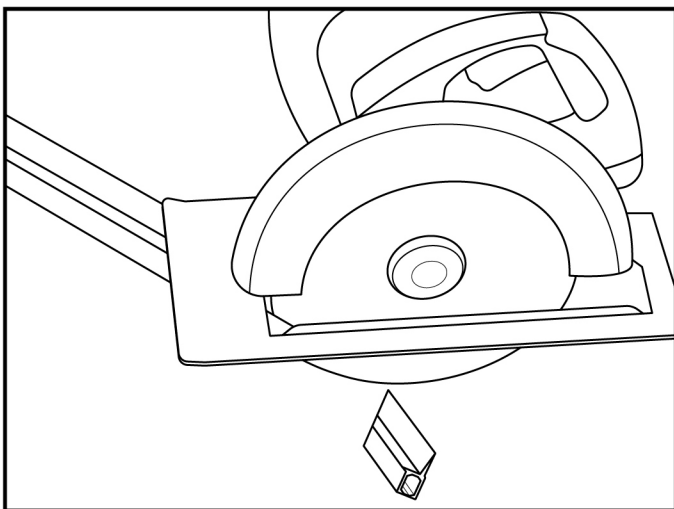

STEP 04: Cut back wall flange as needed making sure to maintain a 45° on cut.

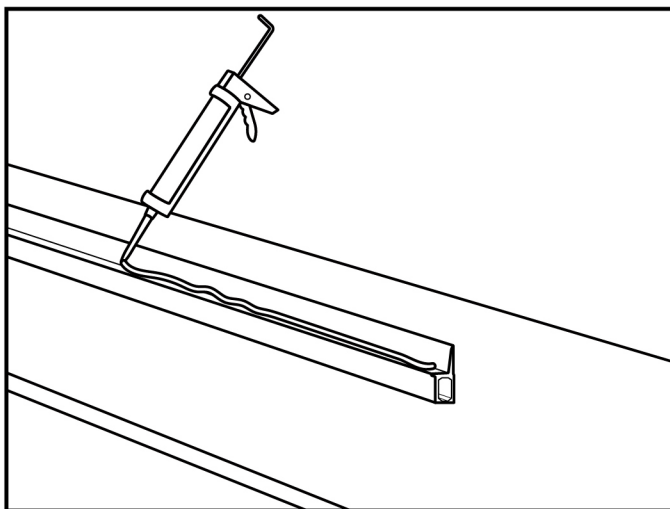


STEP 05: Apply silicone adhesive.

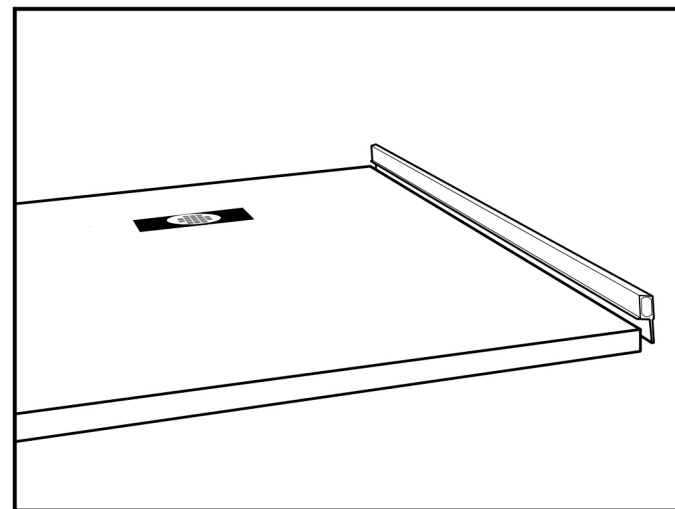


STEP 06: Attach back wall flange to shower base.


Installation Process

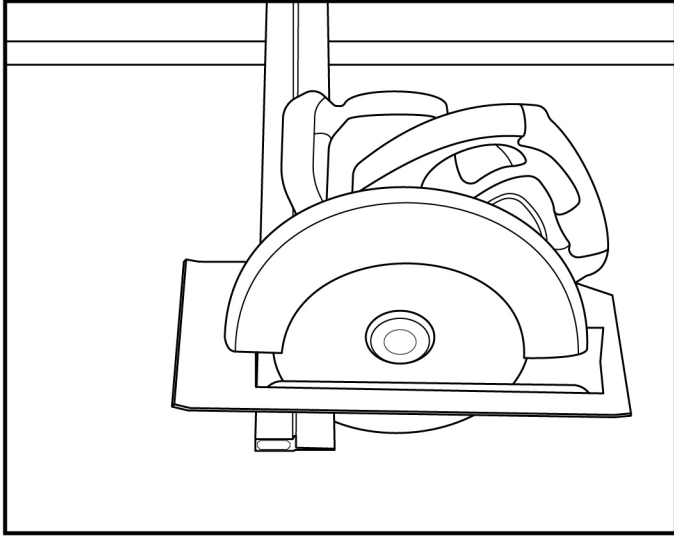


STEP 07: Cut side flanges as needed cutting only on the flat end not the angled end.

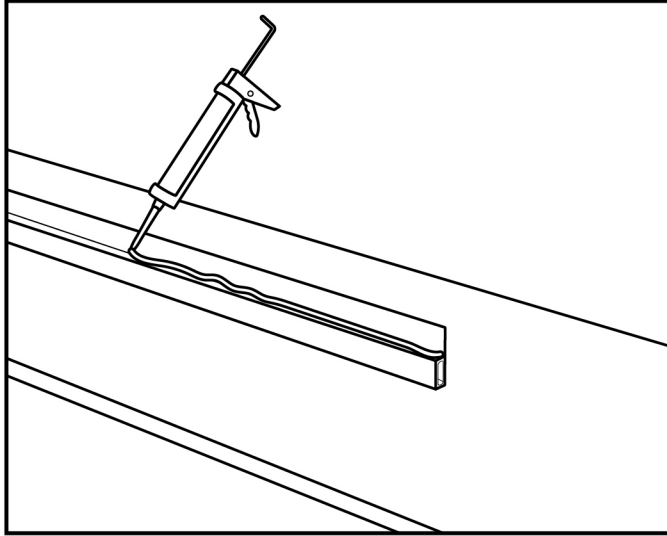


STEP 08: Apply silicone adhesive.

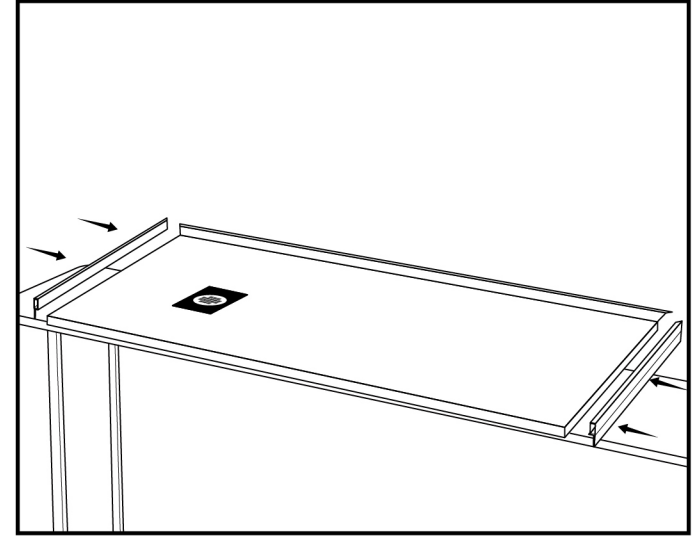


STEP 09: Attach side flanges to the shower base.

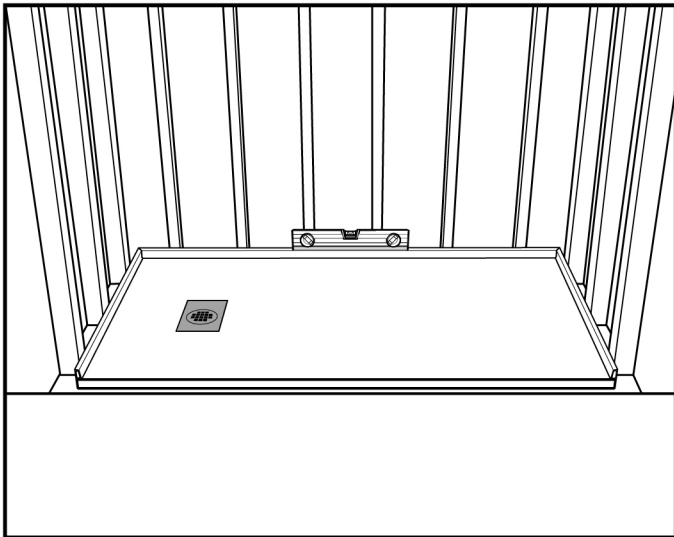

STEP 10: Install shower base. Check to see if base is level. If shimming is needed use level to determine the thickness of the shims. Apply shims to the underside of the base and re check the level.

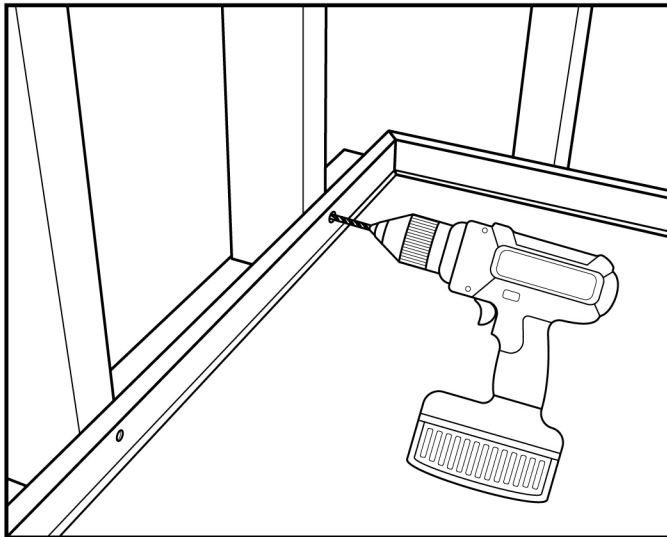


STEP 11: Drill pilot holes through the flange and into the studs.

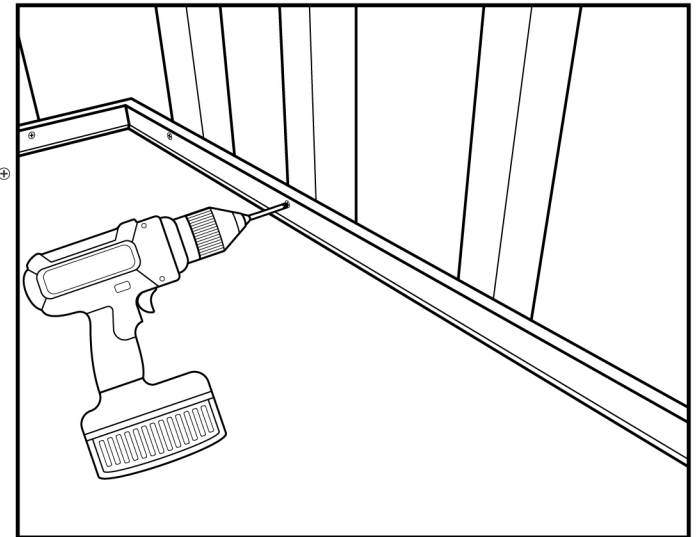


STEP 12: Insert screws and attach the shower base directly to the studs.

See Install Video at: www.nuvobath.com/installation-videos


Installation Process

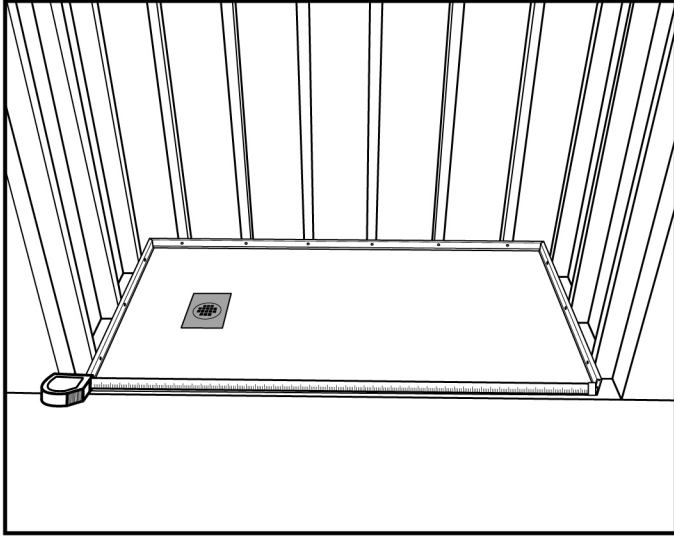


STEP 13: Measure in between the side tile flanges to determine overall length for the threshold.

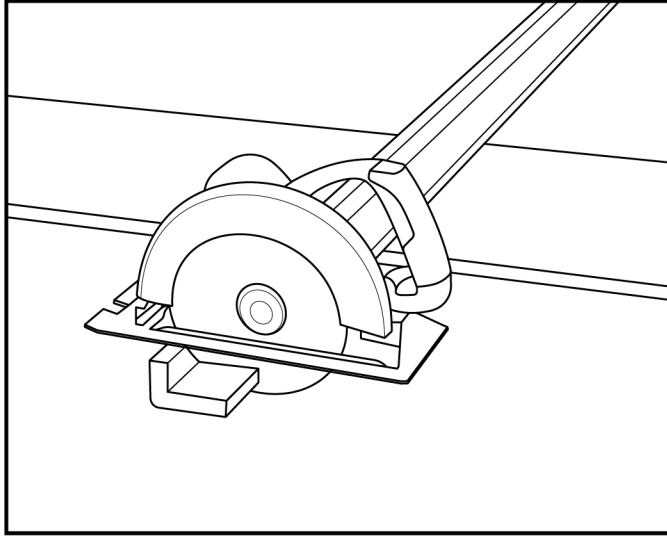


STEP 14: Cut threshold to fit.

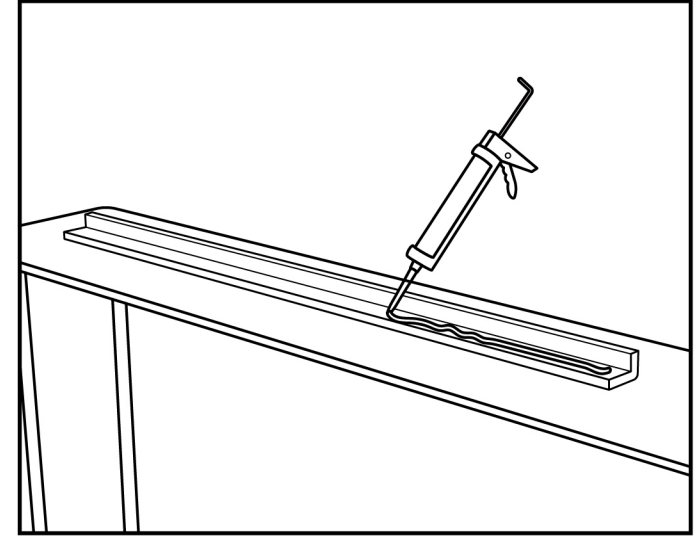


STEP 15: Apply silicone adhesive.

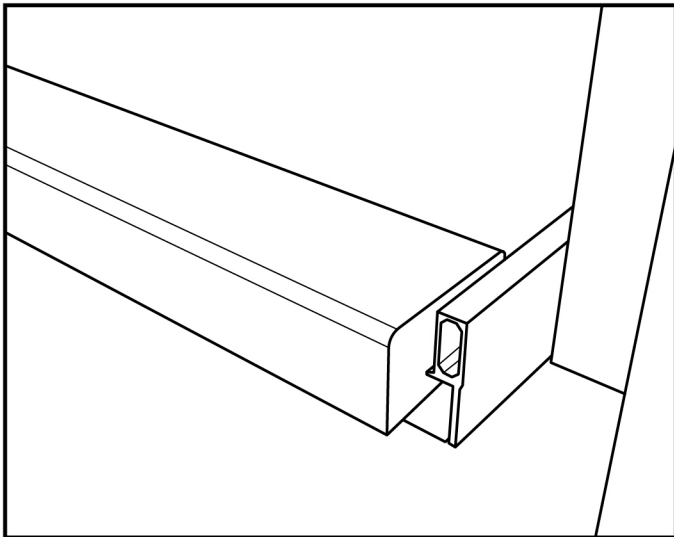

STEP 16: Attach threshold to shower base.

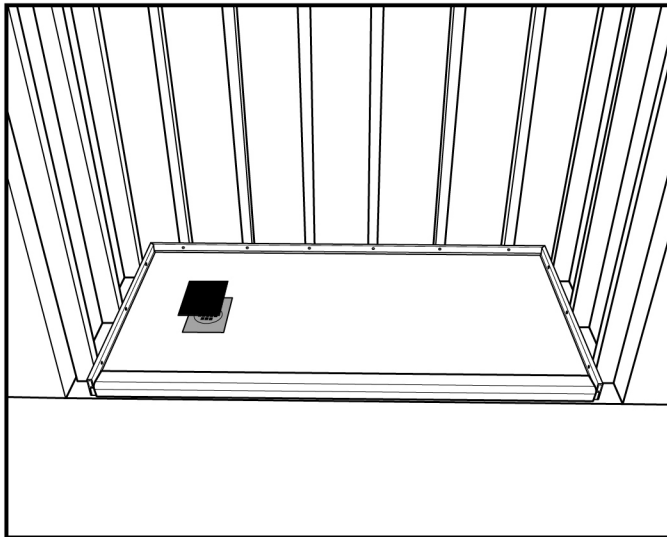

STEP 17: Add drain cover included with end drain bases only. Allow 24 hours to cure before use.

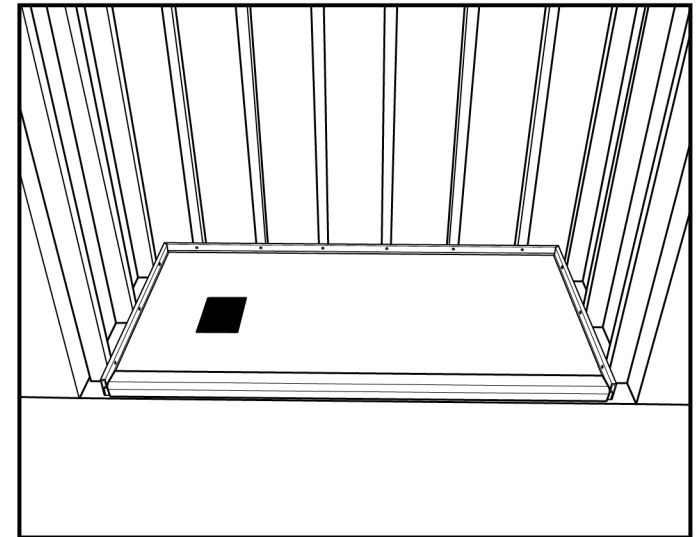

STEP 18: "Allow 24 hours to cure before use."