




PRODUCT


Assembly instructions "RVO Classic Muskoka chair"

Hardware List:

- 12 screws
- 2 lag bolt with washers
- 8 bolts
- 8 nuts

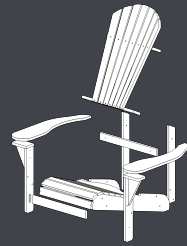


Step 1

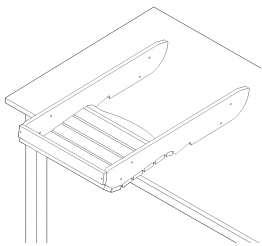


***Tip:** A table can make installing first two legs easier.

Step 2

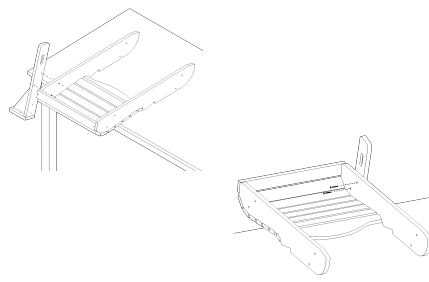

Install left arm rest with 2 screws.


Step 3.1

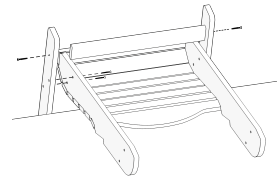

Part A: Install bottom support bar on the left side. 1 screw required.


Part B: Install the right arm rest. Make sure the bottom support bar is also screwed in as well.

Step 3.2

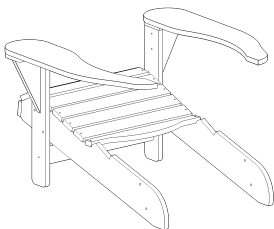


How it should look now.

Step 4

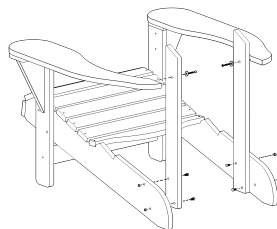


Next, install the two back support arms. **remember to keep the bolt on the outside.*

Step 5

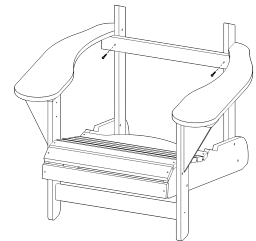

Install the back crossbar. ***2 screws required.**

Step 6

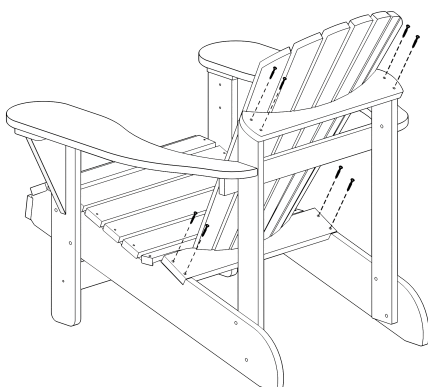

Lastly, take the preassembled back piece and install using 8 screws.



Made in Canada

Assembled "RVO Classic Muskoka chair"

