


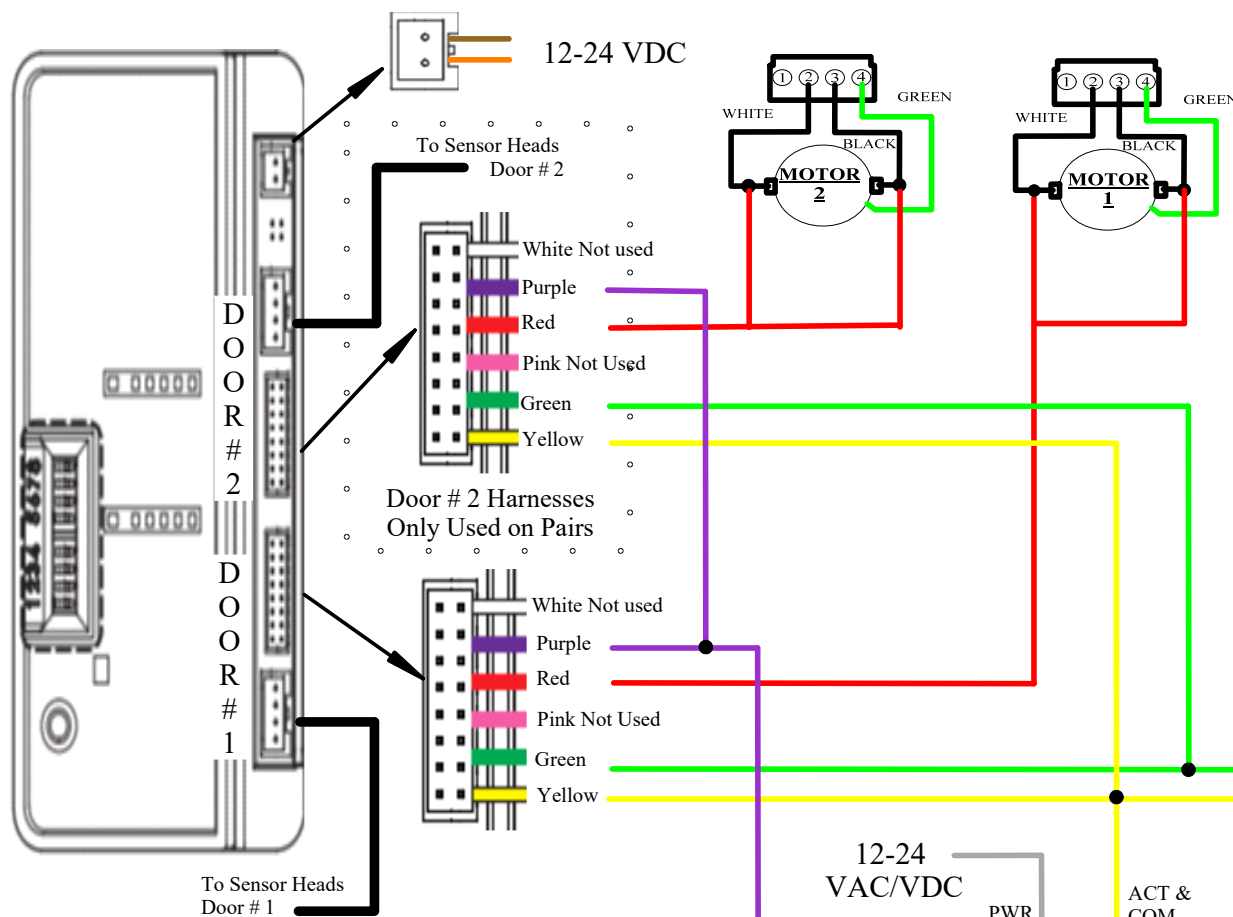

#### NOTE:

It may be necessary to add a wire to pin 6 of the 6 pin molex connector. The Timer/Carpet slide switch must be set to Timer Logic.

#### NOTES:

1. Pin 1 is Com.
2. Pin 2 is Activation
3. Pin 3 is Mat Safety
4. Pin 6 is Stall

#### INSTALLATION NOTES:

1. Set Door Speeds and verify proper operation prior to final connection of sensor system.
2. Technician MUST WALK TEST to verify function and detection patterns comply with ANSI/BHMA A156.10 requirements.

**NOTE:**  
For Knowing Act Applications all activation devices must connect tot the Purple Wires of the OC-907-CT. (N/O Dry Contact)

|                                                                                                                       |                |                      |
|-----------------------------------------------------------------------------------------------------------------------|----------------|----------------------|
| Title: Stanley L Shape Control with Elite Pro                                                                         |                | Drawing # 01STALSP01 |
| Drawing By: JAS                                                                                                       | Date: 09-17-24 | Sheet: 1 of 1        |
| Optex Technologies Inc.<br>10741 Walker St., Suite 300,Cypress, CA 90630<br>Office: (800)877-6656, Fax: (310)214-8644 |                |                      |