

ACT
& COM

PWR

INSTALLATION NOTES:

1. Set door speeds and verify proper door operation prior to final connection of sensor system.
2. Technician **MUST WALK TEST** to verify function and detection patterns comply with ANSI/BHMA A156.10 requirements.

To Sensor Heads
on Door Panel.

OC-907-CT

DOOR
1

DOOR
2


PWR

Yellow
Green
Not Used Pink
Red
Purple
Not Used White

Orange
Brown

NOTE:
For Known act Applications
all activation devices must
connect to the purple wires
of the OC-907-CT.
(N/O Dry Contact)

Push Pull Activation must
be disabled at control.

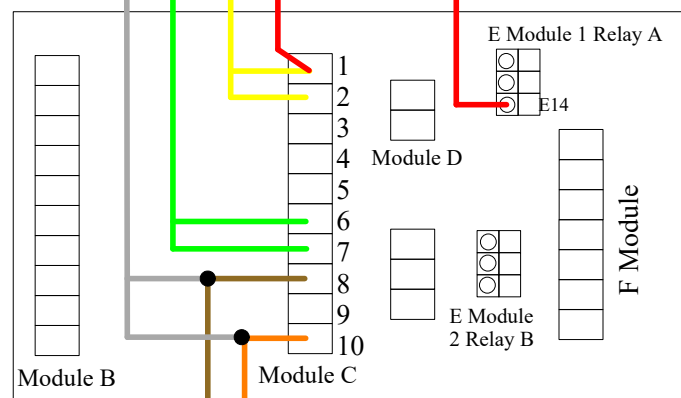

Title: Tormax TDA Single with Elite Pro		Drawing # 01TORTDAELIP01
Drawing By: JAS	Date: 09-17-24	Sheet: 1 of 1
Optex Technologies Inc. 10741 Walker St., Suite 300, Cypress, CA 90630 Office: (800)-877-6656, Fax: (310)214-8644		