


INSTALLATION NOTES


1. Set door speeds and verify proper door operation prior to final connection of sensors system.
2. Technician **MUST WALK TEST** to verify function and detection patterns comply with ANSI/BHMA A156.10 requirements.
3. On Knowing Act applications, push/pull activation must not be used.
4. When using two controls (Sim Pair, Double Egress) wire each control as shown and add sync lines between controls on TB1 pins 1,2, 3 and 7.

OC-904C T dipswitch Setting Chart		
	OFF	ON
1. Safety relay contact	N.O.	N.C.
2. Stall relay contact	N.O.	N.C.
3. Activation operation	Auto.	Knowing Act
4. Test input	Enable	Disable
5. Test output	High	Low
6. Test output "Activation"	Enable	Disable
7. Mandatory	OFF	
8. Mandatory	OFF	


Fully Automatic	Knowing Act
1. OFF	OFF
2. ON	ON
3. OFF	ON
4. ON	ON
5. OFF	OFF
6. ON	ON
7. OFF	OFF
8. OFF	OFF

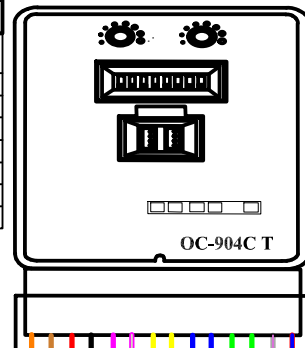

Orange
Brown
Red
Black
White/Purple
Yellow
Blue
Green
Gray/Pink
Red/Blue

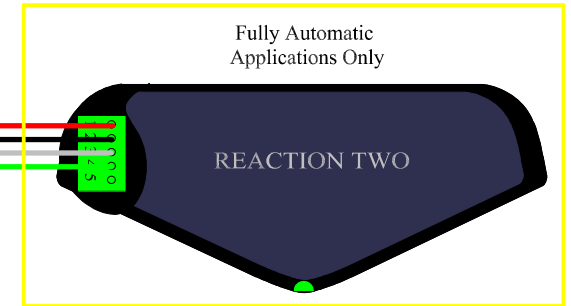

NOTE:
ALL activation devices must connect to the Purple & White/Purple wires (N/O dry contact only). The Purple & White/Purple wires from the OC-904C T's connect in parallel. Be sure to observe polarity (+ to +, - to -). DO NOT connect purple wires to Door Control.

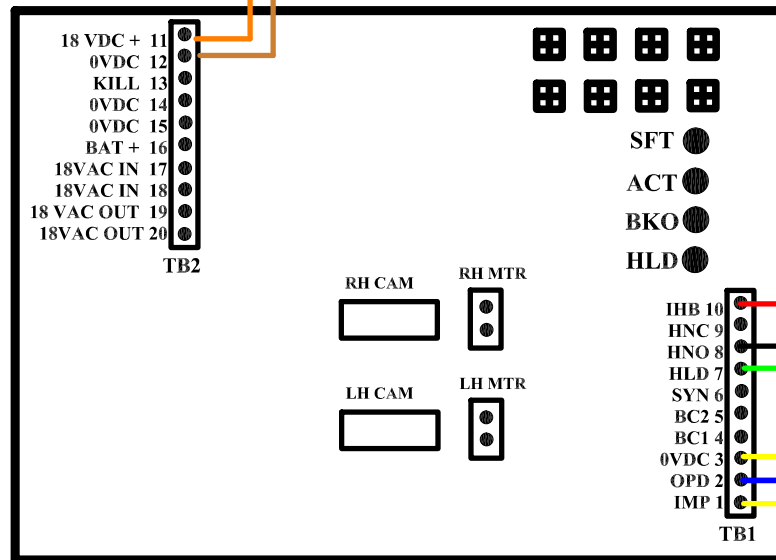

Title: 16300450 Besam 900 Sim. Pair with Elite T		Drawing # 16300450
Drawing By: PWK	Date: 09/16/17	Sheet: 1 of 1
OPTEX Technologies Inc. 18730 S. Wilmington Ave. Unit 100 Rancho Dominguez, CA. 90220 800-877-6656 FAX 310-898-1098		