


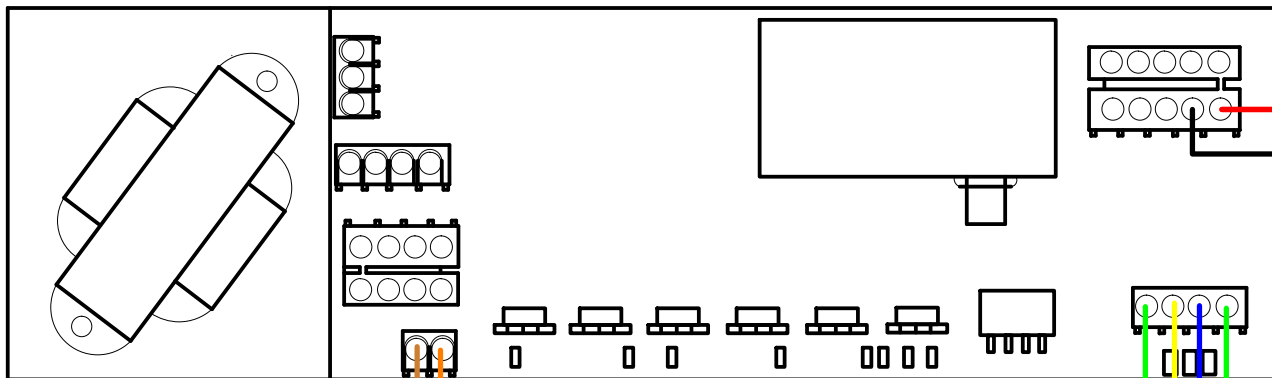

- INSTALLATION NOTES**
1. Set door speeds and verify proper door operation prior to final connection of sensors system.
 2. Technician **MUST WALK TEST** to verify function and detection patterns comply with ANSI/BHMA A156.10 requirements.

OC-904C T dipswitch Setting Chart		
	OFF	ON
1. Safety relay contact	N.O.	N.C.
2. Stall relay contact	N.O.	N.C.
3. Activation operation	Auto.	Knowing Act
4. Test input	Enable	Disable
5. Test output	High	Low
6. Test output "Activation"	Enable	Disable
7. Mandatory	OFF	OFF
8. Mandatory	OFF	OFF


Fully Automatic	Knowing Act
1. OFF	OFF
2. OFF	OFF
3. OFF	ON
4. ON	ON
5. OFF	OFF
6. ON	ON
7. OFF	OFF
8. OFF	OFF

NOTE:
 ALL activation devices must connect to the Purple & White/Purple wires (N/O dry contact only).
 The Purple & White/Purple wires from the OC-904C T's connect in parallel. Be sure to observe polarity (+ to +, - to -).
 DO NOT connect purple wires to Door Control.



N.O.
 COM

Orange
 Brown
 Red
 Black
 Purple
 White/Purple
 Yellow
 Yellow
 Blue
 Blue
 Green
 Green
 Gray/Pink
 Red/Blue

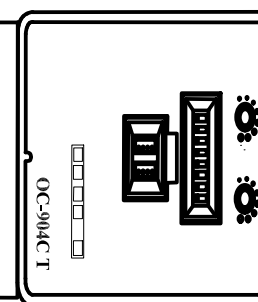

REACTION TWO

Fully Automatic
 Applications Only

Title: 16300760 KM K Control Single with Elite T		Drawing # 16300760
Drawing By: RNG	Date: 09/16/17	Sheet: 1 of 1
OPTEx Technologies Inc. 18730 S. Wilmington Ave. Unit 100 Rancho Dominguez, CA. 90220 800-877-6656 FAX 310-898-1098		