


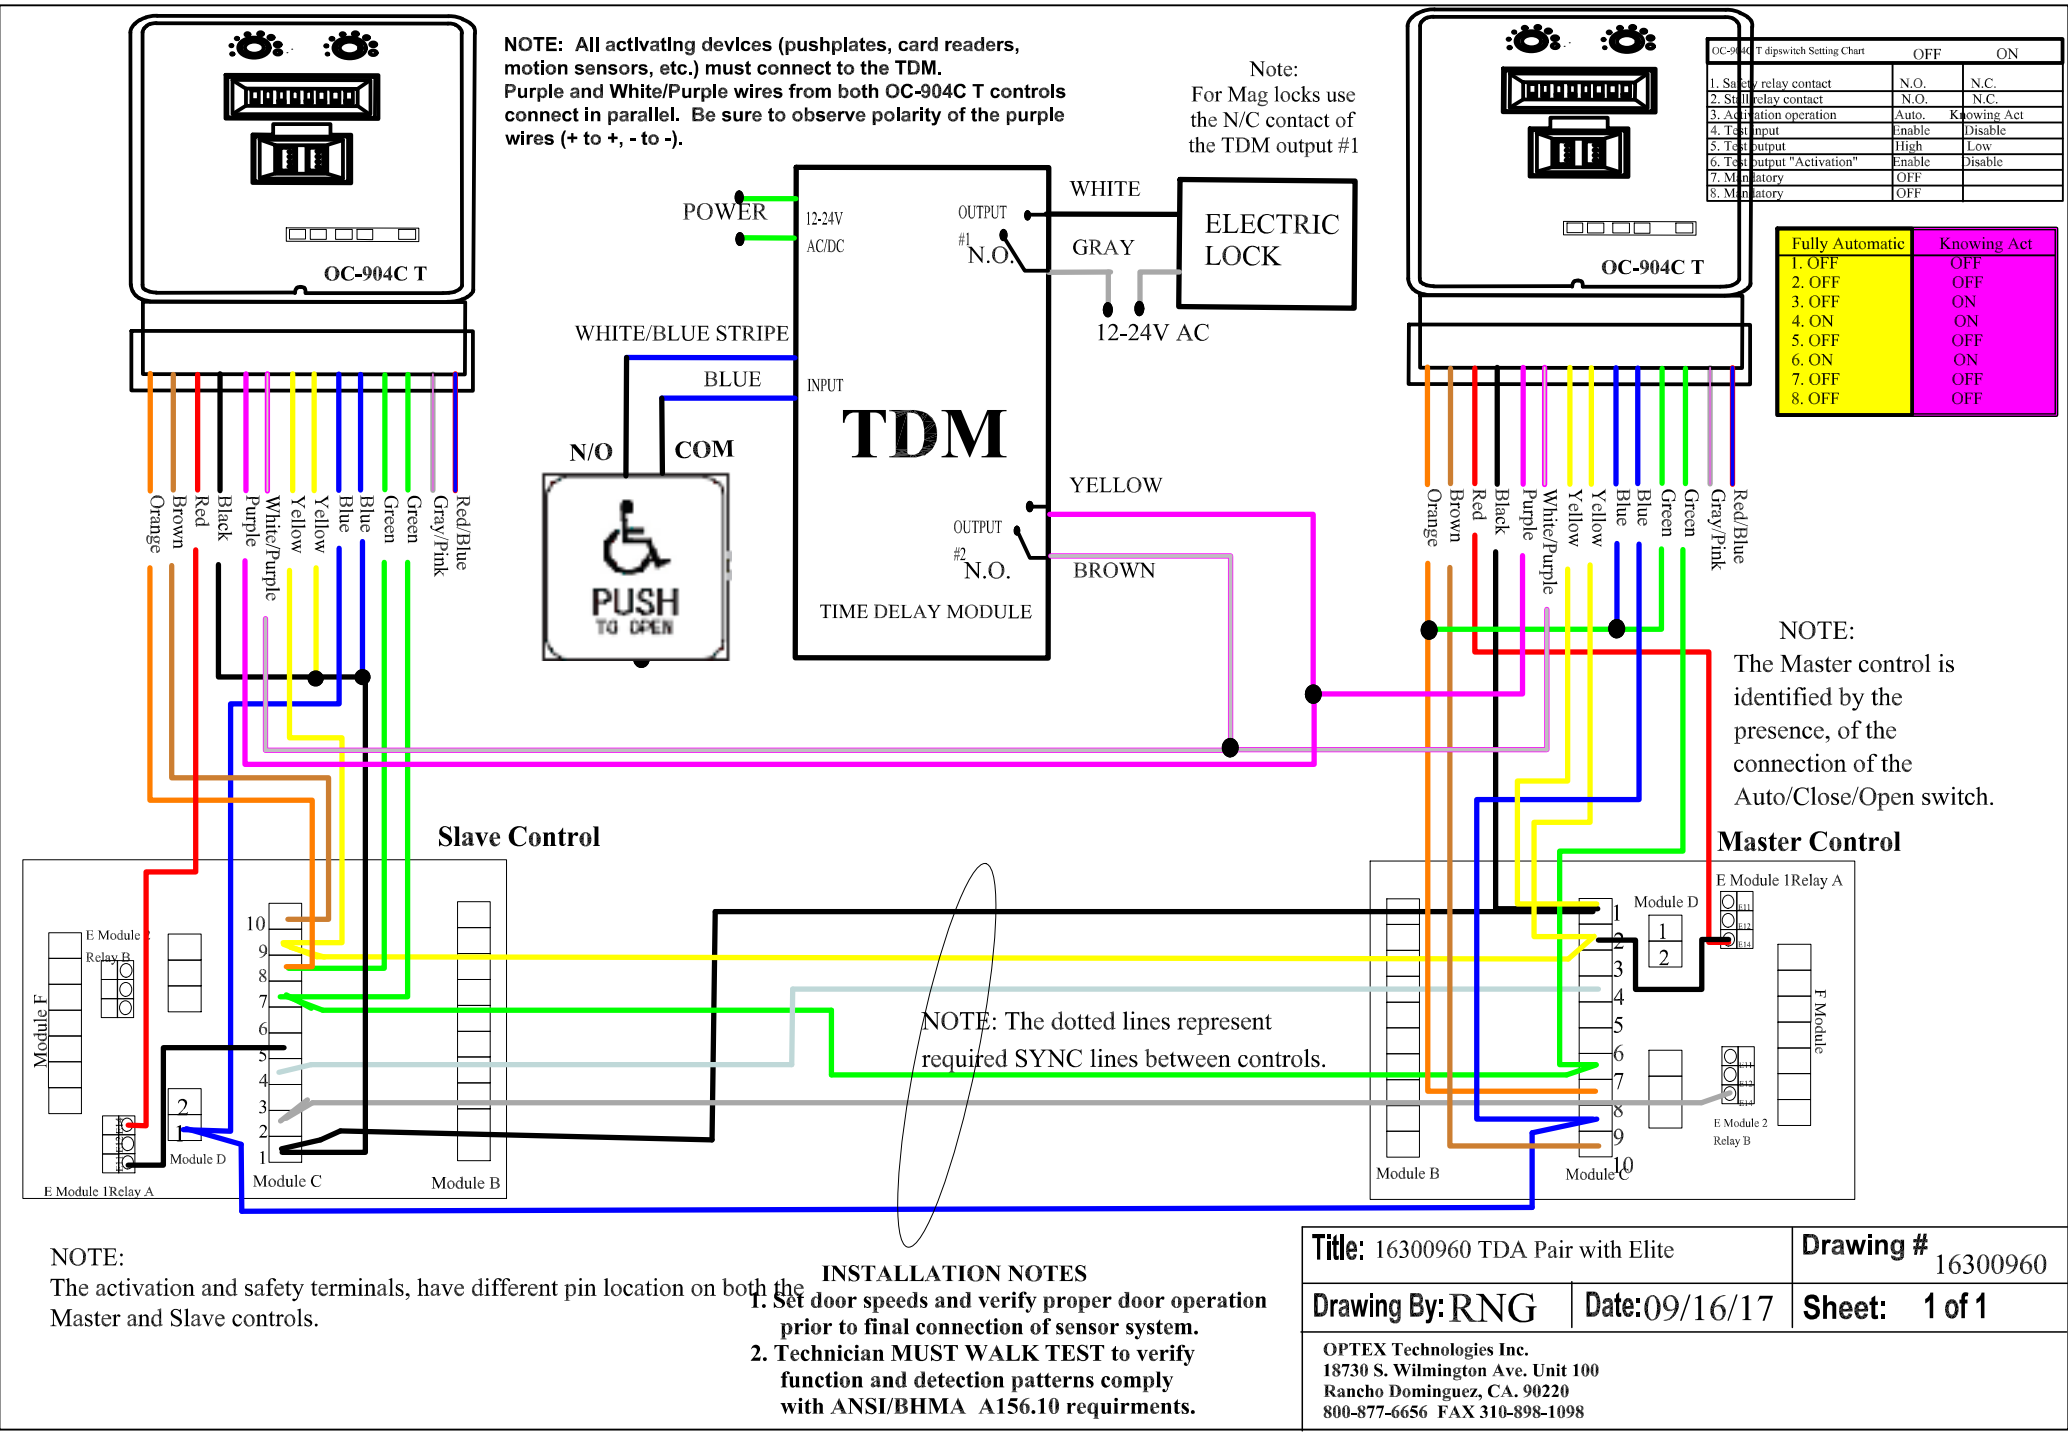

NOTE: All activating devices (pushplates, card readers, motion sensors, etc.) must connect to the TDM. Purple and White/Purple T controls connect in parallel. Be sure to observe polarity of the purple wires (+ to +, - to -).

Note:
For Mag locks use the N/C contact of the TDM output #1

OC-904C T dipswitch Setting Chart			OFF	ON
1. Safety relay contact	N.O.	N.C.		
2. Still relay contact	N.O.	N.C.		
3. Activation operation	Auto.	Knowing Act		
4. Test input	Enable	Disable		
5. Test output	High	Low		
6. Test output "Activation"	Enable	Disable		
7. Mandatory	OFF			
8. Mandatory	OFF			

Fully Automatic	Knowing Act
1. OFF	OFF
2. OFF	OFF
3. OFF	ON
4. ON	ON
5. OFF	OFF
6. ON	ON
7. OFF	OFF
8. OFF	OFF

NOTE:
The Master control is identified by the presence, of the connection of the Auto/Close/Open switch.

NOTE:
The activation and safety terminals, have different pin location on both the Master and Slave controls.

- INSTALLATION NOTES**
1. Set door speeds and verify proper door operation prior to final connection of sensor system.
 2. Technician MUST WALK TEST to verify function and detection patterns comply with ANSI/BHMA A156.10 requirements.

Title: 16300960 TDA Pair with Elite		Drawing # 16300960	
Drawing By: RNG		Date: 09/16/17	Sheet: 1 of 1
OPTEX Technologies Inc. 18730 S. Wilmington Ave. Unit 100 Rancho Dominguez, CA. 90220 800-877-6656 FAX 310-898-1098			