

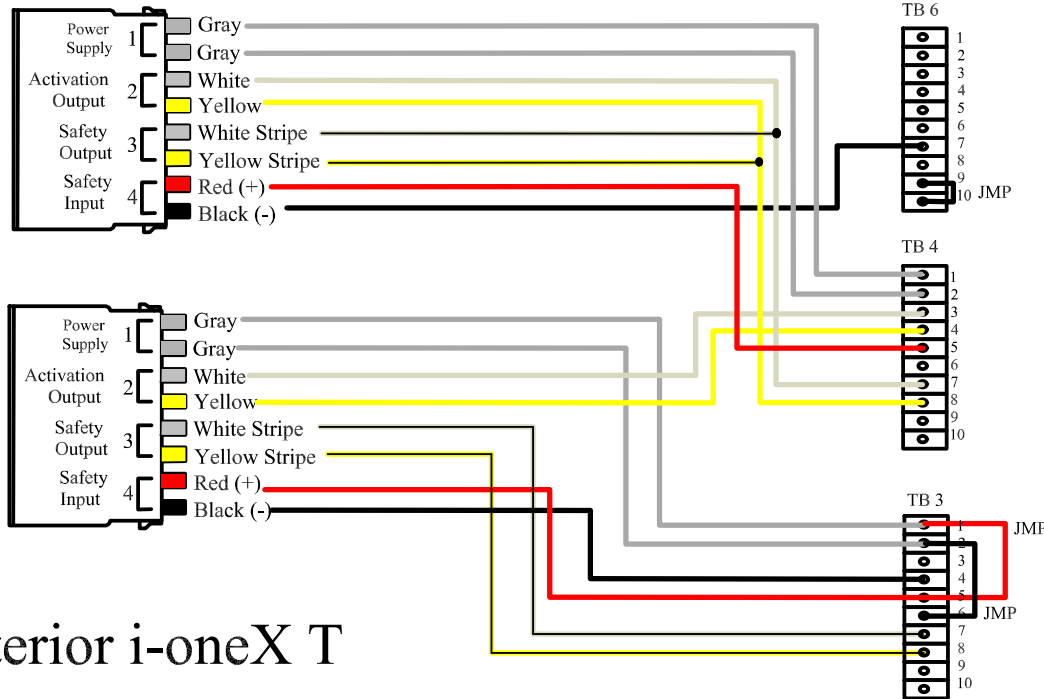


Exterior i-oneX T

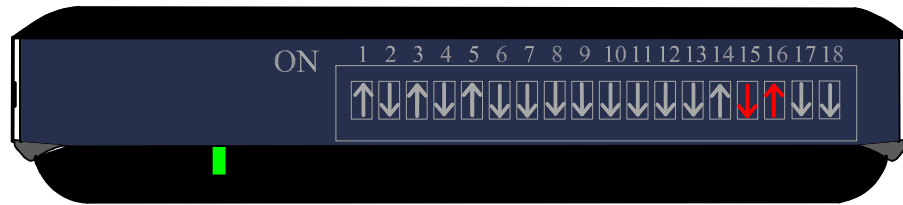


Interior i-oneX T

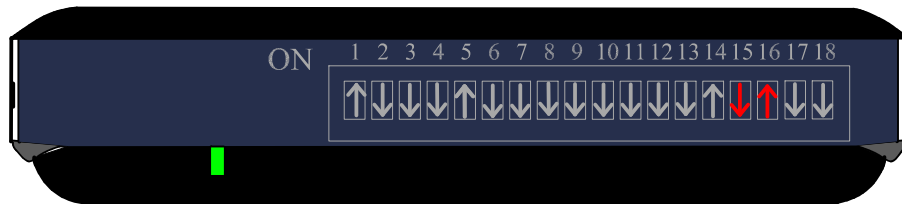

Notes:

1. Verify proper door operation prior to final connection of sensors.
2. Clip or remove the JP200 jumper wire on the MC521 Pro, located between the two encoder connectors.
3. Enable monitoring with pushbuttons: Select Index = 19, Select Value 3
4. Enable monitoring with Android: In the Main Selection press Configure Door Manual.
Go to Function Safety Logic. Select = Monitored Sensors.
5. Dipswitch 15 must be OFF (down) & Dipswitch 16 must be ON (up) for proper monitoring operation.
6. Technician must perform a field test to verify substantial compliance with ANSI/BHMA A156.10 Section 8.

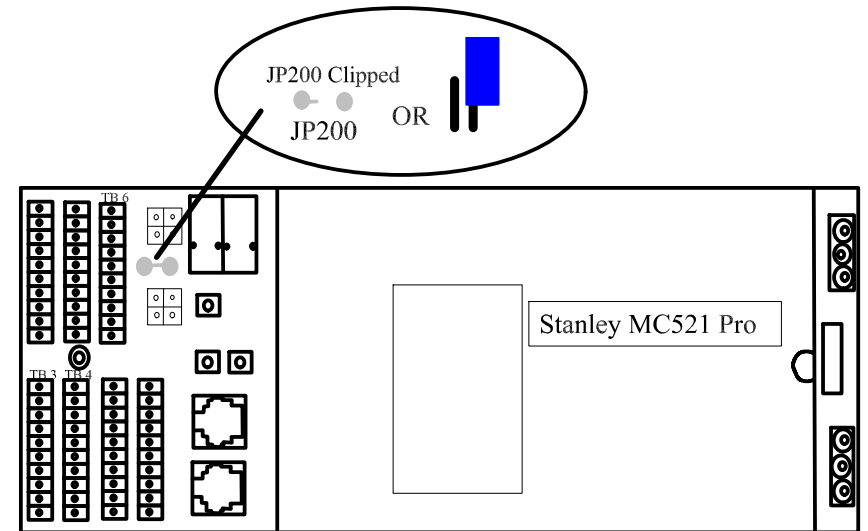

Title: 16300110 Stanley MC521 Pro with i-oneX T		Drawing # 16300110
Drawing By: RNG	Date: 5/9/16	Sheet: 1 of 1
OPTEx Technologies Inc. 18730 S. Wilmington Ave. Unit 100 Rancho Dominguez, CA. 90220 800-877-6656 FAX 310-898-1098		